

MAINTENANCE SCHEDULE - EUROPE 15,000km/10,000miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.
R: Replace or change or lubricate. F: Fill

GASOLINE ENGINE

SERVICE INTERVALS:		ODOMETER READING				Sterling Year/Month of Production	Model Code	Engine Code				
Odometer reading or months, whichever comes first									Land Cruiser 150			
						1GR-FE (4.0 V6)						
MAINTENANCE ITEMS		× 1,000km		× 1,000miles		GRJ150						
		1 7.5 15 22.5 30 37.5 45 52.5 60 67.5 75 82.5 90		1 5 10 15 20 25 30 35 40 45 50 55 60		Months () : for reference		2009/08 2010/10 2011/10 2012/10 2013/08 2014/08 2015/06 2016/08 2017/08 2018/06				
Timing Belt		Replace every 150,000km (100,000miles)						—				
Valve Clearance	Sensory Inspection *1	I I I I I I I						(Every 72 months)				
	Actual inspection	I I I I I I I						Every 12 months				
Drive belt	V-ribbed belt	First inspect at 105,000km (70,000miles), then every 15,000km (10,000miles)						First inspect at 72 months, then every 12 months				
		I I I I I I I						Every 12 months				
Engine Oil	5W-30 (preferred) 10W-30, 15W-40, 20W-50	Normal	R	R	R	R	R	R	R	Every 12 months		
		Severe	R	R	R	R	R	R	R	R	Every 6 months	
	0W-20 (preferred) 5W-30, 10W-30, 15W-40, 20W-50	Normal	R	R	R	R	R	R	R	R	Every 12 months	●
		Severe	R	R	R	R	R	R	R	R	Every 6 months	●
	0W-20 for downsized turbo engines (preferred), 0W-20, 5W-30, 10W-30	Replace when the maintenance reminder appears *8										
		Replace when the maintenance reminder appears *8										
	0W-16 (preferred) 0W-20, 5W-30, 10W-30	Normal	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	Every 6 months	
	0W-8 (preferred) 0W-16, 0W-20, 5W-30, 10W-30	Normal	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	Every 6 months	
	Engine oil filter	Replace when the maintenance reminder appears *8										
		Normal	R	R	R	R	R	R	R	R	Every 12 months	●
Cooling and heater system *2	Severe	R	R	R	R	R	R	R	R	Every 6 months	●	
										Every 24 months	●	
Engine coolant (Including intercooler coolant except for T24A-FTS(HEV))	S-LLC (pink) *4	First replace at 150,000km (100,000miles), then every 90,000km (60,000miles)						—				
	S-LLC (blue) *4	First replace at 210,000km (140,000miles), then every 120,000km (80,000miles)						First replace at 11 years, then every 6 years				
Inverter coolant (Including intercooler coolant for T24A-FTS(HEV) only)	S-LLC (pink) *4	I I I I I I I						—				
		First replace at 240,000km (160,000miles); then, every 90,000km (60,000miles)						—				
Engine oil cooler hoses and connections		I I I I I I I						Every 24 months				
Exhaust pipes and mountings		I I I I I I I						Every 24 months				
GPF hoses for checking exhaust pressure		-						R: 36 months				
Spark plugs	Platinum or Iridium Tipped type	Replace every 90,000km (60,000miles)*9						—				
		Replace every 90,000km (60,000miles)						Every 72 months				
Fuel filter	Aygo and Aygo X only	R						—				
	GT86 / GR86	Replace every 180,000km (120,000miles)						Every 15 years				
Fuel injection system *6		Replace every 120,000km (80,000miles)						Every 96 months				
	Valvematic system	F	F	F	F	F	F	F	F	—		
Air cleaner filter	Normal	Fill every 105,000km (70,000miles)						—				
		I I I I I I I						I: Every 24 months R: Every 48 months				
	Dusty road *10	I I I I I I I						I: Every 12 months R: Every 36 months				
		I I I I I I R						I: Every 12 months R: Every 48 months				
Fuel tank cap, fuel lines, connections and fuel vapor control valve	*5	I I I I I I I						I: Every 6 months R: Every 36 months				
		I I I I I I I						Every 24 months				
Charcoal canister	Others	I I I I I I I						I: Every 24 months				
	Normal	I I I I I I I						—				
	Aygo and Aygo X only	I I I I I I I						—				
Charcoal canister filter	Severe	I I I I I I I						—				
	Aygo and Aygo X only	R R R R R R R						—				
HEV battery cooling intake filter	Normal	I I I I I I I						—				
	*11	I R I R I R I						—				
	Severe only	R R R R R R R						—				
	Severe only	I I I I I I I						—				

*1: Check for tappet noise and engine vibration and adjust if necessary.
 *2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary.
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 *5: For Sweden, Norway and Finland only.
 *6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820 or PZ463-00PB0-04) or equivalent
 *8: Replace both the engine oil and filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over 15,000km (10,000miles) since the last oil change. This may cause the maintenance reminder to appear even when driven less than 15,000km (10,000miles).
 Replace both engine oil and oil filter every 7,500km (5,000miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, when the maintenance reminder does not appear.
 *9: It is possible to replace at every 100,000km (60,000miles)
 *10: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry
 *11: Visually check the HEV battery cooling intake filter for dirt or dust every 15,000km (10,000miles) and replace if necessary. Replace every 30,000km (20,000miles). A service part (PNC G92DH and G92DJ) is available.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/10,000 miles

DIESEL ENGINE SERVICE INTERVALS: Odometer reading or months, whichever comes first		ODOMETER READING												Months () : for reference	Starting Year/Month of Production	Model Code Engine Code	Land Cruiser 150			
		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5				90	KDJ150 KDJ155	2010/10 2011/10 2012/10 2013/08	2014/08
MAINTENANCE ITEMS		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60					
Timing Belt *6		× 1,000 miles				I									I	—	●	●	●	
			Replace every 105,000 km (70,000 miles)												—					
			Replace every 150,000 km (100,000 miles)												—					
Valve Clearance			I												(Every 48 months)	●	●	●		
		*1 : Sensory Inspection													—					
		A: Adjust	A		A		A		A		A		A		A	Every 12 months	●	●	●	
		Normal belt	I		I		I		I		I		I		I	Every 12 months				
Drive belt															—					
		V-ribbed belt	First inspect at 105,000 km (70,000 miles), then every 15,000 km (10,000 miles)												First inspect at 72 months, then every 12 months	●	●	●		
Engine oil ACEA: B1 API: CF-4 or CF		5W-30, 10W-30, 15W-40, 20W-50	Normal*	R		R		R		R		R		R		R	Every 12 months			
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months			
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months												Every 6 months	●	●*	●*	
Engine oil ACEA: C2 (preferred), B1		C2: 5W-30 B1: 5W-30, 10W-30, 15W-40, 20W-50	Normal*	R		R		R		R		R		R		R	Every 12 months			
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months												Every 6 months				
Engine oil ACEA: C2		0W-30, 5W-30	Normal*	R		R		R		R		R		R		R	Every 12 months			
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months												Every 6 months		●**	●**	
Engine oil ACEA: C3		5W-30 PFE	*	Replace every 15,000 km (10,000 miles) or when the reminder light illuminates												Every 12 months				
Engine oil filter			Normal	R		R		R		R		R		R		R	Every 12 months			
			Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
			OMMS	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months												Every 6 months	●	●	●	
			*	Replace every 15,000 km (10,000 miles) or when the reminder light illuminates												Every 12 months				
Cooling and heater system *2				I		I		I		I		I		I		I	Every 24 months	●	●	●
Engine coolant (Include intercooler coolant)		S-LLC (pink) *4		I		I		I		I		I		I		I	—	●	●	●
		Premium-LLC 1WW/2WW		I		I		I		I		I		I		I	—	●	●	●
				First replace at 150,000 km (100,000 miles), then every 90,000 km (60,000 miles)												—				
				First replace at 150,000 km (100,000 miles), then every 90,000 km (60,000 miles)												—				
Exhaust pipes and mountings				I		I		I		I		I		I		I	Every 12 months			
DPR hoses for checking exhaust pressure				I		I		I		I		I		I		I	Every 24 months	●	●	●
Battery				No maintenance												—			●	
Fuel filter		In-tank filter and in-line filter								R						R	Every 72 months	●	●	●
																	Every 90 months			
Diesel smoke								I				I			I	Every 48 months				
												I			I	Every 48 months	●	●	●	
Air cleaner filter		Normal		I		I		I		I		I		I		I	Every 48 months	●	●	●
		Dusty road *7		I	I	I	I	I	I	I	I	I	I	I	I	I	I: Every 12 months R: Every 48 months	●	●	●
				I		I		I		I		I		I		I	I: Every 6 months R: Every 48 months	●	●	●
Fuel tank cap, fuel lines, connections				I		I		I		I		I		I		I	Every 24 months	●	●	●
Air flow meter		KD engine series that comply with EURO-IV, V		Blow air to the sensor intermittently for about 30 seconds at every 60,000 (40,000 miles) km or 48 months												—	●	●	●	

*Engine oil: It is imperative to RESET the OMMS after EVERY oil change
 *2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 *6: For vehicles often operated in extremely dusty conditions, such as mining. Inspect for cracks on the timing belt and abnormal wear on the timing pulley. Remove dust and sand from the timing belt cover.
 *7: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry

● : WITHOUT DPF
 ●* : WITH DPF
 ● : WITHOUT DPF
 ●* : WITH DPF

MAINTENANCE SCHEDULE - EUROPE 15.000 km/10.000 miles

		ODOMETER READING												Months	Starting Year/Month of Production	Model Code	Engine Code		
SERVICE INTERVALS: Odometer reading or months, whichever comes first																			
MAINTENANCE ITEMS		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	() : for reference			
		× 1,000 miles	1	5	10	15	20	25	30	35	40	45	50	55	60		2015/06	2016/08	2017/08 (MC) 2018/06 2021/06
Timing Belt *6			Replace every 105,000 km (70,000 miles)												—				
Valve Clearance		*1: Sensory Inspection	Replace every 150,000 km (100,000 miles)												—				
		A: Adjust	I												(Every 48 months)				
Drive belt		Normal belt	I												Every 12 months				
		V-ribbed belt	First inspect at 105,000 km (70,000 miles), then every 15,000 km (10,000 miles)												First inspect at 72 months, then every 12 months				
Engine oil ACEA: B1 AP/CF-4 or CF		5W-30, 10W-30, 15W-40, 20W-50	Normal*	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months			
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months															
Engine oil ACEA: C2 (preferred), B1		C2: 5W-30 B1: 5W-30, 10W-30, 15W-40, 20W-50	Normal*	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months			
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months															
Engine oil ACEA: C2		0W-30, 5W-30	Normal*	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	•••	•••	•••
			Severe*	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	•••	•••	•••
			OMMS*	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months													•	•	•
Engine oil ACEA: C3		5W-30 PFE	*	Replace every 15,000 km (10,000 miles) or when the reminder light illuminates												Every 12 months			
			Normal	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	•••	•••	•••
			Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	•••	•••	•••
			OMMS	Replace when the reminder light illuminates or after max. 30,000 km (20,000 miles)/24 months													•	•	•
			*	Replace every 15,000 km (10,000 miles) or when the reminder light illuminates												Every 12 months			
Cooling and heater system *2				I	I	I	I	I	I	I	I	I	I	I	I	Every 24 months	•	•	•
Engine coolant (include intercooler coolant)		S-LLC (pink) *4		I	I	I	I	I	I	I	I	I	I	I	I	First replace at 150,000 km (100,000 miles), then every 90,000 km (60,000 miles)	•	•	•
		Premium-LLC 11WW/2WW		I	I	I	I	I	I	I	I	I	I	I	I	First replace at 150,000 km (100,000 miles), then every 90,000 km (60,000 miles)	•	•	•
Exhaust pipes and mountings				I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	•	•	•
DPR hoses for checking exhaust pressure				I	I	I	I	I	I	I	I	I	I	I	I	Every 24 months	•	•	•
Battery				No maintenance												—			
Fuel filter		In-tank filter and in-line filter								R						Every 72 months			
												R				Every 90 months			
Diesel smoke								I							I	Every 48 months	•	•	•
												I			I	Every 48 months	•	•	•
Air cleaner filter		Normal		I	I	I	I	I	I	R	I	I	I	I	I	I: Every 12 months R: Every 48 months	•	•	•
		Dusty road *7		I	I	I	I	I	I	I	R	I	I	I	I	I: Every 6 months R: Every 48 months	•	•	•
Fuel tank cap, fuel lines, connections															I	Every 24 months	•	•	•
SCR-Ad Blue				F	F	F	F	F	F	F	F	F	F	F	F	—	•	•	•

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 *6: For vehicles often operated in extremely dusty conditions, such as mining, inspect for cracks on the timing belt and abnormal wear on the timing pulley. Remove dust and sand from the timing belt cover.
 *7: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry
 *Engine oil: it is imperative to RESET the OMMS after EVERY oil change

• Except for Montenegro, Serbia and Macedonia
 •• For Montenegro, Serbia and Macedonia only
 ••• Except for Montenegro, Serbia and Macedonia
 •••• For Montenegro, Serbia and Macedonia only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/10,000 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.
R: Replace or change or lubricate.

T: Tighten to specified torque.
L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:

Odometer reading or months, whichever comes first

MAINTENANCE ITEMS		ODOMETER READING												Months	Starting Year/Month of Production	Model Code							
		Land Cruiser 150																					
		× 1,000 km				22.5 30				37.5 45							52.5 60				67.5 75		
× 1,000 miles				15 20				25 30				35 40				45 50				55 60			
Floor mat		Inspection at every maintenance												—									
Clutch pedal, return spring and damper - Mechanical type		I	I			I	I			I	I			I	I			●	●	●	●		
Brake pedal and parking brake				I				I				I					I	●	●	●	●		
Brake linings and drums	Normal																	●	●	●	●		
(Include brake linings and drums of parking brake)	Severe	I	I			I	I			I	I			I	I			●	●	●	●		
Brake pads and discs	Normal			I				I				I					I	●	●	●	●		
	Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	●	●	●	●		
Clutch fluid	- MT - MMT (some Diesels)	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4																					
						R				R							R	●	●	●	●		
Clutch fork grease	Severe only	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	●	●	●	●		
		L	L			L	L			L	L			L	L		R	●	●	●	●		
Brake fluid	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4					R				R				R			R	●	●	●	●		
Brake pipes and hoses										I				I			I	●	●	●	●		
Vacuum pump		Replace every 195,000 km (130,000 miles) Inspect every 195,000 km (130,000 miles)												—									
Power steering fluid	A/T fluid DEXRON® II or III					I				I				I			I	●	●	●	●		
Steering wheel, linkages and steering gear box	Normal																	●	●	●	●		
	Severe	I	I			I	I			I	I			I	I		I	●	●	●	●		
Propeller shaft	NLGI No. 1 or No. 2	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	●	●	●	●		
	Severe	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	●	●	●	●		
	Normal	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	●	●	●	●		
Propeller shaft bolts	Tighten bolts			T				T				T					T	●	●	●	●		
	Normal																	●	●	●	●		
	Severe	I	I			I	I			I	I			I	I		I	●	●	●	●		
Drive shaft bolts	Normal																	●	●	●	●		
	Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	●	●	●	●		
	Normal			T				T				T					T	●	●	●	●		
	Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	●	●	●	●		
	Normal			T				T				T					T	●	●	●	●		
	Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	●	●	●	●		
Drive shaft bolts or nuts (on flange-type only)	Normal																	●	●	●	●		
	Severe	I	I			I	I			I	I			I	I		I	●	●	●	●		
	Normal																	●	●	●	●		
	Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	●	●	●	●		
Suspension ball joints and dust covers	Normal																	●	●	●	●		
	Severe	I	I			I	I			I	I			I	I		I	●	●	●	●		
Shift lever of 6-speed manual transmission (on both petrol and Diesel models)	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
Automatic transmission fluid	Toyota Genuine ATF WS																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
Automatic transmission fluid cooler hoses and connections																		●	●	●	●		
Manual transmission oil and transfer oil if so equipped (including auto clutch system)	API Gear oil GL-5																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		
	Normal																	●	●	●	●		
	Severe																	●	●	●	●		

●: Lubricate within 24 hours after submerging
 ** : Replace the blade with new one; blades are not reusable; only for Diesel engines
 * : Lubricate within 24 hours after submerging
 ** : Replace the blade with new one; blades are not reusable; only for Diesel engines
 *** : For AC60 AJT only
 * : Lubricate within 24 hours after submerging
 * : Lubricate within 24 hours after submerging

MAINTENANCE SCHEDULE - EUROPE 15,000 km/10,000 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first			ODOMETER READING												Months	Starting Year/Month of Production	Model Code				
MAINTENANCE ITEMS			x 1,000 km													GRJ150 KDJ15# GDJ15#	Land Cruiser 150				
			1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5				90			
			x 1,000 miles													2009/08 2010/10 2011/10 2012/10 2013/08 2014/08	2015/06 2016/08	2017/08 2018/06	2021/06		
			1	5	10	15	20	25	30	35	40	45	50	55						60	
Front Differential oil	M/T model	API Gear oil GL-4 or GL-5	Normal												I	Every 48 months					
			Severe													R	Every 48 months				
			Normal													I	Every 48 months				
			Severe													R	Every 48 months				
			Normal													I	Every 36 months				
	A/T model	Toyota Genuine ATF WS	Normal													I	Every 48 months				
			Severe													R	I: Every 36 months R: Every 72 months				
		Toyota Genuine CVT FE	Normal													I	Every 48 months				
			Severe													R	I: Every 36 months R: Every 72 months				
		Toyota Genuine e-Transaxle Fluid TE	Normal													I	Every 48 months				
	Severe													R	I: Every 36 months R: Every 72 months						
Differential separated from transmission (API Gear oil GL-5)															R	Every 48 months					
Rear differential oil	E-4WD models only	Normal													I	Every 36 months					
		Severe													R	I: Every 36 months R: Every 72 months					
		Normal													I	Every 48 months					
		Severe													R	I: Every 36 months R: Every 72 months					
Front and rear suspension			Normal											I	Every 24 months						
Active height control suspension fluid - Suspension fluid AHC or equivalent			Severe											I	Every 12 months						
Active height control gas chamber														I	First inspect at 48 months, then every 12 months						
Bolts and nuts on chassis and body *2			Severe only	T	T	T	T	T	T	T	T	T	T	T	Every 12 months						
Tyres and inflation pressure, lights, wiper blades and washer fluid				I	I	I	I	I	I	I	I	I	I	I	Every 12 months						
Air conditioner filter	Pollen removal type	Normal													R	—					
		Dusty road*4		R	R	R	R	R	R	R	R	R	R	R	—						
		*1		R	R	R	R	R	R	R	R	R	R	R	—						
		Normal		I	R	I	R	I	R	I	R	I	R	I	—						
	Standard type & high efficiency type	Dusty road*4		I	R	I	R	I	R	I	R	I	R	I	—						
		*1		I	R	I	R	I	R	I	R	I	R	I	—						
		Normal		R	R	R	R	R	R	R	R	R	R	R	—						
		Dusty road*4		R	R	R	R	R	R	R	R	R	R	R	—						
A/C filter - Combination filter	High efficiency type	Normal		I	R	I	R	I	R	I	R	I	R	I: Every 12 months R: Every 24 months							
		Dusty road*4		R	R	R	R	R	R	R	R	R	R	R	Every 12 months						
		Normal		R	R	R	R	R	R	R	R	R	R	R	—						
		Dusty road*4		R	R	R	R	R	R	R	R	R	R	R	—						
Air conditioner filter	Aygo and Aygo X only	Dusty road*4		R	R	R	R	R	R	R	R	R	R	Every 12 months							
Body Inspection														I	Every 24 months						

*1: With Solar power ventilation system

*2: For seat mounting bolts, front and rear suspension member retaining bolts.

*4: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry