

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque. new information
 R: Replace or change or lubricate. C: Clean corrections

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												Months	Aygo KGB10 WNB10					
		x 1,000 km																		
MAINTENANCE ITEMS		x 1,000 miles													05/02&05 07/03					
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal												I	Every 48 months			
			Severe														R	Every 48 months		
		LV Gear oil API GL-4	Normal														I	Every 48 months	●	
			Severe														R	Every 48 months	●	
		A/T model	Toyota Genuine ATF type T-IV	Normal														I	Every 36 months	
				Severe														R	I: Every 36 months R: Every 72 months	
	Toyota Genuine ATF WS		Normal														I	Every 36 months		
			Severe														R	I: Every 36 months R: Every 72 months		
	Toyota Genuine CVTF TC		Normal														I	Every 48 months		
			Severe														R	I: Every 36 months R: Every 72 months		
	Differential separated from transmission (API Gear oil GL-5)															R	Every 48 months			
	Rear differential oil		API Gear oil GL-5													R	Every 48 months			
		A/T fluid WS		Normal											I	Every 36 months				
				Severe											R	I: Every 36 months R: Every 72 months				
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease		NLGI No. 2	Normal												R	Every 24 months				
			Severe												R	Every 12 months				
Front and rear suspension		Normal													I	Every 24 months	●			
		Severe													I	Every 12 months	●			
Active height control suspension fluid - Suspension fluid AHC or equivalent															R	—				
Active height control gas chamber															I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body		Severe only													T	Every 12 months	●			
Tires and inflation pressure		Normal													I	Every 24 months	●			
		Severe													I	Every 12 months	●			
Air conditioning filter		Normal													I	Every 24 months				
		Dusty road													I	Every 12 months				
		Normal													R	Every 24 months				
		Dusty road													R	Every 12 months				
		Normal & Dusty road													R	Every 24 months				
Particle filter		Foldable type													R	"Clean" replaced by "Inspect"				
															R	Refer to TME letter of October 2007				
		Pollen removal type													R	on "Potential Health Risk From				
															R	Cleaning of Cabin Air Filter Elements				
		Standard type & high efficiency type													R		●			
		Dusty road													R		●			
Combination filter		Combination filter (high efficiency type)													R					
															R					
		Dusty road													R					
															R					
															R					
															R					
Corrosion Inspection															I	Every 24 months	●			

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 milesIncludes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

new information

corrections

GASOLINE ENGINE		MAINTENANCE OPERATIONS											Aygo									
SERVICE INTERVALS:		R: Replace or change or lubricate. F: Fill											1KR-FE (1.0 L3)									
Odometer reading or months, whichever comes first		ODOMETER READING											KGB10									
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months							
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	() : for reference							
MAINTENANCE ITEMS													05/02	07/03								
Timing Belt		Replace every 150,000 km (90,000 miles)											—									
Valve Clearance (Sensory Inspection)*1													*1 (Every 72 months)		●	●						
Drive belt		V-ribbed belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)											Initial: 72 and then every 12 months		●	●				
Engine oil (API: SH, SJ) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	Every 12 months							
		Severe		R	R	R	R	R	R	R	R	R	R	R	Every 6 months							
Engine oil (API: SJ, SL) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	Every 12 months		●					
		Severe		R	R	R	R	R	R	R	R	R	R	R	Every 6 months		●					
Engine oil (API: SL, SM) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	Every 12 months			●				
		Severe		R	R	R	R	R	R	R	R	R	R	R	Every 6 months			●				
Engine oil filter		Normal		R	R	R	R	R	R	R	R	R	R	R	Every 12 months		●	●				
		Severe		R	R	R	R	R	R	R	R	R	R	R	Every 6 months		●	●				
Cooling and heater system *2													I		●	●						
Engine coolant		LLC (red/green) *3													R		R	Initial: 36 months				
		S-LLC (pink) *4													I		I	I	●	●		
													First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)		●	●						
Inverter coolant		S-LLC (pink) *4													I		I	I				
													First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)									
Exhaust pipes and mountings													I		I	I	●	●				
Spark plugs		Platinum or Iridium Tipped type													R		R	R				
		Others													I		R	I	●	●		
Battery													No maintenance		—							
Fuel filter (Aygo only)													Replace every 180,000 km (108,000 miles)		15 years		●	●				
Fuel injection system													F		F	F	F	F	F	—		
Air cleaner filter (from October 2002, applicable to all models in production)		Normal		I	I	I	R	I	I	I	I	I	I	I	I: Every 24 months R: Every 48 months		●	●				
		Dusty road		I	I	I	I	I	R	I	I	I	I	I	I: Every 12 months R: Every 48 months		●	●				
Air cleaner filter		Normal		I	I	R	I	I	R	I	I	I	R	I: Every 24 months R: Every 48 months								
		Dusty road		Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.											—							
Fuel tank cap, fuel lines, connections and fuel vapor control valve													I		I	I	●	●				
Charcoal canister		*5													I		I	I				
		Others													I		I	I	●	●		
		Aygo only													Normal		I	I	●	●		
		Severe													I		I	I	●	●		
Charcoal canister filter		Aygo only													Normal		R	R	●	●		
		Severe													R		R	R	●	●		

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

A: Check and adjust if necessary.

R: Replace or change or lubricate.

D: Drain

PEUGEOT DIESEL ENGINE

SERVICE INTERVALS: Odometer reading or months, whichever comes first		ODOMETER READING												Months (): for reference	Aygo				
		× 1,000 km			22.5 30 37.5			45 52.5 60			67.5 75 82.5 90				2WZ-TV (1.4D4D)				
MAINTENANCE ITEMS		× 1,000 miles		1 4.5 9			13.5 18 22.5			27 31.5 36			40.5 45 49.5 54			WNB10			
Timing Belt		Normal		Replace every 240,000 km (150,000 miles)												Every 120 months	●		
		Severe *1		Replace every 180,000 km (120,000 miles)												Every 120 months	●		
Drive belt	V-ribbed	Normal						I									●		
		Severe				I				I								●	
Engine oil		Normal			I		R		I		R		I		R	I: Every 12 months R: Every 24 months	●		
		Severe			I	R		I	R	I		R	I	R		I	R	I: Every 6 months R: Every 12 months	●
		Low annual Mileage														R: Every 24 months	●		
Engine oil filter		Normal					R				R				R	R: Every 24 months	●		
		Severe				R		R		R		R		R		R	R: Every 12 months	●	
		Low annual Mileage														R: Every 24 months	●		
Cooling and heater system hose and connections						I			I				I			Every 24 months	●		
Engine coolant	Toyota Genuine LLC (For 2WZ-TV engine model only)	Inspect				I			I				I			-	●		
		Replace *4		Replace every 240,000 km (150,000 miles)												-	●		
Water sediment accumulator							D				D			D		-	(1)		
Exhaust pipes and mountings					I		I		I		I		I		I	Every 12 months	●		
Fuel filter											R					Every 72 months	●		
Diesel smoke	Normal					I			I				I			Every 24 months	●		
	Severe			I		I		I		I		I		I		Every 12 months	●		
Air cleaner filter	Normal														R: Every 48 months	●			
	Dusty road		R												R: Every 12 months	●			
Heater plugs																-			
Fuel tank cap, fuel lines and connections *2						I			I		I		I		I	Initial: 24 and 48 months	●		

(1): RHD model only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

new information

CHASSIS AND BODY 1/2

R: Replace or change or lubricate. L: Lubricate

corrections

SERVICE INTERVALS:	MAINTENANCE ITEMS	ODOMETER READING												Months	Aygo KGB10 WNB10				
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75			82.5	90		
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		05/02&05 07/03		
	Clutch pedal, return spring and damper - Mechanical type		I		I		I		I		I		I		I		●*		
	Brake pedal and parking brake				I		I		I		I		I		I		●		
	Brake linings and drums (Include brake linings of parking brake)	Normal			I		I		I		I		I		I		●		
		Severe	I		I		I		I		I		I		I		●		
	Brake pads and discs	Normal			I		I		I		I		I		I		●		
		Severe	I		I		I		I		I		I		I		●		
	Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3					I		I		I		I		I				
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4					R		R		R		R		R				
		SAE J1704 or FMVSS No. 116 DOT4					I		I		I		I		I				
	Clutch fluid for auto clutch system				R		R		R		R		R		R				
	Sequential M/T system fluid				I		I		I		I		I		I				
	Brake fluid	SAE J1703 or FMVSS No. 116 DOT3					R		R		R		R		R				
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4					R		R		R		R		R				
		SAE J1704 or FMVSS No. 116 DOT4					R		R		R		R		R		●		
	Brake pipes and hoses				I		I		I		I		I		I		●		
	Vacuum pump for brake booster (Diesel engines only)	Ixetic (Luk-AT) or Pierburg	Replace every 195,000 km (121,000 miles) or 120 months													●			
		Others	Inspect every 195,000 km (121,000 miles) or 120 months													●			
	Power steering fluid	ATF fluid DEXRON® II or III					I		I		I		I		I				
		TOYOTA P.S. fluid EH or equivalent					I		I		I		I		I				
	Steering wheel, linkage and steering gear box	Normal					I		I		I		I		I				
		Severe	I		I		I		I		I		I		I				
	SRS airbag *1	Initial inspect at first 120 months from the vehicle registration date.																	
	Propeller shaft	NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	L	L	Every 24 months		
			Severe	L	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months		
	Propeller shaft bolts	Normal				T		T		T		T		T		T	Every 24 months		
		Severe	T		T		T		T		T		T		T		Every 12 months		
	Drive shaft boots	Normal				I		I		I		I		I		I	●		
		Severe	I		I		I		I		I		I		I		●		
		Normal				I		I		I		I		I		I	Every 12 months		
		Severe	I		I		I		I		I		I		I		Every 6 months		
	Drive shaft bolts	Normal				T		T		T		T		T		T	Every 24 months		
		Severe	T		T		T		T		T		T		T		Every 12 months		
		Normal				T		T		T		T		T		T	Every 12 months		
		Severe	T		T		T		T		T		T		T		Every 6 months		
	Suspension ball joints and dust covers	Normal				I		I		I		I		I		I	●		
		Severe	I		I		I		I		I		I		I		●		
		Normal				I		I		I		I		I		I	Every 12 months		
		Severe	I		I		I		I		I		I		I		Every 6 months		
	Shift lever of 6-speed manual transmission					I		I		I		I		I		I	-		
	Automatic transmission fluid	Vehicles produced before July, '99	Normal				I		R		I		I		I		I: Every 12 months R: Every 48 months		
			Severe	I		R		I		R		I		R		R		I: Every 12 months R: Every 24 months	
		Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal						I				I		I		Every 36 months	
				Normal							I				I		I		Every 48 months
			Severe							I				R		R		I: Every 36 months R: Every 72 months	
			Toyota Genuine ATF WS	Normal							I				I		I		Every 36 months
				Normal							I				I		I		Every 48 months
			Severe							I				R		R		I: Every 36 months R: Every 72 months	
		Toyota Genuine CVTF TC	Normal							I				I		I		Every 48 months	
			Severe							I				R		R		I: Every 36 months R: Every 72 months	
		Other	Normal							I				I		I		I: Every 36 months R: Every 72 months	
			Severe						I		R		I		R		R	I: Every 18 months R: Every 36 months	
	Manual transmission oil and transfer oil if so equipped (Including auto clutch system)	API Gear oil GL-5	Normal						I								Every 48 months		
			Severe							R								Every 48 months	
		API Gear oil GL-4 or GL-5	Normal							I								Every 48 months	
			Severe							R								Every 48 months	
		LV Gear oil API GL-4	Normal							I								●	
			Severe							R								●	
		Other (GL-4 or GL-5)	Normal							I								Every 48 months	
			Severe							R								Every 48 months	
	Transfer oil	API Gear oil GL-4 or GL-5	Normal						I									Every 48 months	
			Severe							R								Every 48 months	
		API Gear oil GL-5	Normal					R		R								Every 48 months	
			Severe						R		R							Every 48 months	
		API Gear oil GL-5	Normal						I									Every 48 months	
			Severe							R								Every 48 months	
		Toyota Genuine Differential Oil LX85 (APL GL-5)	Normal						I									Every 48 months	
			Severe							R								Every 48 months	
		Toyota Genuine ATF WS	Normal						I									Every 48 months	
			Severe							I								I: Every 36 months R: Every 72 months	

*1: After 120 months from the vehicle registration date, inspect every 24 months.

*: KGB10
**: WNB10

MAINTENANCE SCHEDULE - GENERAL 10,000 kmIncludes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

R: Replace or change or lubricate.

F: Fill

GASOLINE ENGINE**SERVICE INTERVALS:**

Odometer reading or months, whichever comes first

		ODOMETER READING																Months () : for reference	Aygo 1KR-FE (1.0) KGB10 07/03		
		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75			80	
MAINTENANCE ITEMS		× 1,000 km																			
Timing Belt		Replace every 150,000 km																—			
Valve Clearance	Sensory Inspection *1																		I	Every 96 months	●
Drive belts						I				I									I	Every 24 months	●
Engine oil (API: SJ, SL) (ILSAC)	Normal				R	R			R	R			R	R			R	R	Every 12 months		
	Severe		R	R	R	R			R	R	R	R			R	R	R	R	Every 6 months		
Engine oil (API: SL, SM) (ILSAC)	Normal				R	R			R	R			R	R			R	R	Every 12 months	●	
	Severe		R	R	R	R			R	R	R	R			R	R	R	R	Every 6 months	●	
Engine oil filter	Normal				R	R			R	R			R	R			R	R	Every 12 months	●	
	Severe		R	R	R	R			R	R	R	R			R	R	R	R	Every 6 months	●	
Cooling and heater system *2		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●		
Engine coolant	S-LLC (pink) *4										I								I	Every 24 months	●
		First replace at 160,000 km; after, every 80,000 km																	●		
Inverter coolant	S-LLC (pink) *4										I								I	Every 24 months	
		First replace at 160,000 km; after, every 80,000 km																			
Exhaust pipes and mountings						I				I								I	Every 12 months	●	
Spark plugs	Platinum or Iridium Tipped type	Replace every 100,000 km																—			
	Others									R								R	Every 48 months	●	
Battery				I		I			I		I			I			I	I	Every 12 months	●	
Fuel filter (including the filter in the fuel tank)																		R	Every 96 months	●	
	Aygo only																	R	Every 48 months	●	
Fuel injection system *5							F	F	F	F	F	F	F	F	F	F	F	F	--		
		When the "Injector Maintenance Required" message is displayed on the multi-information display																			
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal				I				R								R	I: Every 24 months R: Every 48 months	●	
		Dusty road Inspect every 2,500km/3months and replace every 40,000km/48months.																	●		
		Normal				I					R								R	I: Every 24 months R: Every 48 months	
		Dusty road			I		I			I	R		I		I				R	I: Every 24 months R: Every 48 months	
	TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																		
		Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																		
Fuel tank cap, fuel lines, connections and fuel vapor control valve		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●		
Charcoal canister										I								I	Every 24 months		
	Aygo only									R								R	I: Every 24 months R: Every 48 months	●	
Charcoal canister filter	Aygo only									R								R	I: Every 24 months R: Every 48 months	●	

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING																						
Odometer reading or months, whichever comes first														Aygo										
														KGB10										
														07/03										
MAINTENANCE ITEMS		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months				
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I								I	Every 48 months	●		
			Severe																			R	Every 48 months	●
		A/T model	API Gear oil GL-4 or GL-5	Normal										I								I	Every 48 months	
			Severe																			R	Every 48 months	
	Differential separated from transmission (API Gear oil GL-5)	WS	Normal										I								I	Every 24 months		
			Severe																		R	I: Every 24 months R: Every 48 months		
		T-IV	Normal										I								I	Every 24 months		
			Severe																			R	I: Every 24 months R: Every 48 months	
		Toyota Genuine CVTF TC	Normal										I									I	Every 24 months	
			Severe																			R	I: Every 24 months R: Every 48 months	
Rear differential oil	API Gear oil GL-5	Normal				I					R				I					R	I: Every 12 months R: Every 48 months			
		Severe					R				R				R					R	R: Every 24 months			
		Normal																			R	I: Every 12 months R: Every 48 months		
		Severe																			R	I: Every 12 months R: Every 48 months		
	A/T fluid WS	Normal											I								I	Every 24 months		
		Severe																			R	I: Every 24 months R: Every 48 months		
		Normal																			R	I: Every 12 months R: Every 48 months		
		Severe																			R	Every 24 months		
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2					R				R				R					R	Every 12 months				
Front and rear suspension	Normal					I					I			I						I	Every 12 months	●		
	Severe				I	I		I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●		
	Normal					I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			
	Severe				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 3 months			
Active height control suspension fluid - Suspension fluid AHC or equivalent		Replace every 100.000 km																						
Active height control gas chamber												I	I	I	I	I	I	I	I	I	I: initial 48 months; then every 12 months			
Bolts and nuts on chassis and body	Severe only				T	T		T	T		T	T		T	T		T	T		T	Every 6 months	●		
Tires and inflation pressure					I	I		I	I		I	I		I	I		I	I		I	Every 6 months	●		
Lights, horn, wipers and washers					I	I		I	I		I	I		I	I		I	I		I	Every 6 months	●		
Particle filter	Pollen removal type	Normal			C	C		R	C		C	R		C	R		C	C		C				
		Severe			C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C				
	Standard type	Normal							R						R							●		
		Severe					R		R		R		R		R		R					●		
	Semi-standard type	Normal & Severe						R						R										
	High efficiency type	Normal					R		R		R		R		R		R							
Severe							R		R		R		R		R		R							
Combination filter	High efficiency type	Normal & Severe			R	R		R	R		R	R		R	R		R	R						
		Replace when the service indicator light illuminates																						
Air conditioner refrigerant amount						I					I				I					I	Every 12 months	●		

*3: Customers should inspect by themselves