

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

GASOLINE ENGINE		MAINTENANCE OPERATIONS										Starting Year/Month of Production	Model Code	Engine Code	Auris																		
		I: Inspect and correct or replace as necessary. R: Replace or change or lubricate. F: Fill													Auris 1NR-FE (1.33)	Auris 1ZR-FAE (1.6)	Auris 8NR-FTS (1.2 Turbo)	Auris HV 2ZR-FXE (1.8HV)	Auris TS 1NR-FE (1.33)	Auris TS 1ZR-FAE (1.6)	Auris TS 8NR-FTS (1.2 Turbo)	Auris TS HV 2ZR-FXE (1.8HV)											
SERVICE INTERVALS:		ODOMETER READING										Months																					
Odometer reading or months, whichever comes first		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5															75	82.5	90	() : for reference				
MAINTENANCE ITEMS		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60																		
		× 1,000 miles	1	5	10	15	20	25	30	35	40	45	50	55	60																		
Timing Belt		Replace every 150,000 km (90,000 miles)										—																					
Valve Clearance		Sensory Inspection *1 Actual inspection										(Every 72 months) Every 12 months																					
Drive belt		V-ribbed belt										Inspect 105,000 km (63,000 miles), after 105,000 km inspect every 15,000 km (9,000 miles) Initial: 72 and then every 12 months Every 12 months	•	•	•	•					•	•	•	•									
Engine oil (API: SH, SJ) (ILSAC)		Normal										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•					
Engine oil (API: SJ, SL) (ILSAC)		Severe										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•				
Engine Oil		5W-30 (preferred) 10W-30, 15W-40, 20W-50										Normal	R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			
		Severe										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•				
		0W-20 (preferred) 5W-30, 10W-30, 15W-40, 20W-50										Normal	R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		Severe										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			
		0W-20 for downsized turbo engines (preferred), 0W-20, 5W-30, 10W-30										Normal	R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
		Severe										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Engine oil filter		Normal										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			
		Severe										R R R R R R R R R R R R R R R R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Cooling and heater system *2		S-LLC (pink) *4										First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		S-LLC (blue) *4										First replace at 210,000 km (126,000 miles); after, every 120,000 km (72,000 miles)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Inverter coolant		S-LLC (pink) *4										First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles) First replace at 240,000 km (150,000 miles); after, every 90,000 km (54,000 miles)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Engine oil cooler hoses and connections		Exhaust pipes and mountings										Every 24 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
GPF hoses for checking exhaust pressure		R: 36 months										•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			
Spark plugs		Platinum or Iridium Tipped type										Replace every 90,000 km (54,000 miles)*9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		Others										I: Every 24 months R: Every 48 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Battery		No maintenance										—																					
Fuel filter		Aygo										Replace every 180,000 km (108,000 miles)	15 years																				
		GT 86										Replace every 120,000 km (72,000 miles)	8 years																				
LPG gas filter		R R R R R R R R R R R R R R R R										Every 12 months																					
Fuel injection system *6		F F F F F F F F F F F F F F F F										—																					
		Valvematic system										Fill every 105,000 km	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	•*	
Air cleaner filter		Normal										I: Every 24 months R: Every 48 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
		Dusty road *10										I: Every 12 months R: Every 36 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		Dusty road										I: Every 6 months R: Every 36 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
Air cleaner filter		Normal										I: Every 24 months R: Every 48 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
		Dusty road										Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.	—																				
Fuel tank cap, fuel lines, connections and fuel vapor control valve		LPG system piping and connectors, tank, filler valve, wiring *7										Every 24 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
LPG system operation settings		LPG tank										Replace every 10 years	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			
Charcoal canister		Others										I: Every 24 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		Aygo only										I: Every 24 months	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
Charcoal canister filter		Normal										R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
		Aygo only										Severe	R	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
HV battery cooling intake filter		Severe only										C C C C C C C C C C	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		

*1: Check for tappet noise and engine vibration and adjust if necessary.
 *2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
 *3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 For GT 86, it is allowed to use Pink Toyota S-LLC for complete REPLACEMENT; in case of TOP-UP, Blue S-LLC is available in 1-litre bottles (P/N 08889-80190)
 *5: For Sweden, Norway and Finland only.
 *6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820 or PZ463-00PB0-04) or equivalent
 *7: Check for leaks and tightness of piping, connectors, multivalve, wiring, tank and tank filler valve
 *8: Replace both the engine oil and filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over 15,000 km (9,000 miles) since the last oil change. This may cause the maintenance reminder to appear even when driving less than 15,000 km (9,000 miles).
 Replace both engine oil and oil filter every 7,500 km (4,500 miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, when the maintenance reminder does not appear.
 *9: It is possible to replace at every 100,000km (60,000 miles)
 *10: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry

*: For Croatia, Bosnia Herzegovina, Macedonia, Estonia, Latvia, Romania, Montenegro and Ukraine

*: For Iceland, Canary Island, Reunion and Malta only

*: For Iceland, Canary Island, Reunion, Serbia, Montenegro and Malta only

*: For Croatia, Bosnia Herzegovina, Macedonia, Estonia, Latvia, Romania, Montenegro and Ukraine

*: For Iceland, Canary Island, Reunion and Malta only

*: For Iceland, Canary Island, Reunion, Serbia, Montenegro and Malta only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.
R: Replace or change or lubricate.
S: Special

DIESEL ENGINE

SERVICE INTERVALS:		ODOMETER READING										Months	Starting Year/Month of Production	Model Code	Engine Code		
Odometer reading or months, whichever comes first		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5					75	82.5
MAINTENANCE ITEMS		x 1,000 miles										() : for reference					
Timing Belt	*6	I										—					
		Replace every 105,000 km (60,000 miles)										—					
		Replace every 150,000 km (90,000 miles)										—					
Timing pulley*6		I															
Timing belt cover*6		C															
Valve Clearance	*I : Sensory Inspection						*I					(Every 48 months)					
	A: Adjust	A		A		A		A		A		A		Every 12 months			
Drive belt	Normal belt	I		I		I		I		I		I		Every 12 months			
	V-ribbed belt	Inspect at 105,000 km (63,000 miles). After, inspect every 15,000 km (9,000 miles)										Initial 72 months; then, every 12 months					
Engine oil ACEA: B1 API: CF-4 or CF	5W-30, 10W-30, 15W-40, 20W-50	Normal*	R		R		R		R		R		R		Every 12 months		
		Severe*	R		R		R		R		R		R		Every 6 months		
		OMMS*	Replace when the reminder light illuminates or after max. 30,000km/24months														
Engine oil ACEA: C2 (preferred), B1	C2: 5W-30 B1: 5W-30, 10W-30, 15W-40, 20W-50	Normal*	R		R		R		R		R		R		Every 12 months		
		Severe*	R		R		R		R		R		R		Every 6 months		
		OMMS*	Replace when the reminder light illuminates or after max. 30,000km/24months														
Engine oil ACEA: C2	0W-30, 5W-30	Normal*	R		R		R		R		R		R		Every 12 months		
		Severe*	R		R		R		R		R		R		Every 6 months		
		OMMS*	Replace when the reminder light illuminates or after max. 30,000km/24months														
Engine oil ACEA: C3	5W-30 PFE	*	Replace every 15,000km or when the reminder light illuminates										Every 12 months				
Engine oil filter		Normal	R		R		R		R		R		R		Every 12 months		
		Severe	R		R		R		R		R		R		Every 6 months		
		OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months														
		*	Replace every 15,000km or when the reminder light illuminates										Every 12 months				
Cooling and heater system *2		I										Every 24 months					
Engine coolant (Include intercooler coolant)	S-LLC (pink) *4	10 km (150,000 miles); after, every 90 I															
	Premium-LLC 1WW/2WW	I															
Exhaust pipes and mountings		I										Every 12 months					
		I										Every 24 months					
DPR hoses for checking exhaust pressure												R: 36 months					
Battery												No maintenance					
Fuel injection pipes												Replace every 150,000 km (90,000 miles)					
Fuel filter	0						R					Every 72 months					
	In-tank filter and in-line filter						R					Every 90 months					
Fuel pump		Replace every 300,000 km (180,000 miles)															
Diesel smoke		I										Every 48 months					
		I										Every 48 months					
Air cleaner filter (from October 2002, applicable to all models in production)	Normal	I		I		I		R		I		I		I: Every 12 months R: Every 48 months			
	Dusty road *7	I		I		I		I		R		I		I: Every 6 months R: Every 48 months			
Air flow meter (for EURO IV vehicles)*5												S	Every 48 months				
Fuel tank cap, fuel lines, connections							I					I	Every 24 months				
SCR- Ad Blue		F		F		F		F		F		F		—			

*1: You may also use API CE or CD.
*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.
*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
*5: Blow air to the sensor intermittently for about 30 seconds
*6: For vehicles often operated in extremely dusty conditions, such as mining. Inspect for cracks on the timing belt and abnormal wear on the timing pulley. Remove dust and sand from the timing belt cover.
*7: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry
*Engine oil: it is imperative to RESET the OMMS after EVERY oil change

*: High strength belt
note: OMMS at 15,000 km

*: High strength belt
note: OMMS at 15,000 km

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first		ODOMETER READING										Months	Starting Year/Month of Production Model Code	Auris	Auris HV	Auris TS	Auris TS HV		
		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5			75	82.5	90	NRE180 NRE185 ZRE185 NDE180	ZWE186	NRE180 NRE185 ZRE185 NDE180
MAINTENANCE ITEMS		x 1,000 miles												2015/05(MC)	2015/05(MC)	2015/05(MC)	2015/05(MC)		
Floor mat		Inspection at every maintenance												●	●	●	●		
Clutch pedal, return spring and damper - Mechanical type		I I I I I I I I I I I I																	
Brake pedal and parking brake		I I I I I I I I I I I I										Every 24 months		●	●	●	●		
Brake linings and drums (Include brake linings and drums of parking brake)		Normal		I I I I I I I I I I I I										Every 24 months					
		Severe		I I I I I I I I I I I I										Every 12 months					
Brake pads and discs		Normal		I I I I I I I I I I I I										Every 12 months		●	●	●	●
		Severe		I I I I I I I I I I I I										Every 6 months		●	●	●	●
Clutch fluid	- M/T - MMT (some Diesels)	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I I I I I I I I I I I I										Every 24 months		●*		●*	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		R R R R R R R R R R R R										Every 24 months		●		●	
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I I I I I I I I I I I I										Every 24 months		●		●		
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		First replace at 120,000 km (72,000 miles) or 96 months; then, every 90,000 km (54,000 miles) or 72 months										Every 24 months						
Brake fluid		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		R R R R R R R R R R R R										Every 24 months		●	●	●	●
Brake pipes and hoses		I I I I I I I I I I I I										Every 24 months		●	●	●	●		
Vacuum pump for brake booster		Replace every 195,000 km (121,000 miles) or 120 months Inspect every 195,000 km (121,000 miles) or 120 months												●**		●**			
Power steering fluid		A/T fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent		I I I I I I I I I I I I										Every 24 months					
		Normal		I I I I I I I I I I I I										Every 24 months					
		Severe		I I I I I I I I I I I I										Every 12 months		●	●	●	●
Steering wheel, linkage and steering gear box		I I I I I I I I I I I I										Every 24 months							
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																	
Propeller shaft	NLGI No. 1 or No. 2	Normal		L L L L L L L L L L L L										Every 24 months					
		Severe		L L L L L L L L L L L L										Every 12 months					
	Normal		L L L L L L L L L L L L										Every 24 months						
	Severe		L L L L L L L L L L L L										Every 12 months						
Propeller shaft bolts	Tighten bolts	Normal		T T T T T T T T T T T T										Every 48 months					
		Severe		T T T T T T T T T T T T										Every 24 months					
Drive shaft boots	Normal		I I I I I I I I I I I I										Every 24 months		●	●	●	●	
	Severe		I I I I I I I I I I I I										Every 12 months		●	●	●	●	
	Normal		I I I I I I I I I I I I										Every 12 months						
	Severe		I I I I I I I I I I I I										Every 6 months						
Drive shaft bolts or nuts (on flange-type only)	Normal		T T T T T T T T T T T T										Every 24 months						
	Severe		T T T T T T T T T T T T										Every 12 months						
	Normal		T T T T T T T T T T T T										Every 12 months						
	Severe		T T T T T T T T T T T T										Every 6 months						
Suspension ball joints and dust covers	Normal		I I I I I I I I I I I I										Every 24 months		●	●	●	●	
	Severe		I I I I I I I I I I I I										Every 12 months		●	●	●	●	
	Normal		I I I I I I I I I I I I										Every 12 months						
	Severe		I I I I I I I I I I I I										Every 6 months						
Shift lever of 6-speed manual transmission (on both petrol and Diesel models)		I I I I I I I I I I I I												●		●			
Automatic transmission fluid	Toyota Genuine ATF WS	Normal		I I I I I I I I I I I I										Every 36 months					
		-		I I I I I I I I I I I I										R					
		Normal		I I I I I I I I I I I I										I: Every 24 months R: Every 60 months					
		Severe		I I I I I I I I I I I I										Every 48 months		●		●	
	Toyota Genuine CVTF TC	Normal		I I I I I I I I I I I I										Every 48 months					
		Severe		I I I I I I I I I I I I										R					
	Toyota Genuine CVTF FE	Normal		I I I I I I I I I I I I										Every 48 months		●		●	
		Severe		I I I I I I I I I I I I										R					
Automatic transmission fluid cooler hoses and connections		I I I I I I I I I I I I										Every 36 months							
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)	API Gear oil GL-5	Normal		I I I I I I I I I I I I										Every 48 months					
		Severe		I I I I I I I I I I I I										R					
	Toyota Genuine Transfer Gear oil LF	Normal		I I I I I I I I I I I I										Every 48 months					
		Severe		I I I I I I I I I I I I										R					
	LV Gear oil API GL-4	Normal		I I I I I I I I I I I I										Every 48 months		●		●	
		Severe		I I I I I I I I I I I I										R					
Transfer oil	API Gear oil GL-5		R R R R R R R R R R R R										Every 48 months						
	API Gear oil GL-5		I I I I I I I I I I I I										Every 48 months						
	Severe		I I I I I I I I I I I I										R						
	Toyota Genuine Transfer Gear oil LF		I I I I I I I I I I I I										Every 48 months						
	Severe		I I I I I I I I I I I I										R						
	Toyota Genuine Transfer gear oil LL80 (preferred), Toyota Genuine Differential Oil LX (API: GL-5)		I I I I I I I I I I I I										Every 48 months						
	Normal		I I I I I I I I I I I I										Every 48 months						
	Severe		I I I I I I I I I I I I										R						
	Normal		I I I I I I I I I I I I										Every 48 months						
	Severe		I I I I I I I I I I I I										R						

*1: After 120 months from the vehicle registration date, inspect every 24 months.

*: NDE and ADE only
*: For Diesel engine, valvematic gasoline engine and turbo charger gasoline model only

*: NDE and ADE only
*: For Diesel engine, valvematic gasoline engine and turbo charger gasoline model only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:				ODOMETER READING												Starting Year/Month of Production	Model Code							
				Months																				
				× 1,000 km												Auris	Auris HV	Auris TS	Auris TS HV					
				× 1,000 miles												NRE180	ZWE186	NRE180	ZWE186					
MAINTENANCE ITEMS																ZRE185		ZRE185						
																NDE180		NDE180						
																2015/05(MC)	2015/05(MC)	2015/05(MC)	2015/05(MC)					
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal																				
			Severe																					
		A/T model	LV Gear oil API GL-4	Normal																	●		●	
				Severe																	●		●	
			Toyota Genuine ATF WS	Normal							I											●		●
				Severe							I												●	
	Toyota Genuine CVTF TC	Normal																						
		Severe																						
	Toyota Genuine CVTF FE	Normal																		●		●		
		Severe																		●		●		
	Differential separated from transmission (API Gear oil GL-5)																							
	Rear differential oil	API Gear oil GL-5		Normal																				
RAV4 HV (4WD), NX300h (4WD) and RX450h/450hL (4WD) only		Severe																						
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease			NLGI No. 2	Normal																				
				Severe			R	R	R	R														
Front and rear suspension				Normal															●	●	●	●		
				Severe			I	I	I	I									●	●	●	●		
Active height control suspension fluid - Suspension fluid AHC or equivalent																								
Active height control gas chamber																								
Bolts and nuts on chassis and body *2				Severe only			T	T	T	T									●	●	●	●		
Tires and inflation pressure Tyres, lights, wiper blades and washer fluid				Normal															●	●	●	●		
				Severe			I	I	I	I									●	●	●	●		
A/C filter- Particle filter	Pollen removal type	Stamped "C", "E", "K", or "N"	Normal																●	●*	●	●*		
			Dusty road*4																●	●*	●	●*		
		Stamped "P" or "L"	Normal																					
			Dusty road*4																					
	Standard type & high efficiency type	Normal																						
		Dusty road*4																						
A/C filter - Combination filter	High efficiency type	Normal																						
		Dusty road*4																						
		Normal*3																						
		Dusty road*4																						
Air conditioner filter Aygo only																								
Corrosion Inspection																								

1*: with Solar power ventilation system
 2*: For seat mounting bolts, front and rear suspension member retaining bolts.
 3*: For New models, model changed or minor change vehicles, produced from January 2015
 4*: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry

*: stamped "C"

*: stamped "C"

MAINTENANCE SCHEDULE - EUROPE 20,000 km/12,500 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.
 R: Replace or change or lubricate.
 S: Special C: Clean

DIESEL ENGINE

SERVICE INTERVALS: Odometer reading or months, whichever comes first	ODOMETER READING	Months (): for reference	Starting Year/Month of Production	Model Code	Engine Code	Auris		Auris T/S	
						1WW Euro6 (1.6D) WWE185	2015/05	2017/10	1WW Euro6 (1.6D) WWE185
	× 1,000 km	1 10 20 30 40 50 60 70 80 90 100							
	× 1,000 miles	1 6.25 12.5 18.75 25 31.25 37.5 43.75 50 56.25 62.5							
Drive belt	V-ribbed belt	Inspect at 100.000 km (62,500 miles). After, inspect every 20.000 km (12,500 miles)				●	●	●	●
Engine oil ACEA: C2	0W-30, 5W-30	Normal*3							
		Severe*3	R R R R R R R R R R						
Engine oil ACEA	5W-30 PFE 1WW/2WW	*3	Replace every 20.000 km (12.500 miles) or when the reminder light illuminates			●*	●*	●*	●*
Engine oil filter		Normal*3	R R R R R R R R R R						
		Severe*3	R R R R R R R R R R						
		3	Replace every 20.000 km (12.500 miles) or when the reminder light illuminates				●	●*	●*
Cooling and heater system *1			I I I I I I			●	●	●	●
Engine coolant (Include intercooler coolant)	S-LLC (pink) *2		I I I I I I						
	Premium-LLC 1WW/2WW *4	First replace at 160,000 km (100,000 miles); then, every 80.000 km (50.000 miles)							
		First replace at 160,000 km (100,000 miles); then, every 80,000 km (25,000 miles)					●	●	●
Exhaust pipes and mountings			I I I I I I			●	●	●	●
Fuel filter	Drain water		I I I I I I			●	●	●	●
	0 0			R		●	●	●	●
Diesel smoke			I			●	●	●	●
Air cleaner filter	Normal		I I R I I I			●	●	●	●
	Dusty road *5		I I I I I R I I I I			●	●	●	●
Fuel tank cap, fuel lines, connections			I I I I I I			●	●	●	●

*1: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
 *2: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 *3: **Engine oil; it is imperative to RESET the OMMS after EVERY oil change**
It is possible that the oil change reminder light illuminates before 20,000 km (12,500 miles); after, every 90.000 km (54.000 miles)
Should this happen, change the engine oil and oil filter and reset the OMMS.
 *4: **Engine coolant (1WW) only exists concentrated, 50% dilution.**
 *5: Roads in area where the pavement rate is low, or a cloud of dust often arises and the air is dry

*: Replace every 10.000 km or when the reminder light illuminates (For Bosnia and Herzegovina only).
 *: Replace every 10.000 km or when the reminder light illuminates (For Bosnia, Herzegovina and Macedonia only).
 *: Replace every 10.000 km or when the reminder light illuminates (For Bosnia and Herzegovina only).
 *: Replace every 10.000 km or when the reminder light illuminates (For Bosnia, Herzegovina and Macedonia only).

MAINTENANCE SCHEDULE - EUROPE 20,000 km/12,500 miles

CHASSIS AND BODY 1/2

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

T: Tighten to specified torque.

R: Replace or change or lubricate.

L: Lubricate

SERVICE INTERVALS: Odometer reading or months, whichever comes first	× 1,000 km	ODOMETER READING										Months	Starting Year/Month of Production	Model Code	Auris		Auris T/S			
		1	10	20	30	40	50	60	70	80	90				100	WWE185	WWE185	2015/05	2017/10	2015/05
MAINTENANCE ITEMS	× 1,000 miles	1	6.25	12.5	18.75	25	31.25	37.5	43.75	50	56.25	62.5								
Floor mat		Inspection at every maintenance													●	●	●	●		
Brake pedal and parking brake				I					I				Every 24 months			●	●	●	●	
Brake linings and drums of parking brake	Normal			I					I				Every 24 months							
	Severe		I	I	I	I	I	I	I	I	I	I	Every 12 months							
Brake pads and discs	Normal		I	I	I	I	I	I	I	I	I	I	Every 12 months			●	●	●	●	
	Severe	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			●	●	●	●	
Clutch fluid	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4			I					I				Every 24 months							
		I	I	I	I	I	I	I	I	I	I	I	Every 24 months			●	●	●	●	
Brake fluid	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R				R				Every 24 months			●	●	●	●	
Brake pipes and hoses			I	I	I	I	I	I	I	I	I	I	Every 24 months			●	●	●	●	
Steering wheel, linkage and steering gear box	Normal		I	I	I	I	I	I	I	I	I	I	Every 24 months			●	●	●	●	
	Severe	I	I	I	I	I	I	I	I	I	I	I	Every 12 months			●	●	●	●	
Drive shaft boots	Normal		I	I	I	I	I	I	I	I	I	I	Every 24 months			●	●	●	●	
	Severe	I	I	I	I	I	I	I	I	I	I	I	Every 12 months			●	●	●	●	
Suspension ball joints and dust covers	Normal		I	I	I	I	I	I	I	I	I	I	Every 24 months			●	●	●	●	
	Severe	I	I	I	I	I	I	I	I	I	I	I	Every 12 months			●	●	●	●	
Shift lever of 6-speed manual transmission				I					I							●	●	●	●	
Automatic transmission fluid	Toyota Genuine ATF WS	Normal					I						Every 48 months							
		Severe			I				R				I: Every 36 months R: Every 72 months							
Manual transmission oil	LV Gear oil API GL-4	Normal					I						Every 48 months			●	●	●	●	
		Severe					R						Every 48 months			●	●	●	●	
Transfer oil	API Gear oil GL-5				R				R				Every 48 months							

MAINTENANCE SCHEDULE - EUROPE 20,000 km/12,500 miles

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first				ODOMETER READING												Starting Year/Month of Production	Model Code	Auris		Auris T/S		
				Months														WWE185		WWE185		
MAINTENANCE ITEMS				× 1,000 km	1	10	20	30	40	50	60	70	80	90	100	2015/05 2016/04 2016/07	2017/10	2015/05 2016/04 2016/07	2017/10			
				× 1,000 miles	1	6.25	12.5	18.75	25	31.25	37.5	43.75	50	56.25	62.5							
Front Differential oil	M/T model	LV Gear oil API GL-4	Normal						I							Every 48 months	●	●	●	●		
			Severe						R								Every 48 months	●	●	●	●	
	A/T model	Toyota Genuine ATF WS	Normal						I								Every 48 months					
			Severe						I				R				I: Every 36 months R: Every 72 months					
Rear differential		API Gear oil GL-5							R				R			Every 48 months						
Front and rear suspension				Normal			I		I				I		I	Every 24 months	●	●	●	●		
				Severe		I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	●	●	●
Bolts and nuts on chassis and body *1				Severe only			T		T			T		T	Every 12 months	●	●	●	●			
Tires and inflation pressure				Normal			I		I			I		I		Every 12 months	●	●	●	●		
				Severe		I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●	●	●
Particle filter/Cabin Air Filter			Standard type	Normal			I		R			I		R								
				Dusty road		I	R	I	R	I	R	I	R	I	R							
			Pollen removal type	Normal						I		R			I		R					
				Dusty road		I	R	I	R	I	R	I	R	I	R	I	R					
				Normal						R		R			R		R		●	●	●	●
				Dusty road		R	R	R	R	R	R	R	R	R	R	R	R	R	●	●	●	●
Combination filter		Combination filter (High efficiency type)	Normal				I		R			I		R								
			Dusty road		I	R	I	R	I	R	I	R	I	R								
Corrosion Inspection									I				I		Every 24 months	●	●	●	●			

1*: For seat mounting bolts, front and rear suspensions member retaining bolts