

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 milesIncludes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

MAINTENANCE OPERATIONSI: Inspect and correct or replace as necessary.
R: Replace or change or lubricate. F: Fill**GASOLINE ENGINE**

SERVICE INTERVALS:		ODOMETER READING											TMC Auris		TMUK TMMT Auris					
Odometer reading or months, whichever comes first													4ZZ-FE (1.4)	1ZR-FE (1.6)	4ZZ-FE (1.4)	1ZR-FE (1.6)				
MAINTENANCE ITEMS		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months	ZZE150	ZRE151	ZZE150	ZRE151
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	() : for reference	06/10	06/10	07/02	07/02
Timing Belt		Replace every 150,000 km (90,000 miles)											—							
Valve Clearance (Sensory Inspection)*1													*I (Every 72 months)	●		●				
Drive belt	V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)											Initial: 72 and then every 12 months	●	●	●	●			
Engine oil (API: SH, SJ) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months				
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months				
Engine oil (API: SJ, SL) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months				
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months				
Engine oil (API: SL, SM) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months	●	●	●	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●	●	●
Engine oil filter	Normal		R		R		R		R		R		R		R	Every 12 months	●	●	●	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●	●	●
Cooling and heater system *2					I				I					I	Every 24 months	●	●	●	●	
Engine coolant	LLC (red/green) *3											R		R	Initial: 36 months					
	S-LLC (pink) *4				I				I					I		●	●	●	●	
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)												●	●	●	●			
Inverter coolant	S-LLC (pink) *4				I				I					I						
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)																		
Exhaust pipes and mountings					I				I					I	Every 24 months	●	●	●	●	
Spark plugs	Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)											—		●		●			
	Others				I				R					I	I: Every 24 months R: Every 48 months	●		●		
Battery		No maintenance											—							
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)											15 years							
Fuel injection system			F		F		F		F		F		F		F	—				
Air cleaner filter (from October 2002, applicable to all models in production)	Normal		I		I		I		R		I		I		I	I: Every 24 months R: Every 48 months	●	●	●	●
	Dusty road		I	I	I	I	I	I	R	I	I	I	I	I	I	I: Every 12 months R: Every 48 months	●	●	●	●
Air cleaner filter	Normal		I		I		R		I		I		R		R	I: Every 24 months R: Every 48 months				
	Dusty road	Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.											—							
Fuel tank cap, fuel lines, connections and fuel vapor control valve					I				I					I	Every 24 months	●	●	●	●	
Charcoal canister	*5												—	●	●	●	●			
	Others												—	●	●	●	●			
	Aygo only	Normal												—						
	Severe												—							
Charcoal canister filter	Aygo only	Normal												—						
	Severe												—							
	Normal												—							
	Severe												—							

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; LC120 and LC V8 running change; iQ new model; Avensis Full Model change

Engine oil layout adjusted (information not changed)

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.
 R: Replace or change or lubricate.
 S: Special C: Clean

DIESEL ENGINE

SERVICE INTERVALS:		ODOMETER READING											Months		TMC Auris		TMUK TMMT Auris				
Odometer reading or months, whichever comes first													() : for reference		1ND-TV (1.4 D-4D)	1AD-FTV 2.0 D-4D DPR/CCo	1ND-TV (1.4 D-4D)	1AD-FTV (2.0 D-4D) DPR/CCo	2AD-FHV (2.2 D-4D)		
MAINTENANCE ITEMS															NDE150	ADE150	NDE150	ADE150	ADE157		
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90			06/10	06/10	07/02	07/02	07/02
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54							
Timing Belt	*6	I											—								
		Replace every 105,000 km (60,000 miles)											—								
		Replace every 150,000 km (90,000 miles)											—								
Timing pulley*6		I																			
Timing belt cover*6		C																			
Valve Clearance	*I : Sensory Inspection												(Every 48 months)		●		●				
	A: Adjust	A A A A A A											Every 12 months								
Drive belt	Normal belt	I I I I I I											Every 12 months								
	V-ribbed belt	Inspect at 105,000 km (63,000 miles). After, inspect every 15,000 km (9,000 miles)											Initial 72 months; then, every 12 months		●	●	●	●	●		
Engine oil (ACEA: B1; API: CF-4 or CF)*1 *: Engines WITHOUT DPF	Normal	R R R R R R											Every 12 months		●	●*	●	●*	●		
	Severe	R R R R R R											Every 6 months		●	●*	●	●*	●		
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months													●	●*	●	●*	●		
Engine oil (ACEA: C2 preferred or B1; API: CF-4 or CF)*1 *: Engines WITH DPF	Normal	R R R R R R											Every 12 months			●**		●**			
	Severe	R R R R R R											Every 6 months			●**		●**			
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months														●**		●**			
Engine oil filter	Normal	R R R R R R											Every 12 months		●	●	●	●	●		
	Severe	R R R R R R											Every 6 months		●	●	●	●	●		
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months													●	●	●	●	●		
Cooling and heater system *2		I											Every 24 months		●	●	●	●	●		
Engine coolant	LLC (red/green) *3	R											Initial: 36 months								
	S-LLC (pink) *4	I													●	●	●	●	●		
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)													●	●	●	●	●		
Exhaust pipes and mountings		I I I I I I											Every 12 months								
		I											Every 24 months		●	●	●	●	●		
Battery		No maintenance											—								
Fuel injection pipes		Replace every 150,000 km (90,000 miles)											—								
Fuel filter		R											Every 72 months		●	●	●	●	●		
	In-tank filter and in-line filter	R											Every 90 months								
Fuel pump		Replace every 300,000 km (180,000 miles)																			
Diesel smoke		I											Every 48 months								
		I											Every 48 months		●	●	●	●	●		
Air cleaner filter (from October 2002, applicable to all models in production)	Normal	I I I I I R I I											I: Every 24 months R: Every 48 months		●	●	●	●	●		
	Dusty road	I I I I I I I R I I I I											I: Every 12 months R: Every 48 months		●	●	●	●	●		
Air cleaner filter	Normal	I I R I I R											I: Every 12 months R: Every 48 months								
	Dusty road	Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.											—								
Air flow meter (for EURO IV vehicles)*5		S											Every 48 months								
Fuel tank cap, fuel lines, connections		I											Every 24 months		●	●	●	●	●		

*1: You may also use API CE or CD. NMSC's ch NMSC's ch NMSC's ch NMSC's ch NMSC's choice
 2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean: engines WITHOUT DPF
 *3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months. **: engines WITH DPF
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids) *: engines WITHOUT DPF
 *5: Blow air to the sensor intermittently for about 30 seconds **: engines WITH DPF
 *6: For vehicles often operated in extremely dusty conditions, such as mining. Inspect for cracks on the timing belt and abnormal wear on the timing pulley. Remove dust and sand from the timing belt cover.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only
 I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING										Months		TMC Auris	TMUK TMMT Auris			
Odometer reading or months, whichever comes first																		
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90			
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54			
Clutch pedal, return spring and damper - Mechanical type			I			I			I			I			I			
Brake pedal and parking brake						I			I			I			I	Every 24 months	● ●	
Brake linings and drums (include brake linings of parking brake)		Normal				I			I			I			I	Every 24 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months		
Brake pads and discs		Normal				I			I			I			I	Every 12 months	● ●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	● ●	
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3				I			I			I			I	Every 24 months		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R			R			R			R	Every 24 months	● ●	
		SAE J1704 or FMVSS No. 116 DOT4				I			I			I			I	Every 24 months		
Clutch fluid for auto clutch system						R			R			R			R	Every 24 months		
Sequential M/T system fluid						I			I			I			I	Every 24 months		
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3				R			R			R			R	Every 24 months		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R			R			R			R	Every 24 months	● ●	
		SAE J1704 or FMVSS No. 116 DOT4				R			R			R			R	Every 24 months		
Brake pipes and hoses						I			I			I			I	Every 24 months	● ●	
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg	Replace every 195,000 km (121,000 miles) or 120 months										11**	11**				
		Others	Inspect every 195,000 km (121,000 miles) or 120 months															
Power steering fluid		AT fluid DEXRON® II or III				I			I			I			I	Every 24 months		
		TOYOTA P.S. fluid EH or equivalent				I			I			I			I	Every 24 months		
Steering wheel, linkage and steering gear box		Normal				I			I			I			I	Every 24 months	● ●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●	
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.															
Propeller shaft		NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	L	Every 24 months		
			Severe	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months		
Propeller shaft bolts		Normal				T			T			T			T	Every 24 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months		
Drive shaft boots		Normal				I			I			I			I	Every 24 months	● ●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●	
		Normal				I			I			I			I	Every 12 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months		
Drive shaft bolts		Normal				T			T			T			T	Every 24 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months		
		Normal				T			T			T			T	Every 12 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months		
Suspension ball joints and dust covers		Normal				I			I			I			I	Every 24 months	● ●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●	
		Normal				I			I			I			I	Every 12 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months		
Shift lever of 6-speed manual transmission						I			I			I			I		● *	
Automatic transmission fluid		Vehicles produced before July, '99		Normal					I			R			I	I: Every 12 months R: Every 48 months		
				Severe	I				R			I			R	I: Every 12 months R: Every 24 months		
		Vehicles produced after August, '99		Toyota Genuine ATF type T-IV		Normal							I			I	Every 36 months	
						Normal							I			I	Every 48 months	
				Toyota Genuine ATF WS		Normal							I			I	Every 36 months	
						Normal							I			I	Every 48 months	
				Toyota Genuine CVTF TC		Normal							I			I	Every 36 months	
						Severe							I			R	I: Every 36 months R: Every 72 months	
				Other		Normal							I			R	I: Every 36 months R: Every 72 months	
						Severe							I			R	I: Every 18 months R: Every 36 months	
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5		Normal							I				I	Every 48 months		
				Severe								R			R	Every 48 months		
		API Gear oil GL-4 or GL-5		Normal									I			I	Every 48 months	
				Severe									R			R	Every 48 months	● ●
		LV Gear oil API GL-4		Normal									I			I	Every 48 months	● ●
				Severe									R			R	Every 48 months	● ●
		Other (GL-4 or GL-5)		Normal							I			I	Every 48 months			
				Severe							R			R	Every 48 months			
Transfer oil		API Gear oil GL-4 or GL-5		Normal								I			I	Every 48 months		
				Severe								R			R	Every 48 months		
		API Gear oil GL-5		Normal									I			I	Every 48 months	
				Severe									R			R	Every 48 months	
		API Gear oil GL-5		Normal									I			I	Every 48 months	
				Severe									R			R	Every 48 months	
		Toyota Genuine Differential Oil LX85 (APT: GL-5)		Normal									I			I	Every 48 months	
				Severe									R			R	Every 48 months	
Toyota Genuine ATF WS		Normal									I			I	Every 48 months			
		Severe									I			R	I: Every 36 months R: Every 72 months			

*1: After 120 months from the vehicle registration date, inspect every 24 months.

11**: NDE150 only
 *: ADE150 only
 11***: NDE150 only
 *: ADE150,7

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												TMC	TMUK					
Odometer reading or months, whichever comes first														Auris	TMMT Auris					
		Months												ZZE150	ZZE150					
														ZRE151	ZRE151					
														NDE150	NDE150					
														ADE150	ADE150,7					
MAINTENANCE ITEMS		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90					
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	06/10	07/02			
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal							I									
			Severe									R								
		LV Gear oil API GL-4	Normal										I					●	●	
			Severe											R					●	●
		A/T model	Toyota Genuine ATF type T-IV	Normal									I							
				Normal										I						
	Severe														R					
	Toyota Genuine ATF WS		Normal										I							
			Normal											I						
			Severe													R				
	Toyota Genuine CVTF TC	Normal									I									
	Severe														R					
Differential separated from transmission (API Gear oil GL-5)															R					
Rear differential oil		API Gear oil GL-5													R					
		A/T fluid WS	Normal								I				I					
			Severe												R					
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease		NLGI No. 2	Normal								R				R					
			Severe			R		R					R		R					
Front and rear suspension		Normal					I								I					
		Severe				I		I							I					
Active height control suspension fluid - Suspension fluid AHC or equivalent															R					
Active height control gas chamber															I					
															I					
Bolts and nuts on chassis and body		Severe only				T		T		T		T		T						
Tires and inflation pressure		Normal						I							I					
		Severe				I		I		I		I		I						
Air conditioning filter		Normal													I					
		Dusty road				I		I		I		I		I						
		Normal						R		R		R		R						
		Dusty road				R		R		R		R		R						
		Normal & Dusty road						R		R		R		R						
Particle filter		Foldable type				I		R		I		R		I						
						I		I		I		I		I						
		Pollen removal type						R		I		R		I						
						I		R		I		R		I						
		Standard type & high efficiency type						R		R		R		R						
		Dusty road				R		R		R		R		R						
Combination filter (high efficiency type)		Normal				R		R		R		R		R						
		Dusty road				R		R		R		R		R						
		Replace when the service indicator light illuminates																		
Corrosion Inspection															I					
															I					

MAINTENANCE SCHEDULE - GENERAL 10,000 kmIncludes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

MAINTENANCE OPERATIONS
 I: Inspect and correct or replace as necessary.
 R: Replace or change or lubricate.
 F: Fill

GASOLINE ENGINE

SERVICE INTERVALS: Odometer reading or months, whichever comes first		× 1,000 km	ODOMETER READING																Months (): for reference	Auris (UK+TR)		
			1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75		80	ZZE150 07/02 07/08	1ZR-FE (1.6) ZRE151 07/02 07/08
MAINTENANCE ITEMS																						
Timing Belt			Replace every 150,000 km																—			
Valve Clearance	Sensory Inspection *1																		I	Every 96 months	●	●
Drive belts					I				I										I	Every 24 months	●	●
Engine oil (API: SJ, SL) (ILSAC)	Normal				R	R			R	R									R	Every 12 months		
	Severe				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		
Engine oil (API: SL, SM) (ILSAC)	Normal				R	R			R	R									R	Every 12 months	●	●
	Severe				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●
Engine oil filter	Normal				R	R			R	R									R	Every 12 months	●	●
	Severe				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●
Cooling and heater system *2			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●	●	
Engine coolant	S-LLC (pink) *4								I										I	Every 24 months	●	●
			First replace at 160,000 km; after, every 80,000 km																	●	●	
Inverter coolant	S-LLC (pink) *4								I										I	Every 24 months		
			First replace at 160,000 km; after, every 80,000 km																			
Exhaust pipes and mountings					I				I										I	Every 12 months	●	●
Spark plugs	Platinum or Iridium Tipped type		Replace every 100,000 km																—		●	
	Others								R										R	Every 48 months	●	
Battery					I	I			I	I									I	Every 12 months	●	●
Fuel filter (including the filter in the fuel tank)																			R	Every 96 months	●	●
	Aygo only								R										R	Every 48 months		
Fuel injection system *5					F	F			F	F									F	--		
			When the "Injector Maintenance Required" message is displayed on the multi-information display																			
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal				I			R										R	I: Every 24 months R: Every 48 months	●	●
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																	●	●	
	Normal					I			R										R	I: Every 24 months R: Every 48 months		
	Dusty road				I	I			I	R									R	I: Every 24 months R: Every 48 months		
TNF (Thin Non-woven Fabrics) type	Normal		Inspect every 10,000km/12months and replace every 100,000km/120months.																			
	Dusty road		Inspect every 5,000km/6months and replace every 100,000km/120months.																			
Fuel tank cap, fuel lines, connections and fuel vapor control valve			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●	●	
Charcoal canister									I										I	Every 24 months	●	●
	Aygo only								R										R	I: Every 24 months R: Every 48 months		
Charcoal canister filter	Aygo only								R										R	I: Every 24 months R: Every 48 months		

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil *API Gear oil GL-5* added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil *Toyota Genuine ATF WS* added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: *Toyota Genuine CVTF TC* added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or change R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING										Auris (UK+TR)	
Odometer reading or months, whichever comes first												ZZE150 ZRE151	
		× 1,000 km										07/02 07/08	
MAINTENANCE ITEMS													
Clutch pedal		No maintenance										●	
Clutch pedal return spring and damper		Aygo only											
Brake pedal and parking brake		I I I I I I I I I I I I										Every 6 months ●	
Brake linings and drums (include brake linings of parking brake)		Normal I I I I I I I I I I I I										Every 12 months	
		Severe I I I I I I I I I I I I										Every 6 months	
Brake pads and discs		Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3 I I I I I I I I I I I I										I: Every 6 months R: Every 24 months	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4 I I I I I I I I I I I I										I: Every 6 months R: Every 24 months ●	
		SAE J1704 or FMVSS No. 116 DOT4 I I I I I I I I I I I I										I: Every 6 months R: Every 24 months	
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3 I I I I I I I I I I I I										●	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4 I I I I I I I I I I I I										I: Every 6 months R: Every 24 months ●	
		SAE J1704 or FMVSS No. 116 DOT4 I I I I I I I I I I I I										Every 6 months	
Brake pipes and hoses		Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg Replace every 195.000 km (121.000 miles) or 120 months											
		Others Inspect every 200.000 km											
Power steering fluid		A/T fluid DEXRON® II or III I I I I I I I I I I I I										Every 6 months	
Steering wheel, linkage and steering gear box		Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
Front wheel alignment (side slip)		I I I I I I I I I I I I										Every 48 months	
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.											
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2 R R R R R R R R R R R R R R										Every 3 months	
Propeller shaft		NLGI No. 2 Normal L L L L L L L L L L L L										Every 6 months	
		Severe L L L L L L L L L L L L										Every 6 months	
Tightening bolts for propeller shaft		Normal T T T T T T T T T T T T										Every 12 months	
		Severe T T T T T T T T T T T T										Every 6 months	
		Normal T T T T T T T T T T T T										Every 6 months	
		Severe T T T T T T T T T T T T										Every 3 months	
Drive shaft boots		Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
Tightening bolts for drive shaft		Normal T T T T T T T T T T T T										Every 24 months	
		Severe T T T T T T T T T T T T										Every 12 months	
		Normal T T T T T T T T T T T T										Every 6 months	
		Severe T T T T T T T T T T T T										Every 3 months	
Suspension ball joints and dust covers		Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
Shift lever for 6-speed manual transmission		I I I I I I I I I I I I										--	
Automatic transmission fluid		WS Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 24 months R: Every 48 months ●	
		T-IV Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 24 months R: Every 48 months	
		Toyota Genuine CVTF TC I I I I I I I I I I I I										I: Every 24 months R: Every 48 months	
		A/T fluid D-II or DEXRON III Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 12 months R: Every 24 months	
Manual transmission oil		LV Gear oil API GL-4 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										●	
		API Gear oil GL-4 or GL-5 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R Every 48 months	
		API Gear oil GL-5 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R Every 48 months	
Transfer oil		Gear oil API GL-4 or GL-5 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R Every 48 months	
		Gear oil API GL-5 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R Every 48 months	
		Gear oil API GL-5 Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 12 months R: Every 48 months	
		Toyota Genuine Differential Oil LX85 (API GL-5) Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 12 months R: Every 48 months	
		Toyota Genuine ATF WS Normal I I I I I I I I I I I I										●	
		Severe I I I I I I I I I I I I										R I: Every 24 months R: Every 48 months	

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING													Months	Auris (UK+TR)							
Odometer reading or months, whichever comes first																ZZE150 ZRE151							
		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80		07/02 07/08		
MAINTENANCE ITEMS																							
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I								I	Every 48 months	●	
			Severe																		R	Every 48 months	●
		A/T model	WS	Normal									I								I	Every 24 months	●
				Severe																	R	I: Every 24 months R: Every 48 months	●
		T-IV	Normal										I								I	Every 24 months	
			Severe																		R	I: Every 24 months R: Every 48 months	
	Toyota Genuine CVTF TC	Normal										I								I	Every 24 months		
		Severe																		R	I: Every 24 months R: Every 48 months		
	Differential separated from transmission (API Gear oil GL-5)			Normal																	R	I: Every 12 months R: Every 48 months	
				Severe																	R	R: Every 24 months	
Normal																					R	I: Every 12 months R: Every 48 months	
Severe																					R	R: Every 24 months	
Rear differential oil	API Gear oil GL-5		Normal																	R	I: Every 12 months R: Every 48 months		
			Severe																	R	Every 24 months		
			Normal																		R	I: Every 12 months R: Every 48 months	
			Severe																		R	R: Every 24 months	
A/T fluid WS			Normal																I	Every 24 months			
			Severe																	R	I: Every 24 months R: Every 48 months		
Wheel bearing grease (tapered roller type wheel bearing only)		NLGI No. 2																	R	Every 12 months			
Front and rear suspension			Normal																	I	Every 12 months	●	
			Severe																	I	Every 6 months	●	
			Normal																		I	Every 6 months	
			Severe																		I	Every 3 months	
Active height control suspension fluid - Suspension fluid AHC or equivalent		Replace every 100,000 km															—						
Active height control gas chamber																					I: initial 48 months; then every 12 months		
Bolts and nuts on chassis and body		Severe only			T	T		T	T		T	T		T	T		T	T			Every 6 months	●	
Tires and inflation pressure					I	I		I	I		I	I		I	I		I	I			Every 6 months	●	
Lights, horn, wipers and washers					I	I		I	I		I	I		I	I		I	I			Every 6 months	●	
Particle filter	Pollen removal type		Normal																	C	●		
			Severe																	C	●		
	Standard type	Normal																		R			
		Severe																		R			
	Semi-standard type	Normal & Severe																		R			
		High efficiency type	Normal																	R			
High efficiency type	Severe																		R				
	High efficiency type	Normal & Severe																	R				
Combination filter		High efficiency type			R	R		R	R		R	R		R	R		R	R					
				Replace when the service indicator light illuminates																			
Air conditioner refrigerant amount																					Every 12 months	●	

*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - GENERAL 10,000 kmIncludes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

GASOLINE ENGINE		MAINTENANCE OPERATIONS														Auris and Corolla (JPP)						
		I: Inspect and correct or replace as necessary. R: Replace or change or lubricate. F: Fill														4ZZ-FE (1.4)	1ZR-FE (1.6)					
SERVICE INTERVALS:		ODOMETER READING														Months () : for reference	ZZE150	ZRE151				
Odometer reading or months, whichever comes first		× 1,000 km															06/10	06/10				
MAINTENANCE ITEMS		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80				
Timing Belt		Replace every 150,000 km														—						
Valve Clearance	Sensory Inspection *1																		I	Every 96 months	●	
Drive belts				I						I									I	Every 24 months	●	●
Engine oil (API: SJ, SL) (ILSAC)	Normal			R	R		R	R		R	R		R	R		R	R		R	Every 12 months		
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SL, SM) (ILSAC)	Normal			R	R		R	R		R	R		R	R		R	R		R	Every 12 months	●	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Engine oil filter	Normal			R	R		R	R		R	R		R	R		R	R		R	Every 12 months	●	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Cooling and heater system *2		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months														●	●					
Engine coolant	S-LLC (pink) *4									I									I	Every 24 months	●	●
		First replace at 160,000 km; after, every 80,000 km														●	●					
Inverter coolant	S-LLC (pink) *4									I									I	Every 24 months		
		First replace at 160,000 km; after, every 80,000 km																				
Exhaust pipes and mountings										I									I	Every 12 months	●	●
Spark plugs	Platinum or Iridium Tipped type	Replace every 100,000 km														—		●				
	Others										R								R	Every 48 months	●	
Battery				I		I			I		I			I				I	I	Every 12 months	●	●
Fuel filter (including the filter in the fuel tank)																			R	Every 96 months	●	●
	Aygo only																		R	Every 48 months		
Fuel injection system *5				F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	--		
	When the "Injector Maintenance Required" message is displayed on the multi-information display																					
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal								I									R	I: Every 24 months R: Every 48 months	●	●
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.														●	●				
	Normal									R									R	I: Every 24 months R: Every 48 months		
	Dusty road		I	I		I	R		I	I		I							R	I: Every 24 months R: Every 48 months		
TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																				
	Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																				
Fuel tank cap, fuel lines, connections and fuel vapor control valve		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months														●	●					
Charcoal canister										I									I	Every 24 months	●	●
	Aygo only																		R	I: Every 24 months R: Every 48 months		
Charcoal canister filter	Aygo only																		R	I: Every 24 months R: Every 48 months		

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: "Toyota Genuine CVTF TC" added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING												Auris and Corolla (JPP)						
Odometer reading or months, whichever comes first																				
× 1,000 km		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	ZZE150 ZRE151
MAINTENANCE ITEMS														06/10						
Clutch pedal		No maintenance												●						
Clutch pedal return spring and damper		I												●						
Brake pedal and parking brake		I I I I I I I I I I I I I I I I I I I I												●						
Brake linings and drums (Include brake linings of parking brake)		Normal I												●						
		Severe I												●						
Brake pads and discs		Normal I												●						
		Severe I												●						
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3 I												●						
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4 I												●						
		SAE J1704 or FMVSS No. 116 DOT4 I												●						
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3 I												●						
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4 I												●						
		SAE J1704 or FMVSS No. 116 DOT4 I												●						
Brake pipes and hoses		Normal I												●						
		Severe I												●						
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg Replace every 195,000 km (121,000 miles) or 120 months																		
		Others Inspect every 200,000 km																		
Power steering fluid		A/T fluid DEXRON® II or III I												●						
Steering wheel, linkage and steering gear box		Normal I												●						
		Severe I												●						
Front wheel alignment (side slip)		I												●						
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																		
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2 R												●						
Propeller shaft		NLGI No. 2 Normal L												●						
		Severe L												●						
Tightening bolts for propeller shaft		Normal T												●						
		Severe T												●						
Drive shaft boots		Normal I												●						
		Severe I												●						
Tightening bolts for drive shaft		Normal T												●						
		Severe T												●						
Suspension ball joints and dust covers		Normal I												●						
		Severe I												●						
Shift lever for 6-speed manual transmission		I												●						
Automatic transmission fluid		WS Normal I												●						
		Severe I												●						
		T-IV Normal I												●						
		Severe I												●						
		Toyota Genuine CVTF TC I												●						
		A/T fluid D-II or DEXRON III Normal I												●						
		Severe I												●						
Manual transmission oil		LV Gear oil API GL-4 Normal I												●						
		Severe I												●						
		API Gear oil GL-4 or GL-5 Normal I												●						
		Severe I												●						
		API Gear oil GL-5 Normal I												●						
		Severe I												●						
Transfer oil		Gear oil API GL-4 or GL-5 Normal I												●						
		Severe I												●						
		Gear oil API GL-5 Normal I												●						
		Severe I												●						
		Gear oil API GL-5 Normal I												●						
		Severe I												●						
		Toyota Genuine Differential Oil LX85 (API GL-5) Normal I												●						
		Severe I												●						
		Toyota Genuine ATF WS Normal I												●						
		Severe I												●						

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												Months	Auris and Corolla (JPP)										
Odometer reading or months, whichever comes first															ZZE150 ZRE151										
		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80						
MAINTENANCE ITEMS																				06/10					
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I								I	Every 48 months	●			
			Severe																		R	Every 48 months	●		
		A/T model	API Gear oil GL-4 or GL-5	Normal										I								I	Every 48 months		
			Severe																			R	Every 48 months		
	Differential separated from transmission (API Gear oil GL-5)	WS	Normal										I								I	Every 24 months	●		
			Severe																		R	I: Every 24 months R: Every 48 months	●		
		T-IV	Normal											I								I	Every 24 months		
			Severe																			R	I: Every 24 months R: Every 48 months		
		Toyota Genuine CVTF TC	Normal											I								I	Every 24 months		
			Severe																			R	I: Every 24 months R: Every 48 months		
Rear differential oil	API Gear oil GL-5	Normal					I					R								R	I: Every 12 months R: Every 48 months				
		Severe						R						R						R	R: Every 24 months				
		Normal																		R	I: Every 12 months R: Every 48 months				
		Severe																			R	I: Every 12 months R: Every 48 months			
	A/T fluid WS	Normal												I							I	Every 24 months			
		Severe																			R	I: Every 24 months R: Every 48 months			
		Normal																			R	Every 24 months			
		Severe																			R	I: Every 12 months R: Every 48 months			
Wheel bearing grease (tapered roller type wheel bearing only)		NLGI No. 2																		R	Every 12 months				
Front and rear suspension		Normal																		I	Every 12 months	●			
		Severe																		I	Every 6 months	●			
		Normal																		I	Every 6 months				
		Severe																		I	Every 3 months				
Active height control suspension fluid - Suspension fluid AHC or equivalent		Replace every 100.000 km												—											
Active height control gas chamber																						I: initial 48 months; then every 12 months			
Bolts and nuts on chassis and body		Severe only																				Every 6 months	●		
Tires and inflation pressure																						Every 6 months	●		
Lights, horn, wipers and washers																						Every 6 months	●		
Particle filter	Pollen removal type	Normal																						●	
		Severe																							●
	Standard type	Normal																							●
		Severe																							●
	Semi-standard type	Normal & Severe																							
	High efficiency type	Normal																							
Combination filter	High efficiency type	Normal & Severe																							
Air conditioner refrigerant amount																						Every 12 months	●		

*3: Customers should inspect by themselves