

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only
 I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:

Odometer reading or months, whichever comes first

		ODOMETER READING										Avenis			New Avenis				
		Months										AZT250 ZZT25# CDT250	AZT25# ZZT25# CDT250 ADT251	ZZT25# AZT25# ADT25#	ZRT270,1,2 ADT270,1				
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	03/01	05/03		08/11	
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54					
MAINTENANCE ITEMS																			
Clutch pedal, return spring and damper - Mechanical type		I																	
Brake pedal and parking brake		I										Every 24 months			●				
Brake linings and drums (include brake linings of parking brake)		Normal		I										Every 24 months			●		
		Severe		I										Every 12 months			●		
Brake pads and discs		Normal		I										Every 12 months			●		
		Severe		I										Every 6 months			●		
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3		I										Every 24 months					
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		R										Every 24 months			●*		
		SAE J1704 or FMVSS No. 116 DOT4		I										Every 24 months			●**		
Clutch fluid for auto clutch system		R										Every 24 months			●				
Sequential M/T system fluid		I										Every 24 months							
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3		R										Every 24 months					
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		R										Every 24 months			●		
		SAE J1704 or FMVSS No. 116 DOT4		R										Every 24 months			●		
Brake pipes and hoses		I										Every 24 months			●				
Vacuum pump for brake booster (Diesel engines only)		Ixtetic (Luk-AT) or Pierburg		Replace every 195,000 km (121,000 miles) or 120 months										11			11*		
		Others		Inspect every 195,000 km (121,000 miles) or 120 months										14			14		
Power steering fluid		AT fluid DEXRON® II or III		I										Every 24 months			●		
		TOYOTA P.S. fluid EH or equivalent		I										Every 24 months			●		
Steering wheel, linkage and steering gear box		Normal		I										Every 24 months			●		
		Severe		I										Every 12 months			●		
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																	
Propeller shaft		NLGI No. 1 or No. 2		Normal		L										Every 24 months			
		Severe		L										Every 12 months					
Propeller shaft bolts		Normal		T										Every 24 months					
		Severe		T										Every 12 months					
Drive shaft boots		Normal		I										Every 24 months			●		
		Severe		I										Every 12 months			●		
Drive shaft bolts		Normal		I										Every 12 months					
		Severe		I										Every 6 months					
Suspension ball joints and dust covers		Normal		I										Every 24 months			●		
		Severe		I										Every 12 months			●		
		Normal		I										Every 12 months					
		Severe		I										Every 6 months					
Shift lever of 6-speed manual transmission		I										-			●*				
Automatic transmission fluid		Vehicles produced before July, '99		Normal		I										I: Every 12 months R: Every 48 months			
				Severe		I										I: Every 12 months R: Every 24 months			
		Toyota Genuine ATF type T-IV		Normal		I										Every 36 months			●
				Severe		I										Every 48 months			●
		Toyota Genuine ATF WS		Normal		I										I: Every 36 months R: Every 72 months			●
				Severe		I										I: Every 36 months R: Every 72 months			●
		Toyota Genuine CVTF TC		Normal		I										Every 48 months			●***
				Severe		I										I: Every 36 months R: Every 72 months			●***
		Other		Normal		I										I: Every 36 months R: Every 72 months			●****
				Severe		I										I: Every 36 months R: Every 72 months			●****
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5		Normal		I										Every 48 months			
				Severe		R										Every 48 months			
		API Gear oil GL-4 or GL-5		Normal		I										Every 48 months			●
				Severe		R										Every 48 months			●
		LV Gear oil API GL-4		Normal		I										Every 48 months			●
				Severe		R										Every 48 months			●
Other (GL-4 or GL-5)		Normal		I										Every 48 months					
		Severe		R										Every 48 months					
Transfer oil		API Gear oil GL-4 or GL-5		Normal		I										Every 48 months			
				Severe		R										Every 48 months			
		API Gear oil GL-5		Normal		I										Every 48 months			
				Severe		R										Every 48 months			
		Toyota Genuine Differential Oil LX85 (APL GL-5)		Normal		I										Every 48 months			
				Severe		R										Every 48 months			
		Toyota Genuine ATF WS		Normal		I										Every 48 months			
				Severe		I										I: Every 36 months R: Every 72 months			

*1: After 120 months from the vehicle registration date, inspect every 24 months.

*: Except **
 **: ZRT27# with EB6# and EC6# M/T
 ***: models with U241E and U660E A/T
 ****: models with K111 and K311 CVT

11: Includes necessary replacement of the blades
 14: vehicles with AZ and CD engines
 11*: CDT250 - Includes necessary replacement of the blades
 11**: ADT25#
 14: AZT25#, CDT250 and ADT251 only
 18: except ADT251
 19: ADT251 only
 *: ADT251 only
 14: AZT25# and ADT251 only
 18: except ADT251
 19: ADT251 only

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING											Avensis			New Avensis							
Odometer reading or months, whichever comes first													Months			ZRT27#							
													AZT250	AZT25#	ZZT25#	ADT27#							
													ZZT25#	CDT25#	AZT25#	ADT25#							
													CDT25#	CDT250	ADT251								
MAINTENANCE ITEMS		x 1,000 miles											03/01	05/03	06/04(MC) 07/06	08/11							
Front Differential oil	M/T model	API Gear oil GL-4 or GL-5	Normal							I							Every 48 months	●	18	18			
			Severe								R							Every 48 months	●	18	18		
		LV Gear oil API GL-4	Normal								I							Every 48 months		19	19	●	
			Severe									R						Every 48 months		19	19	●	
		A/T model	Toyota Genuine ATF type T-IV	Normal								I					I	Every 36 months	●	●			
				Normal										I					Every 48 months			●	
	Severe															R	I: Every 36 months R: Every 72 months	●	●	●			
	Toyota Genuine ATF WS		Normal									I					I	Every 36 months					
			Normal										I					Every 48 months				● ***	
			Severe													R	I: Every 36 months R: Every 72 months				● ***		
	Toyota Genuine CVTF TC	Normal										I					Every 48 months				● ****		
		Severe													R	I: Every 36 months R: Every 72 months				● ****			
Differential separated from transmission (API Gear oil GL-5)																Every 48 months							
Rear differential oil	API Gear oil GL-5															Every 48 months							
	A/T fluid WS	Normal													I	Every 36 months							
Severe															R	I: Every 36 months R: Every 72 months							
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease	NLGI No. 2	Normal													R	Every 24 months							
		Severe													R	Every 12 months							
Front and rear suspension	Normal														I	Every 24 months	●	●	●	●			
	Severe														I	Every 12 months	●	●	●	●			
Active height control suspension fluid - Suspension fluid AHC or equivalent															R	—							
Active height control gas chamber															I	I: initial 48 months; then every 12 months							
Bolts and nuts on chassis and body		Severe only													T	Every 12 months	●	●	●	●			
Tires and inflation pressure	Normal														I	Every 24 months	●	●	●	●			
	Severe														I	Every 12 months	●	●	●	●			
Air conditioning filter	Normal														I	Every 24 months							
	Dusty road														I	Every 12 months							
	Normal														R	Every 24 months							
	Dusty road														R	Every 12 months							
	Normal & Dusty road														R	Every 24 months							
Particle filter	Foldable type														R	"Clean" replaced by "Inspect"							
															R	Refer to TME letter of October 2007 on "Potential Health Risk From							
	Pollen removal type														R	Cleaning of Cabin Air Filter Elements							
Combination filter (high efficiency type)	Standard type & high efficiency type	Normal													R		●	●	●	●			
		Dusty road													R		●	●	●	●			
Corrosion Inspection	Replace when the service indicator light illuminates	Normal													R								
		Dusty road													R								

18: except ADT251
 19: ADT251 only
 18: except ADT251
 19: ADT251 only
 ***: models with U241E and U660E A/T
 ****: models with K111 and K311 CVT

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: "Toyota Genuine CVTF TC" added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING												Avenis											
Odometer reading or months, whichever comes first														AZT25# ZZT251											
× 1,000 km		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	05/03	06/04(MC)				
MAINTENANCE ITEMS																									
Clutch pedal		No maintenance													●	●									
Clutch pedal return spring and damper		Aygo only												I	I										
Brake pedal and parking brake				I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●					
Brake linings and drums (Include brake linings of parking brake)		Normal												I	I										
		Severe												I	I	I	I	I	I	I	I	Every 6 months	●	●	
Brake pads and discs		Normal												I	I	I	I	I	I	I	I	Every 6 months	●	●	
		Severe												I	I	I	I	I	I	I	I	Every 3 months	●	●	
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3												I	I	I	R	I	I	I	I	I: Every 6 months R: Every 24 months				
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4												I	I	I	R	I	I	I	I	I: Every 6 months R: Every 24 months				
	SAE J1704 or FMVSS No. 116 DOT4												I	I	I	R	I	I	I	I	I: Every 6 months R: Every 24 months	●	●		
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3												I	I	I	I	I	I	I	I	Every 6 months				
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4												I	I	I	R	I	I	I	R	I: Every 6 months R: Every 24 months				
	SAE J1704 or FMVSS No. 116 DOT4												I	I	I	R	I	I	I	I	Every 6 months	●	●		
Brake pipes and hoses		Normal												I	I	I	I	I	I	I	I	Every 12 months	●	●	
		Severe												I	I	I	I	I	I	I	I	Every 6 months	●	●	
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg												Replace every 195.000 km (121.000 miles) or 120 months											
		Others												Inspect every 200.000 km											
Power steering fluid		A/T fluid DEXRON® II or III												I	I	I	I	I	I	I	I	Every 6 months	17	17	
Steering wheel, linkage and steering gear box		Normal												I	I	I	I	I	I	I	I	Every 12 months	●	●	
		Severe												I	I	I	I	I	I	I	I	Every 6 months			
Front wheel alignment (side slip)												I	I	I	I	I	I	I	I	Every 3 months	●	●			
SRS airbag *1												Initial inspect at first 120 months from the vehicle registration date.													
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 3 months						
Propeller shaft		NLGI No. 2												L	L	L	L	L	L	L	L	Every 6 months			
		Severe												L	L	L	L	L	L	L	L	Every 6 months			
Tightening bolts for propeller shaft		Normal												T	T	T	T	T	T	T	T	Every 12 months			
		Severe												T	T	T	T	T	T	T	T	Every 6 months			
		Normal												T	T	T	T	T	T	T	T	Every 6 months			
		Severe												T	T	T	T	T	T	T	T	Every 3 months			
Drive shaft boots		Normal												I	I	I	I	I	I	I	I	Every 24 months	●	●	
		Severe												I	I	I	I	I	I	I	I	Every 12 months	●	●	
Tightening bolts for drive shaft		Normal												T	T	T	T	T	T	T	T	Every 24 months			
		Severe												T	T	T	T	T	T	T	T	Every 12 months			
		Normal												T	T	T	T	T	T	T	T	Every 6 months			
		Severe												T	T	T	T	T	T	T	T	Every 3 months			
Suspension ball joints and dust covers		Normal												I	I	I	I	I	I	I	I	Every 12 months	●	●	
		Severe												I	I	I	I	I	I	I	I	Every 6 months	●	●	
Shift lever for 6-speed manual transmission												I	I	I	I	I	I	I	I	Every 6 months					
Automatic transmission fluid	WS		Normal												I	I	I	I	I	I	I	I	Every 24 months		
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months		
	T-IV		Normal												I	I	I	I	I	I	I	I	Every 24 months	●	●
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months	●	●
	Toyota Genuine CVTF TC												I	I	I	I	I	I	I	I	Every 24 months				
													I	I	I	I	I	I	I	I	R: Every 48 months				
Manual transmission oil	LV Gear oil API GL-4		Normal												I	I	I	I	I	I	I	I	Every 48 months		
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months		
	API Gear oil GL-4 or GL-5		Normal												I	I	I	I	I	I	I	I	Every 48 months	●	●
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months	●	●
Transfer oil	API Gear oil GL-5		Normal												I	I	I	I	I	I	I	I	Every 48 months		
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months		
	Gear oil API GL-4 or GL-5		Normal												I	I	I	I	I	I	I	I	Every 48 months		
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months		
	Gear oil API GL-5		Normal												I	I	I	I	I	I	I	I	Every 48 months		
			Severe												I	I	I	I	I	I	I	I	R: Every 48 months		
	Gear oil API GL-5		Normal												I	I	I	I	I	I	I	I	Every 12 months		
			Severe												R	R	R	R	R	R	R	R	R: Every 48 months		
	Toyota Genuine Differential Oil LX85 (API GL-5)		Normal												I	I	I	I	I	I	I	I	Every 12 months		
			Severe												R	R	R	R	R	R	R	R	R: Every 48 months		
Toyota Genuine ATF WS		Normal												I	I	I	I	I	I	I	I	Every 24 months			
		Severe												I	I	I	I	I	I	I	I	R: Every 24 months			

*1: After 120 months from the vehicle registration date, inspect every 24 months.

17: AZT25417: AZT254 only

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified t T: Tighten to specified torque.
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:				ODOMETER READING																Avensis										
Odometer reading or months, whichever comes first				× 1,000 km		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	AZT25#	ZZT251					
MAINTENANCE ITEMS																						05/03	06/04(MC)							
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal										I											Every 48 months					
			Severe												R											Every 48 months				
		A/T model	API Gear oil GL-4 or GL-5	Normal												I											Every 48 months	●	●	
				Severe													R											Every 48 months	●	●
			WS	Normal													I											Every 24 months		
				Severe													I											I: Every 24 months R: Every 48 months		
	T-IV	Normal													I											Every 24 months	●	●		
		Severe													I											I: Every 24 months R: Every 48 months	●	●		
	Toyota Genuine CVTF TC	Normal													I											Every 24 months				
		Severe													I											I: Every 24 months R: Every 48 months				
Differential separated from transmission (API Gear oil GL-5)	Normal							I						R											I: Every 12 months R: Every 48 months					
	Severe							R						R											R: Every 24 months					
Rear differential oil	API Gear oil GL-5	Normal						I						R											I: Every 12 months R: Every 48 months					
		Severe						R						R											Every 24 months					
	A/T fluid WS	Normal							I						I											I: Every 12 months R: Every 48 months				
		Severe							I						I											R: Every 24 months				
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2																							Every 12 months						
Front and rear suspension	Normal							I						I											Every 12 months	●	●			
	Severe							I						I											Every 6 months	●	●			
	Normal							I						I											Every 6 months					
	Severe							I						I											Every 3 months					
Active height control suspension fluid - Suspension fluid AHC or equivalent	Replace every 100.000 km																		—											
Active height control gas chamber														I											I: initial 48 months; then every 12 months					
Bolts and nuts on chassis and body	Severe only																							Every 6 months	●	●				
Tires and inflation pressure																								Every 6 months	●	●				
Lights, horn, wipers and washers																								Every 6 months	●	●				
Particle filter	Pollen removal type	Normal																												
		Severe																												
	Standard type	Normal																												
		Severe																												
	Semi-standard type	Normal & Severe																												
	High efficiency type	Normal																												
Severe																														
Combination filter	High efficiency type	Normal & Severe																												
Air conditioner refrigerant amount																								Every 12 months	●	●				

*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary

R: Replace or change or lubricate.

F: Fill

GASOLINE ENGINE

SERVICE INTERVALS:		ODOMETER READING																Months () : for reference	New Avensis								
Odometer reading or months, whichever comes first		× 1,000 km				1	5	10	15	20	25	30	35	40	45	50	55		60	65	70	75	80	1ZR-FAE (1.6)	2ZR-FAE (1.8)	3ZR-FE (2.0)	3ZR-FAE (2.0)
MAINTENANCE ITEMS																			ZRT270	ZRT271	ZRT272	ZRT272					
																			08/11	08/11	08/11	08/11					
Timing Belt		Replace every 150,000 km																—									
Valve Clearance	Sensory Inspection *1																	I	Every 96 months								
Drive belts						I									I					Every 24 months	●	●	●	●			
Engine oil (API: SJ, SL) (ILSAC)		Normal		R				R				R				R				Every 12 months							
		Severe		R				R				R				R				Every 6 months							
Engine oil (API: SL, SM) (ILSAC)		Normal		R				R				R				R				Every 12 months	●	●	●	●			
		Severe		R				R				R				R				Every 6 months	●	●	●	●			
Engine oil filter		Normal		R				R				R				R				Every 12 months	●	●	●	●			
		Severe		R				R				R				R				Every 6 months	●	●	●	●			
Cooling and heater system *2		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●	●	●	●					
Engine coolant		S-LLC (pink) *4																		I	Every 24 months	●	●	●	●		
				First replace at 160,000 km; after, every 80,000 km																	●	●	●	●			
Inverter coolant		S-LLC (pink) *4																		I	Every 24 months						
				First replace at 160,000 km; after, every 80,000 km																							
Exhaust pipes and mountings																		I	Every 12 months	●	●	●	●				
Spark plugs		Platinum or Iridium Tipped type		Replace every 100,000 km																—	●	●	●	●			
		Others						R								R				Every 48 months							
Battery						I		I							I		I			Every 12 months	●	●	●	●			
Fuel filter (including the filter in the fuel tank)		Aygo only																		R	Every 96 months	●	●	●	●		
				R																R	Every 48 months						
Fuel injection system *5				F				F				F				F				--							
				When the "Injector Maintenance Required" message is displayed on the multi-information display																							
Air cleaner filter (including checking pre-air cleaner if equipped)		Paper type		Normal						I				R				I				R	I: Every 24 months R: Every 48 months	●	●	●	●
				Dusty road		Inspect every 2,500km/3months and replace every 40,000km/48months.																	●	●	●	●	
		TNF (Thin Non-woven Fabrics) type		Normal						I				R				I				R	I: Every 24 months R: Every 48 months				
				Dusty road		I				I				R				I				R	I: Every 24 months R: Every 48 months				
		Fuel tank cap, fuel lines, connections and fuel vapor control valve		Normal		Inspect every 10,000km/12months and replace every 100,000km/120months.																					
				Dusty road		Inspect every 5,000km/6months and replace every 100,000km/120months.																					
Charcoal canister																				I	Every 24 months	●	●	●	●		
		Aygo only						I				R				I				R	I: Every 24 months R: Every 48 months						
Charcoal canister filter		Aygo only						I				R				I				R	I: Every 24 months R: Every 48 months						

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: "Toyota Genuine CVTF TC" added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING												New Avenis						
Odometer reading or months, whichever comes first														ZRT27#						
		× 1,000 km												08/11						
		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	
MAINTENANCE ITEMS																				
Clutch pedal		No maintenance												●						
Clutch pedal return spring and damper		Aygo only																		
Brake pedal and parking brake		I I I I I I I I I I I I I I I I I I I I												●						
Brake linings and drums (include brake linings of parking brake)		Normal												●						
		Severe												●						
Brake pads and discs		Normal												●						
		Severe												●						
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I I R I I I I I I I I I I I I I I												●						
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I I R I I I I I I I I I I I I I I												●						
	SAE J1704 or FMVSS No. 116 DOT4	I I I I I R I I I I I I I I I I I I I I												●						
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I I I I I I I I I I I I I I I I I																		
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I I R I I I I I R I I I I I I I I I I												●						
	SAE J1704 or FMVSS No. 116 DOT4	I I I I I I I I I I I I I I I I I I I I																		
Brake pipes and hoses	Normal	I I I I I I I I I I I I I I I I I I I I												●						
	Severe	I I I I I I I I I I I I I I I I I I I I												●						
Vacuum pump for brake booster (Diesel engines only)	Luk-AT or Pierburg	Replace every 195,000 km (121,000 miles) or 120 months																		
	Others	Inspect every 200,000 km																		
Power steering fluid	A/T fluid DEXRON® II or III	I I I I I I I I I I I I I I I I I I I I												●						
Steering wheel, linkage and steering gear box	Normal	I I I I I I I I I I I I I I I I I I I I												●						
	Severe	I I I I I I I I I I I I I I I I I I I I												●						
Front wheel alignment (side slip)		I												●						
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																		
Steering knuckle, drag link, kingpin, center arm and steering linkage grease	NLGI No. 2	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 3 months	
Propeller shaft	Normal	L L L L L L L L L L L L L L L L L L L L												●						
	Severe	L L L L L L L L L L L L L L L L L L L L												●						
Tightening bolts for propeller shaft	Normal	T T T T T T T T T T T T T T T T T T T T												●						
	Severe	T T T T T T T T T T T T T T T T T T T T												●						
	Normal	T T T T T T T T T T T T T T T T T T T T												●						
	Severe	T T T T T T T T T T T T T T T T T T T T												●						
Drive shaft boots	Normal	I I I I I I I I I I I I I I I I I I I I												●						
	Severe	I I I I I I I I I I I I I I I I I I I I												●						
Tightening bolts for drive shaft	Normal	T T T T T T T T T T T T T T T T T T T T												●						
	Severe	T T T T T T T T T T T T T T T T T T T T												●						
	Normal	T T T T T T T T T T T T T T T T T T T T												●						
	Severe	T T T T T T T T T T T T T T T T T T T T												●						
Suspension ball joints and dust covers	Normal	I I I I I I I I I I I I I I I I I I I I												●						
	Severe	I I I I I I I I I I I I I I I I I I I I												●						
Shift lever for 6-speed manual transmission		I												●						
Automatic transmission fluid	WS	Normal	I												●*					
		Severe	I												●*					
	T-IV	Normal	I												●					
		Severe	I												●					
	Toyota Genuine CVTF TC	Normal	I												●**					
		Severe	I												●**					
A/T fluid D-II or DEXRON III	Normal	I												●						
	Severe	I												●						
Manual transmission oil	LV Gear oil API GL-4	Normal	I												●***					
		Severe	I												●***					
	API Gear oil GL-4 or GL-5	Normal	I												●					
		Severe	I												●					
	API Gear oil GL-5	Normal	I												●					
		Severe	I												●					
Transfer oil	Gear oil API GL-4 or GL-5	Normal	I												●					
		Severe	I												●					
	Gear oil API GL-5	Normal	I												●					
		Severe	I												●					
	Gear oil API GL-5	Normal	I												●					
		Severe	I												●					
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal	I												●					
		Severe	I												●					
Toyota Genuine ATF WS	Normal	I												●						
	Severe	I												●						

*1: After 120 months from the vehicle registration date, inspect every 24 months.

*: models with U241E and U660E A/T
 **: models with K111 and K311 CVT
 ***: models with EA6#, EB6# and EC6# M/T

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified tT: Tighten to specified torque.
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:			ODOMETER READING																New Avensis				
Odometer reading or months, whichever comes first																			ZRT27#				
			× 1,000 km																08/11				
MAINTENANCE ITEMS			1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months			
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal							I									I	Every 48 months	● ***	
			Severe									R									R	Every 48 months	● ***
		A/T model	API Gear oil GL-4 or GL-5	Normal								I									I	Every 48 months	
				Severe									R									R	Every 48 months
			WS	Normal								I									I	Every 24 months	● *
	T-IV	Severe									I									R	I: Every 24 months R: Every 48 months	● *	
		Normal									I									I	Every 24 months		
		Severe									I									R	I: Every 24 months R: Every 48 months		
	Toyota Genuine CVTF TC	Normal									I									I	Every 24 months	● **	
		Severe									I									R	I: Every 24 months R: Every 48 months	● **	
Differential separated from transmission (API Gear oil GL-5)	Normal					I				R					I					R	I: Every 12 months R: Every 48 months		
	Severe					R				R					R					R	R: Every 24 months		
						I				R					I					R	I: Every 12 months R: Every 48 months		
Rear differential oil	API Gear oil GL-5	Normal					I			R					I					R	I: Every 12 months R: Every 48 months		
		Severe					R			R					R					R	Every 24 months		
	A/T fluid WS	Normal					I			R					I					R	I: Every 12 months R: Every 48 months		
		Severe					I			R					I					R	I: Every 24 months R: Every 48 months		
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2					R			R					R					R	Every 12 months			
Front and rear suspension	Normal					I			I					I					I	Every 12 months	●		
	Severe					I			I					I					I	Every 6 months	●		
	Normal					I			I					I					I	Every 6 months			
	Severe					I			I					I					I	Every 3 months			
Active height control suspension fluid - Suspension fluid AHC or equivalent	Replace every 100.000 km																			—			
Active height control gas chamber									I			I		I					I	I: initial 48 months; then every 12 months			
Bolts and nuts on chassis and body	Severe only			T		T		T		T		T		T		T		T	T	Every 6 months	●		
Tires and inflation pressure				I		I		I		I		I		I		I		I	I	Every 6 months	●		
Lights, horn, wipers and washers				I		I		I		I		I		I		I		I	I	Every 6 months	●		
Particle filter	Pollen removal type	Normal			C		C		R		C		C		R		C		C				
		Severe			C		C		R		C		C		R		C		C				
	Standard type	Normal							R						R								
		Severe					R		R				R		R				R				
	Semi-standard type	Normal & Severe							R						R								
		Normal					R		R						R				R		●		
High efficiency type	Severe					R		R				R		R				R		●			
	Normal & Severe					R		R				R		R				R					
Combination filter	High efficiency type	Normal & Severe					R		R				R		R				R				
Air conditioner refrigerant amount							I		I				I						I	Every 12 months	●		

*3: Customers should inspect by themselves

*: models with U241E and U660E A/T
 **: models with K111 and K311 CVT
 ***: models with EA6#, EB6# and EC6# M/T