

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change  
 Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary.  
 R: Replace or change or lubricate. F: Fill

**GASOLINE ENGINE**

**SERVICE INTERVALS:**

Odometer reading or months, whichever comes first		ODOMETER READING												Months	3ZZ-FE (1.6)		1ZZ-FE (1.8)			
		× 1,000 km			22.5 30 37.5			45 52.5 60			67.5 75 82.5				ZNR10		ZNR11			
MAINTENANCE ITEMS		× 1,000 miles			13.5 18 22.5			27 31.5 36			40.5 45 49.5			( ) : for reference			04/02	05/08 07/05(MC)	04/02	05/08 07/05(MC)
Timing Belt		Replace every 150,000 km (90,000 miles)												—						
Valve Clearance (Sensory Inspection)*1														*I (Every 72 months)	●	●	●	●		
Drive belt	V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)												Initial: 72 and then every 12 months	●	●	●	●		
Engine oil (API: SH, SJ) (ILSAC)	Normal	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months						
	Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months						
Engine oil (API: SJ, SL) (ILSAC)	Normal	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	●		●			
	Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●		●			
Engine oil (API: SL, SM) (ILSAC)	Normal	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months		●		●		
	Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		●		●		
Engine oil filter	Normal	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	●	●	●	●		
	Severe	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●	●	●		
Cooling and heater system *2			I			I					I		Every 24 months	●	●	●	●			
Engine coolant	LLC (red/green) *3						R				R		Initial: 36 months							
	S-LLC (pink) *4		I			I					I		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)	●	●	●	●			
Inverter coolant	S-LLC (pink) *4		I			I					I		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)							
Exhaust pipes and mountings			I			I					I		Every 24 months	●	●	●	●			
Spark plugs	Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)												—						
	Others		I			R					I		I: Every 24 months R: Every 48 months	●	●	●	●			
Battery		No maintenance												—						
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)												15 years						
Fuel injection system		F	F	F	F	F	F	F	F	F	F	F	—							
Air cleaner filter (from October 2002, applicable to all models in production)	Normal	I	I	I	R	I	I	I	I	I	I	I	I: Every 24 months R: Every 48 months	●	●	●	●			
	Dusty road	I	I	I	I	I	R	I	I	I	I	I	I: Every 12 months R: Every 48 months	●	●	●	●			
Air cleaner filter	Normal	I	I	R	I	I	R				R		I: Every 24 months R: Every 48 months							
	Dusty road	Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.												—						
Fuel tank cap, fuel lines, connections and fuel vapor control valve			I			I					I		Every 24 months	●	●	●	●			
Charcoal canister	*5										I		—	●	●	●	●			
	Others				I						I		Every 24 months	●	●	●	●			
	Aygo only	Normal									I		—							
Charcoal canister filter	Aygo only	Severe				I					I		Every 24 months							
	Normal										R		—							
Severe					R					R		Every 24 months								

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: For Sweden, Norway and Finland only.

\*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

# MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; LC120 and LC V8 running change; iQ new model; Avensis Full Model change

Engine oil layout adjusted (information not changed)

## MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.  
R: Replace or change or lubricate.  
S: Special C: Clean

### DIESEL ENGINE

SERVICE INTERVALS:		ODOMETER READING												Months				
Odometer reading or months, whichever comes first														( ) : for reference				
MAINTENANCE ITEMS																		
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90				
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54				
Timing Belt	*6	I I I																
		Replace every 105,000 km (60,000 miles)												●				
		Replace every 150,000 km (90,000 miles)												●				
Timing pulley*6		I I I																
Timing belt cover*6		C C C																
Valve Clearance	*I : Sensory Inspection													(Every 48 months)				
	A: Adjust	A A A A A A												●				
Drive belt	Normal belt	I I I I I I												Every 12 months				
	V-ribbed belt	Inspect at 105,000 km (63,000 miles). After, inspect every 15,000 km (9,000 miles)												Initial 72 months; then, every 12 months				
Engine oil (ACEA: B1; API: CF-4 or CF)*1 *: Engines WITHOUT DPF	Normal	R R R R R R												● ● ● ●				
	Severe	R R R R R R												● ● ● ●				
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												● ● ● ●				
Engine oil (ACEA: C2 preferred or B1; API: CF-4 or CF)*1 *: Engines WITH DPF	Normal	R R R R R R												● ● ● ●				
	Severe	R R R R R R												● ● ● ●				
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												● ● ● ●				
Engine oil filter	Normal	R R R R R R												● ● ● ●				
	Severe	R R R R R R												● ● ● ●				
	OMMS	Replace when the reminder light illuminates or after max. 30,000km/24months												● ● ● ●				
Cooling and heater system *2		I I I I I I												● ● ● ●				
Engine coolant	LLC (red/green) *3	R R R R R R												Initial: 36 months				
	S-LLC (pink) *4	I I I I I I												● ● ● ●				
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)												● ● ● ●				
Exhaust pipes and mountings		I I I I I I												● ● ● ●				
		I I I I I I												● ● ● ●				
Battery		No maintenance												—				
Fuel injection pipes		Replace every 150,000 km (90,000 miles)												—				
Fuel filter		R R R R R R												● ● ● ●				
	In-tank filter and in-line filter													● ● ● ●				
Fuel pump		Replace every 300,000 km (180,000 miles)																
Diesel smoke		I I I I I I												● ● ● ●				
		I I I I I I												● ● ● ●				
Air cleaner filter (from October 2002, applicable to all models in production)	Normal	I I I R I I												I: Every 24 months R: Every 48 months				
	Dusty road	I I I I I I I R I I I I												I: Every 12 months R: Every 48 months				
Air cleaner filter	Normal	I I R I I R												I: Every 12 months R: Every 48 months				
	Dusty road	Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.												—				
Air flow meter (for EURO IV vehicles)*5		S S S S S S												● ● ● ●				
Fuel tank cap, fuel lines, connections		I I I I I I												● ● ● ●				

\*1: You may also use API CE or CD. NMSC's chg NMSC's chg NMSC's choice  
 \*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary \* : engines WITHOUT DPF  
 \*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months. \*\* : engines WITH DPF  
 \*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)  
 \*5: Blow air to the sensor intermittently for about 30 seconds  
 \*6: For vehicles often operated in extremely dusty conditions, such as mining. Inspect for cracks on the timing belt and abnormal wear on the timing pulley. Remove dust and sand from the timing belt cover.

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Avensis 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

**MAINTENANCE OPERATIONS**

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only  
 I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
 CHASSIS AND BODY 1/2 R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING										Corolla Verso		LEXUS LS600h	LEXUS RX300	LEXUS RX350	LEXUS RX400h	LEXUS SC430							
Odometer reading or months, whichever comes first												ZNR1# CUR10	ZNR1# AUR10	UVF45,46 LS60hL	MCU35	GSU35	MHU38		UZZ40						
		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months										
MAINTENANCE ITEMS		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54											
× 1,000 km												04/02	05/08	07/04	03/02	06/01	05/03	06/08	01/05	05/08					
× 1,000 miles												07/05(MC)	07/08	08/09	05/08	07/02		07/08	04/08	07/08					
Clutch pedal, return spring and damper - Mechanical type		I	I	I	I	I	I	I	I	I	I	I	I	I											
Brake pedal and parking brake															I	I	I	I	I	I	I	I	I	I	
Brake linings and drums (include brake linings of parking brake)		Normal													I	I	I	I	I	I	I	I	I	I	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Brake pads and discs		Normal	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3													I	I	I	I	I	I	I	I	I	I	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4													I	I	I	I	I	I	I	I	I	I	
		SAE J1704 or FMVSS No. 116 DOT4													I	I	I	I	I	I	I	I	I	I	
Clutch fluid for auto clutch system															R	R	R	R	R	R	R	R	R	R	
Sequential M/T system fluid															I	I	I	I	I	I	I	I	I	I	
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3													R	R	R	R	R	R	R	R	R	R	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4													R	R	R	R	R	R	R	R	R	R	
		SAE J1704 or FMVSS No. 116 DOT4													R	R	R	R	R	R	R	R	R	R	
Brake pipes and hoses															I	I	I	I	I	I	I	I	I	I	
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg Others													Replace every 195,000 km (121,000 miles) or 120 months										
Power steering fluid		AT fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent													I	I	I	I	I	I	I	I	I	I	
Steering wheel, linkage and steering gear box		Normal													I	I	I	I	I	I	I	I	I	I	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
SRS airbag *1															Initial inspect at first 120 months from the vehicle registration date.										
Propeller shaft		NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	I	I	I	I	I	I	I	I	I	I	
			Severe	L	L	L	L	L	L	L	L	L	L	L	I	I	I	I	I	I	I	I	I	I	
Propeller shaft bolts			Normal												T	T	T	T	T	T	T	T	T	T	
			Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Drive shaft boots			Normal												I	I	I	I	I	I	I	I	I	I	
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Drive shaft bolts			Normal												T	T	T	T	T	T	T	T	T	T	
			Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Suspension ball joints and dust covers			Normal												I	I	I	I	I	I	I	I	I	I	
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Shift lever of 6-speed manual transmission			Normal												I	I	I	I	I	I	I	I	I	I	
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Automatic transmission fluid		Vehicles produced before July, '99	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe	I	R	I	R	I	R	I	R	I	R	I	I: Every 12 months R: Every 48 months										
		Toyota Genuine ATF type T-IV	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I: Every 36 months R: Every 72 months										
		Toyota Genuine ATF WS	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I: Every 36 months R: Every 72 months										
		Toyota Genuine CVTF TC	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I: Every 36 months R: Every 72 months										
		Other	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I: Every 36 months R: Every 72 months										
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
		API Gear oil GL-4 or GL-5	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I	I	I	I	I	I	I	I	I	I	
		LV Gear oil API GL-4	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
		Other (GL-4 or GL-5)	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
Transfer oil		API Gear oil GL-4 or GL-5	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
		API Gear oil GL-5	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
		Toyota Genuine Differential Oil LX85 (API: GL-5)	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												R	R	R	R	R	R	R	R	R	R	
		Toyota Genuine ATF WS	Normal												I	I	I	I	I	I	I	I	I	I	
			Severe												I: Every 36 months R: Every 72 months										

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

11: Includes necessary replacement of the blades  
 20: except \*. Use Toyota Genuine Differential oil LX85 (API: GL-5)  
 21: AUR10 model

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change  
 Toyota Genuine CVTF maintenance added for new CVT's

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
 R: Replace or change or lubricate. C: Clean

**CHASSIS AND BODY 2/2**

SERVICE INTERVALS:				ODOMETER READING												Corolla Verso						
Odometer reading or months, whichever comes first																ZNR1# CUR10	ZNR1# AUR10					
				Months																		
MAINTENANCE ITEMS																04/02	05/08 07/05(MC)					
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal														I	Every 48 months	●	20	
			Severe																R	Every 48 months	●	20
		LV Gear oil API GL-4	Normal																I	Every 48 months		21
			Severe																R	Every 48 months		21
		A/T model	Toyota Genuine ATF type T-IV	Normal															I	Every 36 months		
				Normal															I	Every 48 months		
	Severe																	R	I: Every 36 months R: Every 72 months			
	Toyota Genuine ATF WS		Normal															I	Every 36 months			
		Normal															I	Every 48 months				
	Toyota Genuine CVTF TC	Normal															I	Every 48 months				
		Severe															R	I: Every 36 months R: Every 72 months				
	Differential separated from transmission (API Gear oil GL-5)																	R	Every 48 months			
Rear differential oil	API Gear oil GL-5																R	Every 48 months				
	A/T fluid WS	Normal															I	Every 36 months				
Severe																R	I: Every 36 months R: Every 72 months					
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease	NLGI No. 2	Normal															R	Every 24 months				
		Severe														R	Every 12 months					
Front and rear suspension	Normal																I	Every 24 months	●	●		
	Severe																I	Every 12 months	●	●		
Active height control suspension fluid - Suspension fluid AHC or equivalent																	R	—				
Active height control gas chamber																	I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body				Severe only	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months	●	●		
Tires and inflation pressure	Normal																I	Every 24 months	●	●		
	Severe																I	Every 12 months	●	●		
Air conditioning filter	Normal																I	Every 24 months				
	Dusty road																I	Every 12 months				
	Normal																R	Every 24 months				
	Dusty road																R	Every 12 months				
	Normal & Dusty road																R	Every 24 months				
Particle filter	Foldable type																R	"Clean" replaced by "Inspect"				
																	R	Refer to TME letter of October 2007				
	Pollen removal type																R	on "Potential Health Risk From				
																	R	Cleaning of Cabin Air Filter Elements				
Standard type & high efficiency type	Normal															R		●	●			
	Dusty road															R		●	●			
Combination filter (high efficiency type)	Normal															R						
	Dusty road															R						
Replace when the service indicator light illuminates																I						
Corrosion Inspection																I	Every 24 months	●	●			

20: except AUR10 model  
 21: AUR10 model

**MAINTENANCE SCHEDULE - GENERAL 10,000 km**

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil \*API Gear oil GL-5\* added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil \*Toyota Genuine ATF WS\* added for LS460(L) 4WD.

**MAINTENANCE OPERATIONS**

A/T fluid: \*Toyota Genuine CVTF TC\* added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or change R: Replace or change or lubricate. L: Lubricate

**CHASSIS AND BODY 1/2**

SERVICE INTERVALS:		ODOMETER READING										Corolla Verso									
Odometer reading or months, whichever comes first												ZNR11									
× 1,000 km		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	04/02	0508 07/05(MC)
MAINTENANCE ITEMS																					
Clutch pedal		No maintenance											●	●							
Clutch pedal return spring and damper		Aygo only																			
Brake pedal and parking brake		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●	
Brake linings and drums (Include brake linings of parking brake)		Normal	I										Every 12 months	●	●						
		Severe	I										Every 6 months	●	●						
Brake pads and discs		Normal	I										Every 6 months	●	●						
		Severe	I										Every 3 months	●	●						
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	I: Every 6 months R: Every 24 months			
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	I: Every 6 months R: Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	I: Every 6 months R: Every 24 months	●	●	
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3	I										Every 6 months									
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	I: Every 6 months R: Every 24 months			
Brake pipes and hoses		Normal	I										Every 12 months	●	●						
		Severe	I										Every 6 months	●	●						
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg	Replace every 195.000 km (121.000 miles) or 120 months																		
		Others	Inspect every 200.000 km																		
Power steering fluid		A/T fluid DEXRON® II or III	I										Every 6 months	●	●						
Steering wheel, linkage and steering gear box		Normal	I										Every 12 months	●	●						
		Severe	I										Every 6 months	●	●						
		Severe	I										Every 3 months	●	●						
Front wheel alignment (side slip)		I										Every 48 months									
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																			
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 3 months			
Propeller shaft		NLGI No. 2	Normal	L										Every 6 months							
		Severe	L										Every 6 months								
Tightening bolts for propeller shaft		Normal	T										Every 12 months								
		Severe	T										Every 6 months								
		Normal	T										Every 6 months								
		Severe	T										Every 3 months								
Drive shaft boots		Normal	I										Every 24 months	●	●						
		Severe	I										Every 12 months	●	●						
Tightening bolts for drive shaft		Normal	T										Every 24 months								
		Severe	T										Every 12 months								
		Normal	T										Every 6 months								
		Severe	T										Every 3 months								
Suspension ball joints and dust covers		Normal	I										Every 12 months	●	●						
		Severe	I										Every 6 months	●	●						
Shift lever for 6-speed manual transmission		I										--									
Automatic transmission fluid	WS	Normal	I										Every 24 months								
		Severe	I										R	I: Every 24 months R: Every 48 months							
	T-IV	Normal	I										Every 24 months								
		Severe	I										R	I: Every 24 months R: Every 48 months							
	Toyota Genuine CVTF TC		I										Every 24 months								
			I										R	I: Every 24 months R: Every 48 months							
Manual transmission oil	LV Gear oil API GL-4	Normal	I										Every 48 months								
		Severe	I										R	Every 48 months	●	●					
	API Gear oil GL-4 or GL-5	Normal	I										Every 48 months								
		Severe	I										R	Every 48 months	●	●					
API Gear oil GL-5		Normal	I										Every 48 months								
		Severe	I										R	Every 48 months							
Transfer oil	Gear oil API GL-4 or GL-5	Normal	I										Every 48 months								
		Severe	I										R	Every 48 months							
			I										R	Every 48 months							
	Gear oil API GL-5	Normal	I										Every 48 months								
		Severe	I										R	Every 48 months							
	Gear oil API GL-5	Normal	I										R	I: Every 12 months R: Every 48 months							
		Severe	R										R	R: Every 24 months							
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal	I										R	I: Every 12 months R: Every 48 months							
		Severe	R										R	R: Every 24 months							
	Toyota Genuine ATF WS		Normal	I										Every 24 months							
		Severe	I										R	I: Every 24 months R: Every 48 months							

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

**MAINTENANCE SCHEDULE - GENERAL 10,000 km**Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary.

R: Replace or change or lubricate.

F: Fill

**GASOLINE ENGINE**

SERVICE INTERVALS: Odometer reading or months, whichever comes first		ODOMETER READING												Months ( ): for reference	Corolla Verso							
		× 1,000 km			1	5	10	15	20	25	30	35	40		45	50	55	60	65	70	75	80
MAINTENANCE ITEMS																						
Timing Belt		Replace every 150,000 km												—								
Valve Clearance	Sensory Inspection *1													I	Every 96 months	●	●					
Drive belts		I												I	Every 24 months	●	●					
Engine oil (API: SJ, SL) (ILSAC)	Normal	R R												Every 12 months	●							
	Severe	R R												Every 6 months	●							
Engine oil (API: SL, SM) (ILSAC)	Normal	R R												Every 12 months		●						
	Severe	R R												Every 6 months		●						
Engine oil filter	Normal	R R												Every 12 months	●	●						
	Severe	R R												Every 6 months	●	●						
Cooling and heater system *2		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months													●	●						
Engine coolant	S-LLC (pink) *4	I												I	Every 24 months	●	●					
		First replace at 160,000 km; after, every 80,000 km													●	●						
Inverter coolant	S-LLC (pink) *4	I												I	Every 24 months							
		First replace at 160,000 km; after, every 80,000 km																				
Exhaust pipes and mountings		I												I	Every 12 months	●	●					
Spark plugs	Platinum or Iridium Tipped type	Replace every 100,000 km												—								
	Others	R												R	Every 48 months	●	●					
Battery		I												I	Every 12 months	●	●					
Fuel filter (including the filter in the fuel tank)		R												R	Every 96 months	●	●					
	Aygo only	R												R	Every 48 months							
Fuel injection system *5		F F F F F F F F F F												--								
		When the "Injector Maintenance Required" message is displayed on the multi-information display																				
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal	I												R	I: Every 24 months R: Every 48 months	●	●				
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.													●	●					
	Normal	I												R	I: Every 24 months R: Every 48 months							
	Dusty road	I												R	I: Every 24 months R: Every 48 months							
TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																				
	Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																				
Fuel tank cap, fuel lines, connections and fuel vapor control valve		First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months													●	●						
Charcoal canister		I												I	Every 24 months	●	●					
	Aygo only	I												R	I: Every 24 months R: Every 48 months							
Charcoal canister filter	Aygo only	I												R	I: Every 24 months R: Every 48 months							

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent



**MAINTENANCE SCHEDULE - GENERAL 10,000 km**

Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary. T: Tighten to specified T: Tighten to specified torque.

R: Replace or change or lubricate.

**CHASSIS AND BODY 2/2**

SERVICE INTERVALS:				ODOMETER READING												Corolla Verso									
Odometer reading or months, whichever comes first																ZNR11									
				× 1,000 km																					
MAINTENANCE ITEMS				1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	04/02	0508 07/05(MC)		
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I								I	Every 48 months				
			Severe																		R	Every 48 months			
		A/T model	WS	Normal									I								I	Every 24 months			
				Severe																		R	I: Every 24 months R: Every 48 months		
		T-IV	Normal										I								I	Every 24 months			
			Severe																			R	I: Every 24 months R: Every 48 months		
	Toyota Genuine CVTF TC	Normal											I								I	Every 24 months			
		Severe																			R	I: Every 24 months R: Every 48 months			
	Differential separated from transmission (API Gear oil GL-5)			Normal					I					R							I	R	I: Every 12 months R: Every 48 months		
				Severe						R						R							R	R: Every 24 months	
																						R	I: Every 12 months R: Every 48 months		
																							R	I: Every 12 months R: Every 48 months	
Rear differential oil	API Gear oil GL-5		Normal					I					R							I	R	I: Every 12 months R: Every 48 months			
			Severe						R						R							R	Every 24 months		
	A/T fluid WS		Normal																	I	Every 24 months				
			Severe																			R	I: Every 24 months R: Every 48 months		
Wheel bearing grease (tapered roller type wheel bearing only)			NLGI No. 2																	R	Every 12 months				
Front and rear suspension			Normal					I													I	Every 12 months	●	●	
			Severe						I													I	Every 6 months	●	●
			Normal							I												I	Every 6 months		
			Severe								I												I	Every 3 months	
Active height control suspension fluid - Suspension fluid AHC or equivalent			Replace every 100.000 km													—									
Active height control gas chamber																				I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body			Severe only																		T	Every 6 months	●	●	
Tires and inflation pressure																					I	Every 6 months	●	●	
Lights, horn, wipers and washers																					I	Every 6 months	●	●	
Particle filter	Pollen removal type		Normal																		C				
			Severe																			C			
	Standard type		Normal																			R			
			Severe																				R		
	High efficiency type		Normal																			R			
			Severe																				R		
Combination filter			High efficiency type	Normal & Severe																	R				
Air conditioner refrigerant amount																					I	Every 12 months	●	●	

\*3: Customers should inspect by themselves