

Fujitsu Ten Repair Flat Rate Overview

Following repair rates are valid from January 1st 2017 for audio visual products manufactured by Fujitsu Ten. The corresponding Toyota/Lexus part numbers can be found under Annex 1.

Flat Rate	Repair Category	Price
TP1	Amplifier (External, Hideaway)	89,00 €
TP2	Radio Cassette Player	118,00 €
TP3	Radio CD Changer	220,00 €
TP4	Radio CD Player	140,00 €
TP5	CD Changer (1-DIN In-Dash)	251,00 €
TP6	3-in-1 Audio, AV (2-DIN Radio/CS/CD), Display Audio ¹⁾	258,00 €
TP7	EMV/Display Type 1, PND	188,00 €
TP8	EMV/Display Type 2, EMV-N	408,00 €

Repair conditions:

- The repair flat rate includes labour and parts. Sets received for repair undergo a complete inspection.
- Forwarding expenses will be charged separately (refer to Annex 2 for detailed information).
- Import duties will not be accepted by Fujitsu Ten so put the term “DDP” (Delivered Duty Paid) on the proforma invoice when you ship a unit outside EU. We will ship it back under DDU (Delivered duty Unpaid) terms.
- The flat rate price excludes repair of physical damages, refurbishments, water ingress damage, accessories, cable set and installation material.
- The defective unit shall be send with the completed AROF and detailed failure description.
- Repair lead time is 3 work days from receipt (receipt in the afternoon counts to next day).
- The repair invoice will be send separately. The amount payable has to be transferred to one of the bank accounts mentioned on the invoice form. The invoice number shall be stated as reference. Only correct VAT numbers clearly mentioned on the AROF can be put on the invoice. If the VAT no is unknown or incorrect the VAT will be invoiced.
- In case no failure was found on the set received for repair, customer will be charged a lump sum of **29.13 €** plus forwarding expenses. In such case we perform a functional inspection, cleaning of CS/CD drive and software update, whichever applicable.

Ship address: Fujitsu Ten Europe GmbH
Attn.: Service Dept
Leuvensesteenweg 555 B.6
1930 Zaventem
BELGIUM

Contact: Fax: +32-2-712-8199
Email: orderdesk@bru.fteg.be

Annex 1

Part No.	Repair Category	Rate
08541-00803	EMV/Display Type 1	TP7
08600-00920	Radio Cassette Player	TP2
08600-00921	Radio Cassette Player	TP2
08600-00922	Radio Cassette Player	TP2
08600-00944	Radio Cassette Player	TP2
08600-00948	Radio Cassette Player	TP2
08600-00954	Radio Cassette Player	TP2
08600-02820	Radio Cassette Player	TP2
08600-02830	Radio Cassette Player	TP2
08600-52810	Radio Cassette Player	TP2
08600-52811	Radio Cassette Player	TP2
08600-52820	Radio Cassette Player	TP2
08600-52821	Radio Cassette Player	TP2
08600-52822	Radio Cassette Player	TP2
08600-52823	Radio Cassette Player	TP2
08601-00861	Single CD Player	TP4
08601-00893	Single CD Player	TP4
08601-00906	Single CD Player	TP4
86100-60110	Radio Cassette Player	TP2
86110-47040	EMV/Display Type 1	TP7
86110-47070	EMV/Display Type 2	TP8
86110-47071	EMV/Display Type 2	TP8
86110-47080	EMV/Display Type 2	TP8
86110-47081	EMV/Display Type 2	TP8
86110-47210	EMV/Display Type 2	TP8
86110-47220	EMV/Display Type 2	TP8
86110-47230	EMV/Display Type 2	TP8
86110-47250	EMV/Display Type 2	TP8
86110-47260	EMV/Display Type 2	TP8
86110-48070	EMV/Display Type 1	TP7
86110-48120	EMV/Display Type 2	TP8
86110-48130	EMV/Display Type 2	TP8
86110-48200	EMV/Display Type 2	TP8
86110-48210	EMV/Display Type 2	TP8
86110-48260	EMV/Display Type 2	TP8
86110-48270	EMV/Display Type 2	TP8
86110-48280	EMV/Display Type 2	TP8
86110-48330	EMV/Display Type 2	TP8
86110-48340	EMV/Display Type 2	TP8
86110-48400	EMV/Display Type 2	TP8
86110-48410	EMV/Display Type 2	TP8
86110-50050	EMV/Display Type 2	TP8
86110-50060	EMV/Display Type 2	TP8
86110-50070	EMV/Display Type 2	TP8
86110-50180	EMV/Display Type 2	TP8
86110-50190	EMV/Display Type 2	TP8
86110-50200	EMV/Display Type 2	TP8
86110-50210	EMV/Display Type 2	TP8
86110-50260	EMV/Display Type 2	TP8
86110-50270	EMV/Display Type 2	TP8
86110-50280	EMV/Display Type 2	TP8
86110-50300	EMV/Display Type 2	TP8
86110-50370	EMV/Display Type 2	TP8
86110-50380	EMV/Display Type 2	TP8
86110-50390	EMV/Display Type 2	TP8
86110-50400	EMV/Display Type 2	TP8
86110-50480	EMV/Display Type 2	TP8
86110-50500	EMV/Display Type 2	TP8
86110-50520	EMV/Display Type 2	TP8
86110-50540	EMV/Display Type 2	TP8
86110-60110	EMV/Display Type 2	TP8
86110-60120	EMV/Display Type 2	TP8
86110-60130	EMV/Display Type 2	TP8

Part No.	Repair Category	Rate
86111-24110	EMV/Display Type 1	TP7
86111-24111	EMV/Display Type 1	TP7
86111-24140	EMV/Display Type 2	TP8
86111-24190	EMV/Display Type 2	TP8
86111-30160	EMV/Display Type 1	TP7
86111-30180	EMV/Display Type 1	TP7
86111-48030	EMV/Display Type 1	TP7
86111-50060	EMV/Display Type 1	TP7
86111-50070	EMV/Display Type 1	TP7
86111-50090	EMV/Display Type 2	TP8
86111-50100	EMV/Display Type 2	TP8
86111-50130	EMV/Display Type 2	TP8
86111-50140	EMV/Display Type 2	TP8
86111-50150	EMV/Display Type 2	TP8
86111-50160	EMV/Display Type 2	TP8
86111-50170	EMV/Display Type 2	TP8
86111-50220	EMV/Display Type 2	TP8
86111-50230	EMV/Display Type 2	TP8
86111-53010	EMV/Display Type 1	TP7
86111-60280	EMV/Display Type 2	TP8
86111-60320	EMV/Display Type 2	TP8
86111-60330	EMV/Display Type 2	TP8
86111-60340	EMV/Display Type 2	TP8
86111-60470	EMV/Display Type 2	TP8
86111-60480	EMV/Display Type 2	TP8
86111-60490	EMV/Display Type 2	TP8
86111-60500	EMV/Display Type 2	TP8
86120-02510	Radio CD player	TP4
86120-02520	Radio CD player	TP4
86120-02521	Radio CD player	TP4
86120-02570	Radio CD Changer	TP3
86120-02571	Radio CD Changer	TP3
86120-02A50	Radio CD player	TP4
86120-02F40	Radio CD player	TP4
86120-0D010	Radio Cassette Player	TP2
86120-0D011	Radio Cassette Player	TP2
86120-0D012	Radio Cassette Player	TP2
86120-0D020	Radio Cassette Player	TP2
86120-0D021	Radio Cassette Player	TP2
86120-0D022	Radio Cassette Player	TP2
86120-0D070	Radio Cassette Player	TP2
86120-0D130	Radio Cassette Player	TP2
86120-0D200	Radio CD player	TP4
86120-0D201	Radio CD player	TP4
86120-0D490	Radio CD player	TP4
86120-0D500	Radio CD player	TP4
86120-0D510	Radio CD player	TP4
86120-0D520	Radio CD player	TP4
86120-0K020	Radio Cassette Player	TP2
86120-0K330	Radio CD player	TP4
86120-12A70	Radio CD Changer	TP3
86120-12A71	Radio CD Changer	TP3
86120-12C50	Radio CD Changer	TP3
86120-1A110	Radio Cassette Player	TP2
86120-1A120	Radio Cassette Player	TP2
86120-1A230	Radio CD player	TP4
86120-1A240	Radio CD player	TP4
86120-1A241	Radio CD player	TP4
86120-28220	Radio Cassette Player	TP2
86120-28350	Radio Cassette Player	TP2
86120-28351	Radio Cassette Player	TP2
86120-2B560	Radio Cassette Player	TP2
86120-33420	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6

continued on next page –

Annex 1

Part No.	Repair Category	Rate
86120-33421	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-33870	Radio CD Changer	TP3
86120-33880	Radio CD Changer	TP3
86120-33881	Radio CD Changer	TP3
86120-33D50	Radio CD Changer	TP3
86120-42050	Radio Cassette Player	TP2
86120-42051	Radio Cassette Player	TP2
86120-44090	Radio Cassette Player	TP2
86120-47040	Radio Cassette Player	TP2
86120-47300	Radio CD player	TP4
86120-47301	Radio CD player	TP4
86120-47310	Radio CD player	TP4
86120-47311	Radio CD player	TP4
86120-47320	Radio CD Changer	TP3
86120-47321	Radio CD Changer	TP3
86120-47330	Radio CD player	TP4
86120-47331	Radio CD player	TP4
86120-47340	Radio CD player	TP4
86120-47341	Radio CD player	TP4
86120-47350	Radio CD Changer	TP3
86120-47351	Radio CD Changer	TP3
86120-52010	Radio Cassette Player	TP2
86120-52011	Radio Cassette Player	TP2
86120-52012	Radio Cassette Player	TP2
86120-52020	Radio Cassette Player	TP2
86120-52021	Radio Cassette Player	TP2
86120-52022	Radio Cassette Player	TP2
86120-52023	Radio Cassette Player	TP2
86120-52160	Radio Cassette Player	TP2
86120-52170	Radio Cassette Player	TP2
86120-52370	Radio Cassette Player	TP2
86120-52380	Radio Cassette Player	TP2
86120-52470	Radio CD player	TP4
86120-52471	Radio CD player	TP4
86120-52570	Radio CD player	TP4
86120-52580	Radio CD player	TP4
86120-52A30	Radio CD player	TP4
86120-52A40	Radio CD player	TP4
86120-52A50	Radio CD player	TP4
86120-52C70	Radio CD player	TP4
86120-52C80	Radio CD player	TP4
86120-53030	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53031	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53040	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53041	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53090	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53100	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53140	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53150	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53180	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53190	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53200	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-53210	3-in-1 Audio (2-DIN Radio/CS/CD)	TP6
86120-60220	Radio Cassette Player	TP2
86120-60D20	Radio CD player	TP4
86120-60D21	Radio CD player	TP4
86120-60M10	Radio CD player	TP4
86140-0D010	Display Audio	TP6
86140-0D020	Display Audio	TP6
86140-0D030	Display Audio	TP6
86140-0D040	Display Audio	TP6
86140-0D050	Display Audio	TP6
86140-0D060	Display Audio	TP6

Part No.	Repair Category	Rate
86140-0D070	Display Audio	TP6
86140-0D080	Display Audio	TP6
86140-0D090	Display Audio	TP6
86140-0D100	Display Audio	TP6
86140-0D110	Display Audio	TP6
86140-0D120	Display Audio	TP6
86140-0D130	Display Audio	TP6
86140-0D140	Display Audio	TP6
86140-0D150	Display Audio	TP6
86140-0D160	Display Audio	TP6
86140-0D170	Display Audio	TP6
86140-0D180	Display Audio	TP6
86140-0D190	Display Audio	TP6
86140-0D200	Display Audio	TP6
86140-0D210	Display Audio	TP6
86140-0D220	Display Audio	TP6
86140-0D230	Display Audio	TP6
86140-0D240	Display Audio	TP6
86140-0D250	Display Audio	TP6
86140-0D260	Display Audio	TP6
86140-0D270	Display Audio	TP6
86140-0D280	Display Audio	TP6
86140-0D290	Display Audio	TP6
86140-0D300	Display Audio	TP6
86140-0K411	Display Audio	TP6
86140-0K421	Display Audio	TP6
86140-52010	Display Audio	TP6
86140-52011	Display Audio	TP6
86140-52012	Display Audio	TP6
86140-52030	Display Audio	TP6
86140-52040	Display Audio	TP6
86140-52200	Display Audio	TP6
86140-52210	Display Audio	TP6
86140-52240	Display Audio	TP6
86140-52250	Display Audio	TP6
86140-52280	Display Audio	TP6
86140-52290	Display Audio	TP6
86140-52310	Display Audio	TP6
86140-53071	Display Audio	TP6
86140-53081	Display Audio	TP6
86140-53161	Display Audio	TP6
86140-53171	Display Audio	TP6
86140-53220	Display Audio	TP6
86140-53290	Display Audio	TP6
86140-53300	Display Audio	TP6
86140-53310	Display Audio	TP6
86140-76010	Display Audio	TP6
86140-76150	Display Audio	TP6
86140-76160	Display Audio	TP6
86140-76170	Display Audio	TP6
86140-78040	Display Audio	TP6
86140-78110	Display Audio	TP6
86140-78150	Display Audio	TP6
86140-78160	Display Audio	TP6
86270-60060	CD Changer (1-DIN In-Dash)	TP5
86280-53020	Amplifier (External, Hideaway)	TP1
86280-53021	Amplifier (External, Hideaway)	TP1
86280-53030	Amplifier (External, Hideaway)	TP1
86280-53031	Amplifier (External, Hideaway)	TP1
86280-53040	Amplifier (External, Hideaway)	TP1
86280-53050	Amplifier (External, Hideaway)	TP1
86280-53060	Amplifier (External, Hideaway)	TP1
86280-53070	Amplifier (External, Hideaway)	TP1

continued on next page –

Annex 1

Part No.	Repair Category	Rate
86430-50440	EMV-N	TP8
86430-50450	EMV-N	TP8
86430-50460	EMV-N	TP8
86430-50460	EMV-N	TP8
86430-50470	EMV-N	TP8
86430-50630	EMV-N	TP8
86430-50640	EMV-N	TP8
86430-50650	EMV-N	TP8
86430-50690	EMV-N	TP8
86431-50800	EMV-N	TP8
86431-50810	EMV-N	TP8
86431-50820	EMV-N	TP8
86431-50821	EMV-N	TP8
86431-50830	EMV-N	TP8
86431-60260	EMV-N	TP8
86431-60261	EMV-N	TP8
86431-60270	EMV-N	TP8
86431-60271	EMV-N	TP8
86431-60272	EMV-N	TP8
86431-60280	EMV-N	TP8
86431-60281	EMV-N	TP8
86431-60290	EMV-N	TP8
86431-60291	EMV-N	TP8
86431-60292	EMV-N	TP8
86804-60040	EMV-N	TP8
86804-60050	EMV-N	TP8
86804-60060	EMV-N	TP8
86804-60070	EMV-N	TP8
PZ422-00330	Radio CD player	TP4
PZ422-00333	Radio CD player	TP4
PZ422-00334	Radio CD player	TP4
PZ422-00336	PND	TP7
PZ422-E0330	Radio CD player	TP4
PZ422-E0335	PND	TP7
PZ422-EE335	PND	TP7
PZ422-H0330	Radio CD player	TP4
PZ422-N0210	Radio CD player	TP4

Overview of forwarding expenses
Annex 2

Below prices applicable for despatch from Fujitsu Ten.

Country	Forwarder	Lead time (workdays)	Weight
			up to 5 kg
Austria	TNT	1-2	23,93 €
Belgium	TNT	1-2	16,74 €
Bulgaria	TNT	4	39,20 €
Cyprus	TNT	3	39,20 €
Czech Republik	TNT	2-3	33,30 €
Denmark	TNT	2-3	22,90 €
Estonia	TNT	3-4	33,30 €
Finland	TNT	2	33,30 €
France	TNT	2-3	21,99 €
Germany	TNT	1-2	19,25 €
Great Britain	TNT	2-3	21,53 €
Greece	TNT	4	33,30 €
Hungary	TNT	2-4	33,30 €
Ireland	TNT	3	22,90 €
Iceland	TNT	2	39,20 €
Italy	TNT	2-4	23,93 €
Latvia	TNT	3-4	33,30 €
Lithuania	TNT	3-4	33,30 €
Luxemburg	TNT	1-2	16,52 €
Monaco	TNT	2-3	39,20 €
Netherlands	TNT	1-2	16,52 €
Norway	TNT	2	39,20 €
Poland	TNT	2-4	33,30 €
Portugal	TNT	3	33,30 €
Romania	TNT	4	39,20 €
Slovakia	TNT	2-4	33,30 €
Slovenia	TNT	2-4	33,30 €
Spain	TNT	2	23,93 €
Sweden	TNT	2-4	33,30 €