



**TOYOTA**

ALWAYS A  
BETTER WAY

# Door handle protection film

Installation instructions

Model year: Universal


Part number: PZ438-B0182-00

Manual reference number: AIM 003 630 - 1

# Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	05-08-16	5	5			

## PZ438-B0182-00

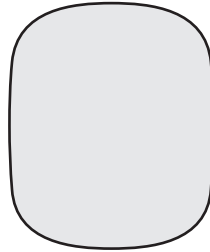


**A**

2x











**A**

**A**

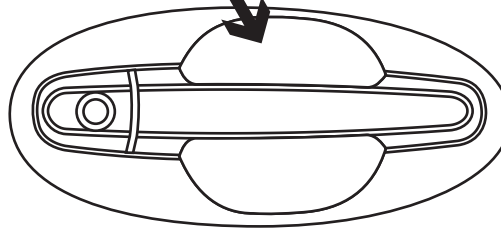


**LHS = RHS**

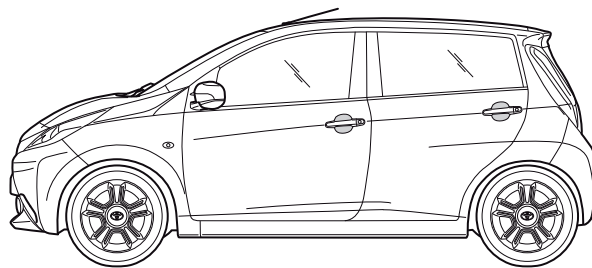


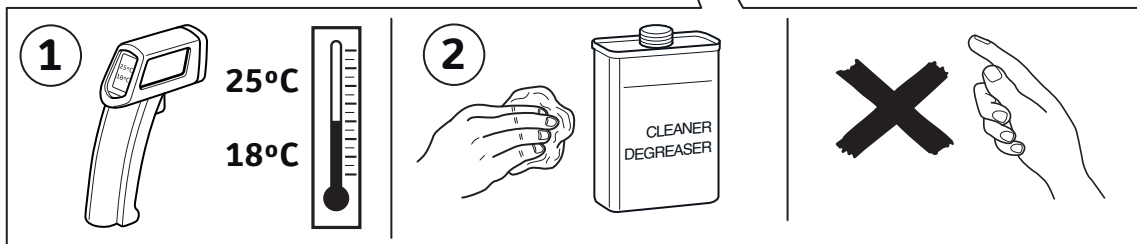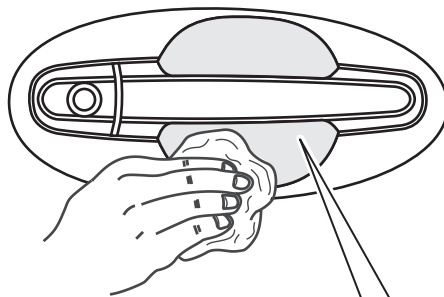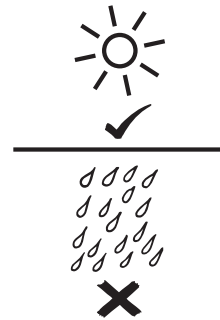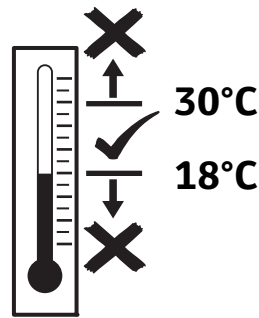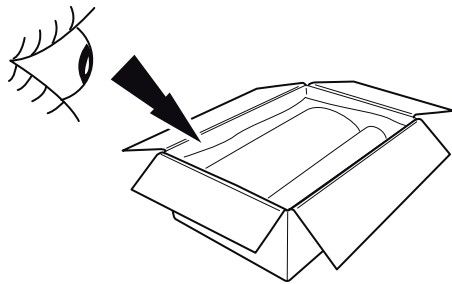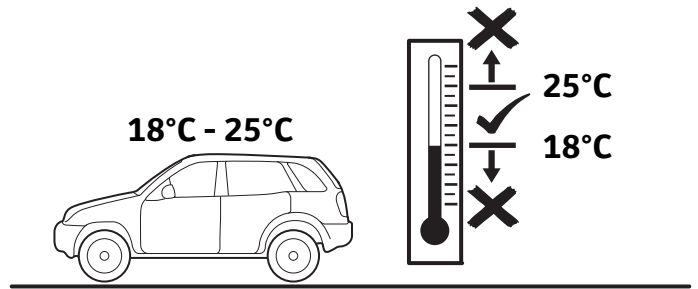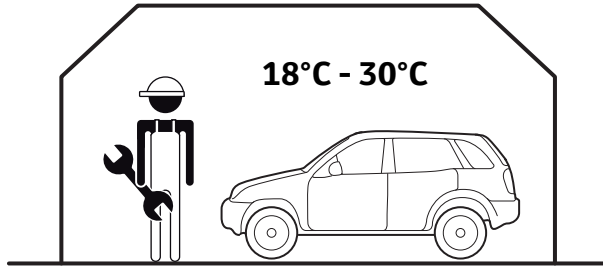


1

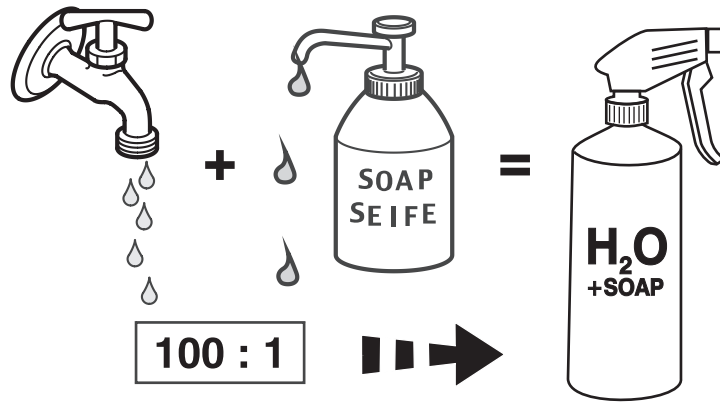


2

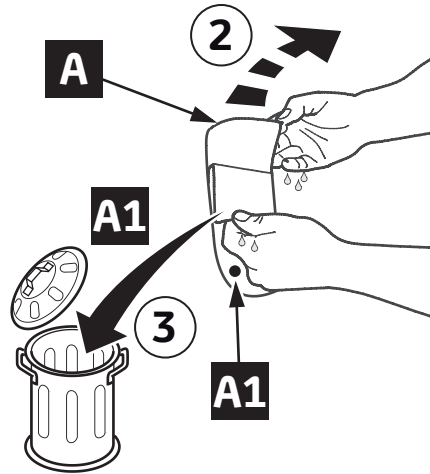



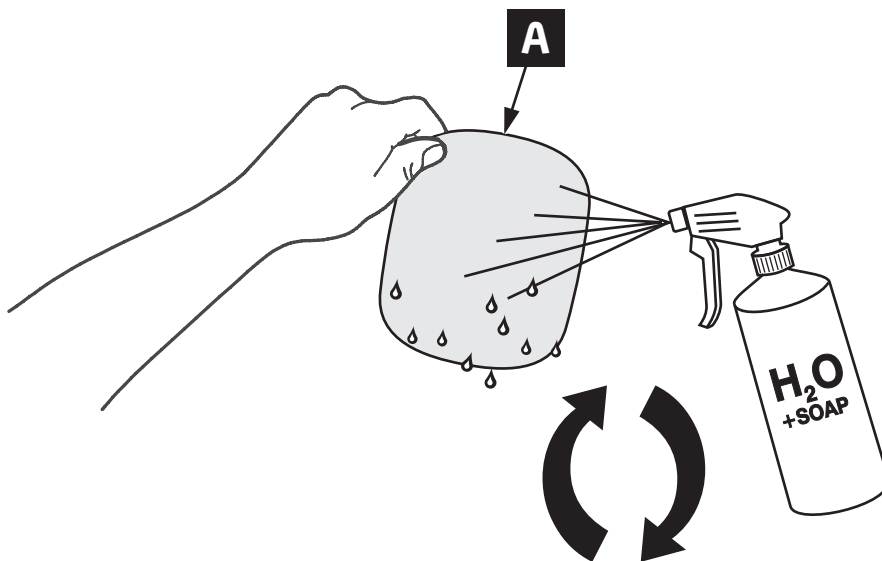

3

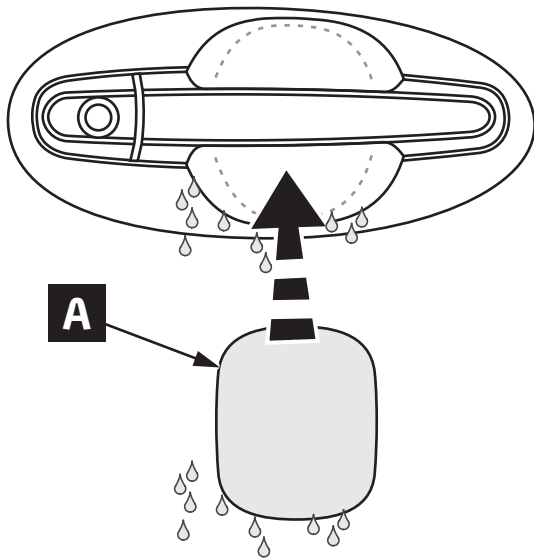



4





  




**Toyota C-HR**  
**Land Cruiser VX**  
**\*\*J200\*-G\*\*E\*W**

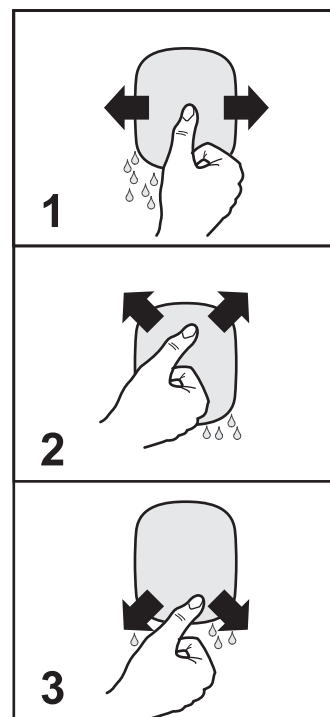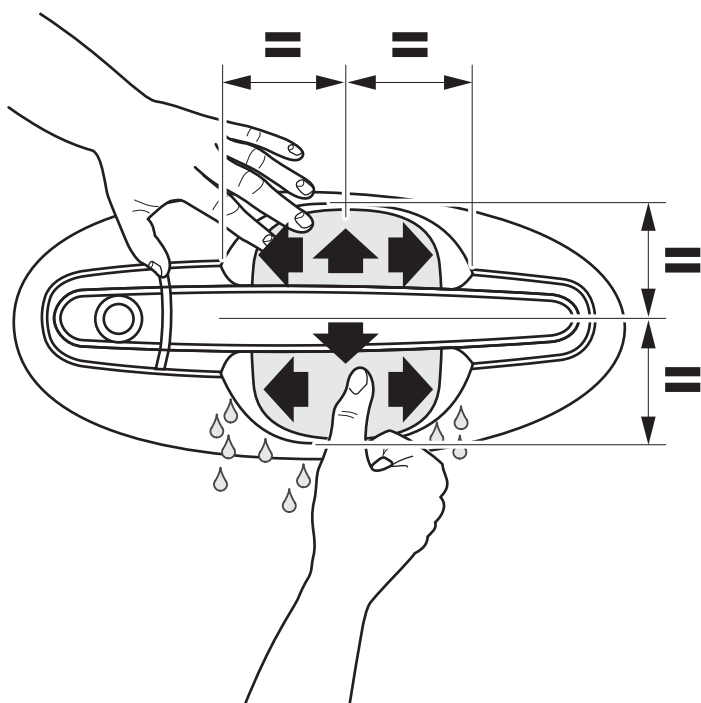5



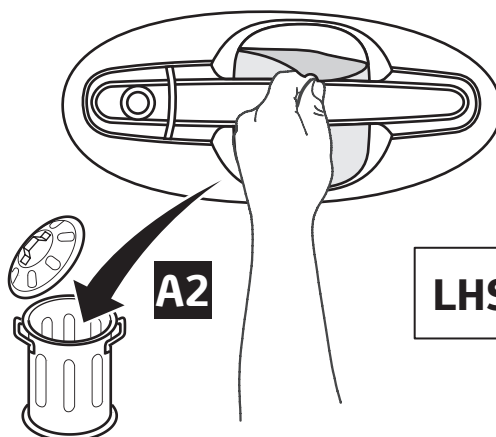


6




**LHS = RHS**

7

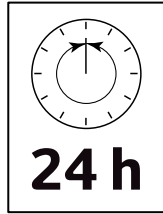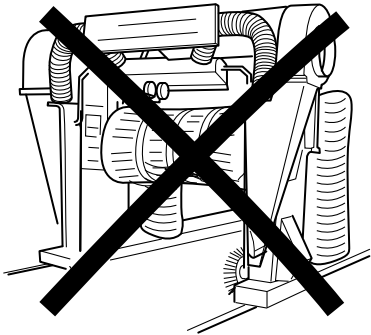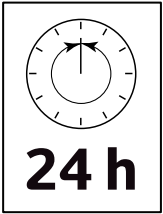

**> 1 meter**

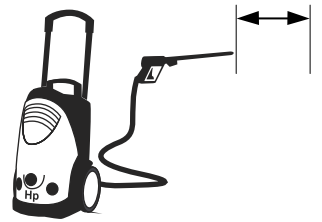

# CHECK SHEET



TOYOTA

ALWAYS A BETTER WAY

Model / Year    Universal    Door handle protection film

VIN n°

**P/N = OK**

= OK

OK

OK

= OK

**Installation Date:**

.. / .. / ..

**Technician Name & Signature:**

**Stamp:**