




# **Avensis Wagon**

## **Half Height Dog Guard**

Installation instructions

Model year: 2008  
Vehicle code: \*\*T27\*\*-AW\*\*\W  
Part number: Dog Guard: PZ483-T5121-00  
Mounting Kit: PZ483-T5121-60  
Divider: PZ483-T5122-00  
Mounting Kit: PZ483-T5122-60  
Weight: Dog Guard: 6kg  
Divider: 4kg


Manual reference number: AIM 001 262-0

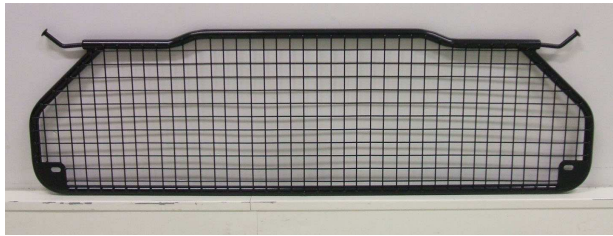

C

PZ483-T5121-00

1-15

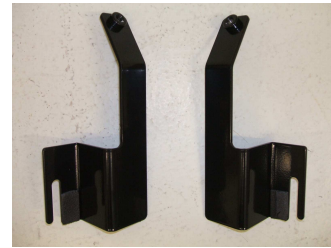

B L/H x1      A R/H x1



D x 2



A



B x1      C x2      D x2      E



PZ483-T5122-00

16-24



B L/H x1      A R/H x1



D x 2

PZ483-T5121-60  
(MOUNTING KIT)





B x1      C x2      D x2      E







PZ483-T5122-60  
(MOUNTING KIT)

**REVISION RECORD**

Rev No.	Date	Page	Picture	Update	New	Deleted Steps

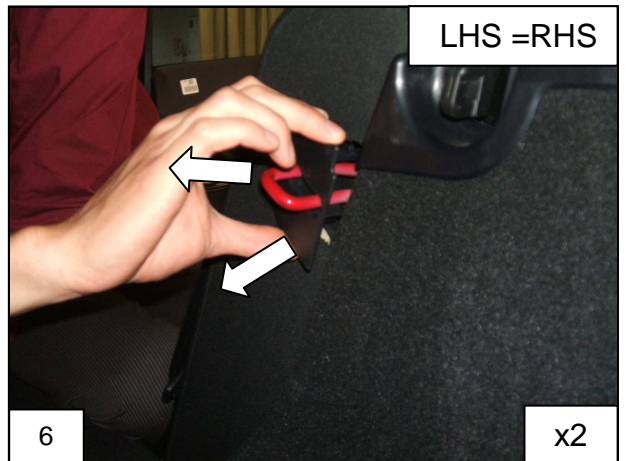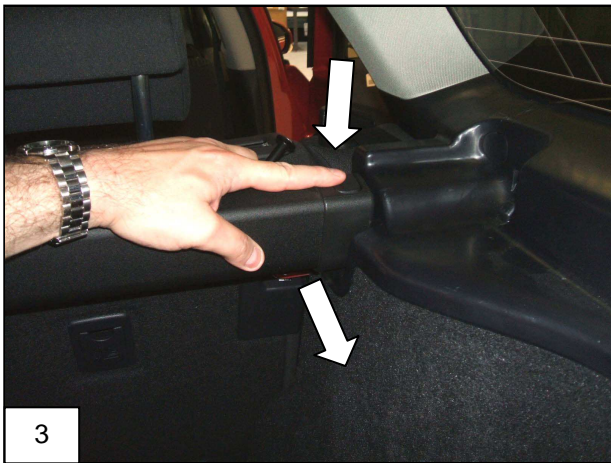

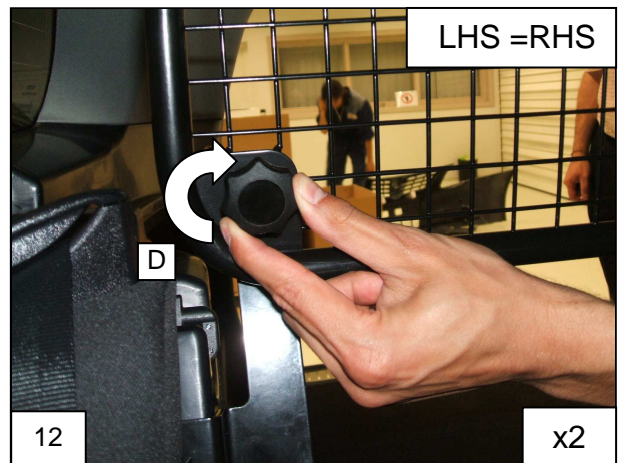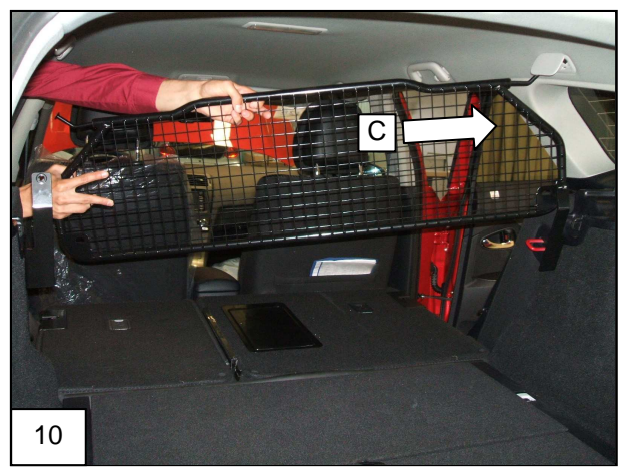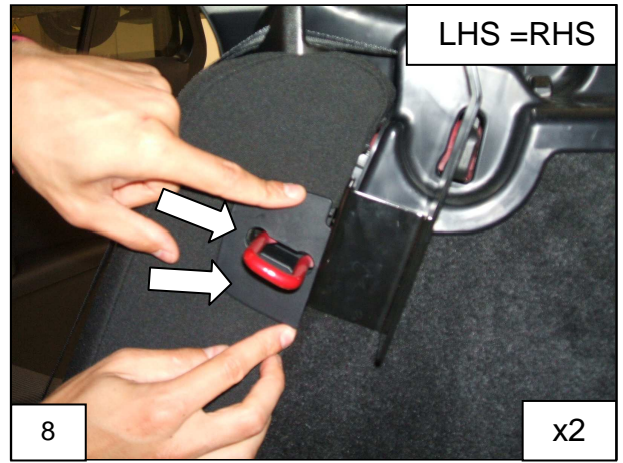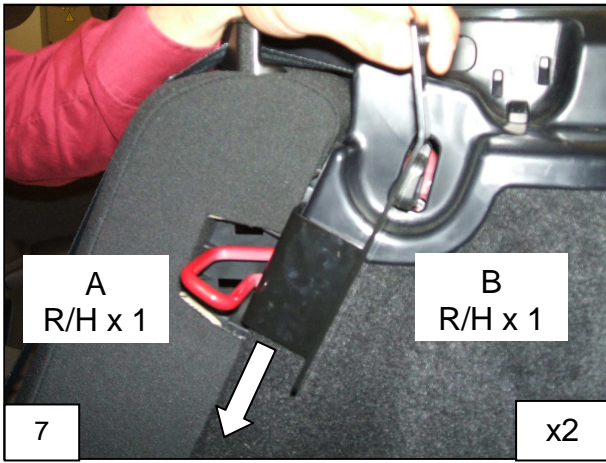

PZ483-T5122-00 ⇨STEP 16

