




# Prius

N1 Conversion kit TDK

Installation instructions

Model year : 04/2009  
Vehicle code: ZVW30L-AHEBW  
Part number: PZ449-G3E31-00






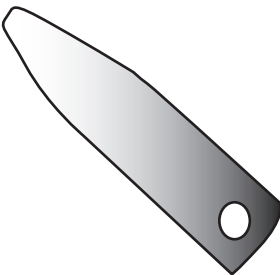
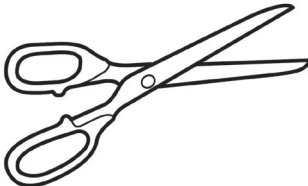
 Weight: 62 kg


Manual reference number: AIM 001 307-1

# Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
1	8/12-09	3		Yes		
1	8/12-09	4	A1	Yes		
1	8/12-09	11	40,41	Yes		
1	8/12-09	12	46,47,48	Yes		

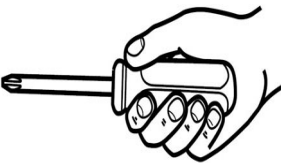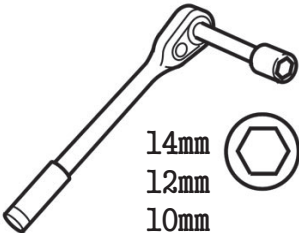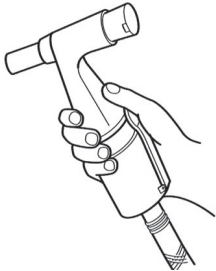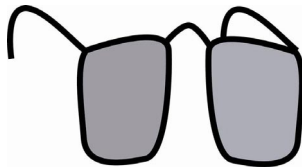



## Tools

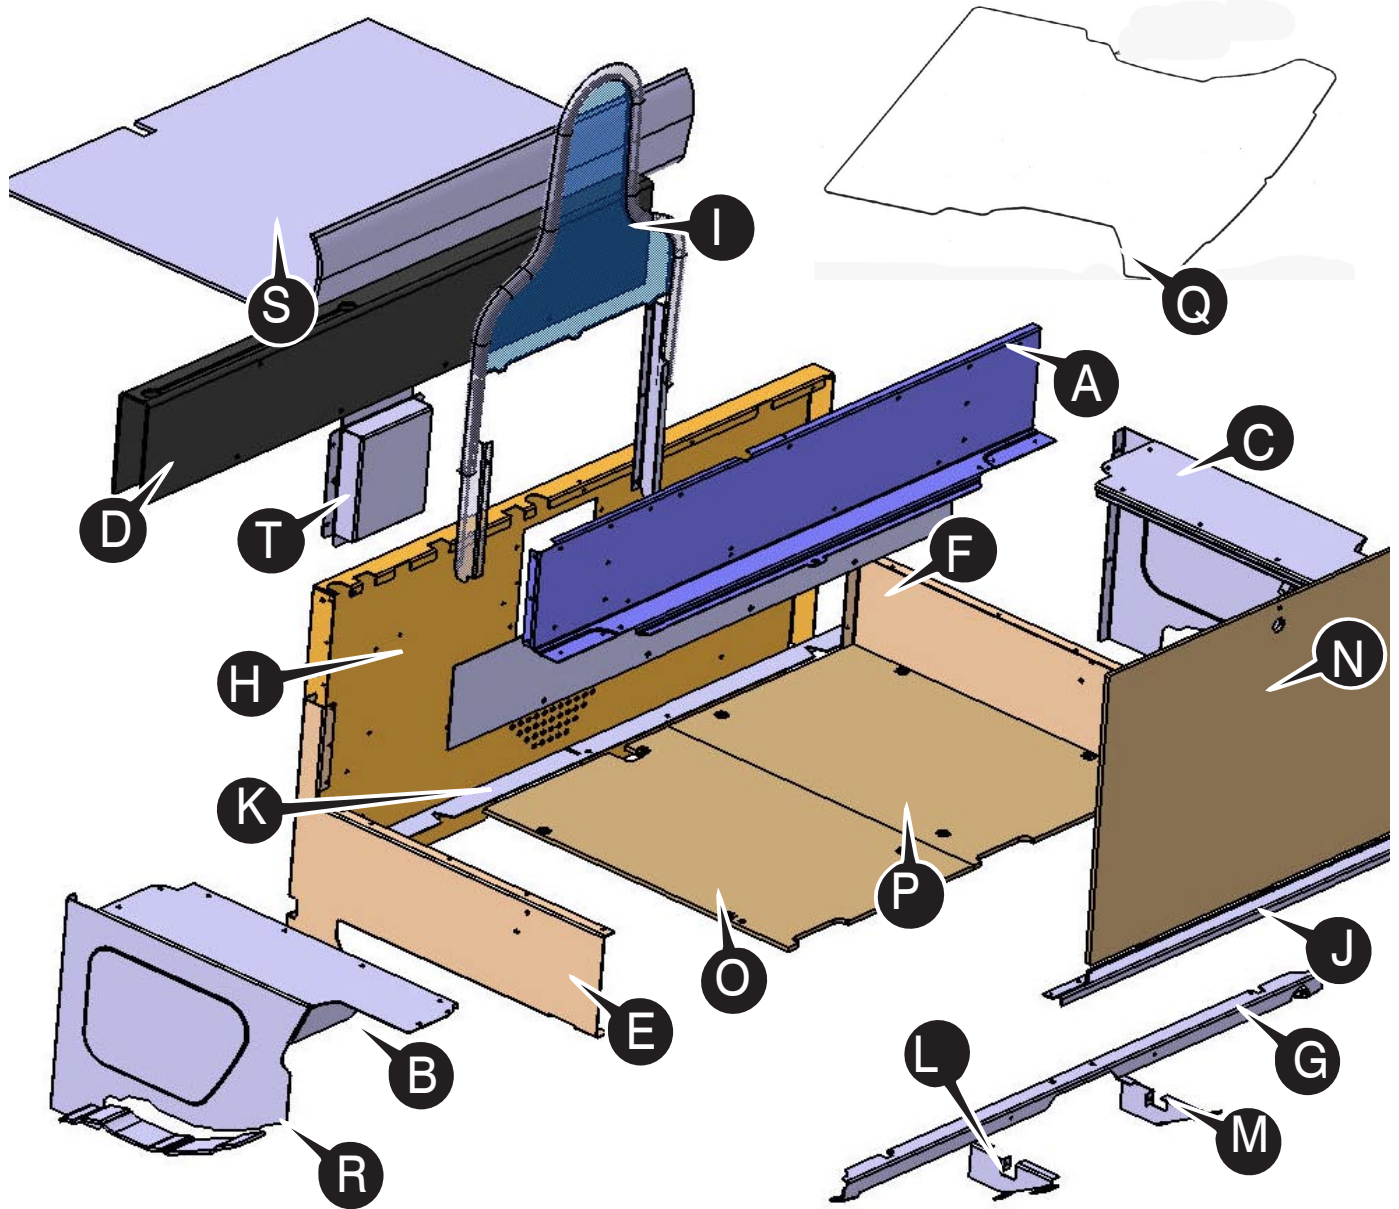

Num	Qua	Part Numb	Definition	Sparepart number
A	1	15002471	Rear sheet lower separator	
B	1	15002472	Side cover left	
C	1	15002473	Side cover right	
D	1	15002474	Innerliner lower separator	
E	1	15002475	Floor support left	
F	1	15002476	Floor support right	
G	1	15002477	Floor support rear	
H	1	15002478	Front sheet	
I	1	15002479	HTS separator	PZ449-G3E31-01
J	1	15002485	Hatch support rear	
K	1	15002486	Luggage room support	
L	1	15002492	Bracket for rear floor support left	
M	1	15002493	Bracket for rear floor support right	
N	1	15002487	Hatch	
O	1	15002488	Floor luggage room	
P	1	15002489	Floor luggage room	
Q	1	15002491	Full carpet floor	PZ449-G3E31-02
R	2	15002495	Carpet for sidecover	
S	1	15002494	Carpet luggage room	
T	1	15003468	Innsert for lower separator	

15002490 PZ449-G3E31-60 Fitting kit

<p><b>A1</b> 5x12 NSS 67 PCS</p> 	<p><b>A2</b> 6x15 Umb 4 PCS</p> 	<p><b>A3</b> 15003047 Screw rivet D8 Nylon 12 PCS</p> 
<p><b>A4</b> Sort plastpropp 9 PCS</p> 	<p><b>A5</b> 461 00 28 2850 mm</p> 	<p><b>A6</b> 5x10x16 NSS 8 PCS</p> 
<p><b>A7</b> MP 8236A 4 PCS</p> 	<p><b>A8</b> 36.721004 330 mm</p> 	<p><b>A9</b> 6x16 6k 2 PCS</p> 
<p><b>B1</b> 123-M6-2C ZC 3 PCS</p> 	<p><b>B2</b> 6,4x15x1,5 S 2 PCS</p> 	<p><b>B3</b> M6x20 ø20 Rattskrue 1 PCS</p> 
<p><b>B4</b> 05100973 2 PCS</p> 	<p><b>B5</b> 15001819 End cover 2 PCS</p> 	<p><b>B6</b> 15002547 Handle cover 2 PCS</p> 

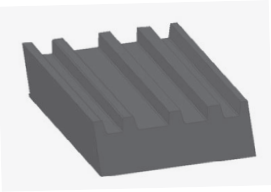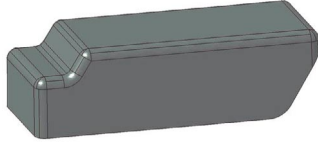