





RAV4

Side step


Installation instructions




Model year:	11/2005
Vehicle code:	**A30*-AW***W
Part number:	PZ415-X090C-ZB
 Weight:	9.8 kg
 Installation time:	1.0 hour
Manual reference number:	AIM 000 530-2

Revision Record

Rev. No	Date	Page	Picture	Update	New	Deleted Steps
1	Jan. 19, 2006	1		✓		
2	Feb. 27, 2009	4, 6	1, 2, 5			✓
		6, 8	4, 8, 9	✓		

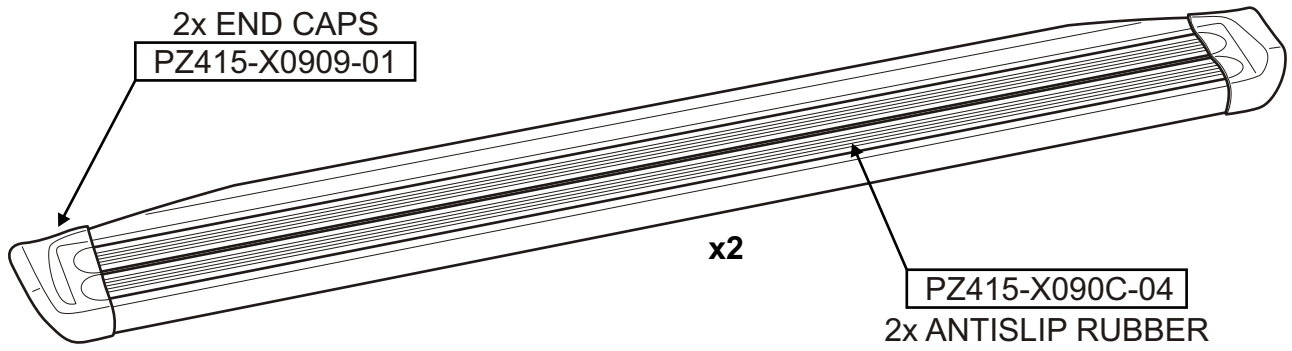A

PZ415-X090C-01

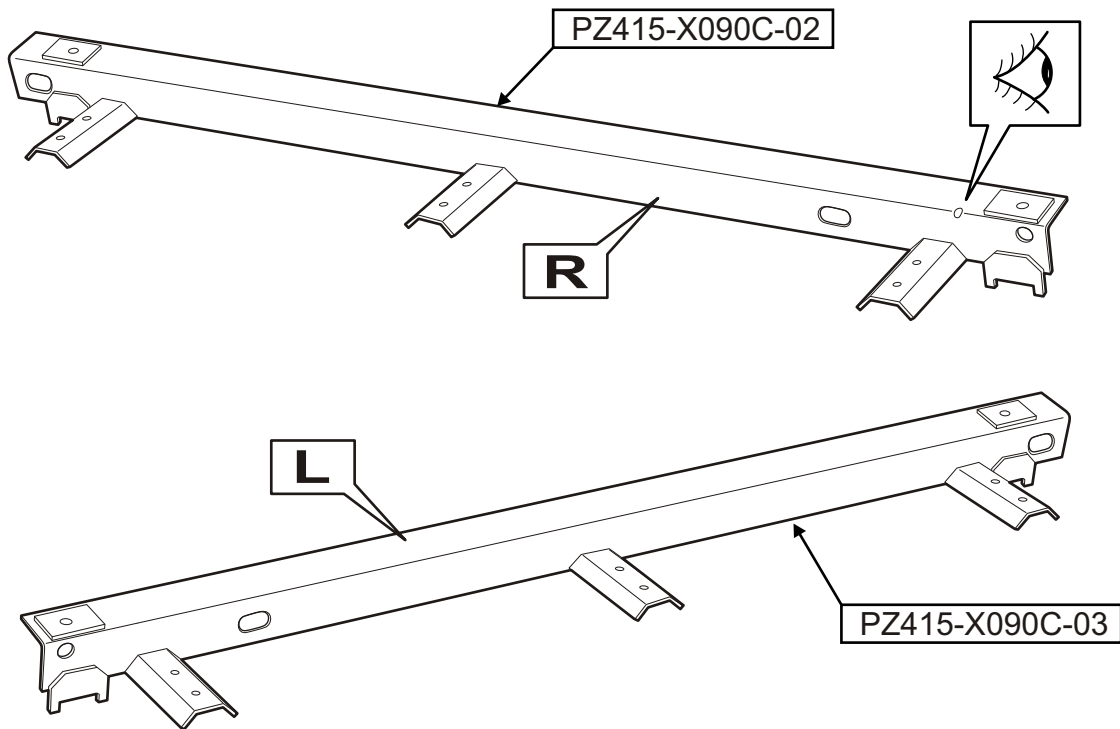B

PZ415-X090C-60

C


x12

D

x12

E


x4

F


x4

G



x4

H



x2

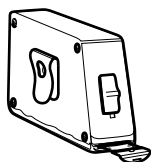





13mm

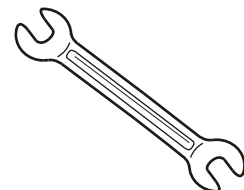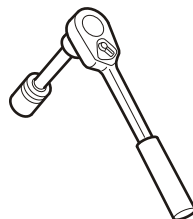

17mm

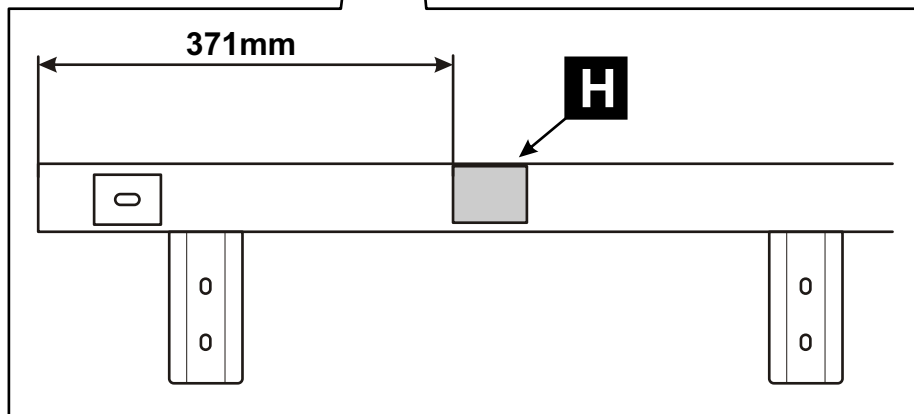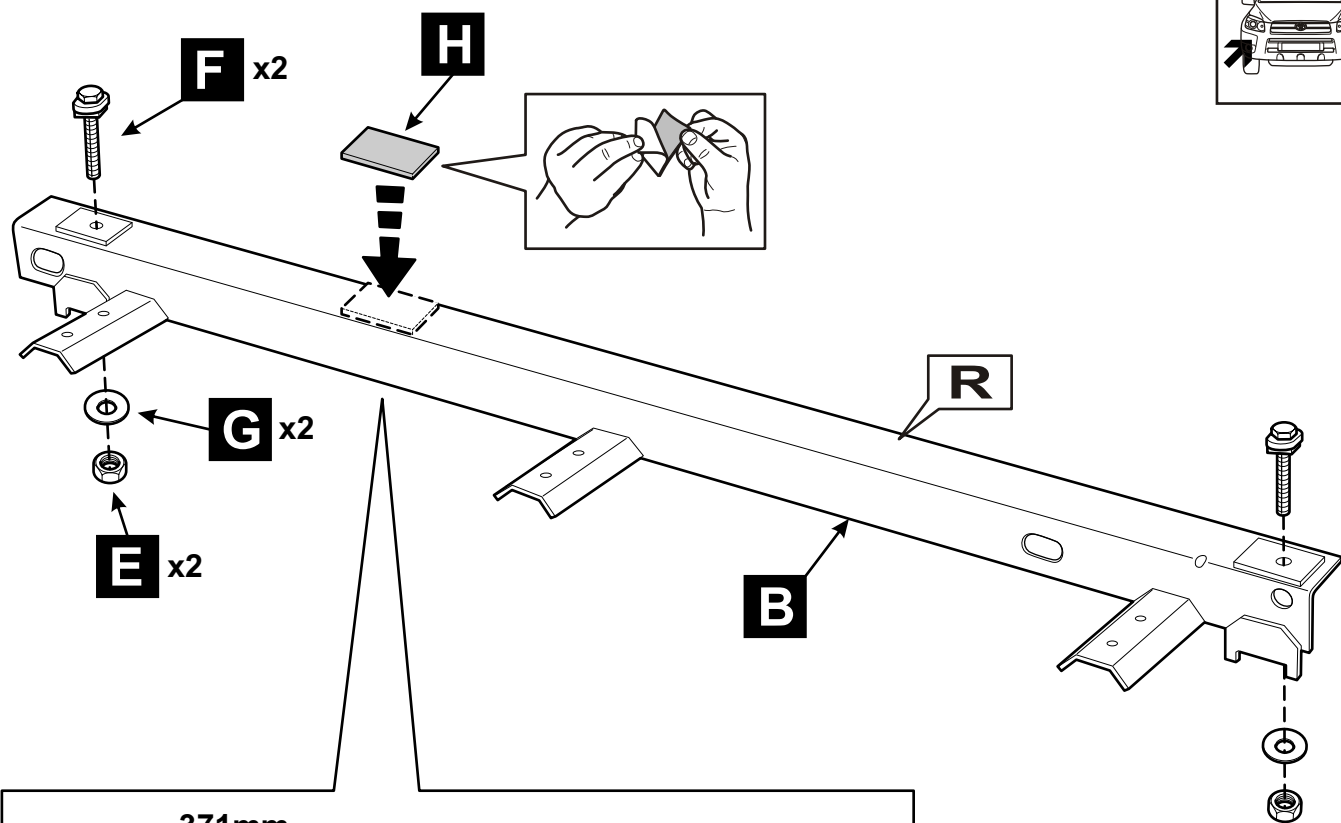

1

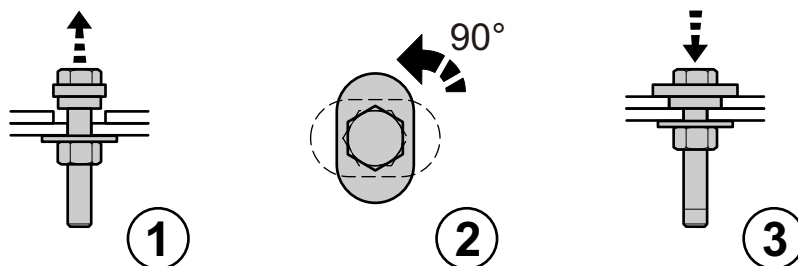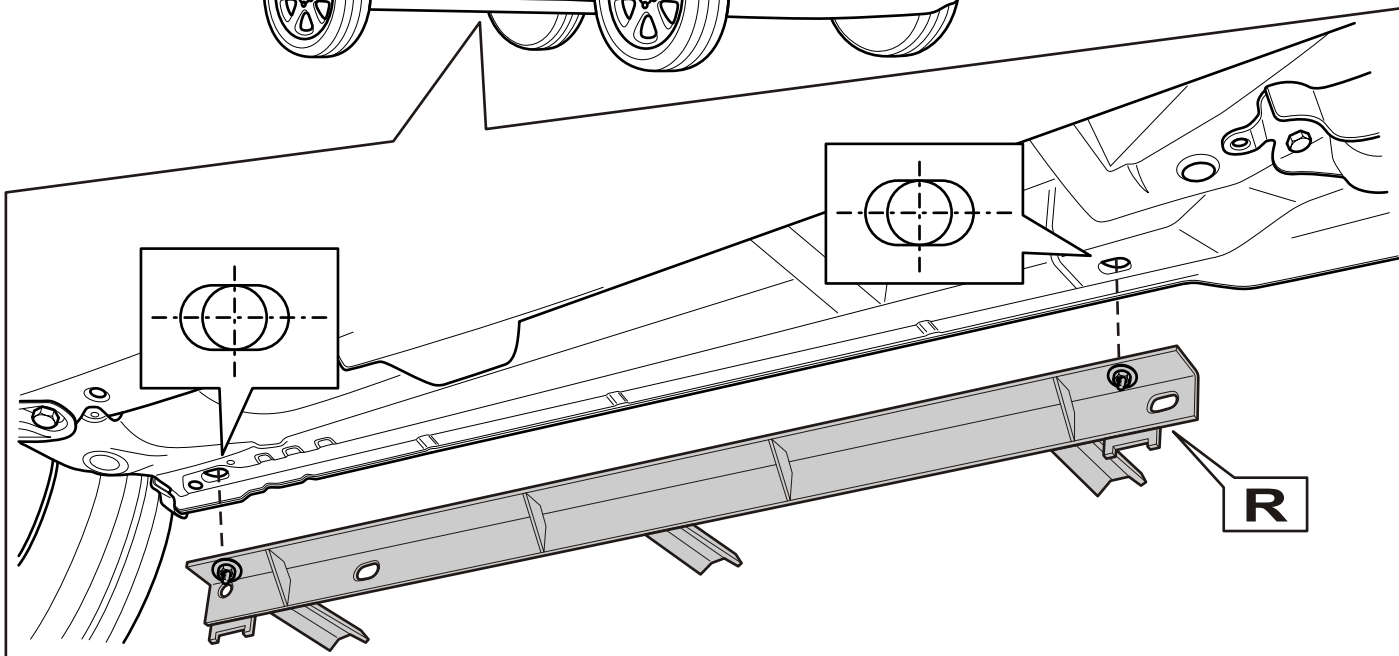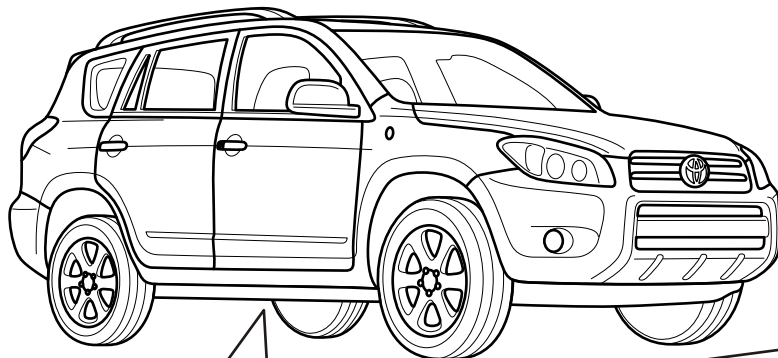
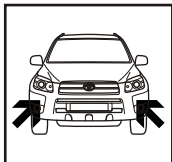


2




1

2



3

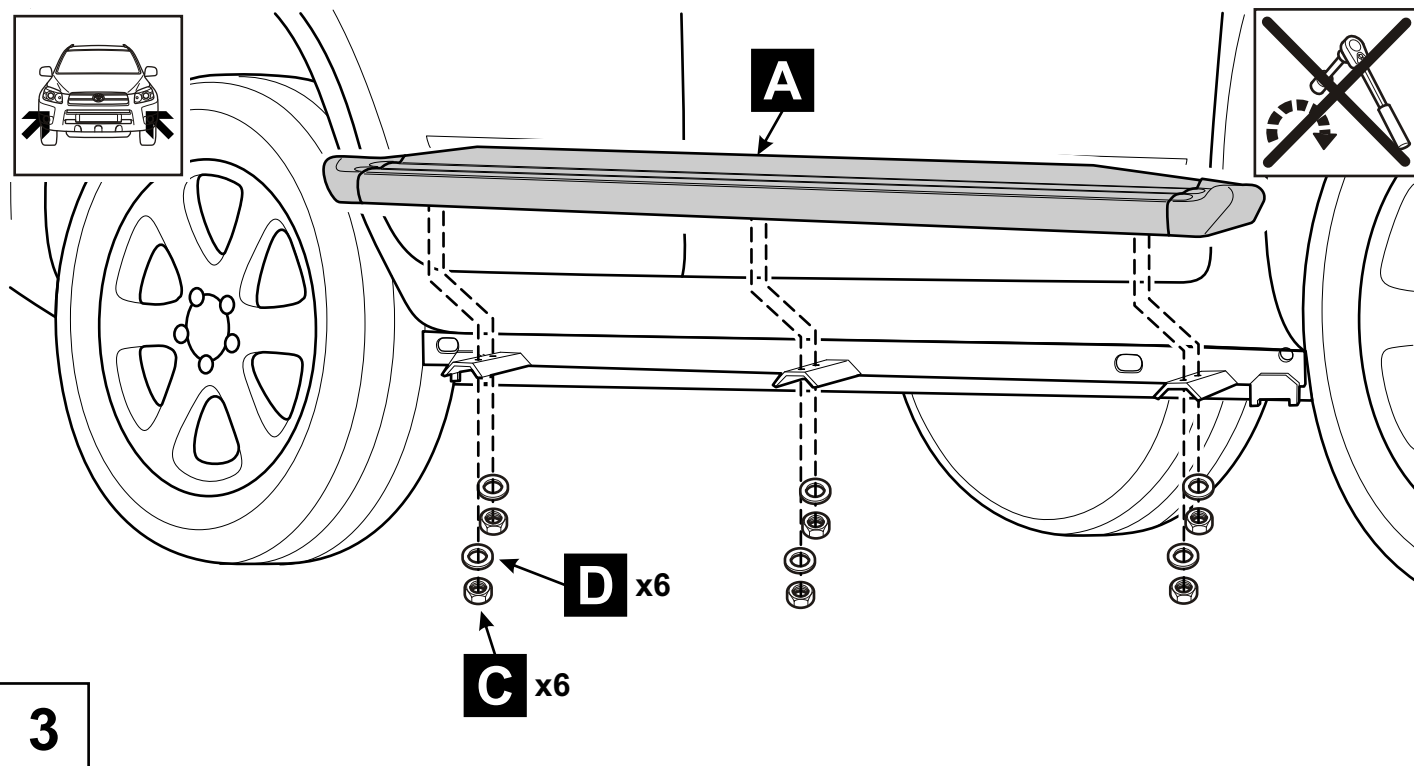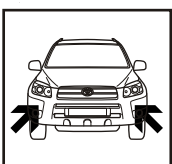





3

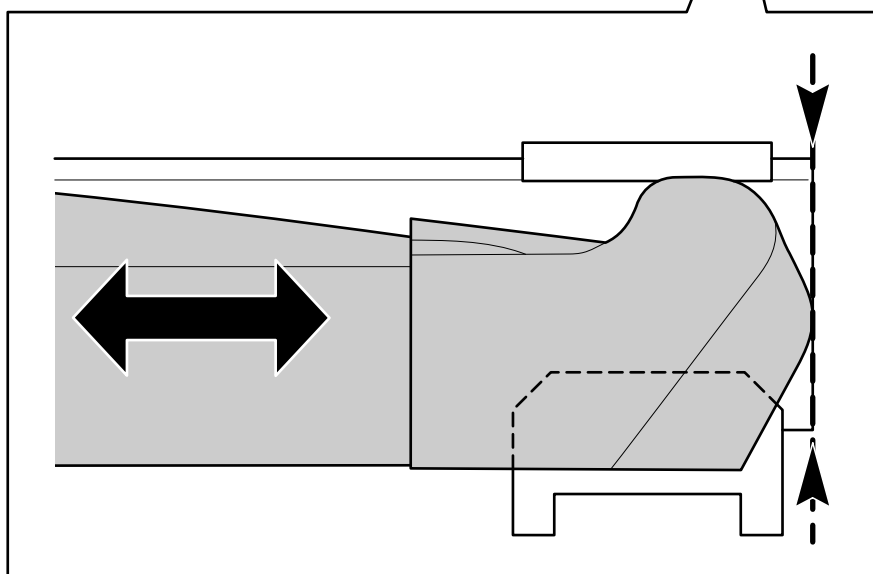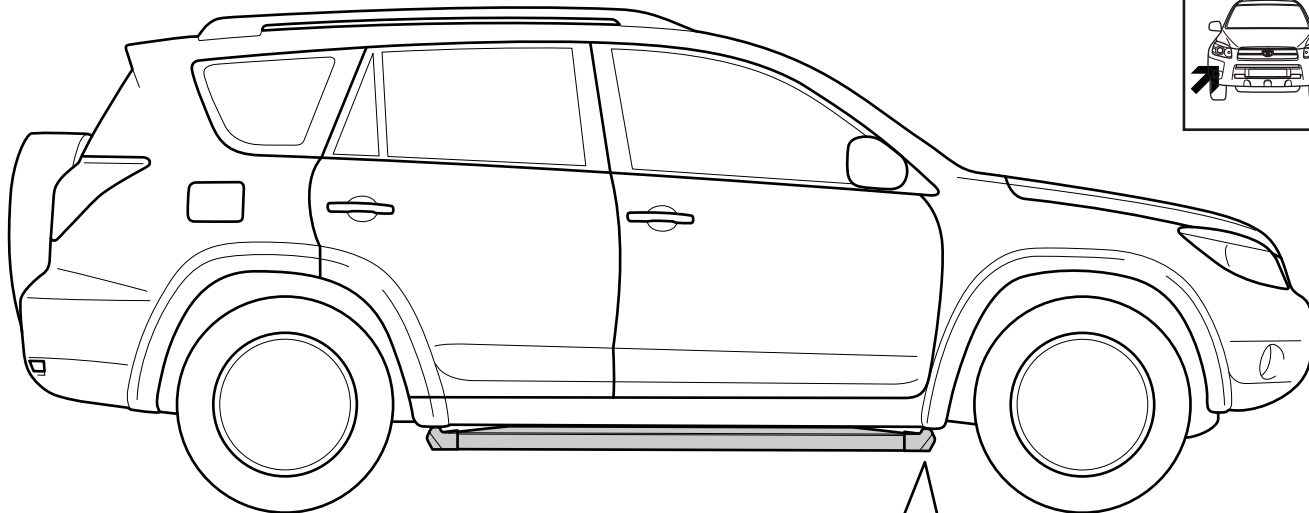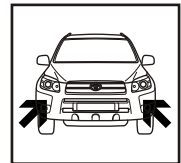

4

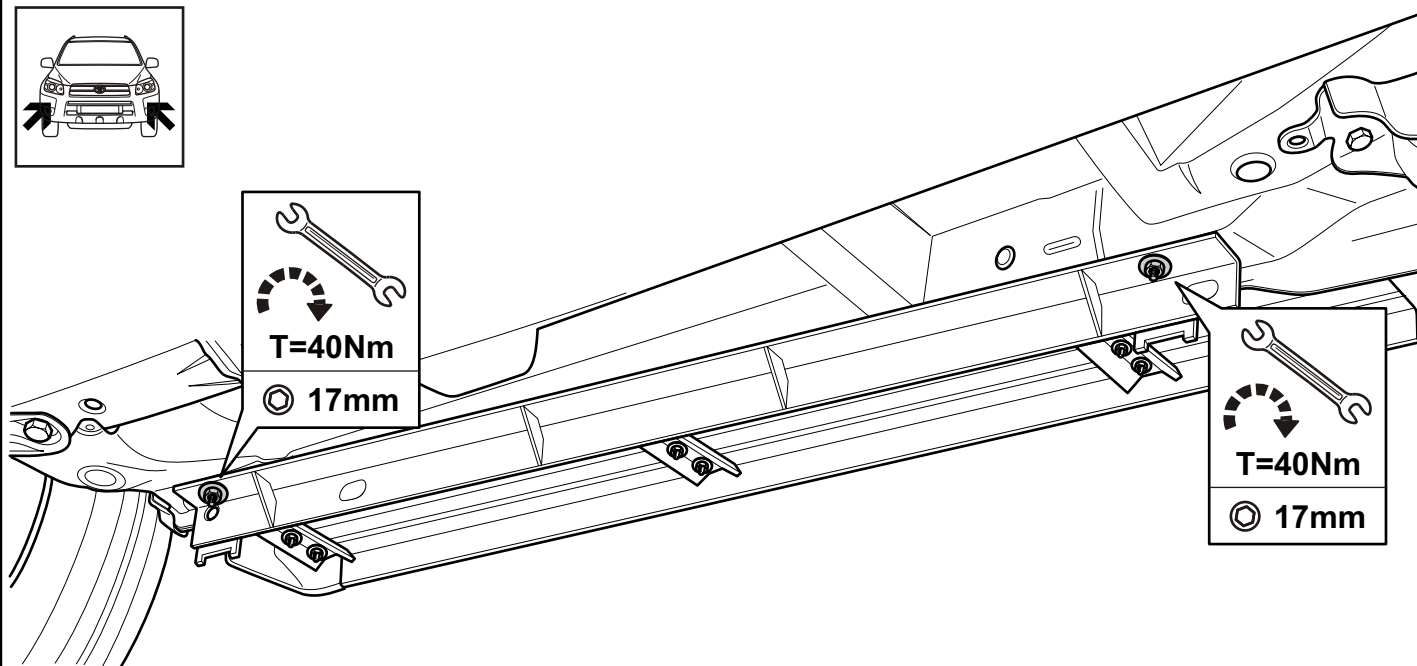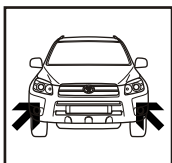

5

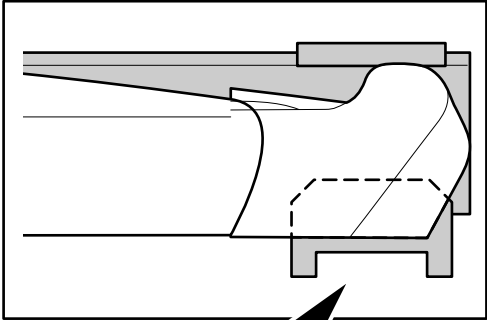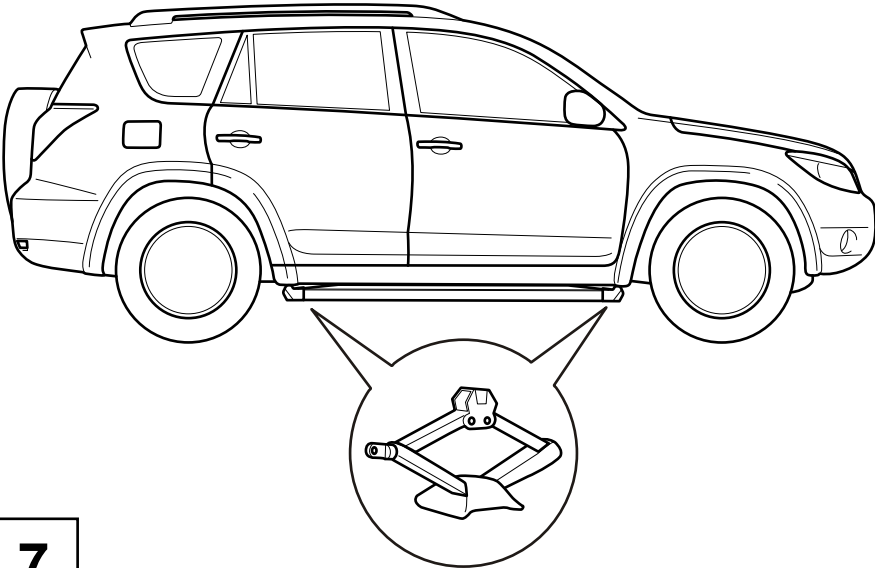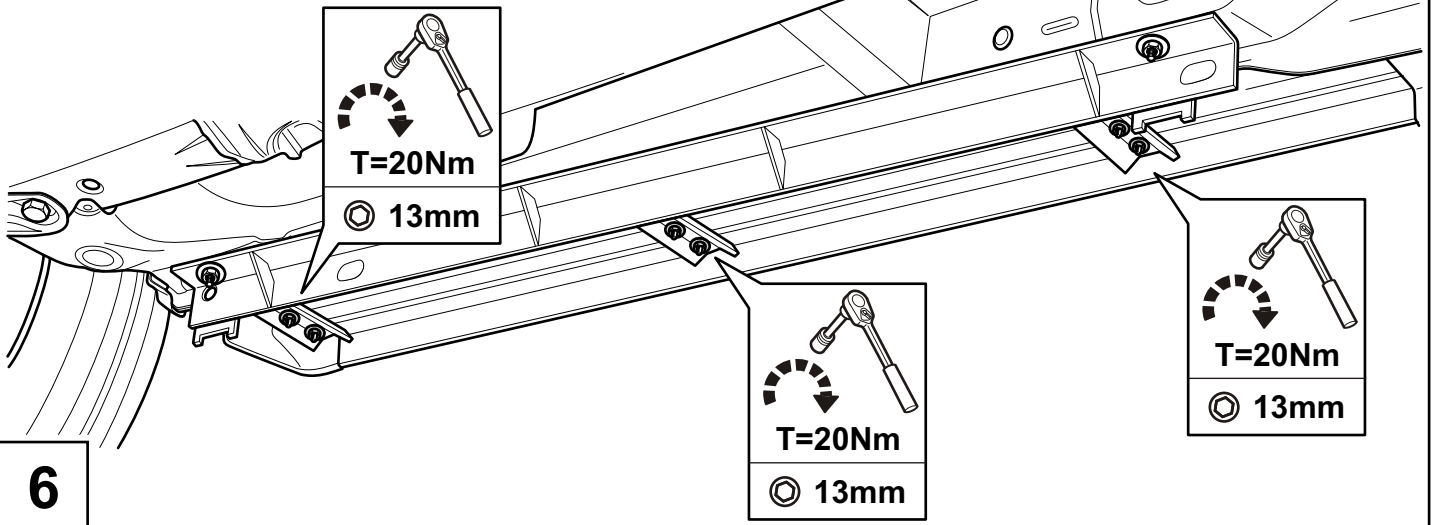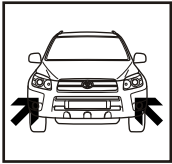

7