



**TOYOTA**

ALWAYS A  
**BETTER WAY**

# Verso

## Vertical Cargo Net

Installation Instructions


Model year: 2009/02, 2012/11  
Vehicle code: \*\*R2\*\*-G\*\*\*\*W  
Part number: PZ416-50340-ZA

Manual reference number: AIM 001 461-5

# Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	07-05-09	All		X		
2	08-11-12	1			Model Year	
3	09-12-15	All		Model Year		
4	05-02-16	All		X	Check Sheet	
5	23-02-16	2-5		X	Picture 4	

**PZ416-50340-ZA**

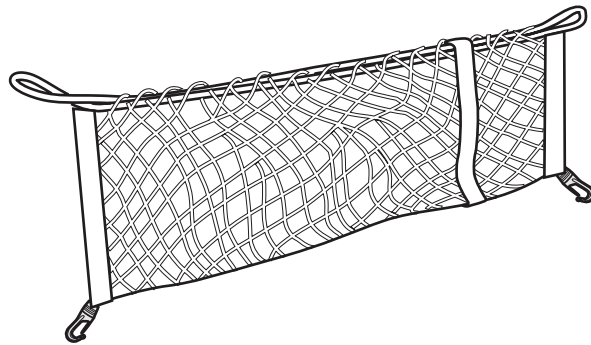


**A**

1x

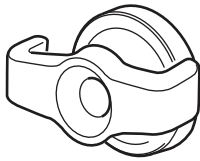

**B**

2x

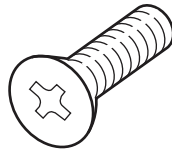






**C**



2x




**D**

2x

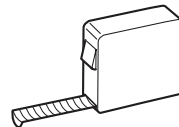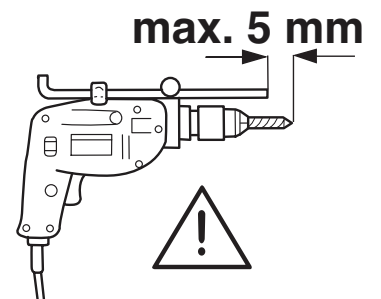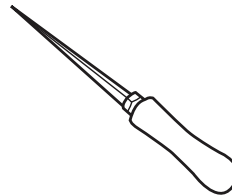


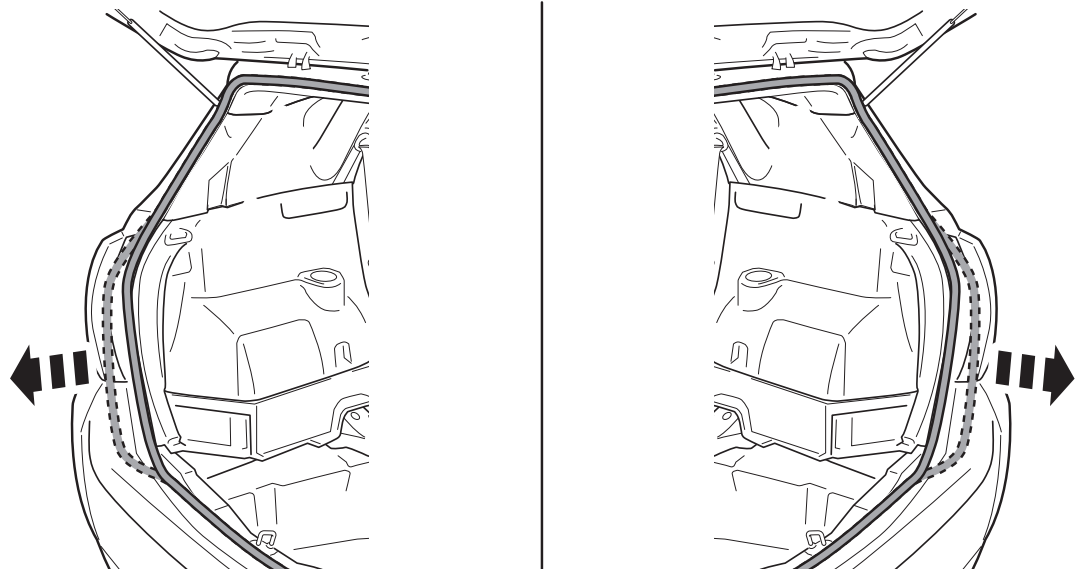
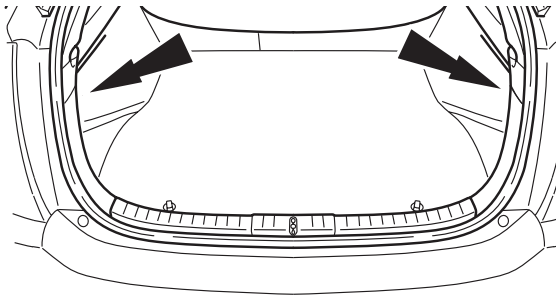


1



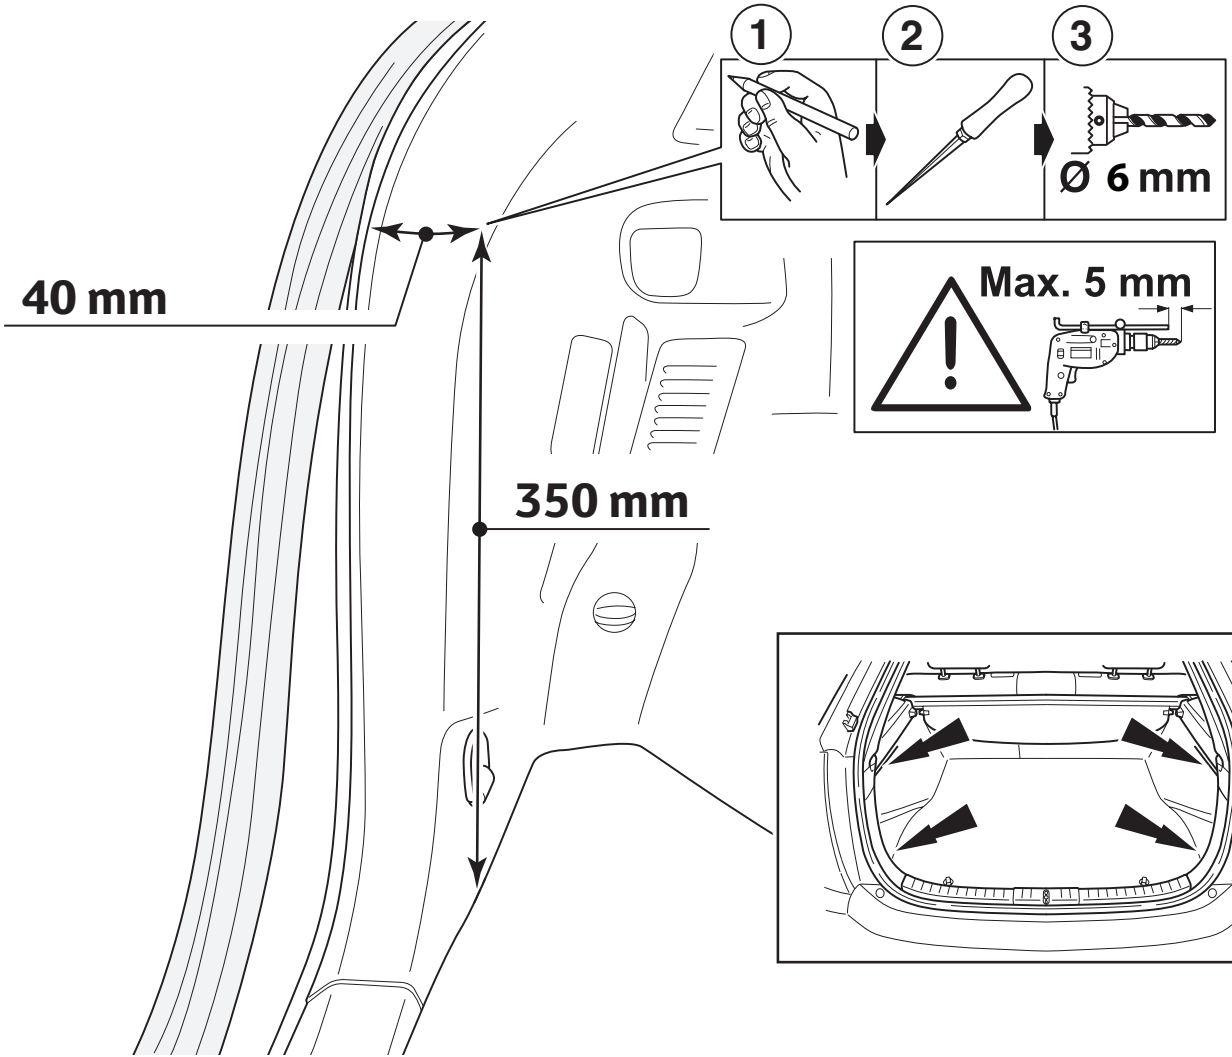


2

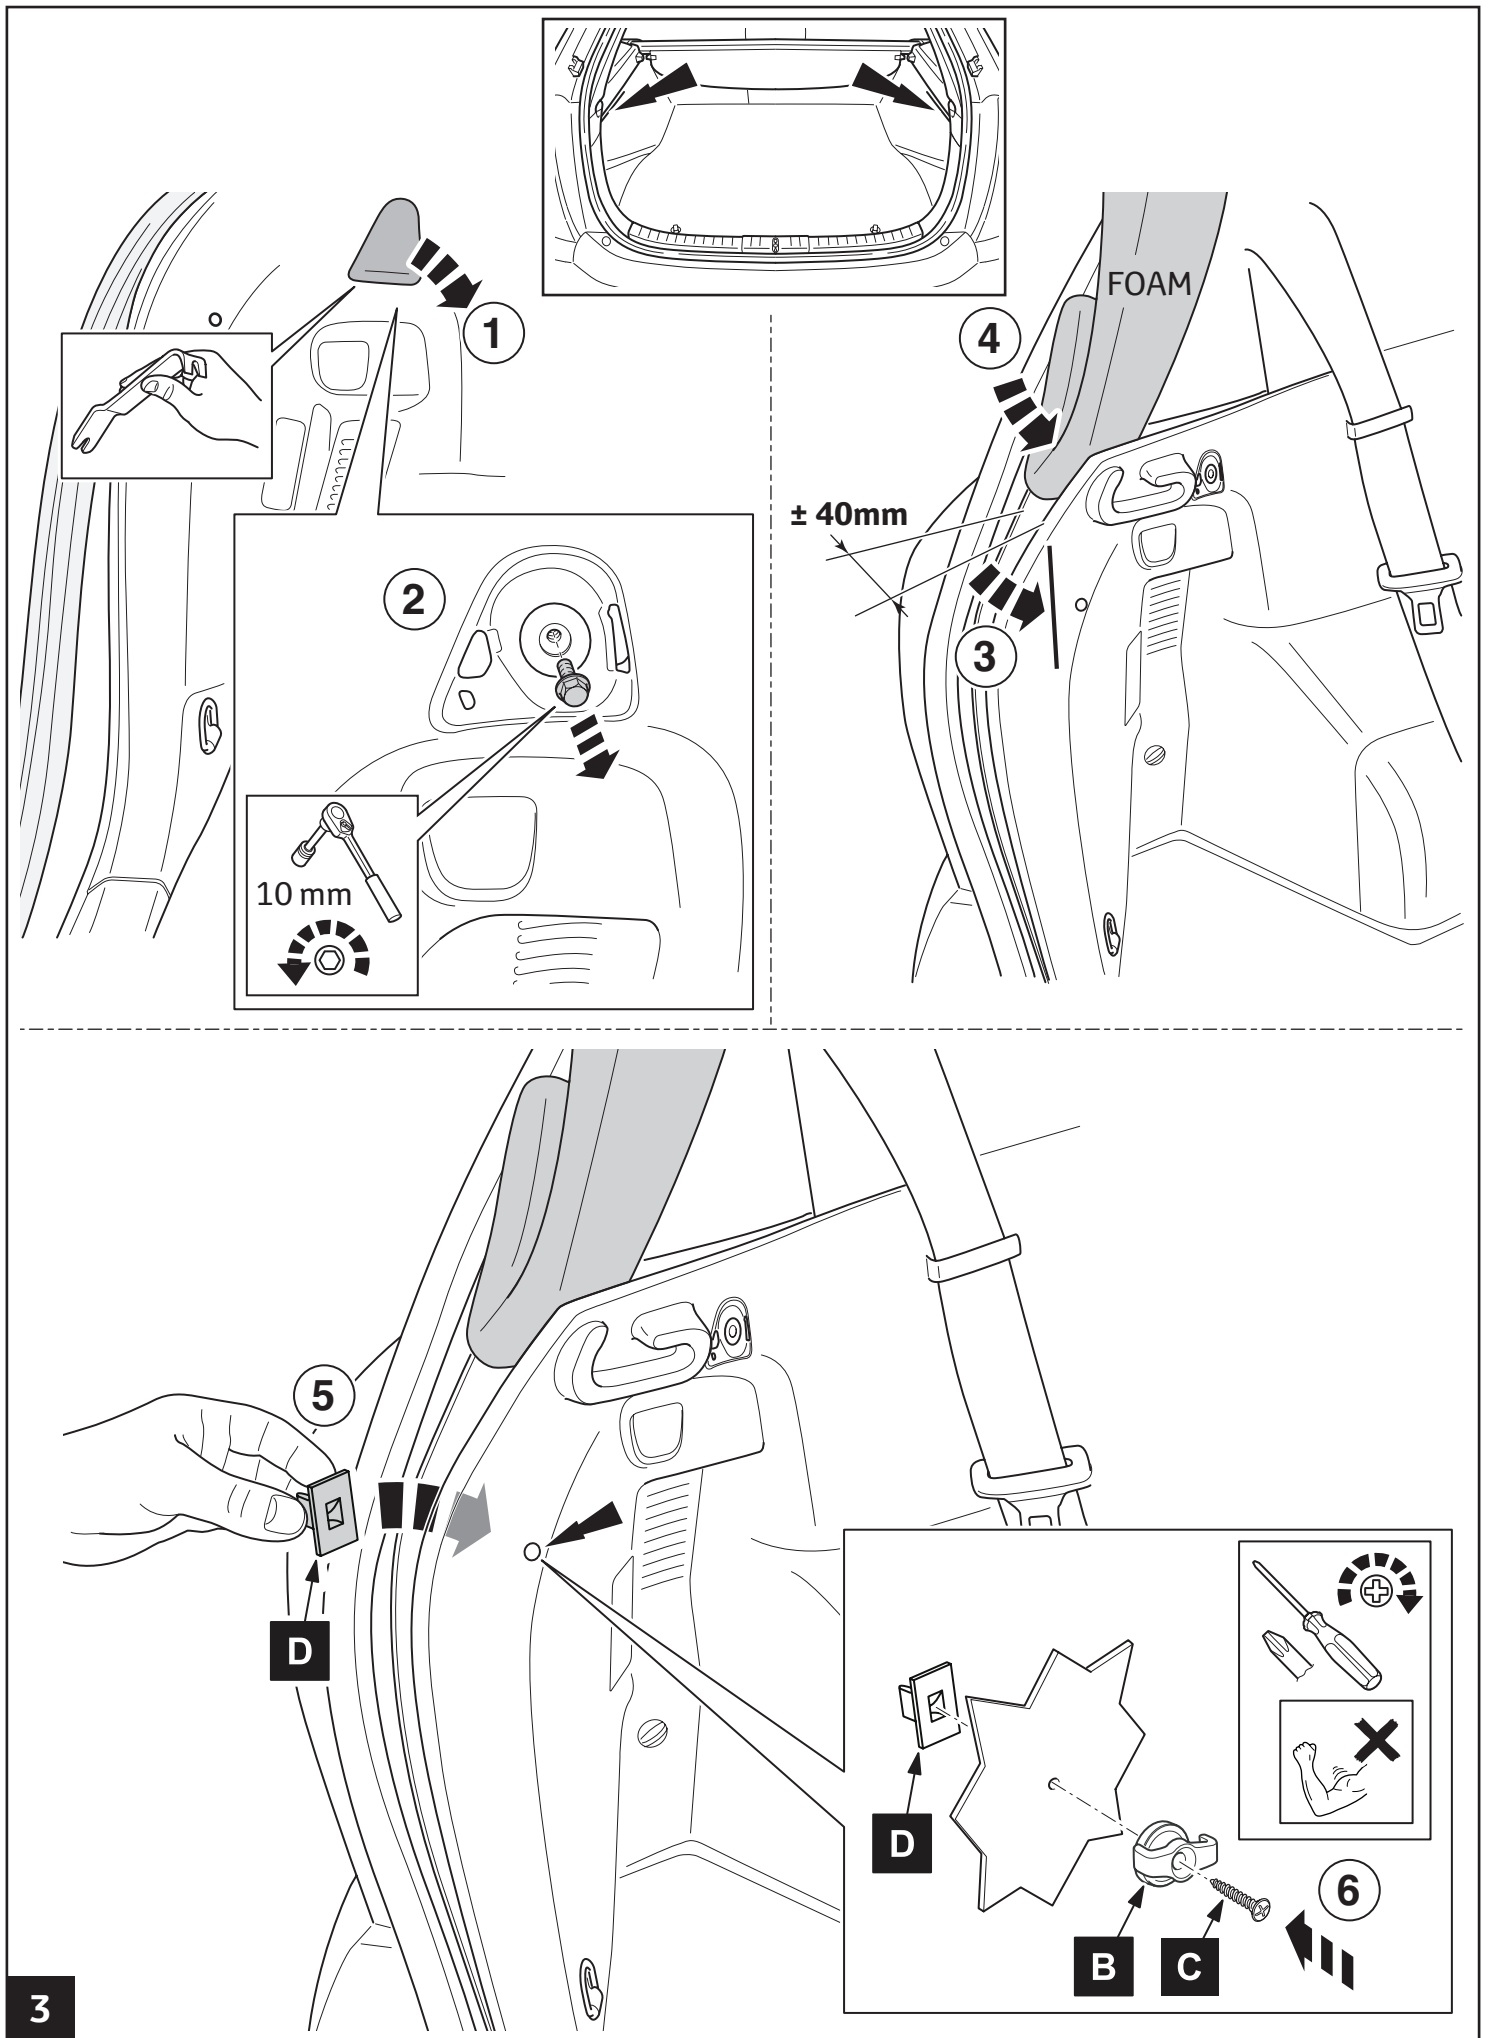

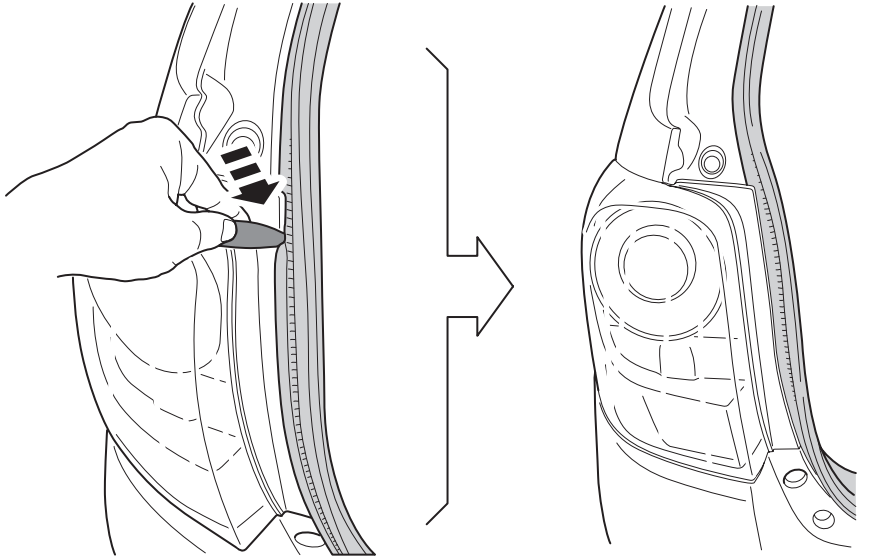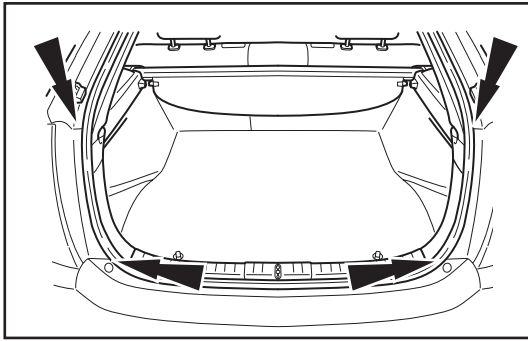

4

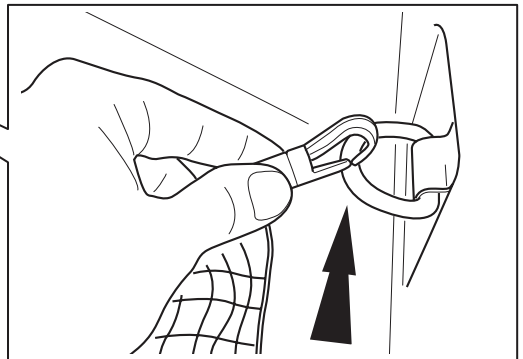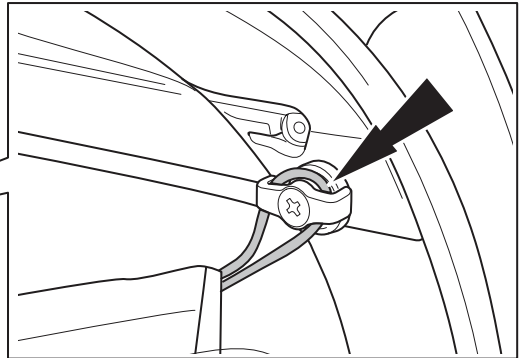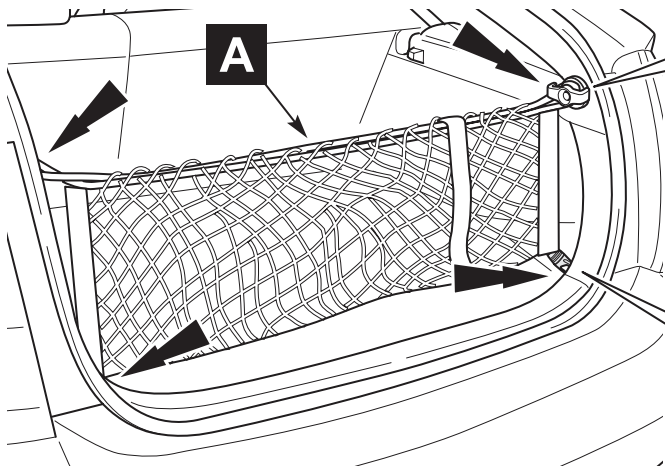

5

# CHECK SHEET





**TOYOTA**

Model / Year **Verso**  
**2009/02, 2012/11**

**Vertical Cargo Net**

VIN n°

ALWAYS A  
BETTER WAY

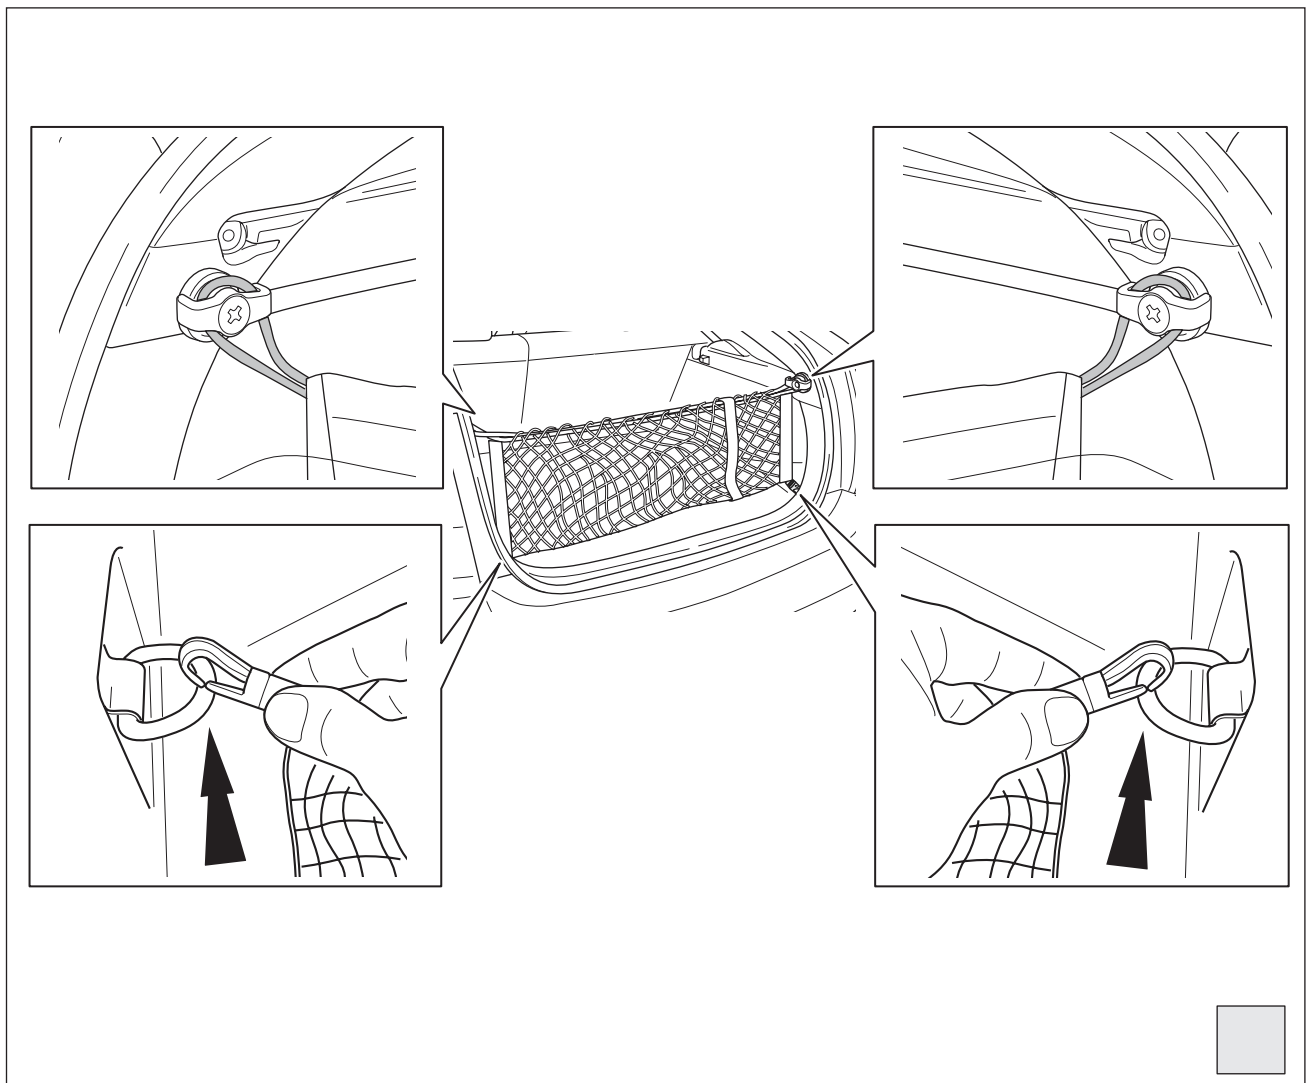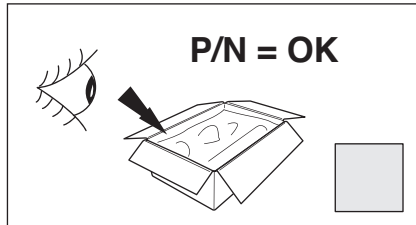

**Installation Date:**  
. . / . . / . . . .

**Technician Name & Signature:**

**Stamp:**