



TOYOTA


RAV4


Front Mudflaps

Installation instructions





Model year : 2006
Vehicle code : **A30*-AW***W
Part number : PZ416-X0960-00

 Weight : 0,370 kg


 Installation time : 0,20 hours

Manual reference number: AIM 000 516-1

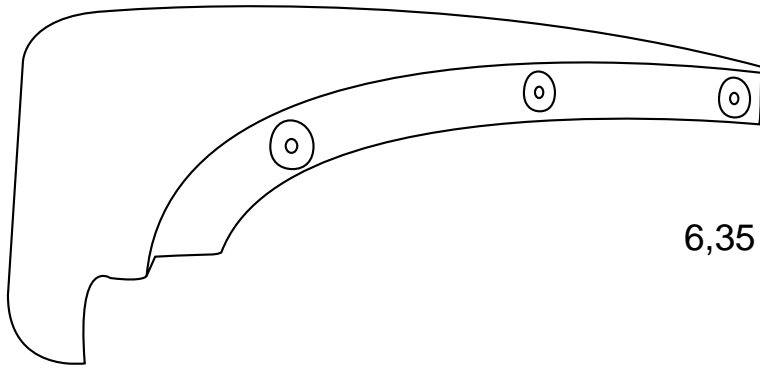


X 1 (A)


6,35 x 19




X 4 (B)




X 1 (A)

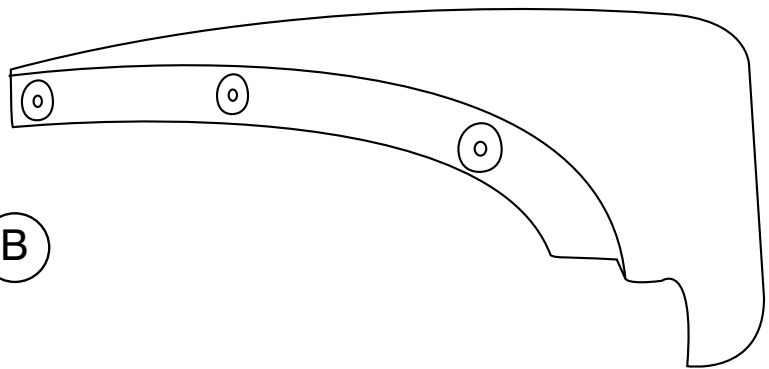

6,35 x 19




X 4 (B)

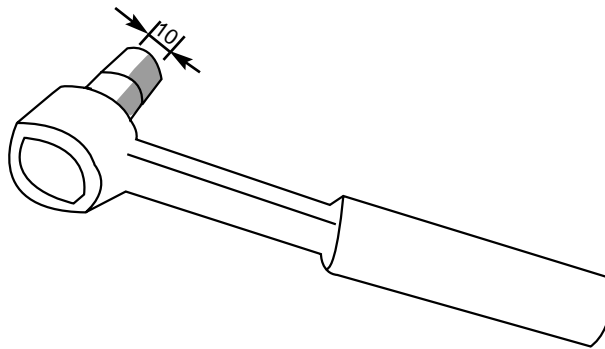


REVISION RECORD

Rev. N°	Date	Page	Picture	Update	New	Deleted Steps
1	06/01/06	all	various	pictures		none


1

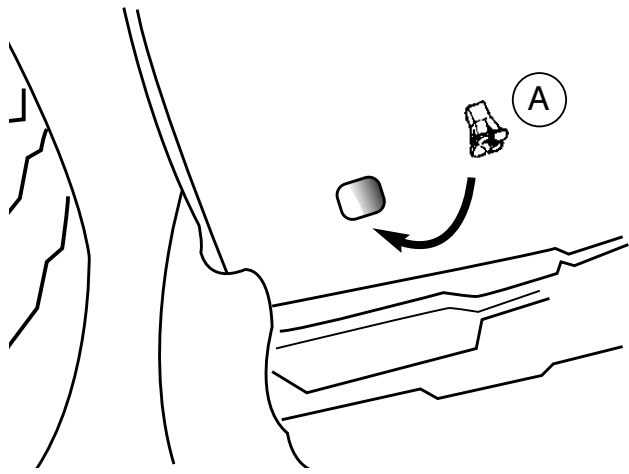


2

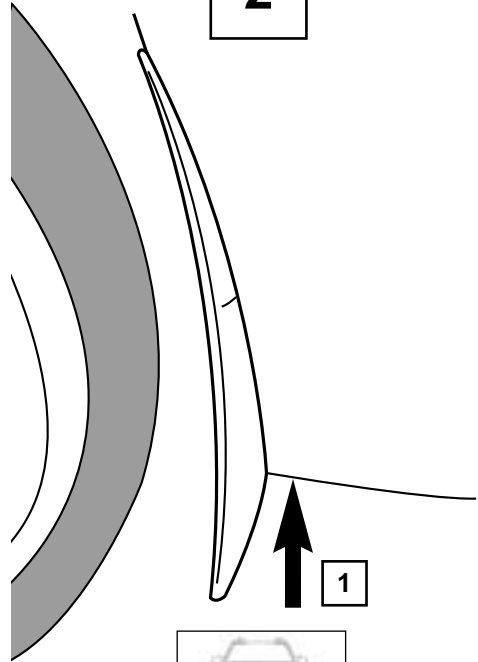


3

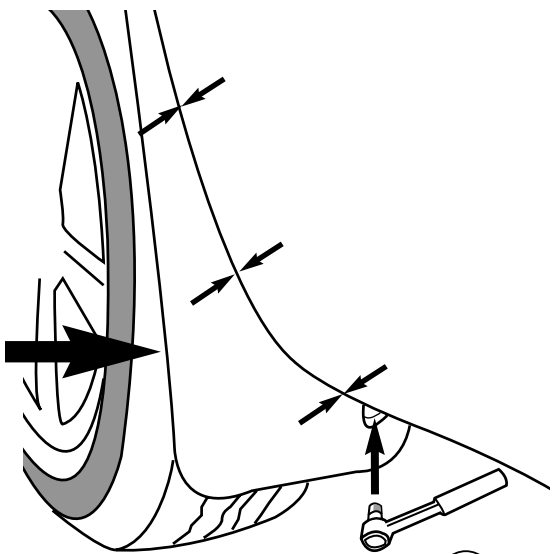

B  6,35 X 19



4

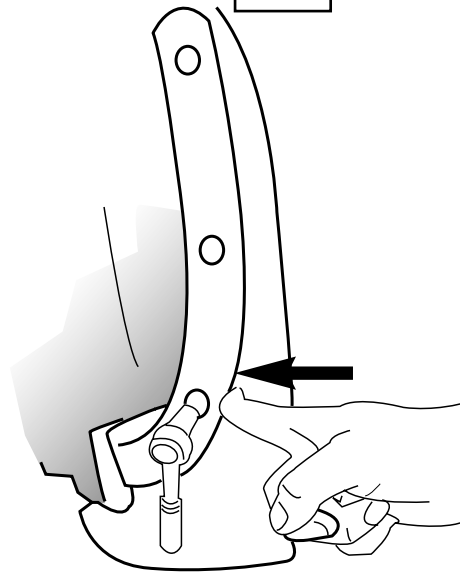

5

