



**TOYOTA**

ALWAYS A  
BETTER WAY

# RAV 4

## Wind deflectors

Installation Instruction





Model year: 2012/12  
Vehicle code: \*\*A4\*\*-AN\*\*\*W  
Part number: PZQ21-42045

Manual reference number: AIM 002 803 - 2

# Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	15.02.13	1		X		
1	15.02.13	3		X		
2	21.02.13	1		X		
2	21.02.13	3		X		

PZQ21-42045

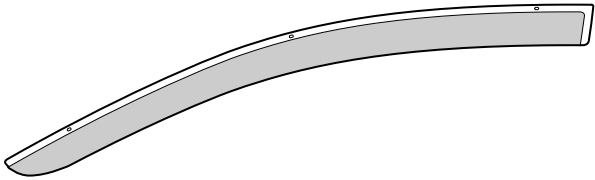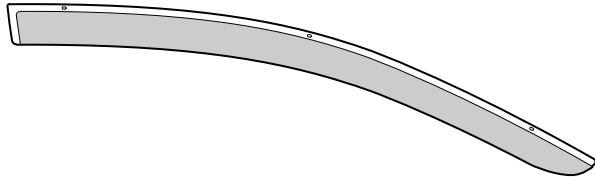


A

1x

B

1x

PZQ21-42045-FK





C

10x

D

4x

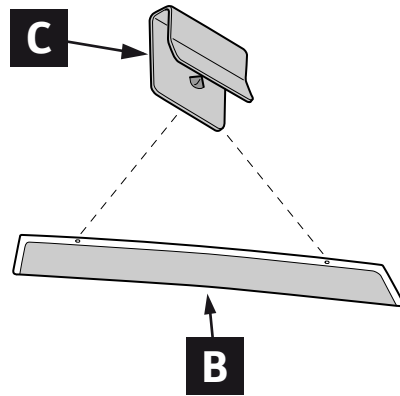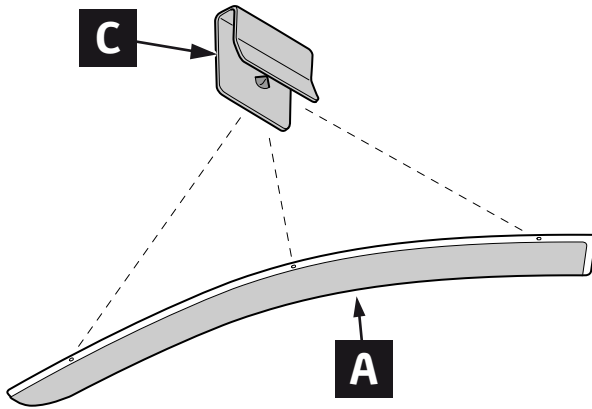


C

A


C

B

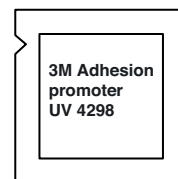


**3M Adhesion  
promoter  
UV 4298**


**PZ415-00000-00**

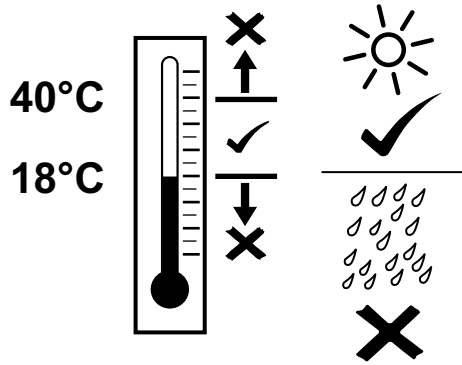



1

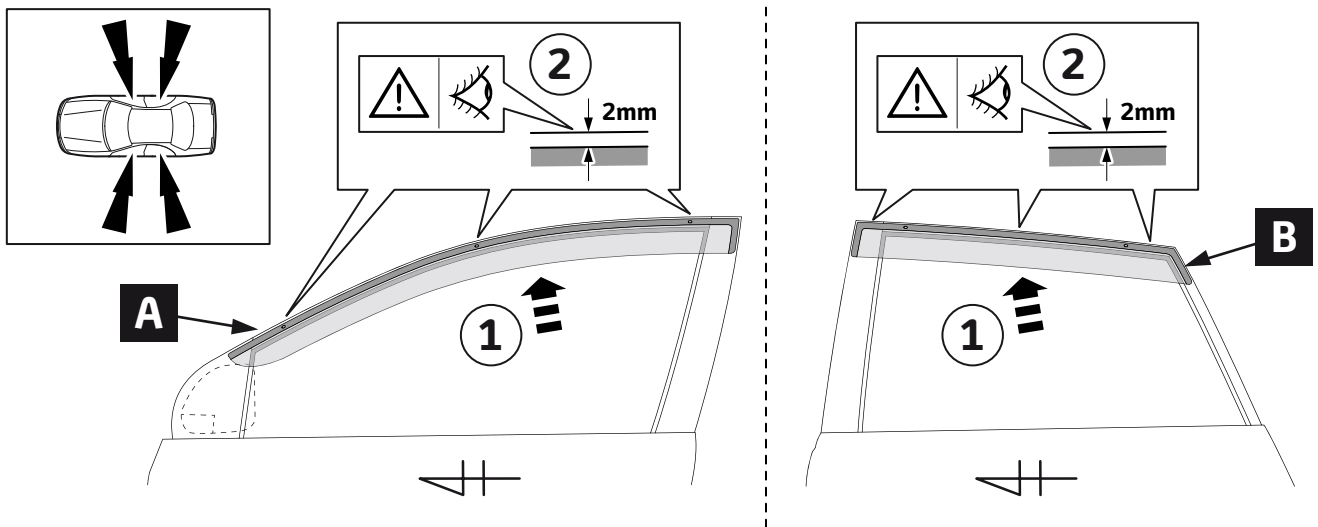


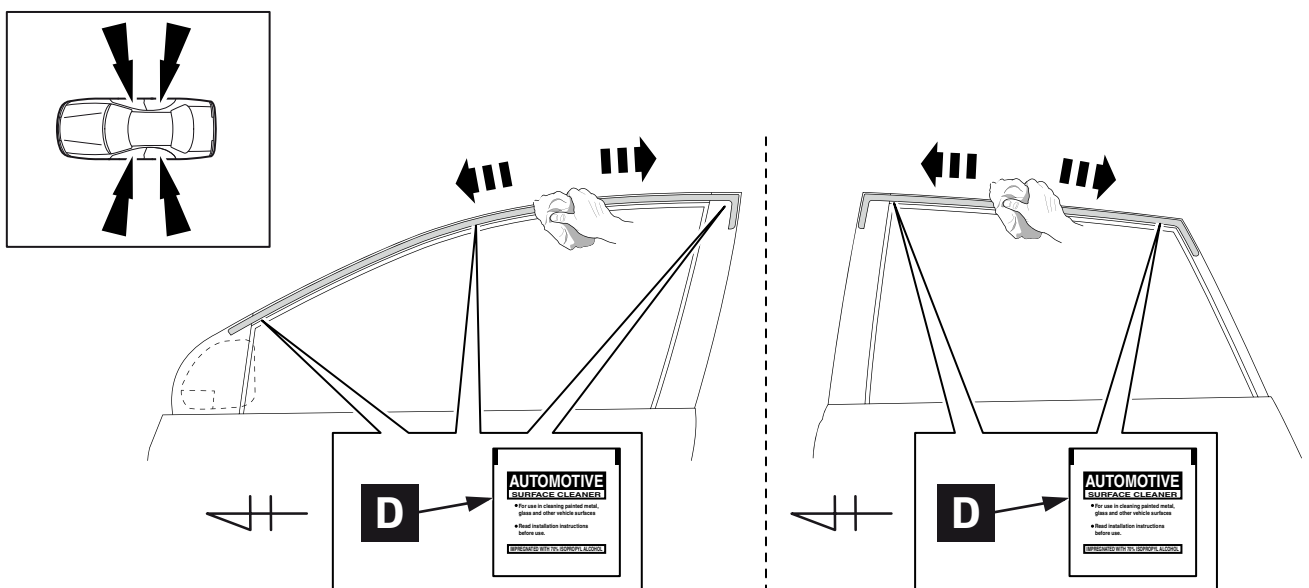


2



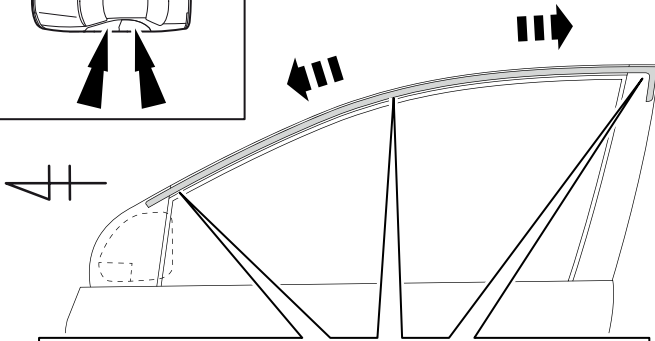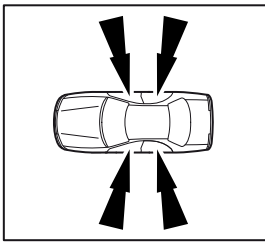

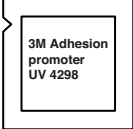
3




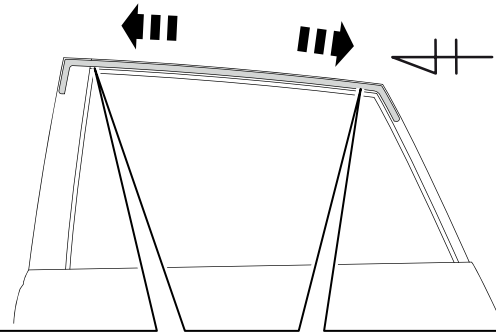


<b>1</b>		<b>3M Adhesion promoter UV 4298</b>	<b>2</b>	
				<b>5 min.</b> <b>&gt; 1.5 min.</b> <b>&lt; 60 min.</b>







<b>1</b>		<b>3M Adhesion promoter UV 4298</b>	<b>2</b>	
				<b>5 min.</b> <b>&gt; 1.5 min.</b> <b>&lt; 60 min.</b>




4

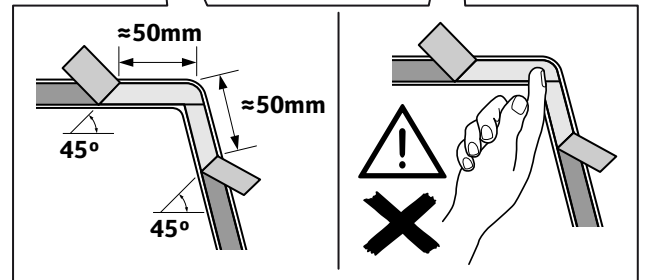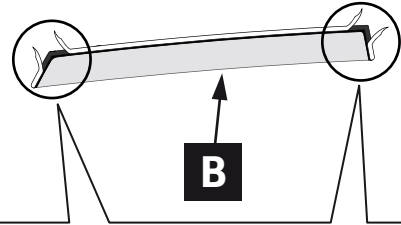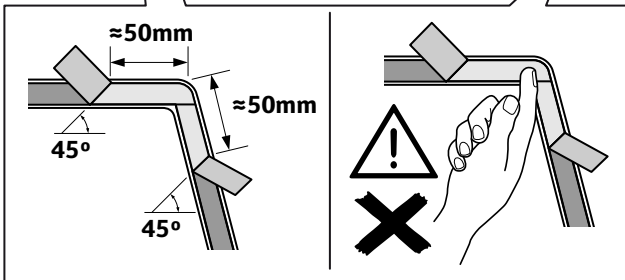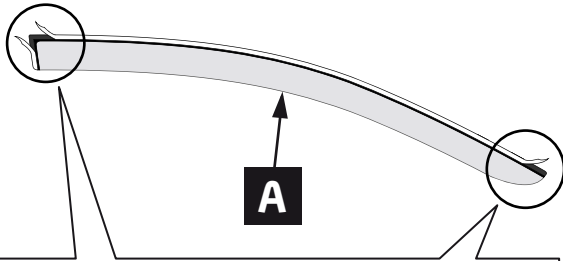

5

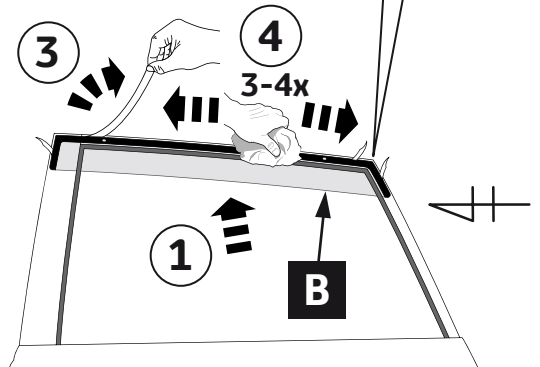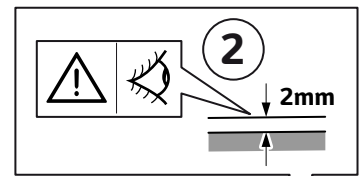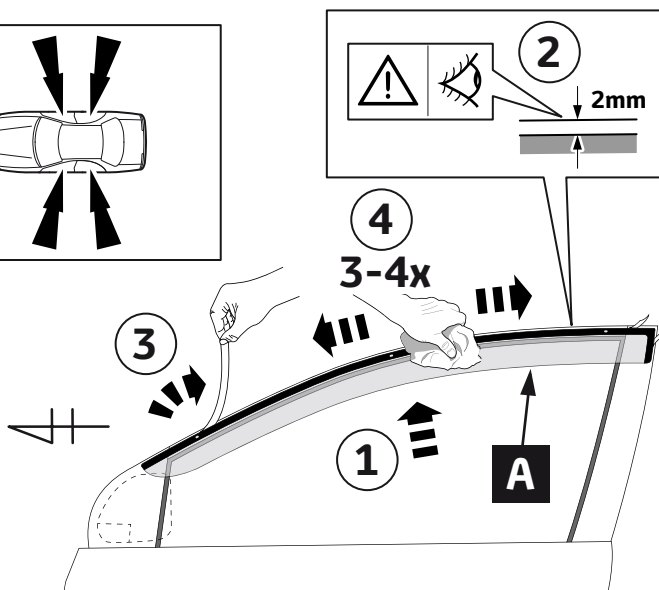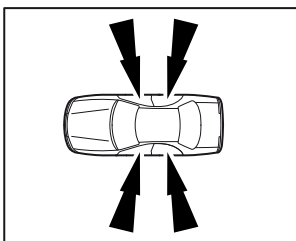

6

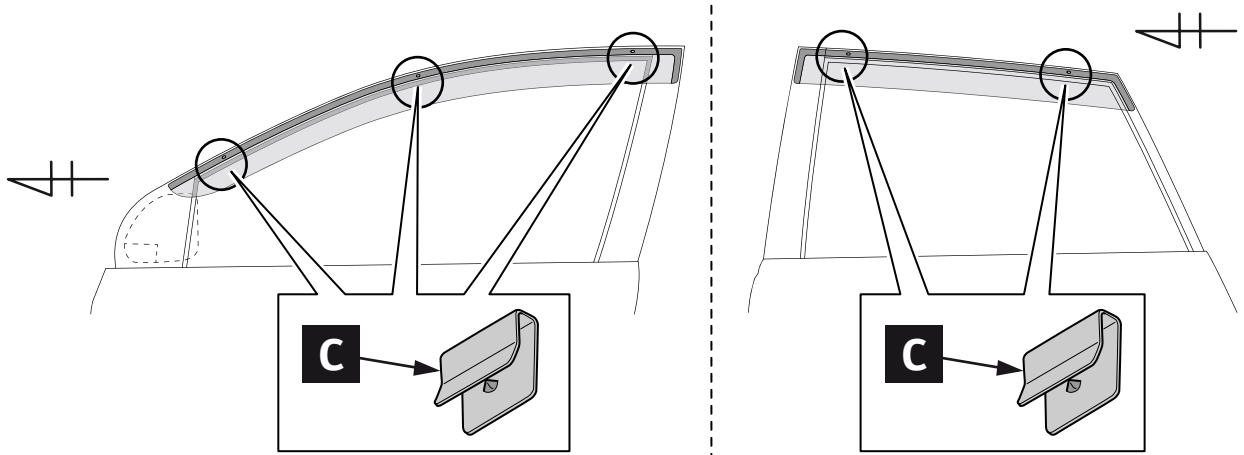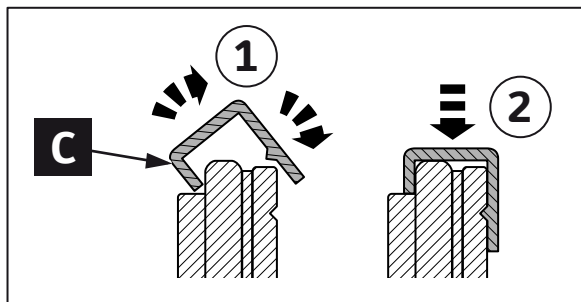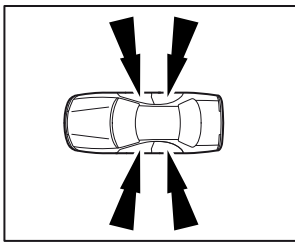

# CHECK SHEET



**TOYOTA**

Model / Year

RAV4 2012/12

Wind Deflectors

VIN n°

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

ALWAYS A BETTER WAY

**P/N = OK**

40°C 18°C

**AUTOMOTIVE SURFACE CLEANER**

\* For use in cleaning painted metal, glass and other vehicle surfaces before use.

PREPARED BY TOYOTA EUROPE

**3M Adhesion promoter UV 4298**

**A** **B**

**C** 1 2

= OK

Installation Date:

. . / . . / . . . .

Technician Name & Signature:

Stamp: