



TOYOTA

ALWAYS A
BETTER WAY

GT86

Shock absorber suspension spring set

Installation instructions

Model year:	2012/03	
Vehicle code:	ZN6-AK** ZN6-AL**	
Part number:	MS260-18001	Shock absorber
	MS250-18001	Coil spring set
	SU003-02887 (2x)	Nut
	SU003-02889 (4x)	Nut
	SU003-03642 (6x)	Nut
	SU003-02869 (4x)	Nut
	SU003-02870 (6x)	Nut
	SU003-02883 (2x)	Nut

Manual reference number: AIM 002 799-0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

MS260-18001

A	B	C	D	E	F	G	H
2x	2x	2x	2x	2x	2x	2x	2x

MS250-18001

J	K
2x	2x

SU003-02887

L

2x

SU003-02889

M

4x

SU003-03642

N

6x

SU003-02869

O

4x

SU003-02870

P

6x

SU003-02883

Q






2x

R


2x

SST 09729-97202
SST 09729-18010




Ø 13mm

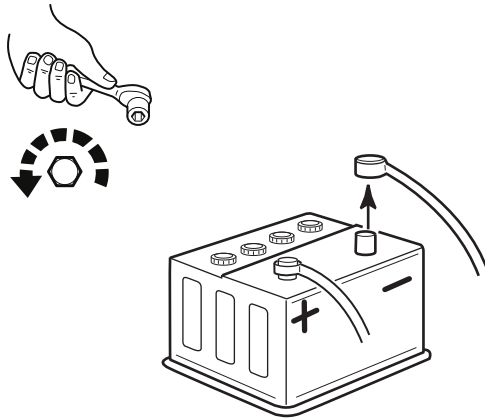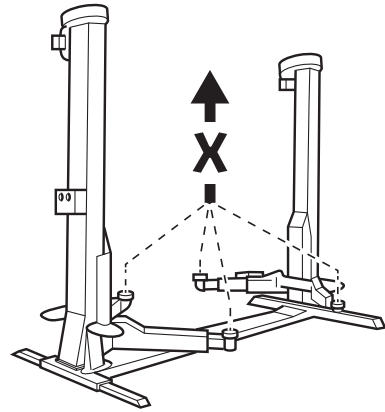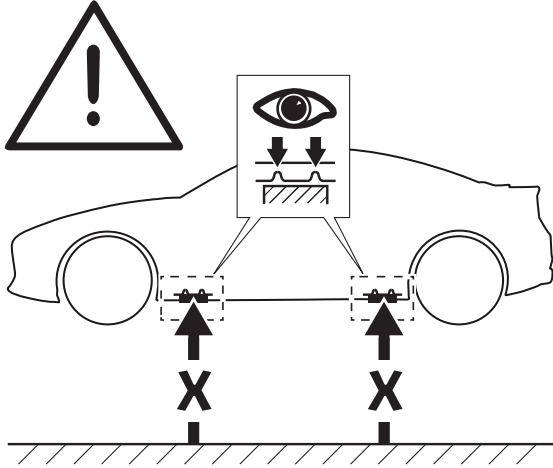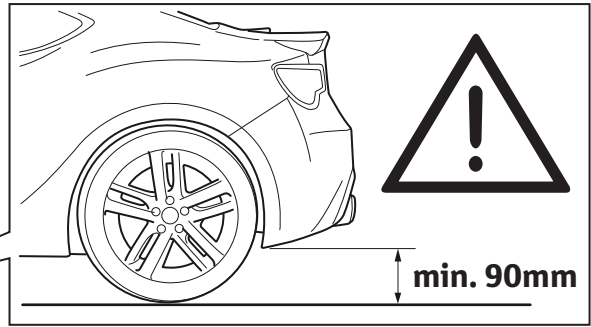
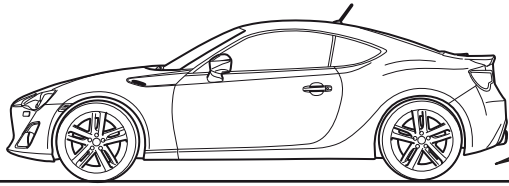





1


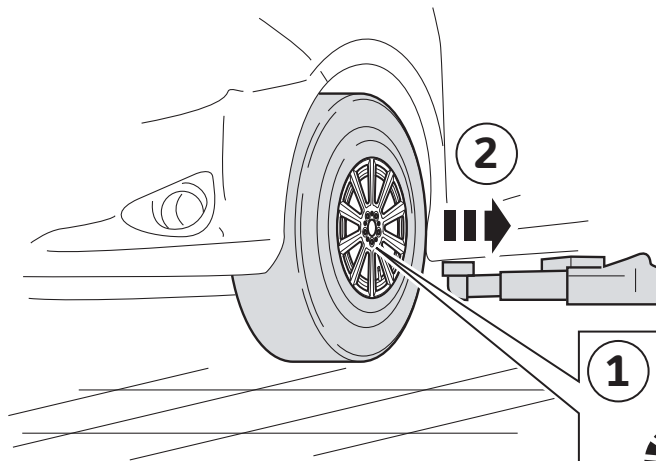





2

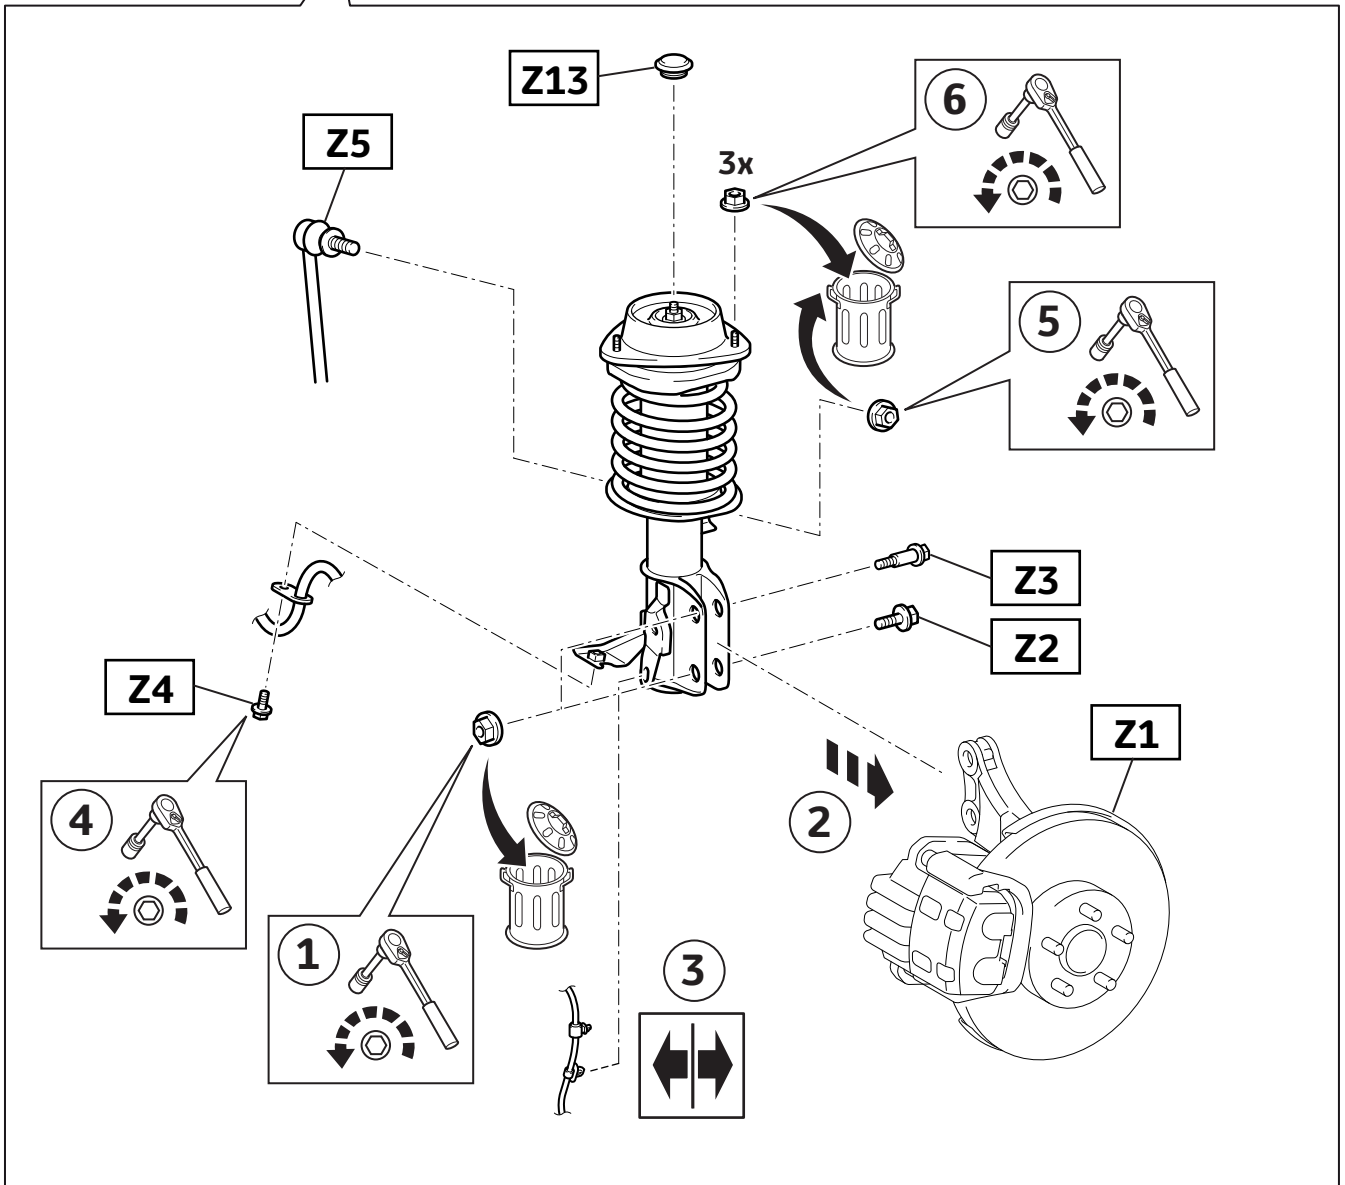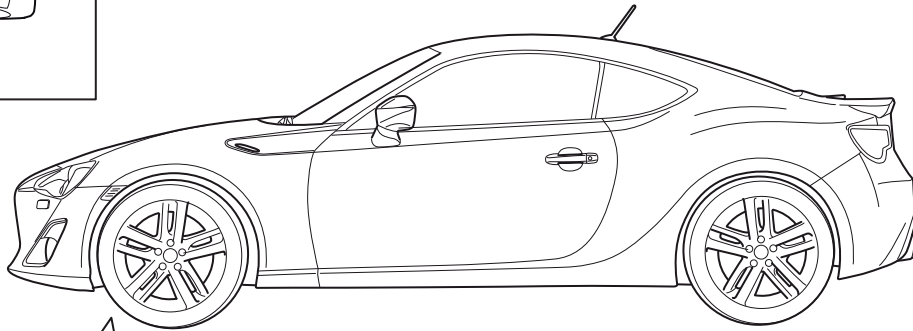
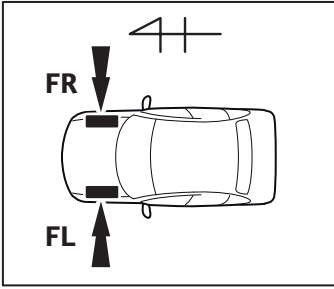


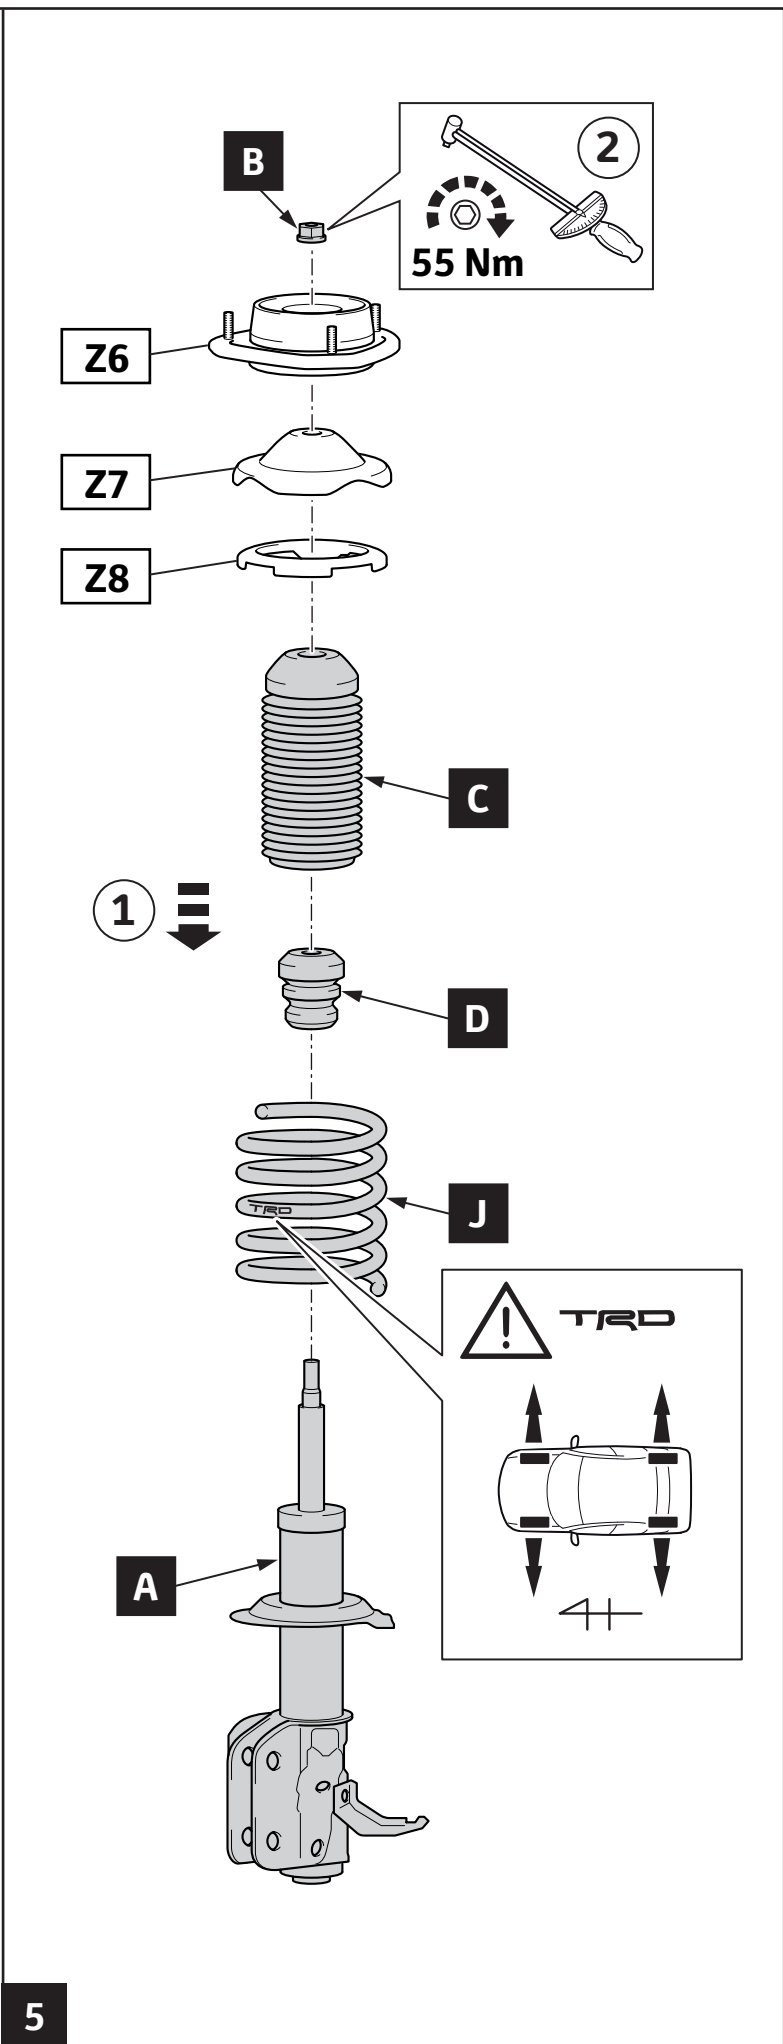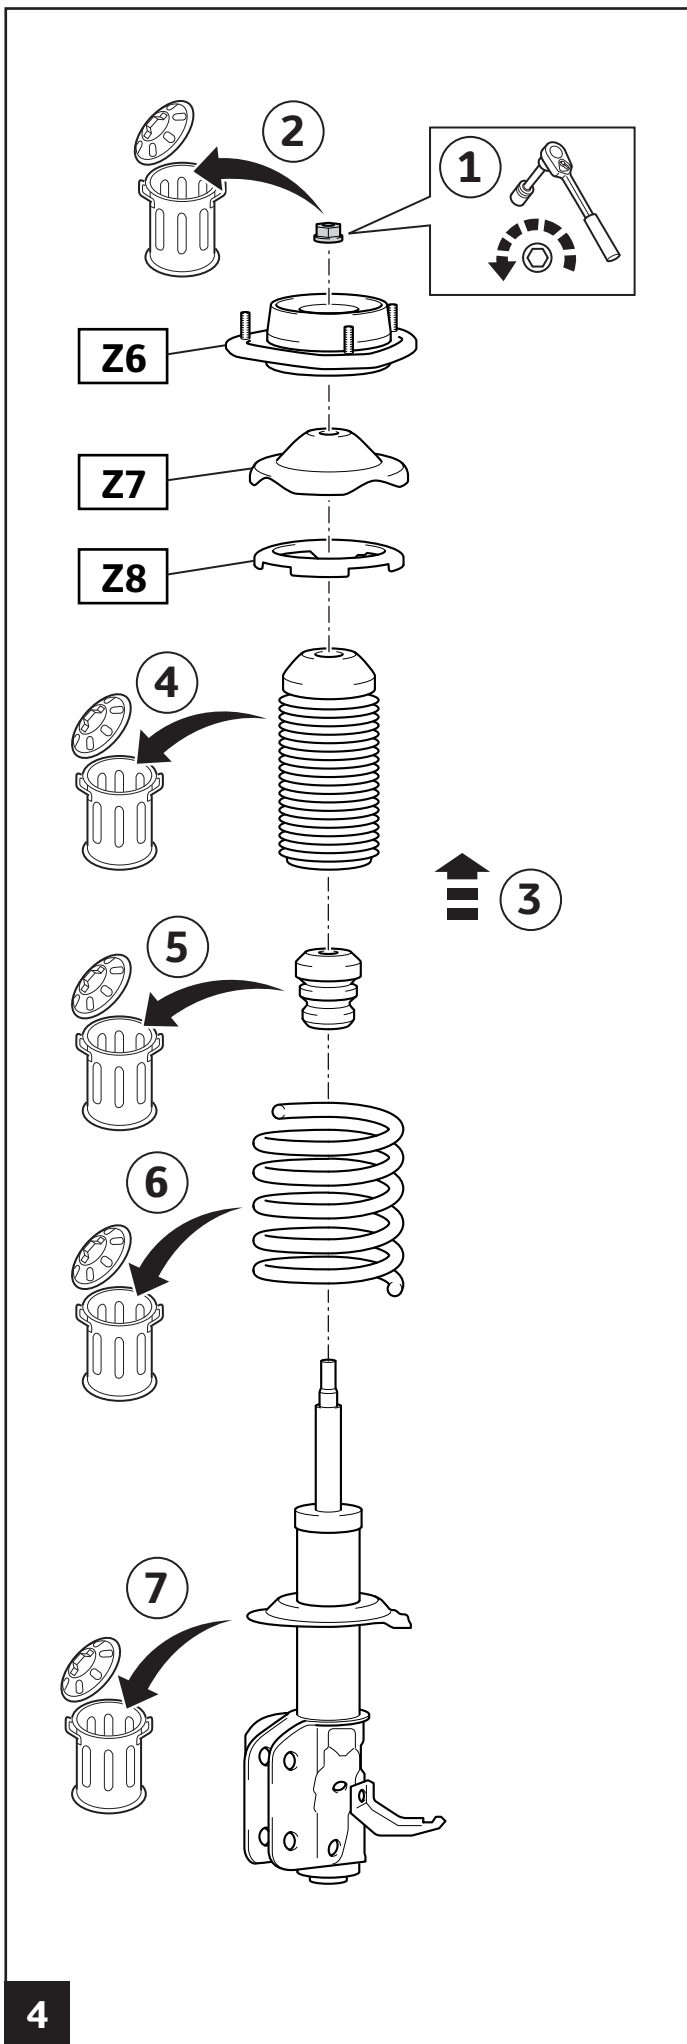

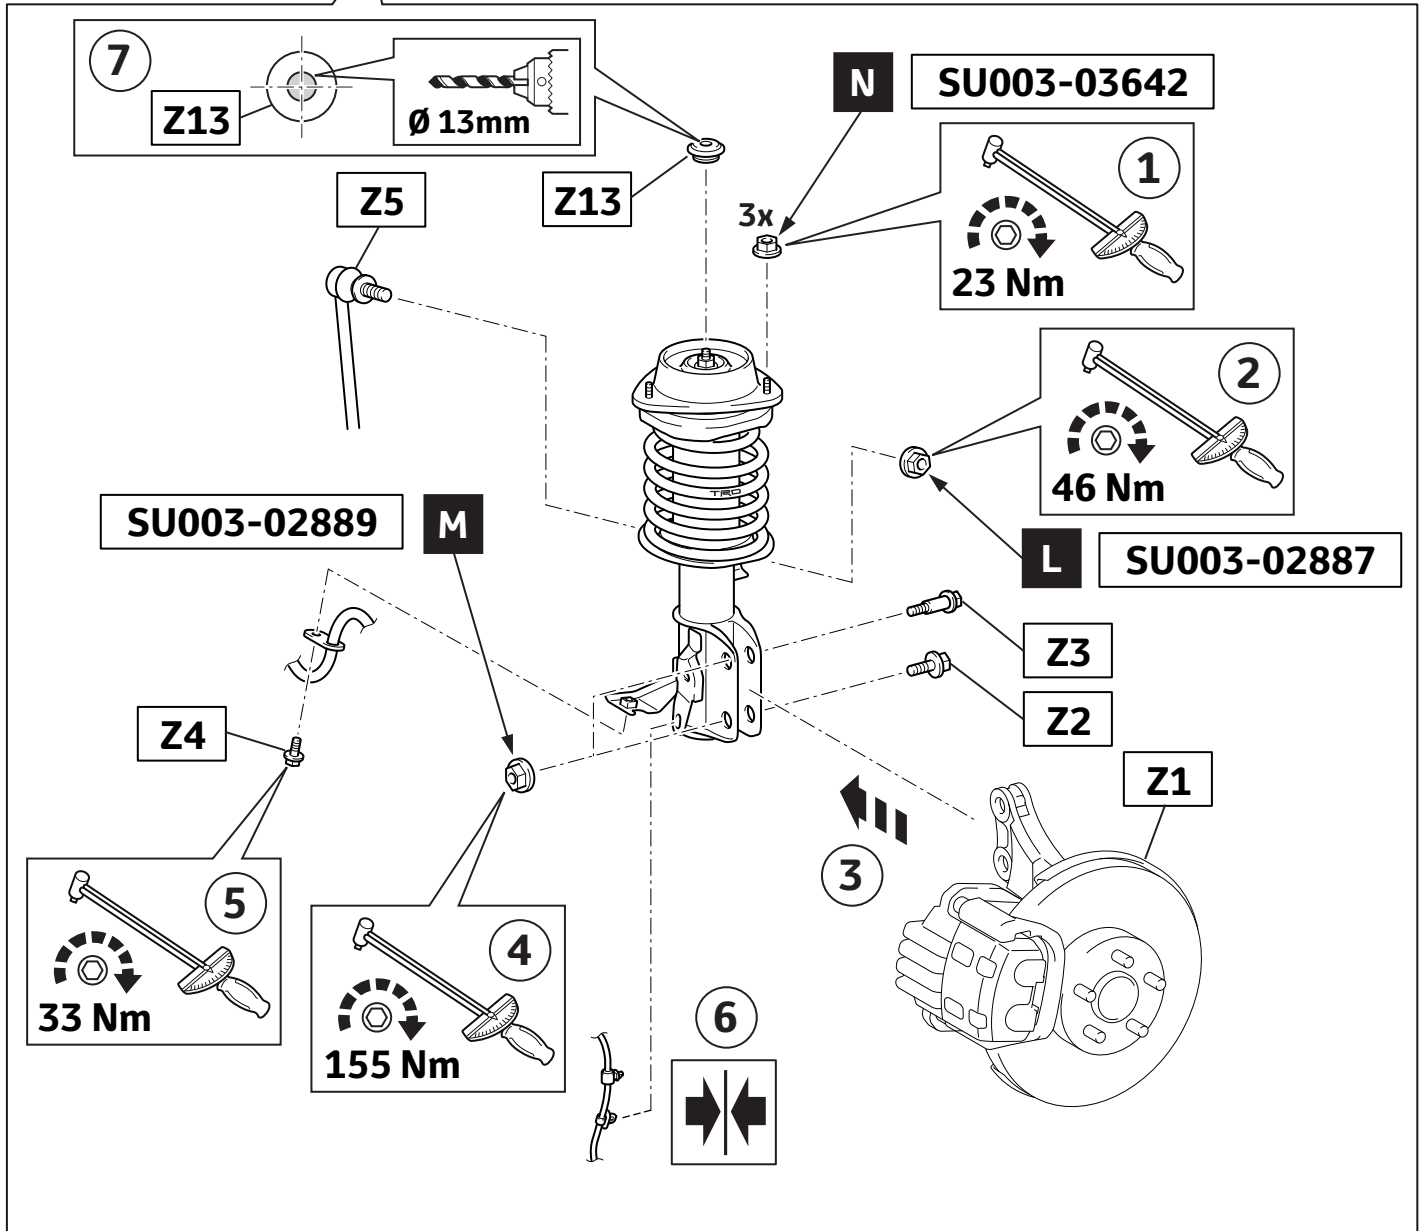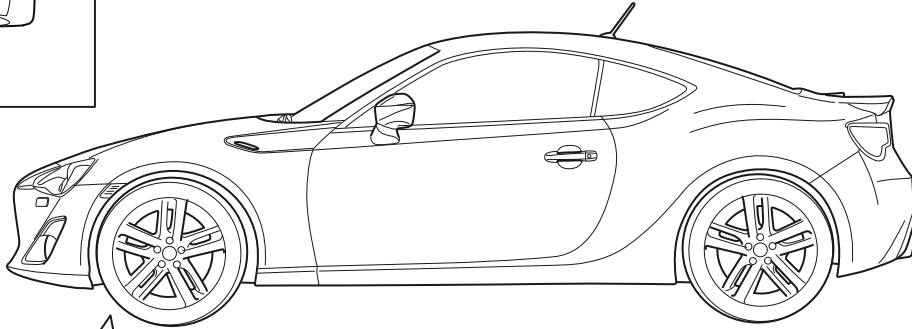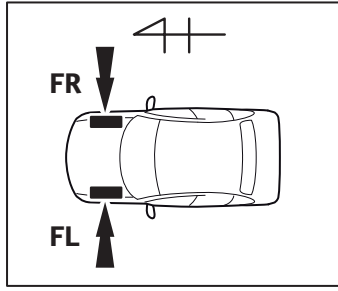


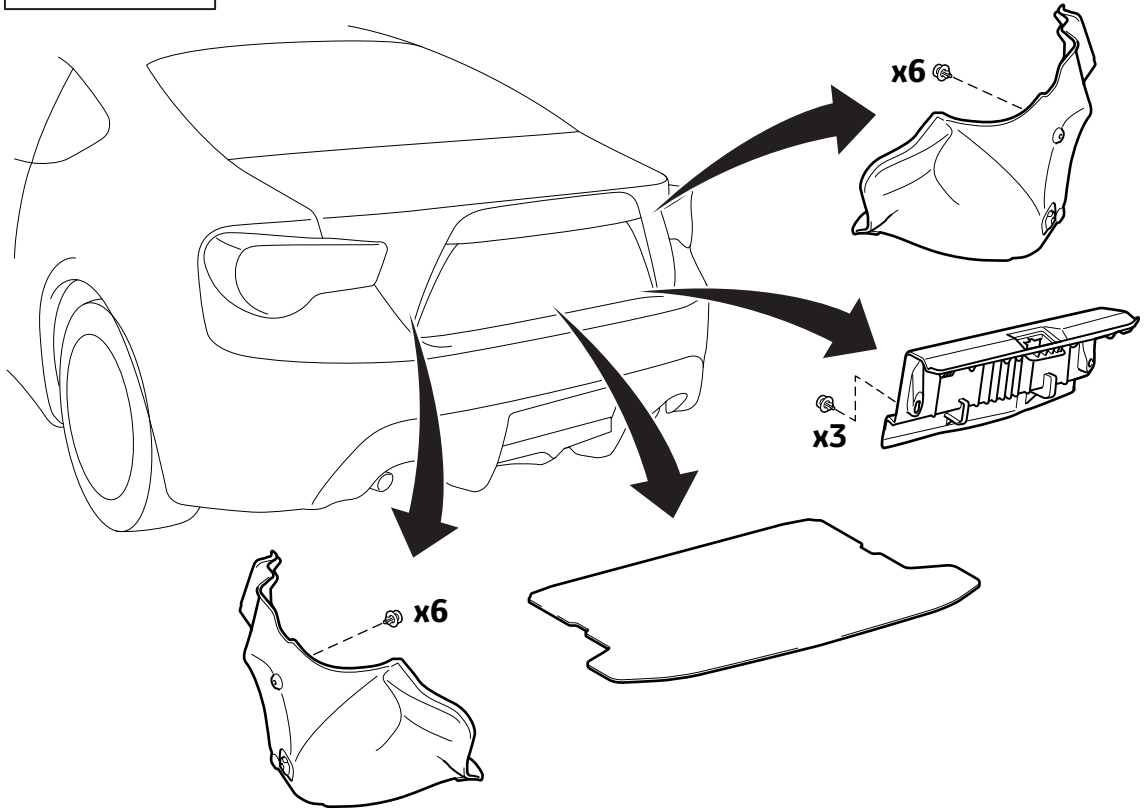
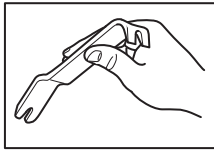


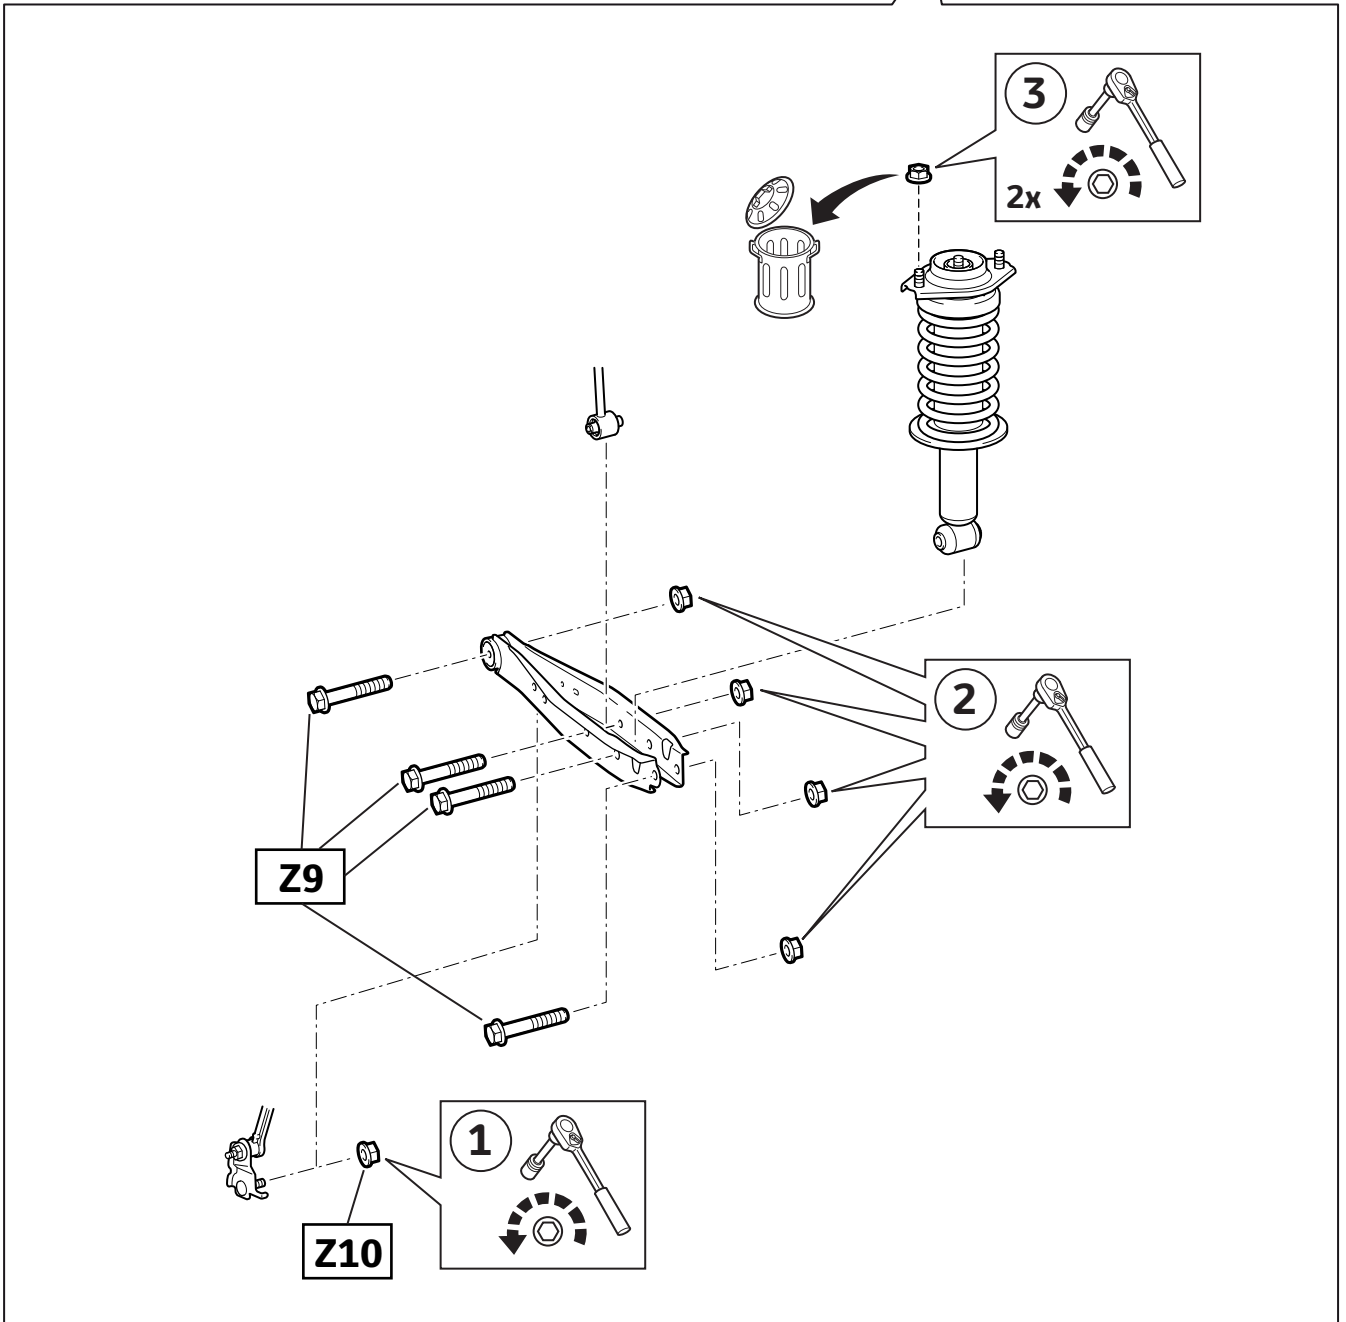
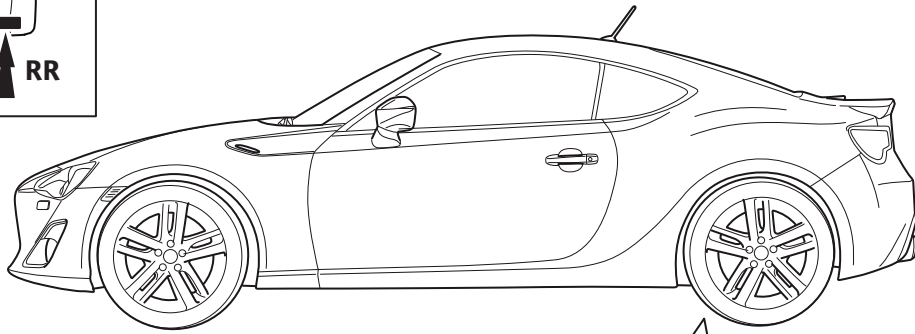
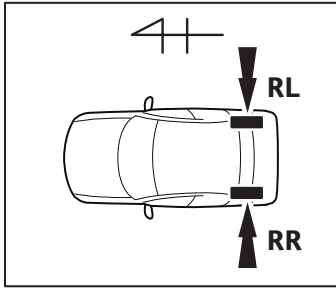


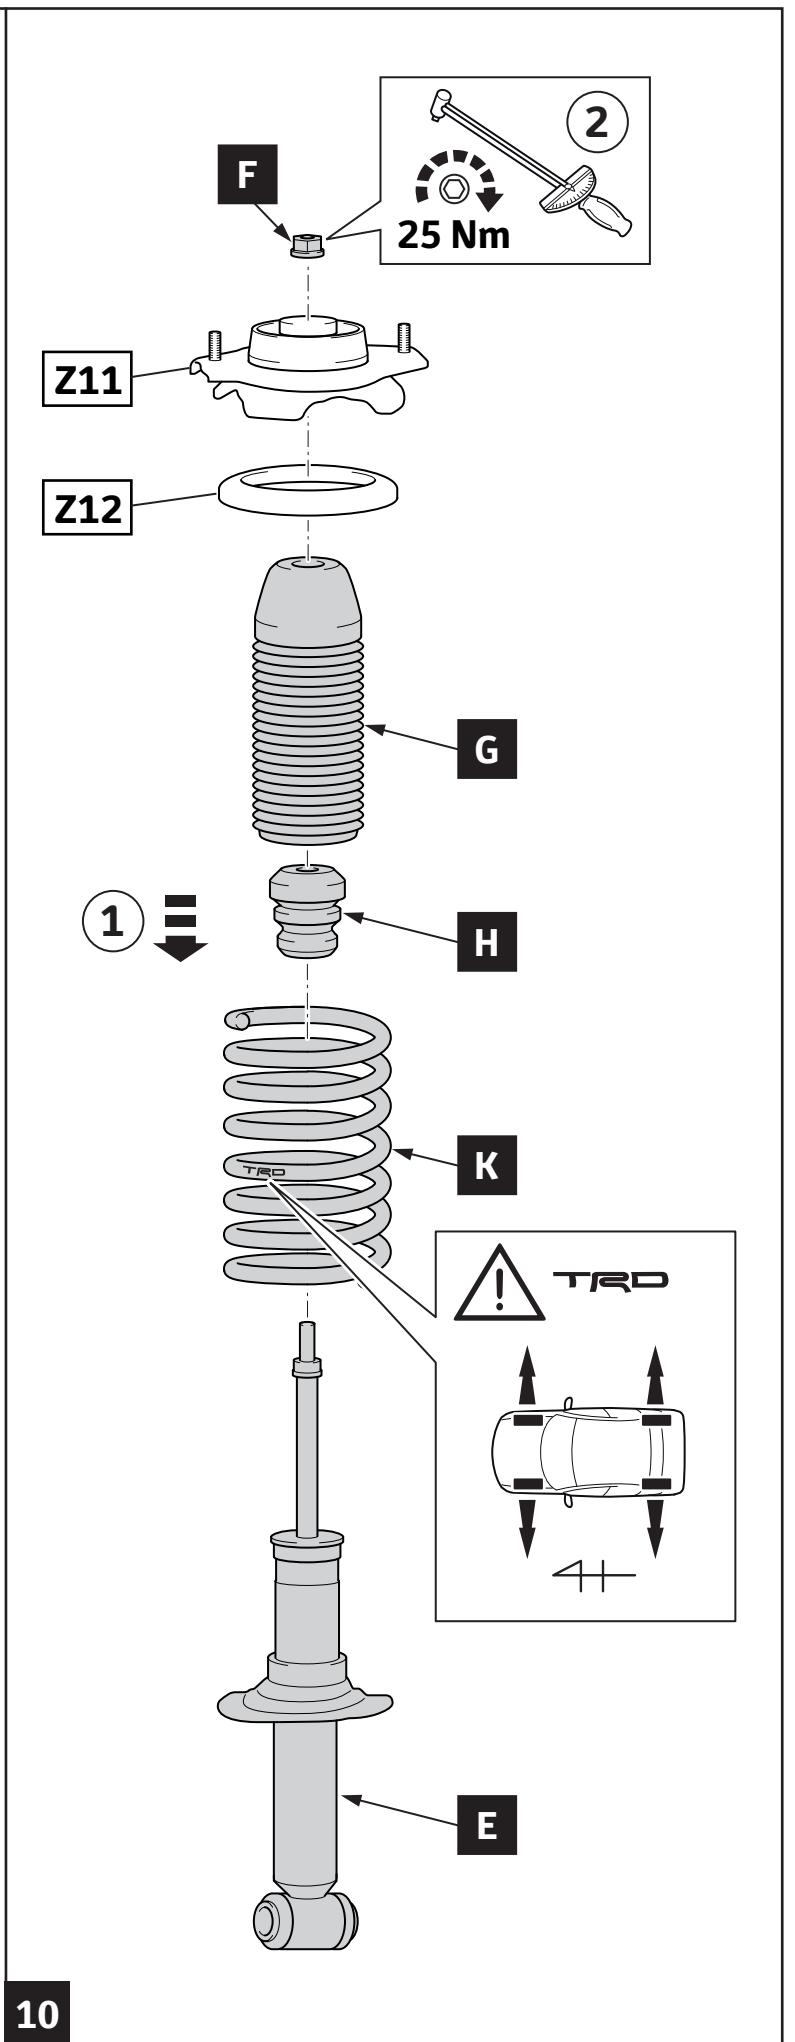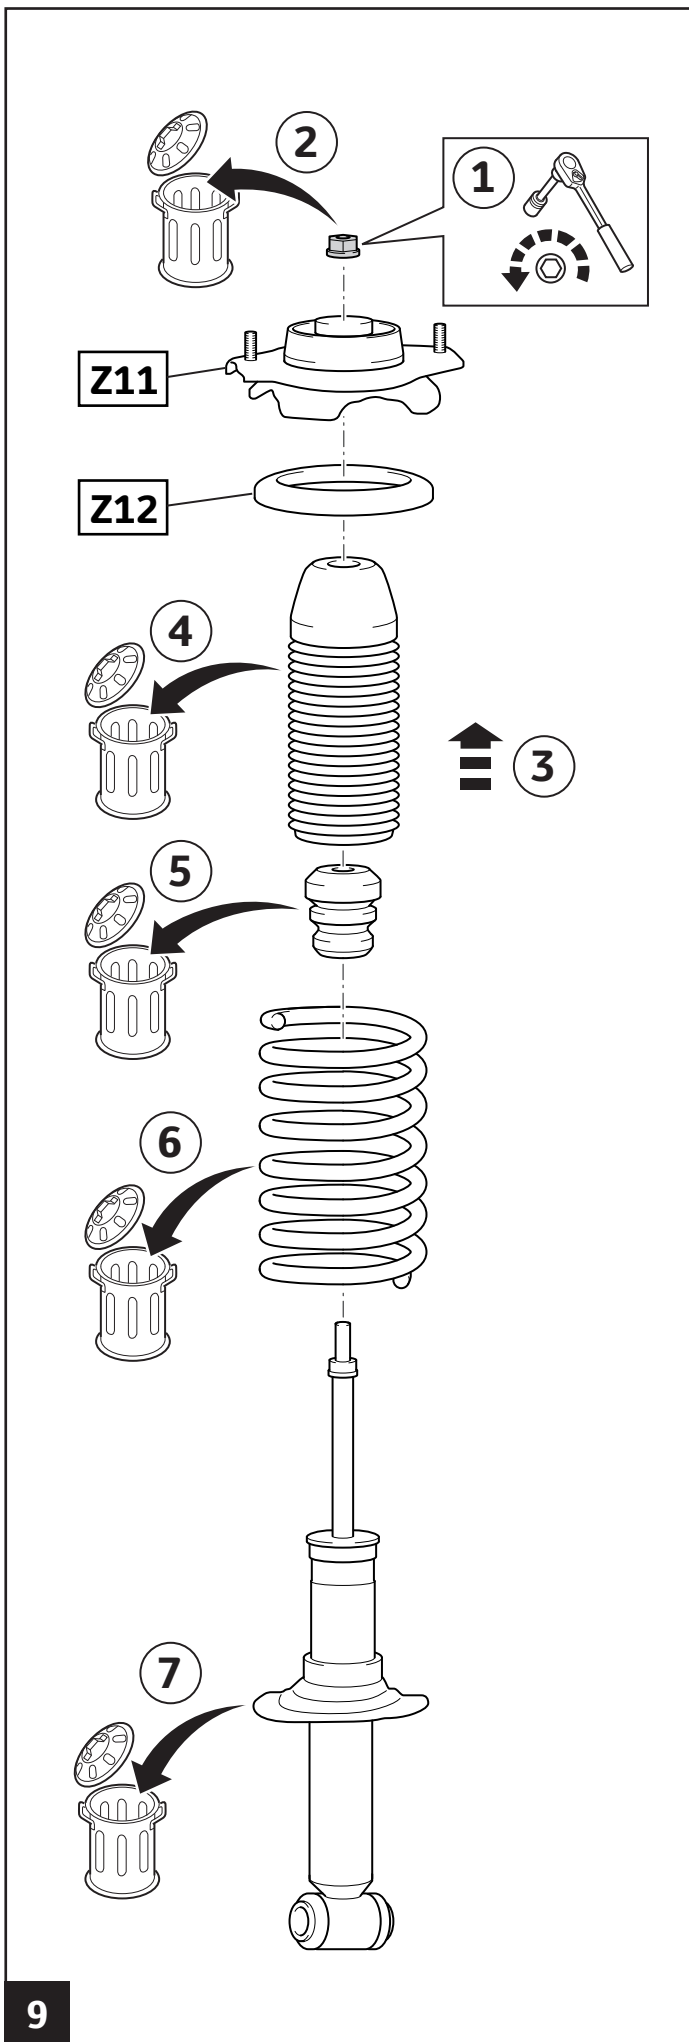




9

10

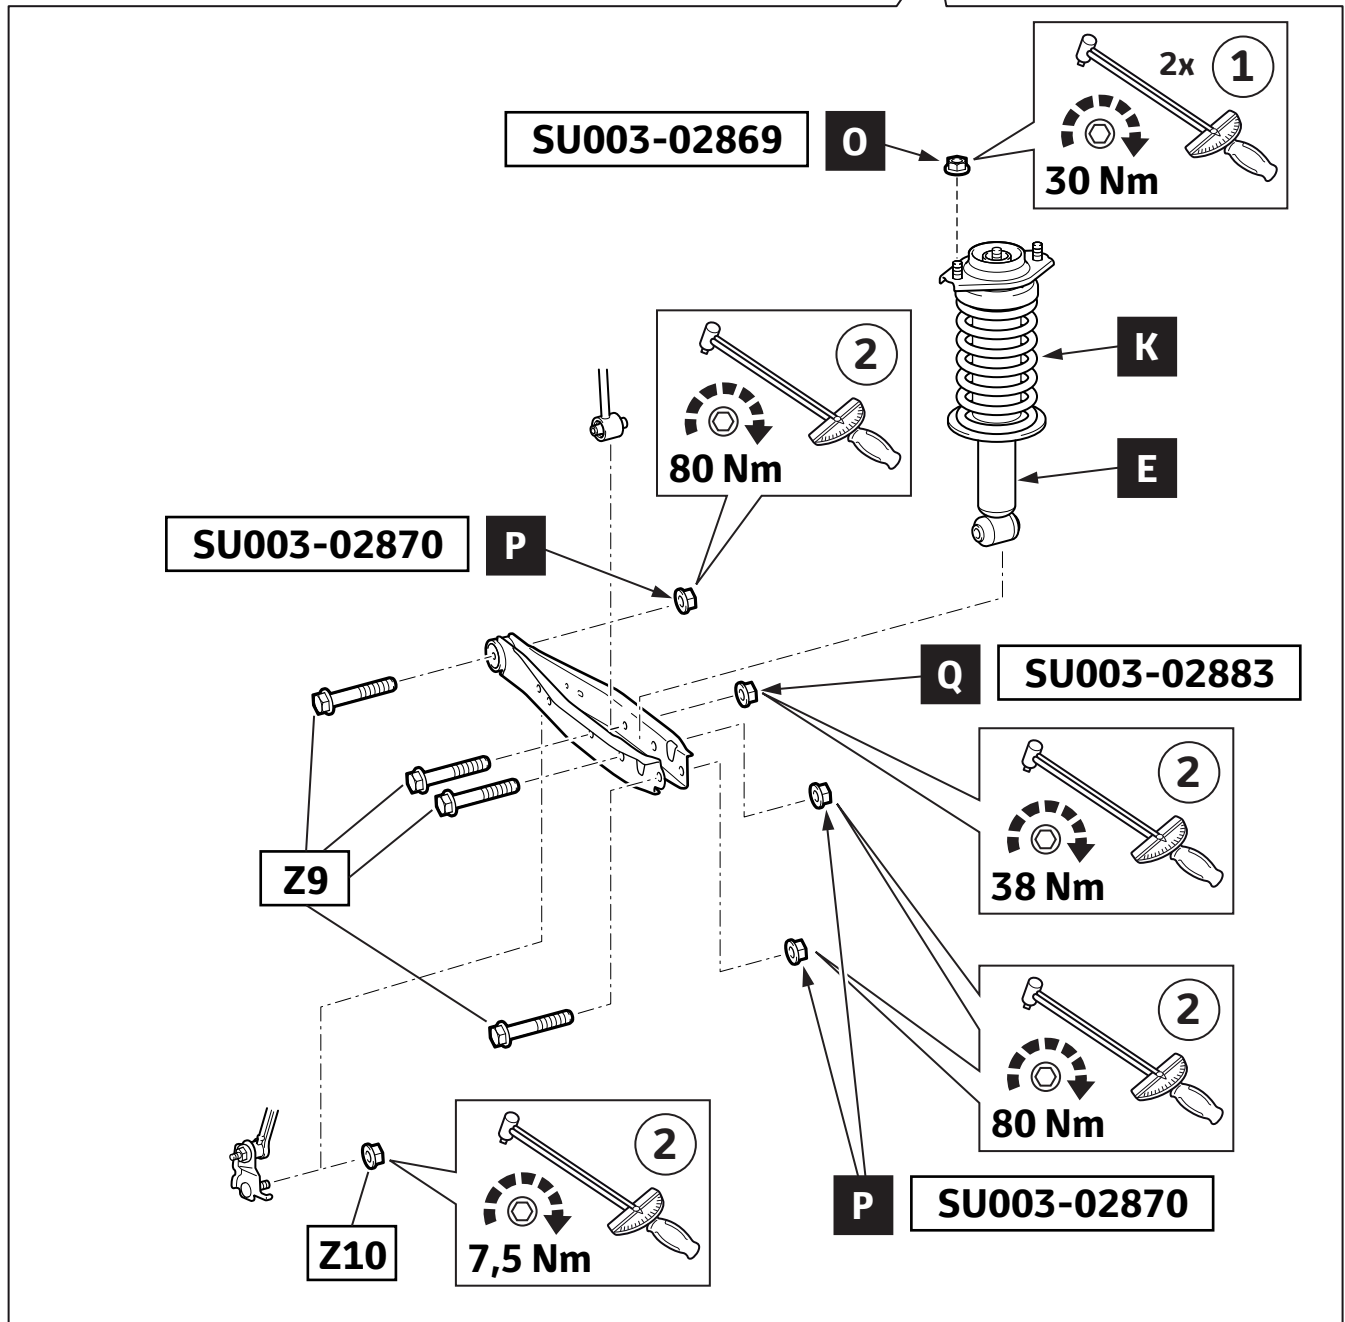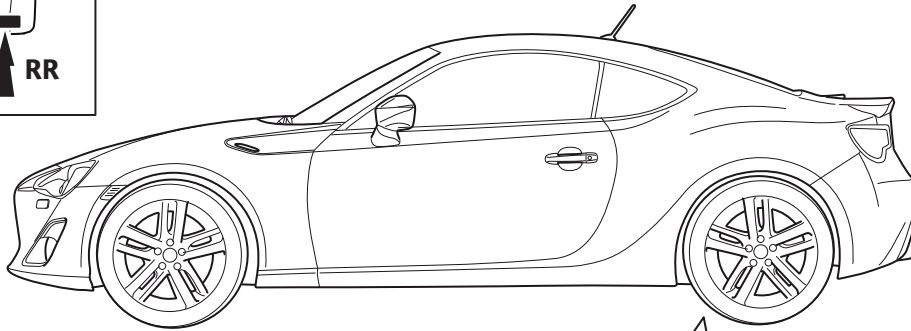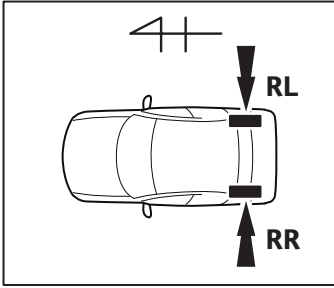

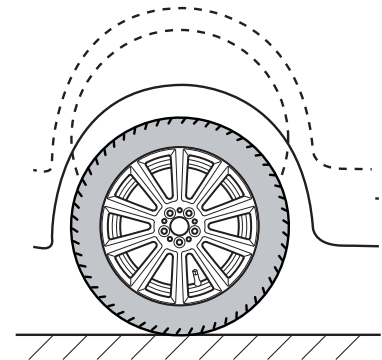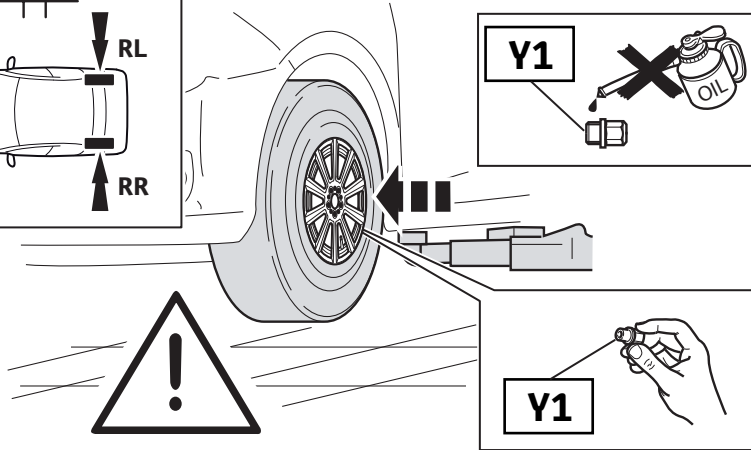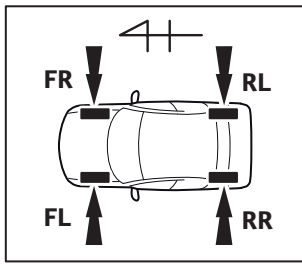

12

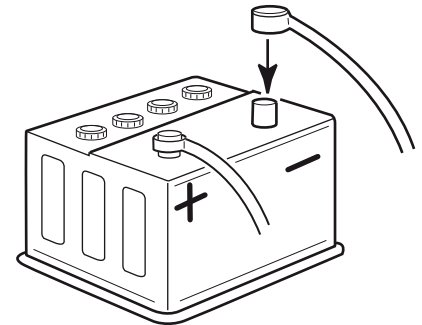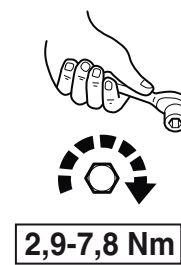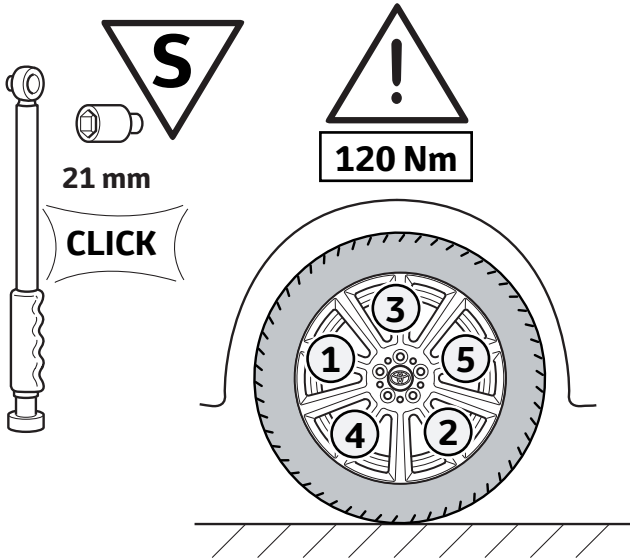

13

14






- INSPECT AND ADJUST REAR AND FRONT WHEEL ALIGNMENT
- VSC SENSOR NEUTRAL MEMORIZATION
- HEIGHT CONTROL SENSOR SIGNAL INITIALIZE (w/ HID Headlight System)
- ADJUST HEADLIGHT AIMING
- INSPECT STEERING WHEEL CENTER POINT

15



INFORMATION ONLY

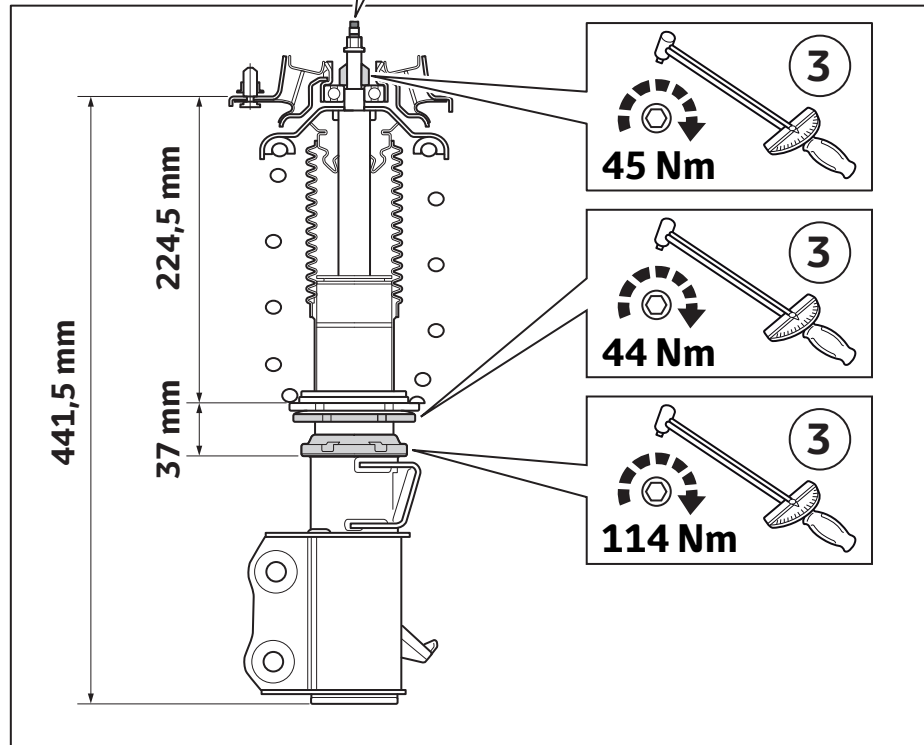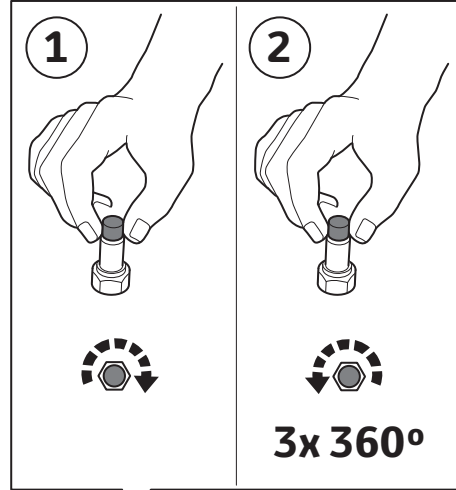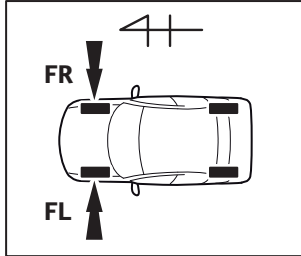



INFORMATION ONLY

