



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR (AWD)

Lower trunk garnish (Painted / Chrome)

Installation instructions

Model year:	2016/10	
Vehicle code:	**X50*-AH***W/X	(AWD)
Part number:	PW405-10000-** 75444-F4010	Lower trunk garnish 'AWD' Badge


Manual reference number: AIM 003 915 - 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PW405-10000-**

A




1x

75444-F4010

B



AWD

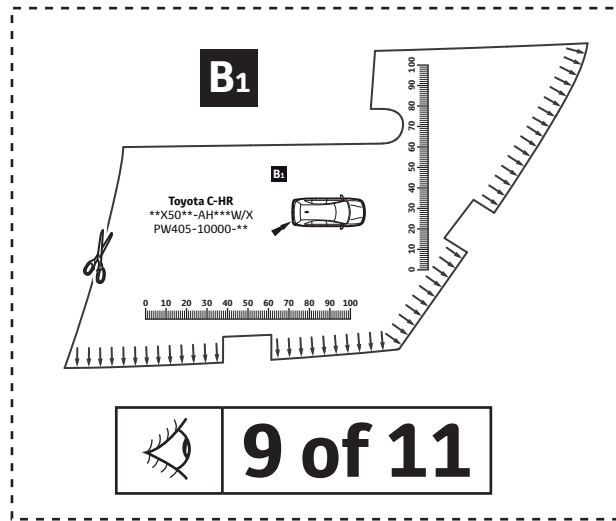

1x



**CLEANER
DEGREASER**

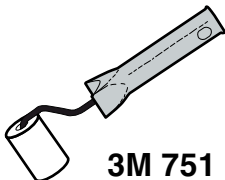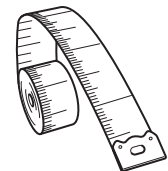



3M 751












40°C


18°C

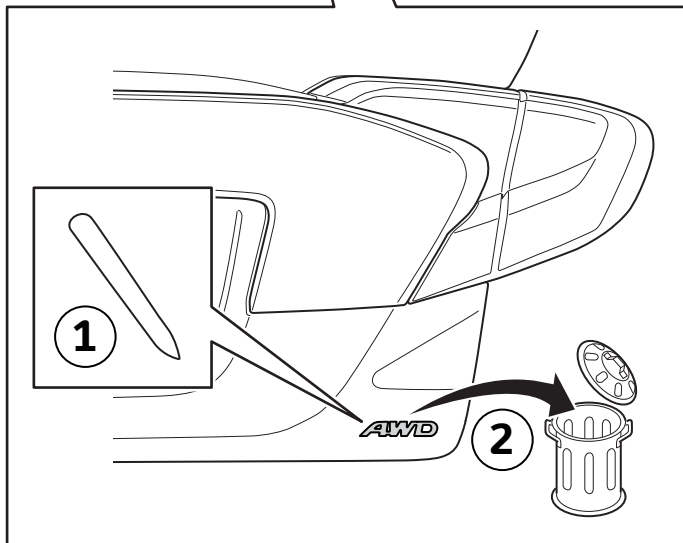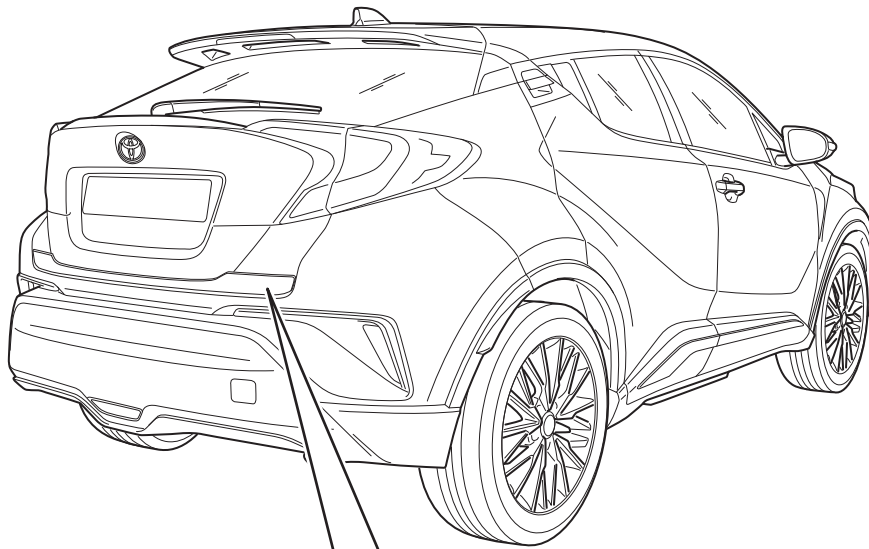


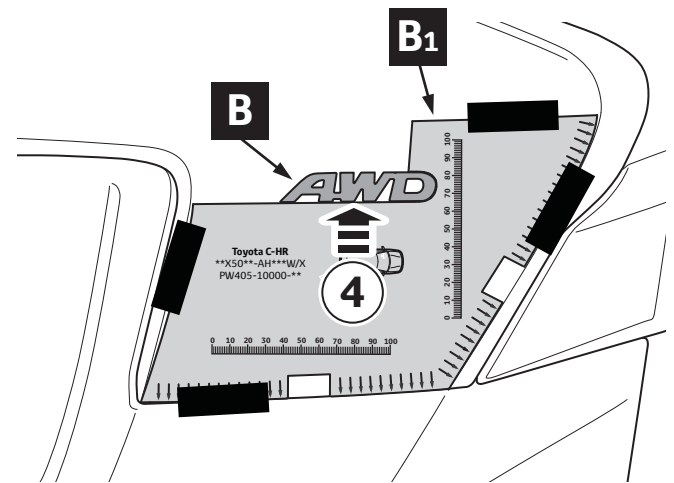
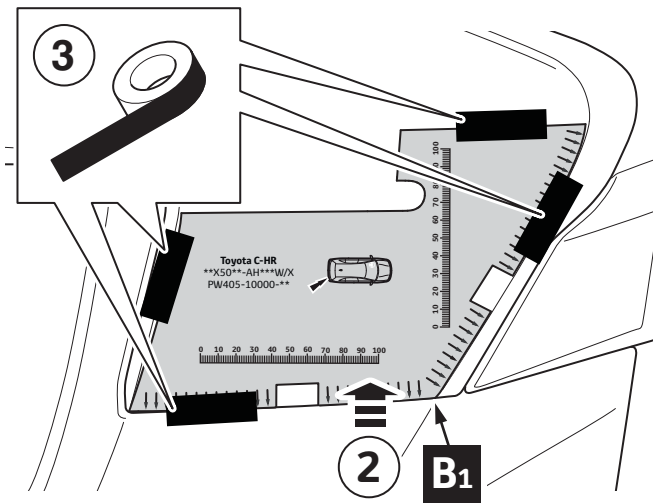
1

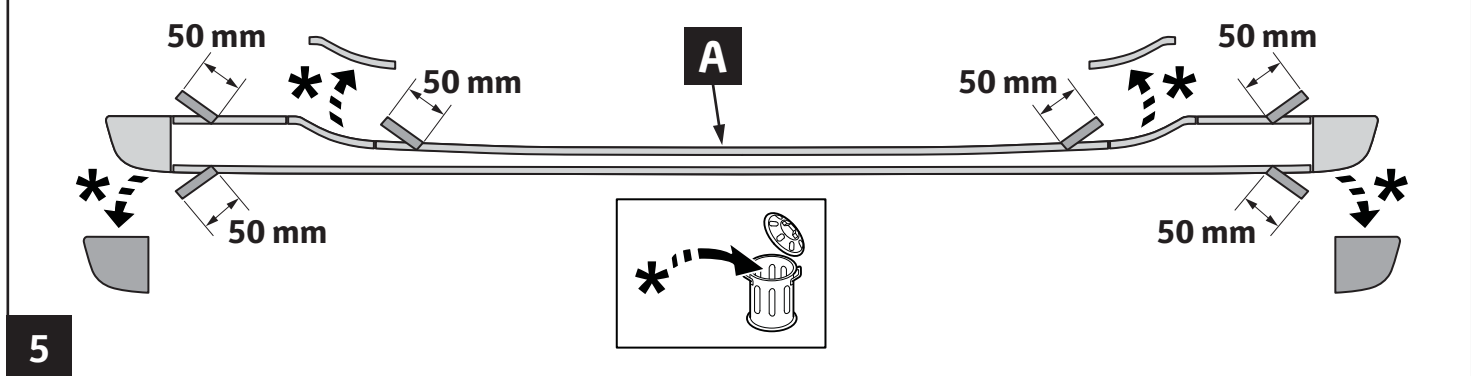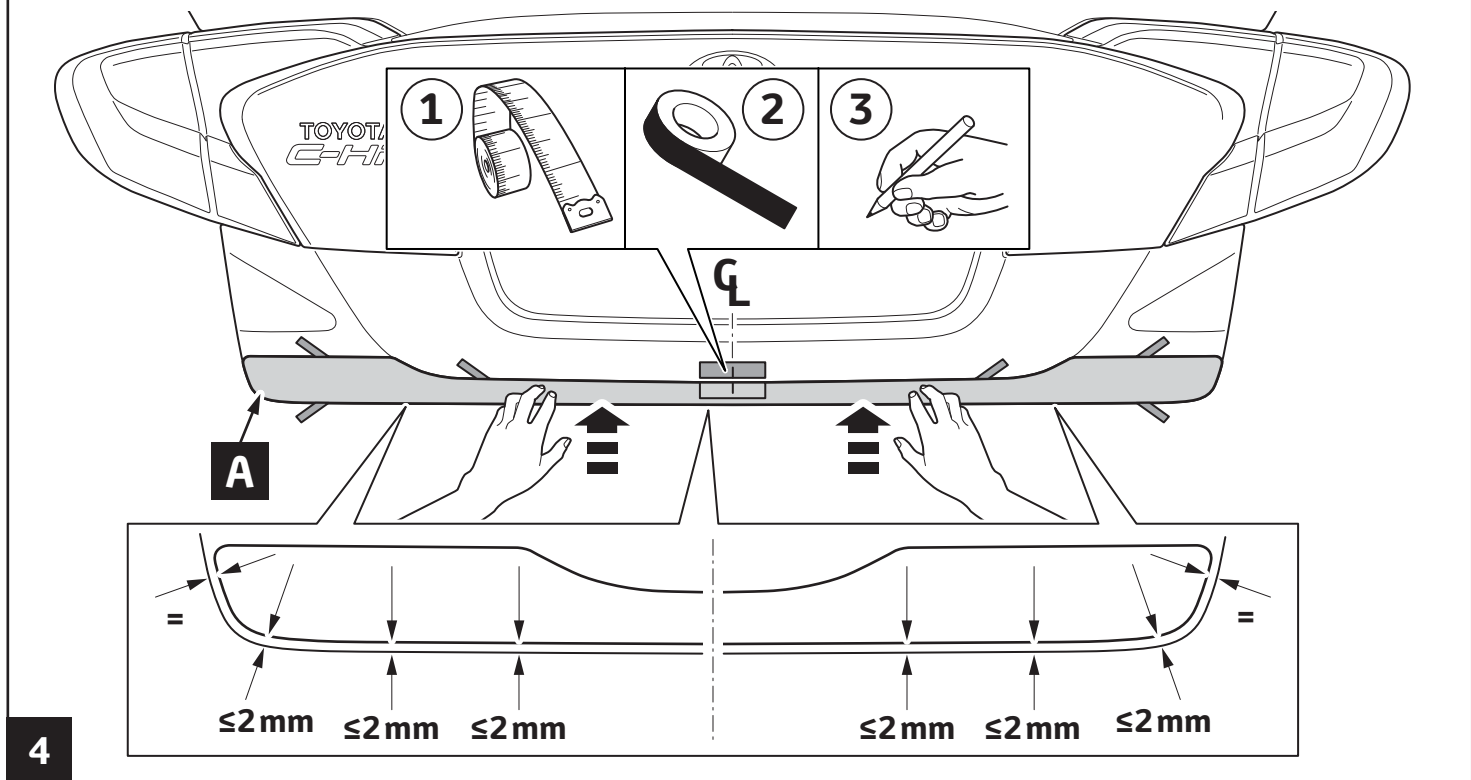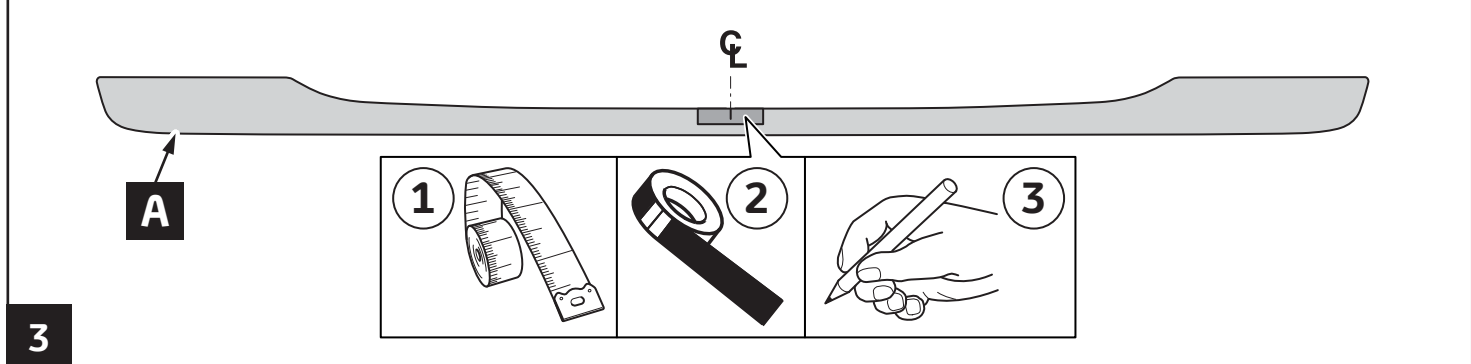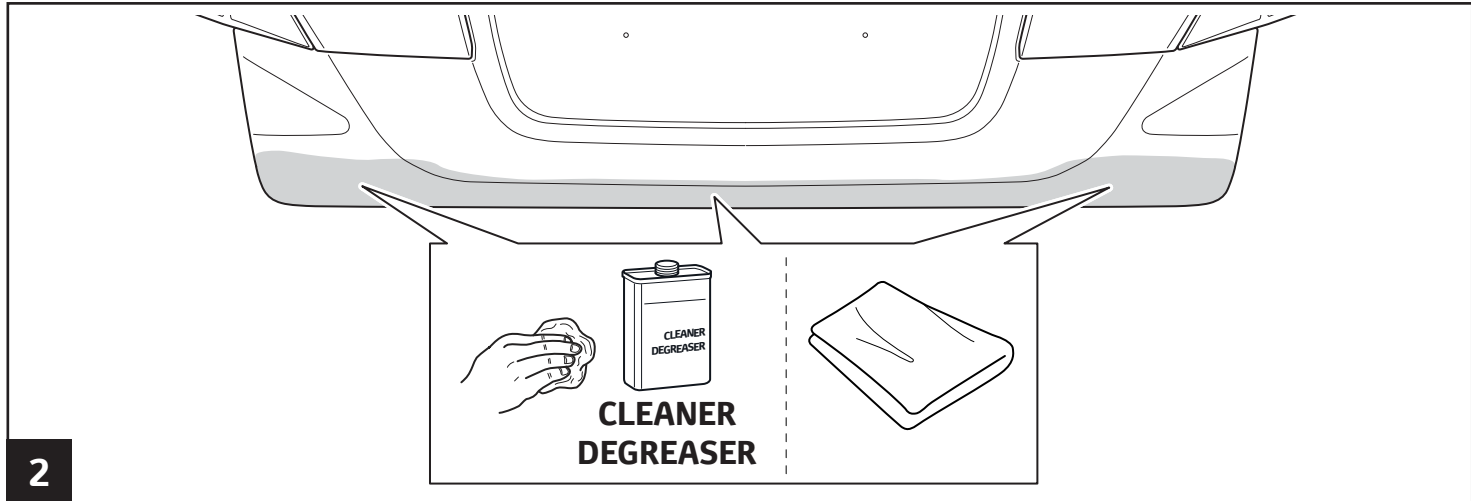

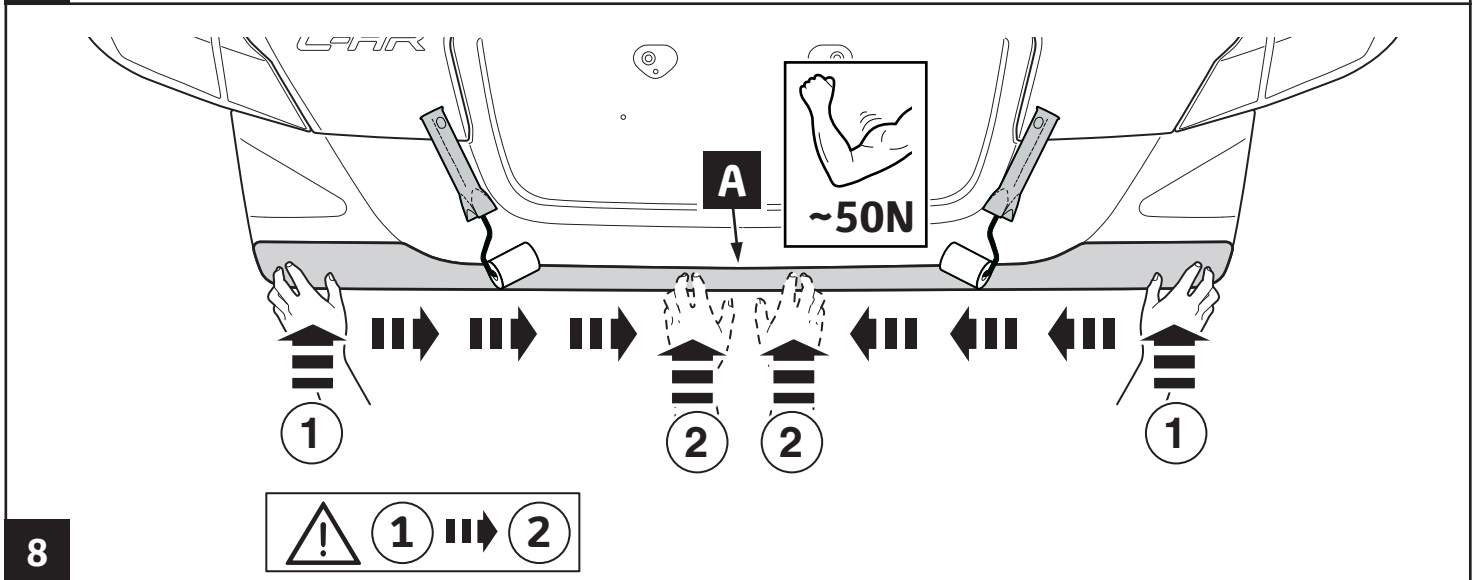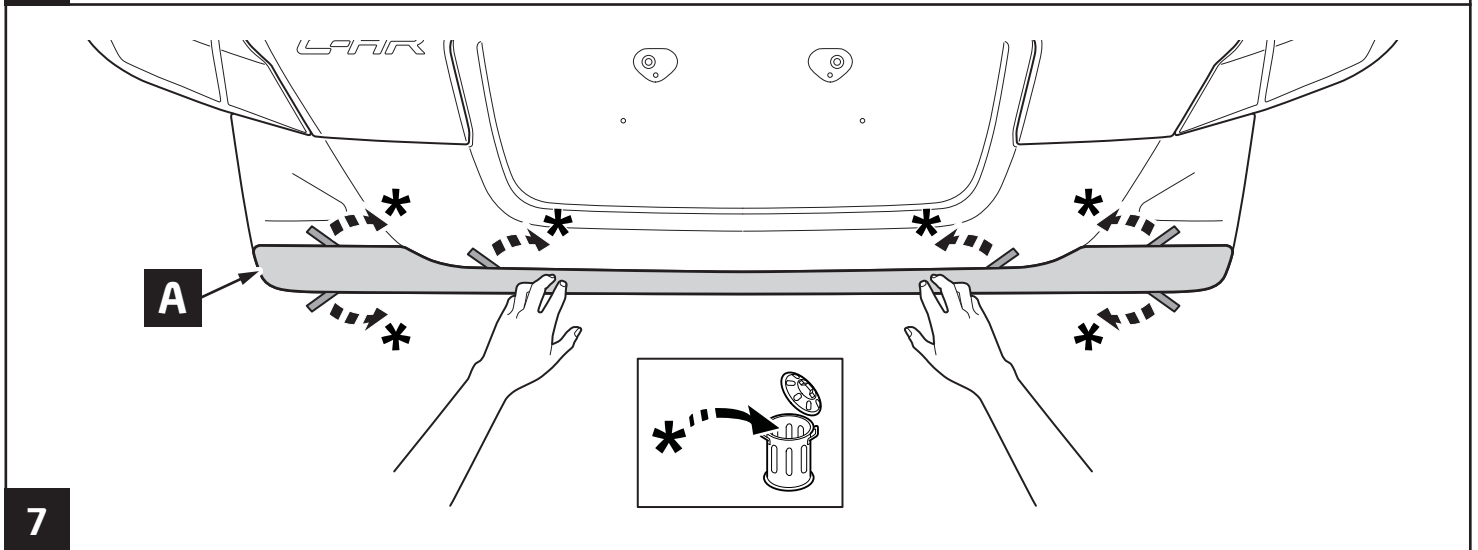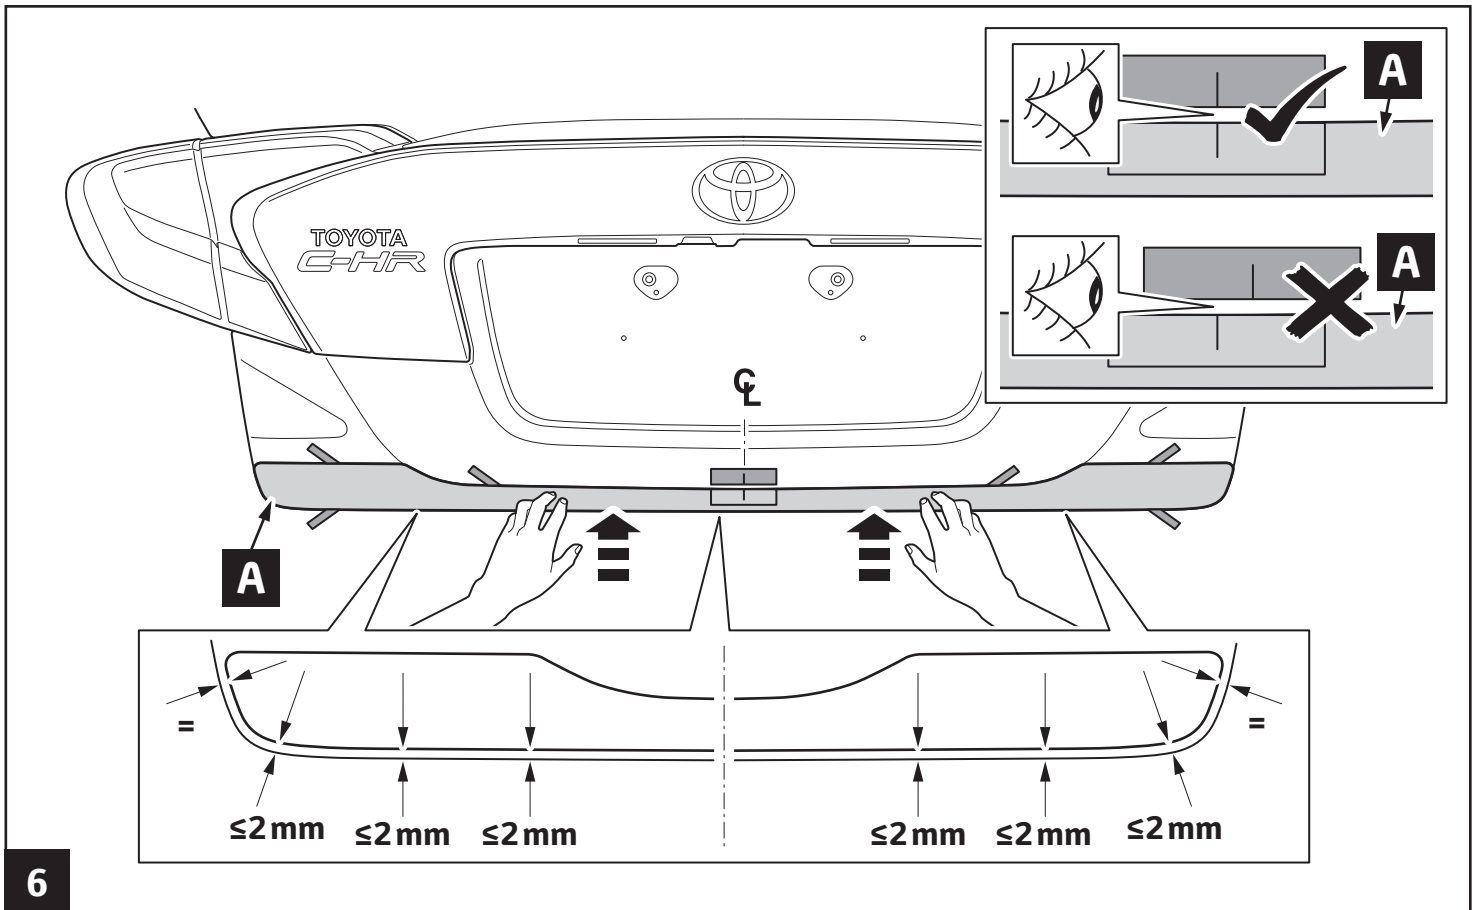


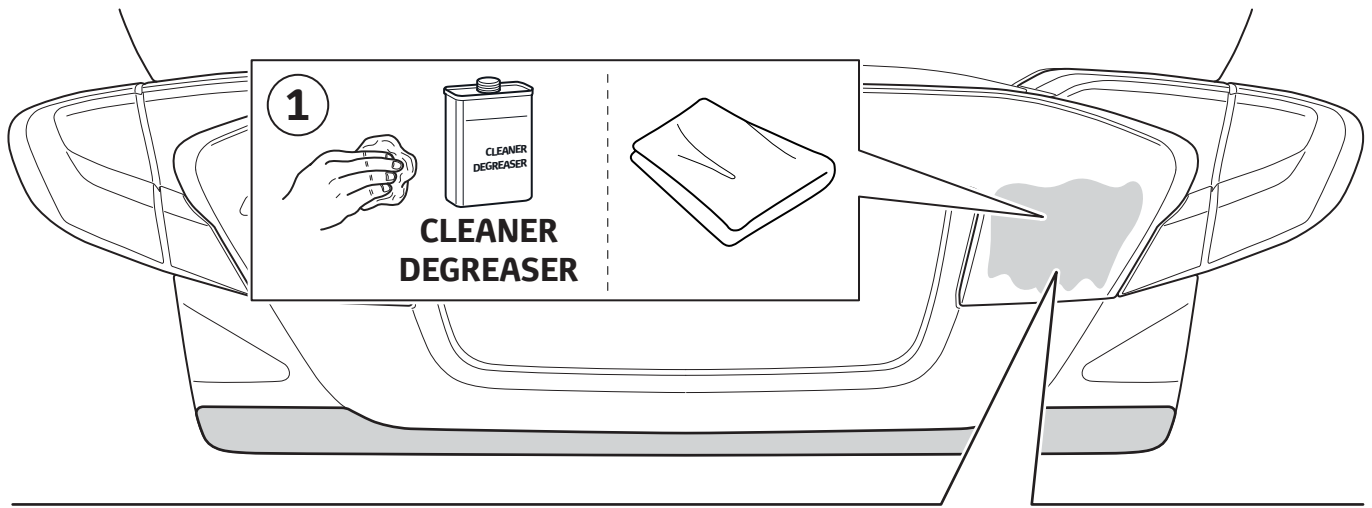

 **9 of 11**



9

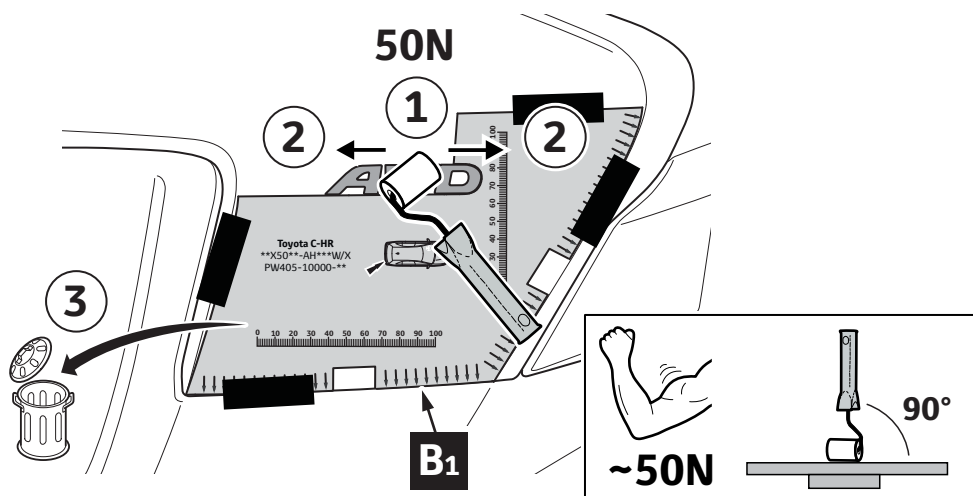

10


5 min. 




24 h 




24 h 

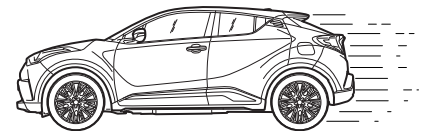


Max. 90 Km/h

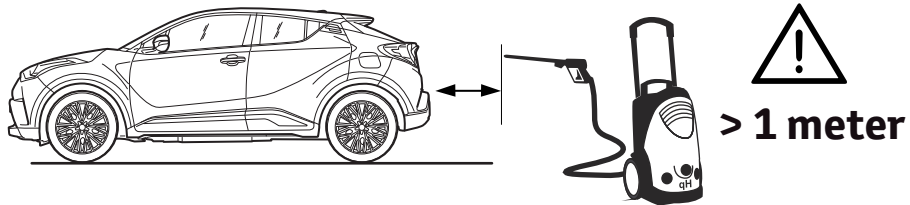

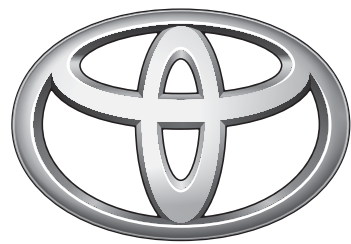



TOYOTA



**Print 100%
Check with Rulers
before use.**

CHECK

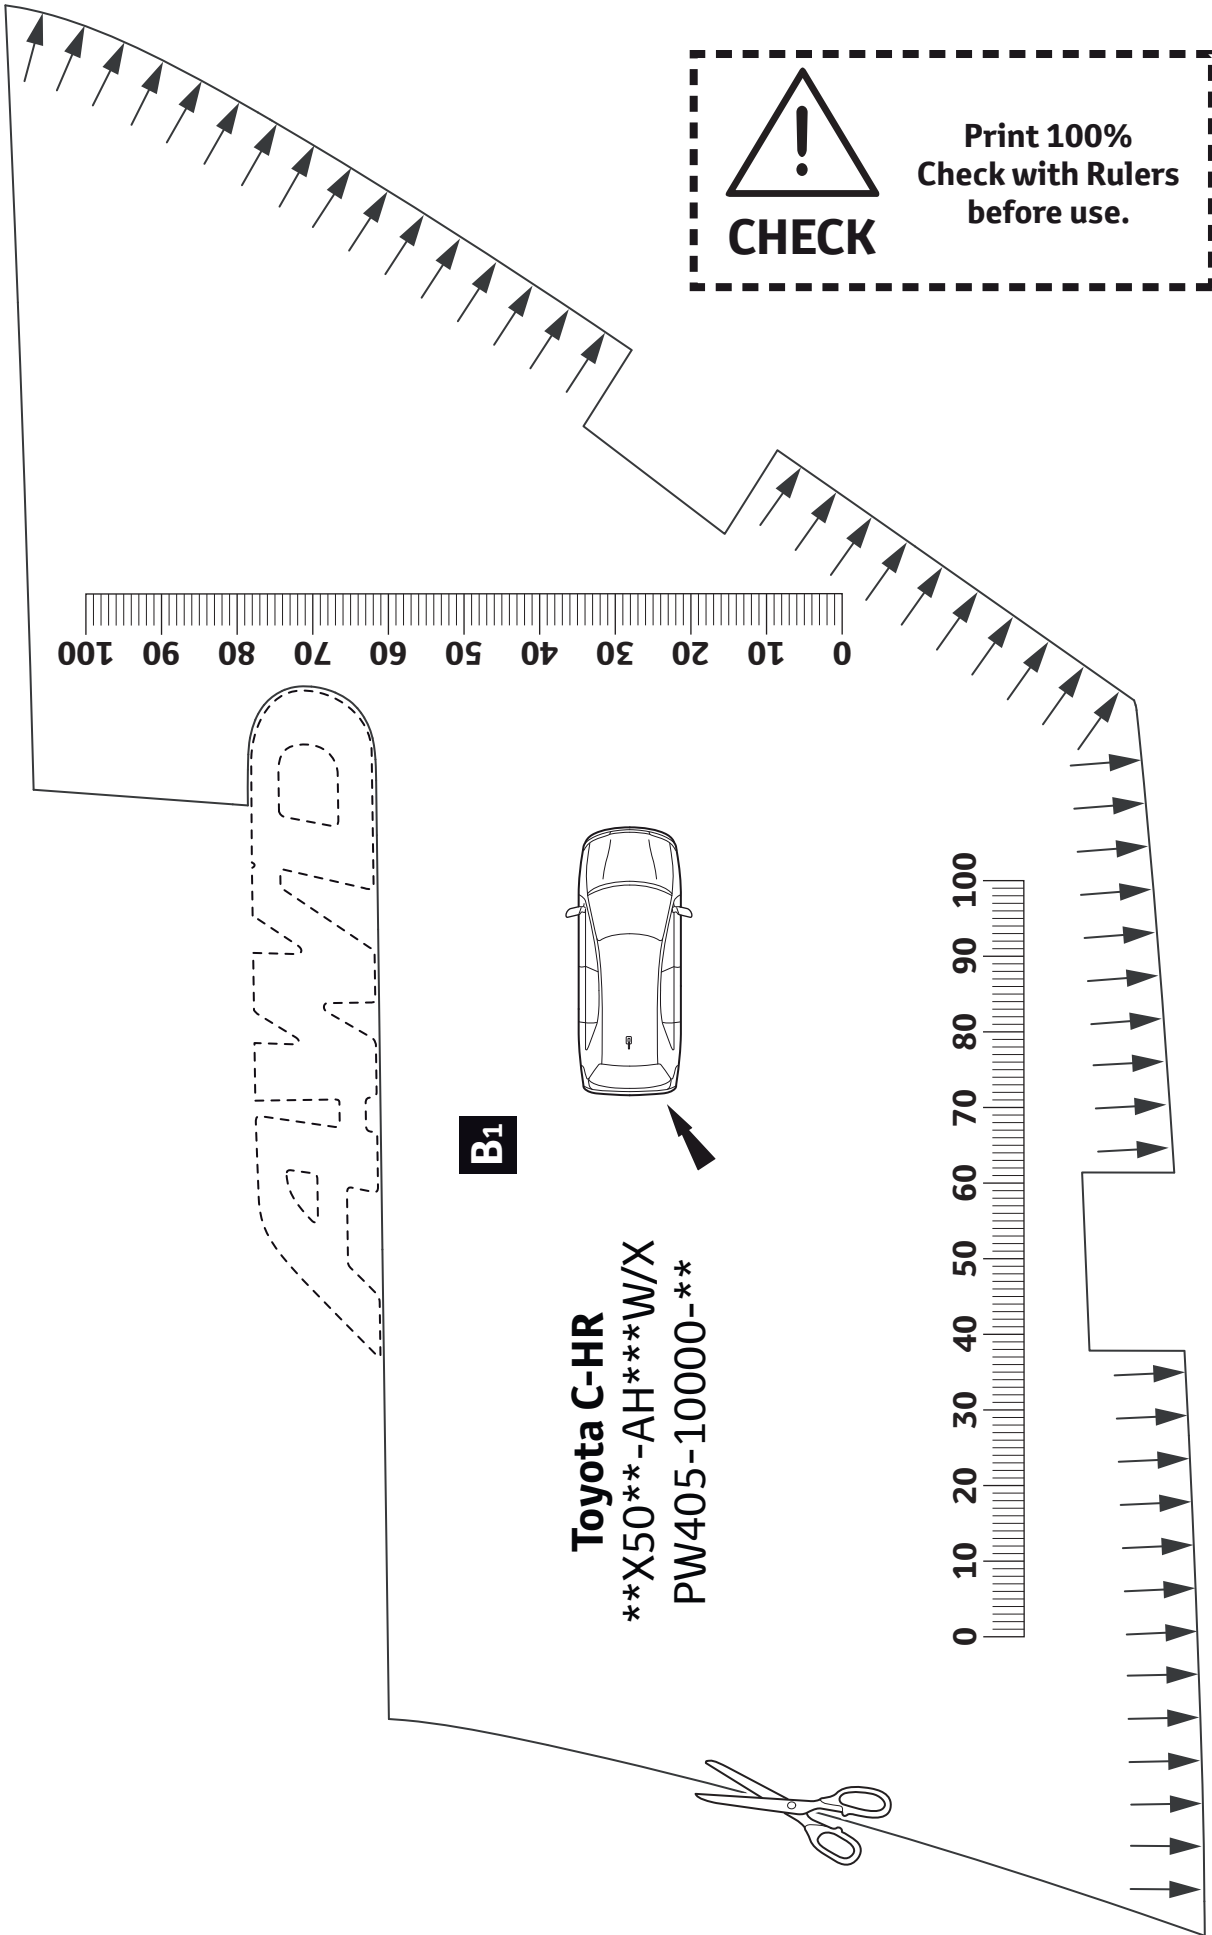

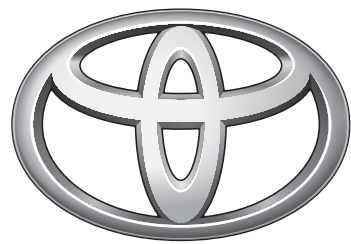

TOYOTA

CHECK SHEET









TOYOTA

Model / Year **Toyota C-HR (AWD) 2016/10** Lower trunk garnish

VIN n°

ALWAYS A BETTER WAY

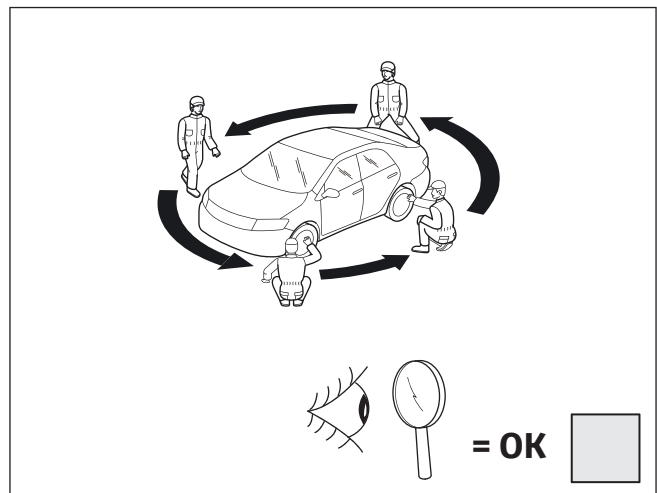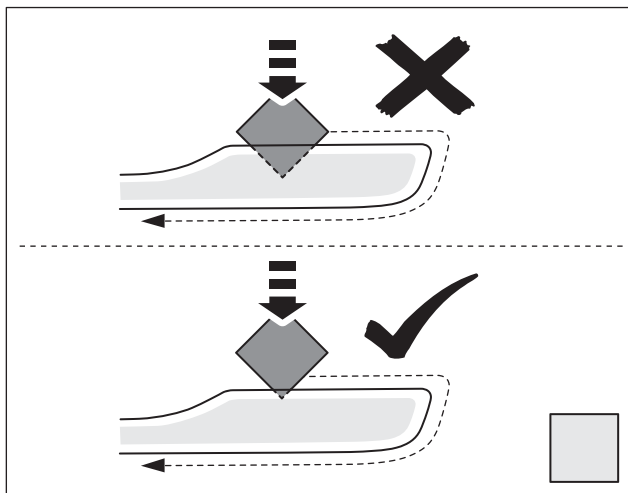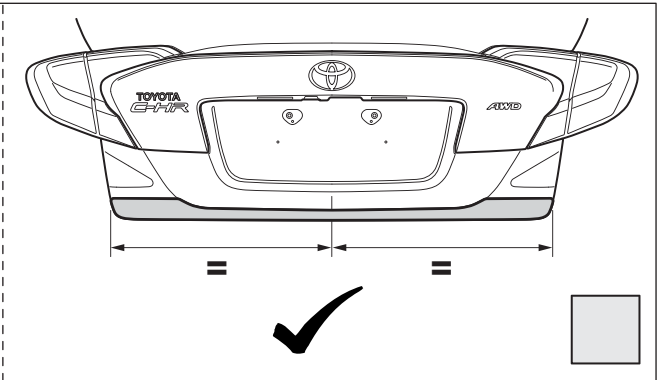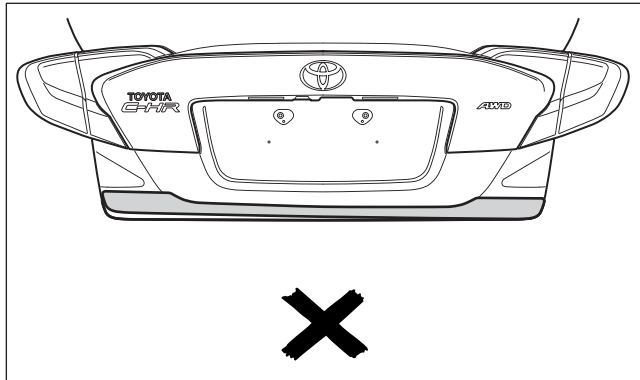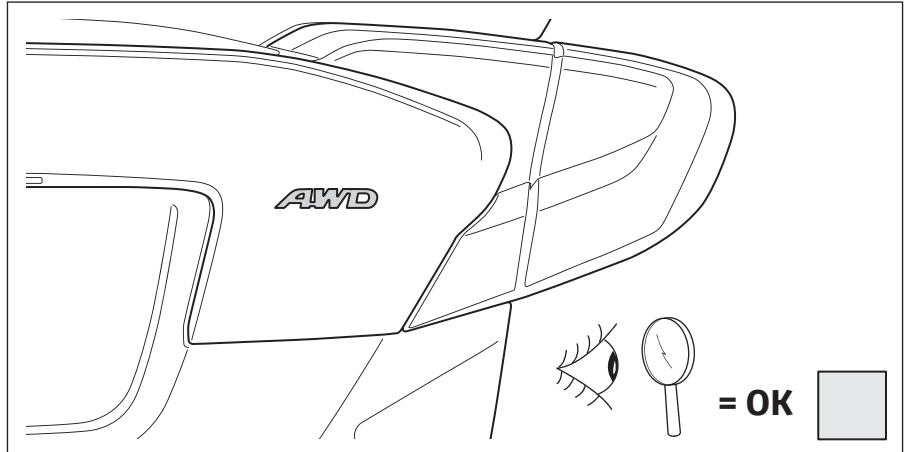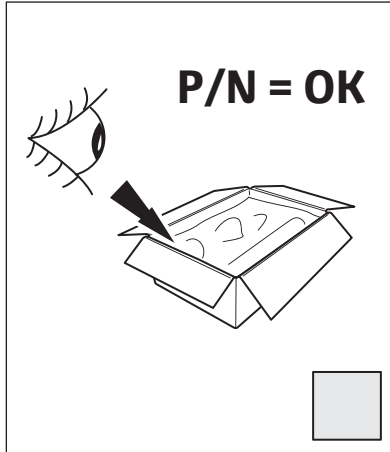

Installation Date:
 . . / . . /

Technician Name & Signature:

Stamp:

