



TOYOTA

ALWAYS A
BETTER WAY

Venza

Mudguards

Installation Instructions

Model year: 2013/04

Vehicle code: **V10*-AW****


Part number: PU060-0T01E-R1 (Rear Set)
PU060-0T01E-F1 (Front Set)
PU060-0T01E-P1 (Full Set)

Manual reference number: AIM 002 750-0

Revision record



Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PU060-0T01E-P1

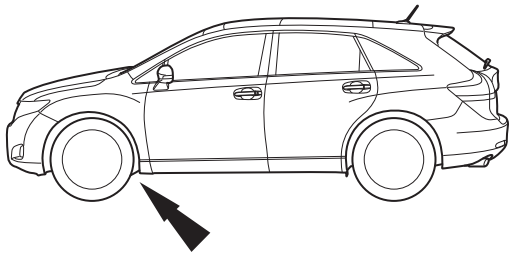


A PU060-0T01E-F1

1x

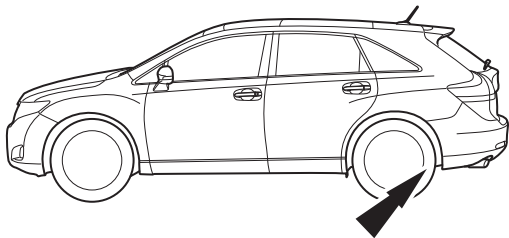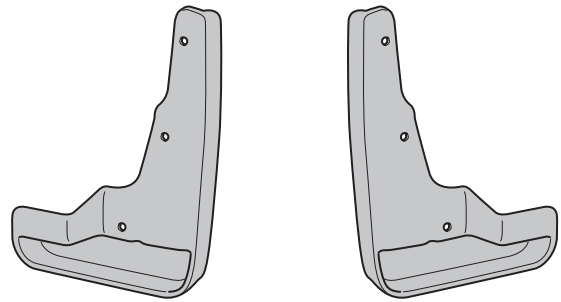

B PU060-0T01E-R1

1x

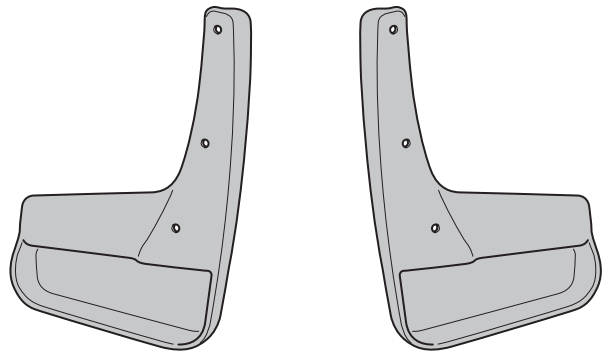

10x15mm



C

2x

10x19mm



D

10x



E

6x

14x19mm






F

2x





G

2x

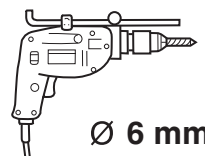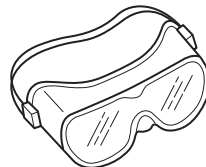


Ø 6 mm

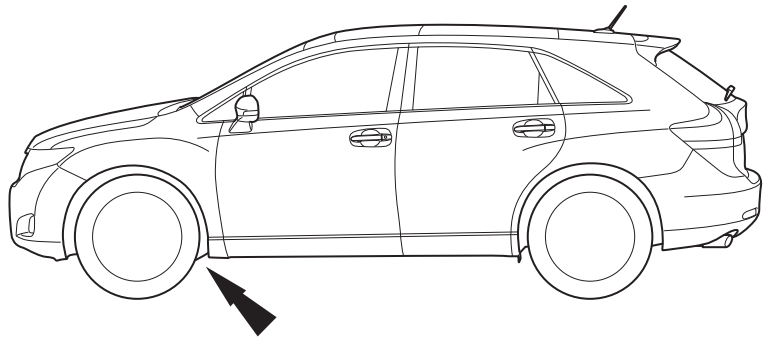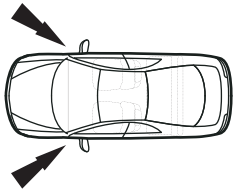

1

L+R

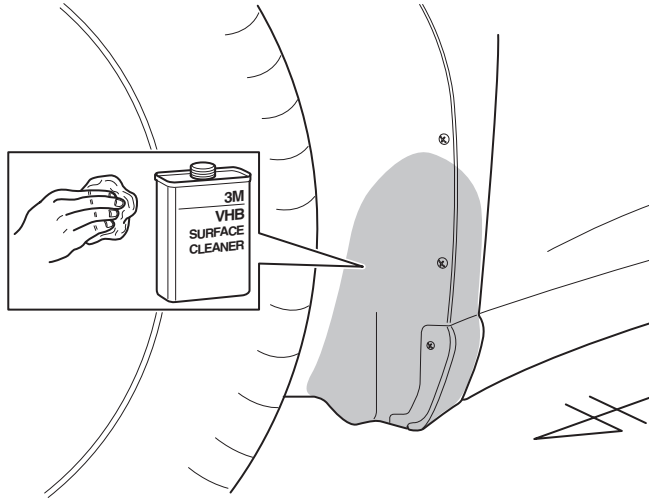


2

L+R




MODEL YEAR:
2009-2011

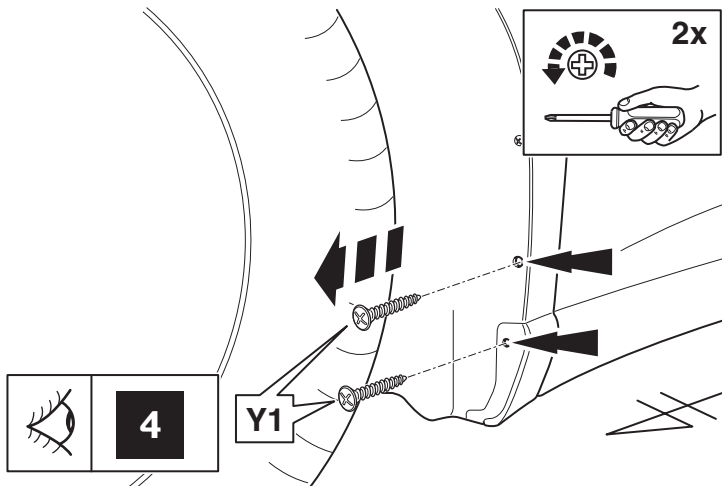

L+R



MODEL YEAR:
2011+

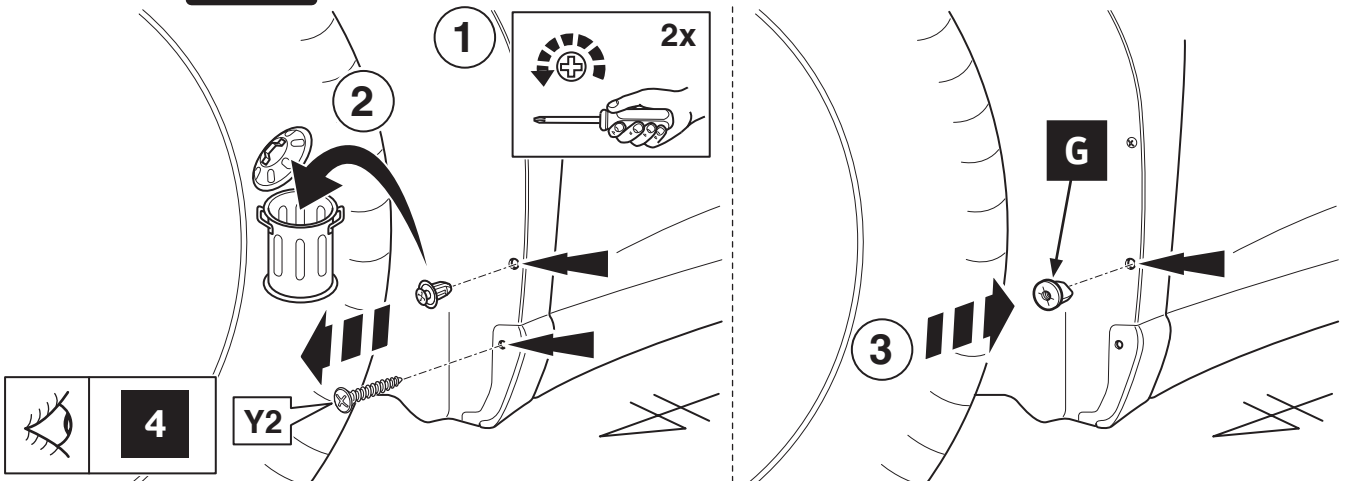


3

L+R



MODEL YEAR:
2009-2011

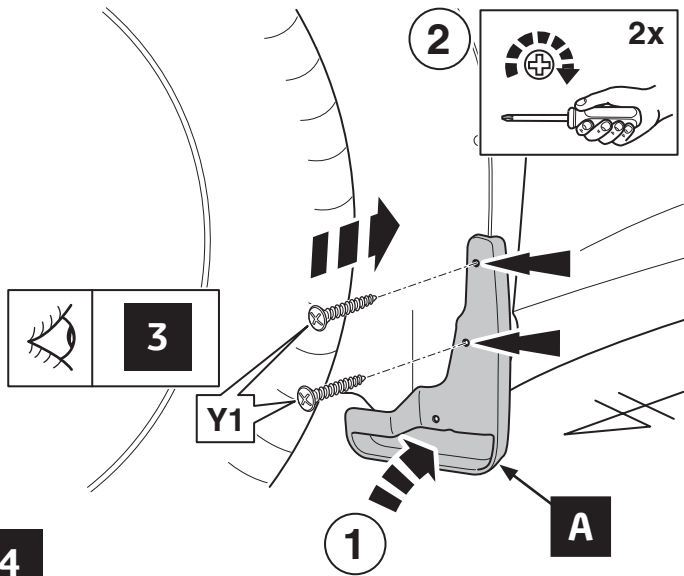


4



L+R





MODEL YEAR:
2011+

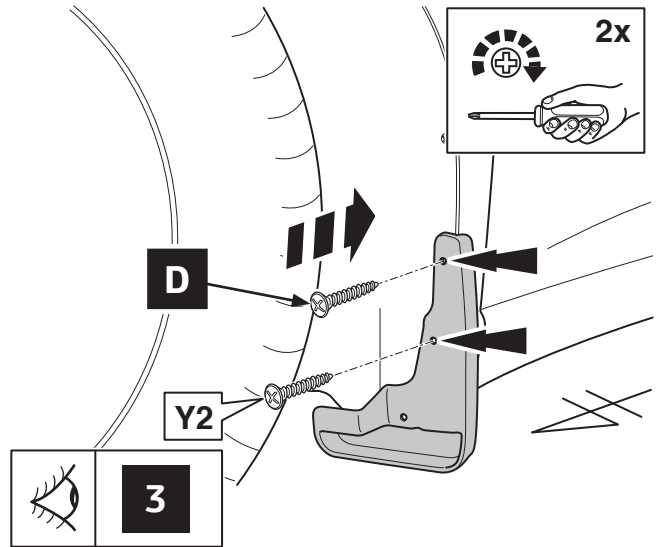

L+R

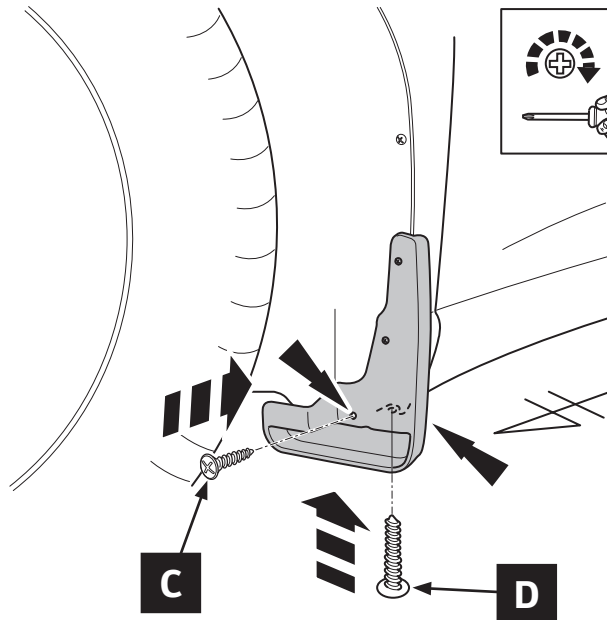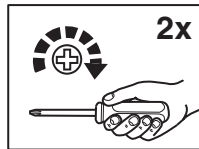

5

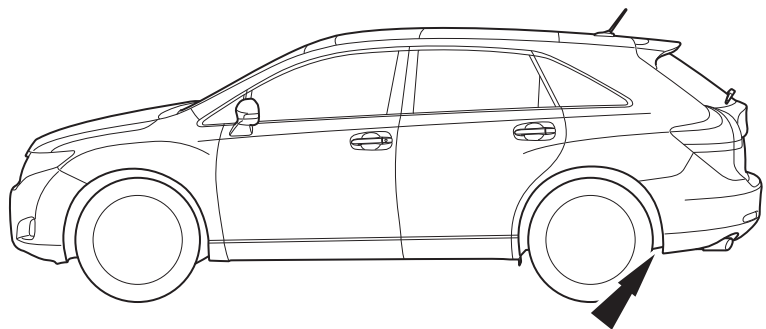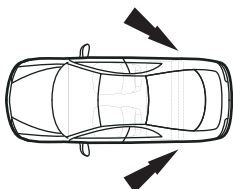


6

L+R




7

L+R

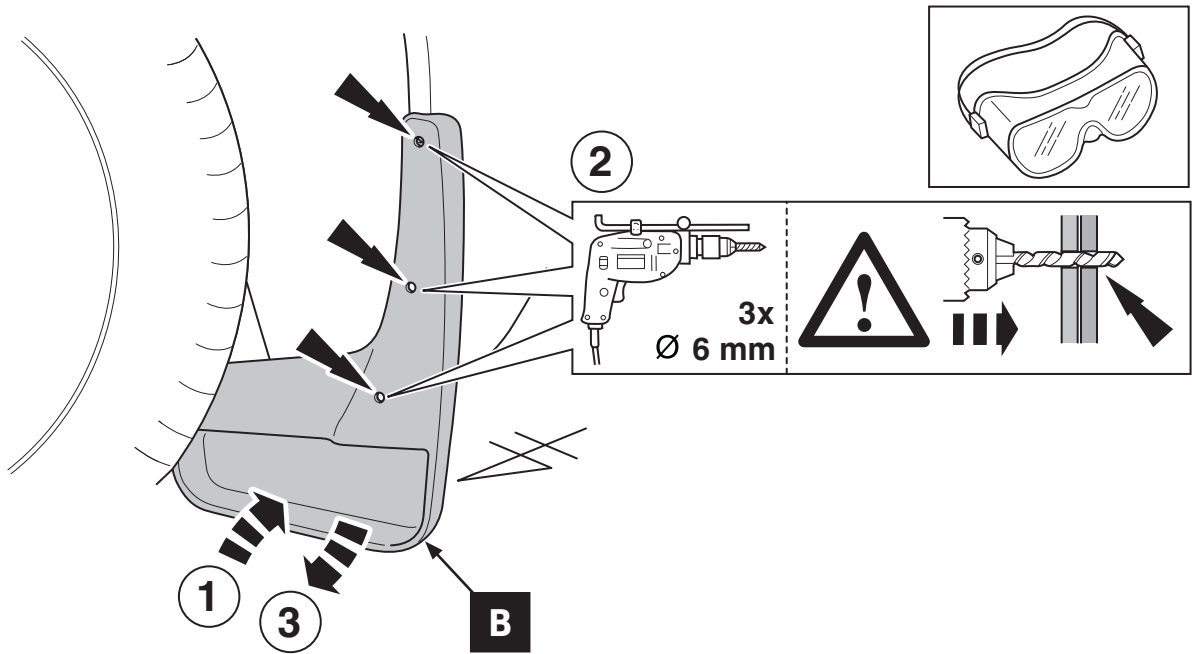

8

L+R

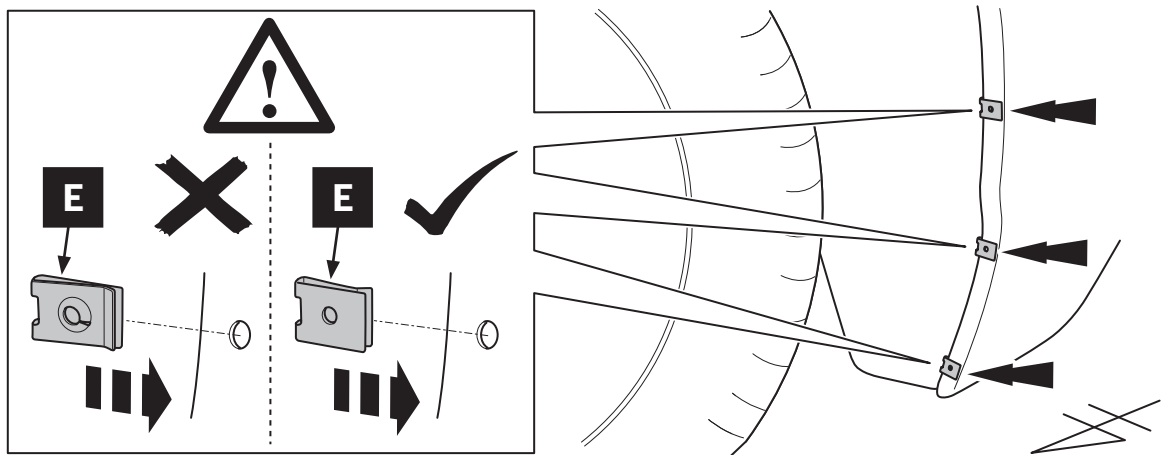

9

