



TOYOTA

ALWAYS A
BETTER WAY

Door handle protection film

Installation instructions

Model year: Universal


Part number: PZ438-B0182-00

Manual reference number: AIM 003 630 - 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PZ438-B0182-00

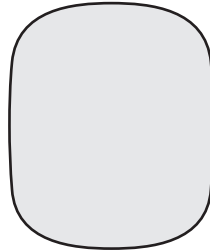


A

2x











A

A

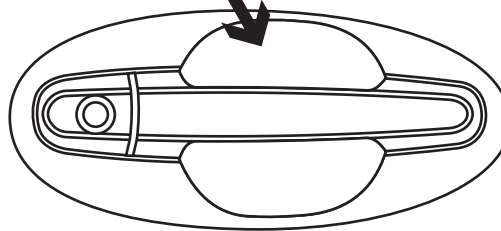


LHS = RHS

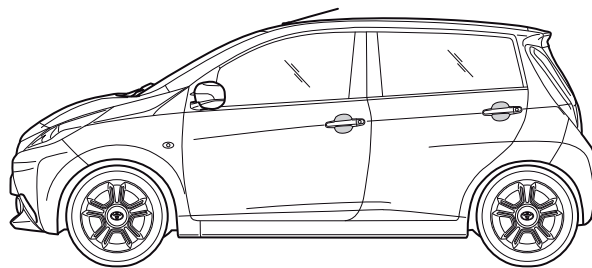


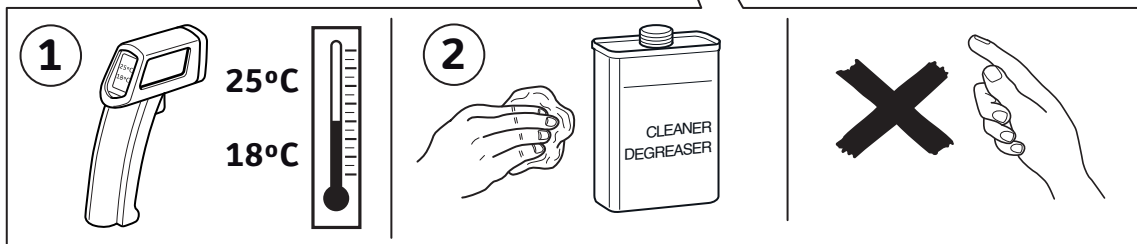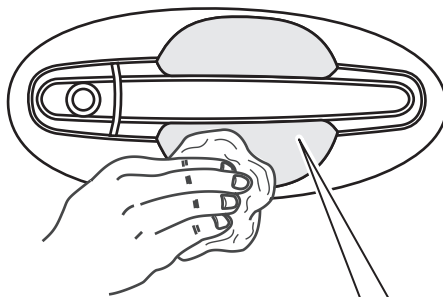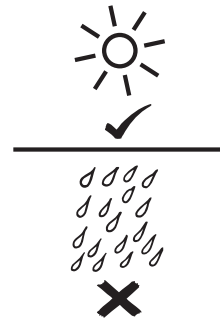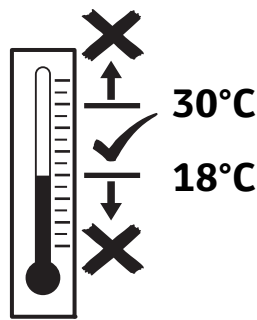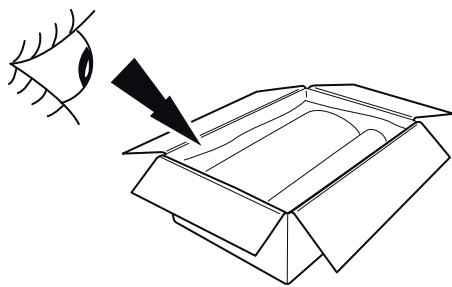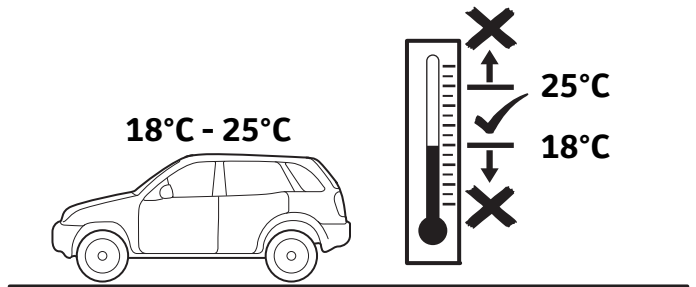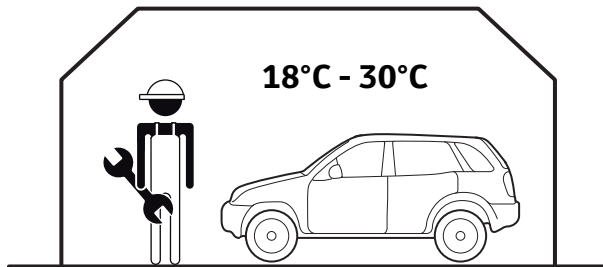


1

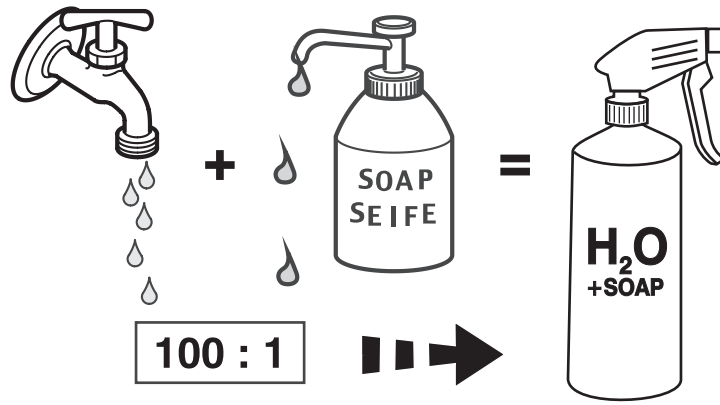


2

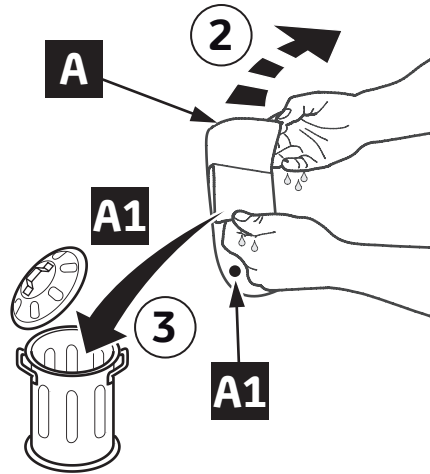

3


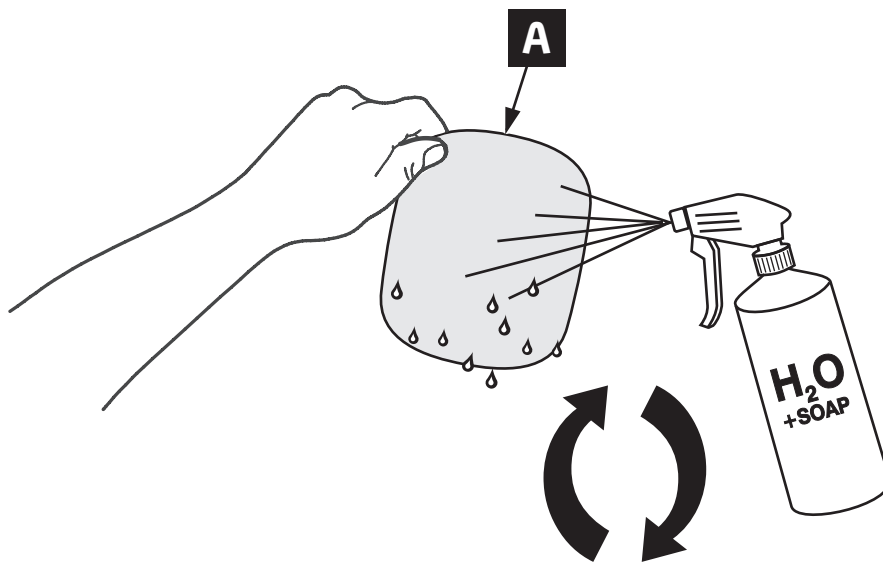


4

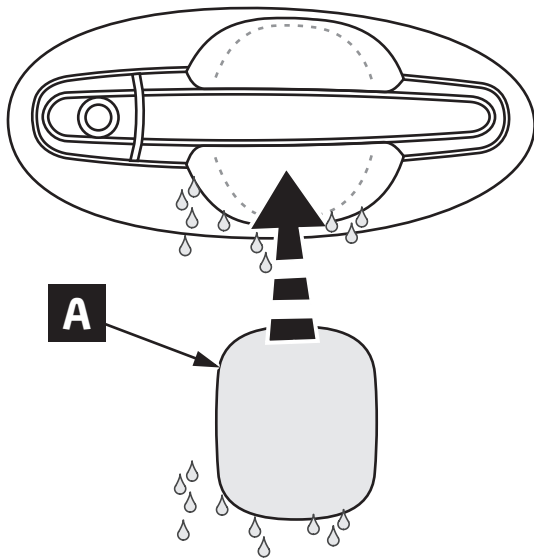


Land Cruiser VX
J200*-GE*W

5


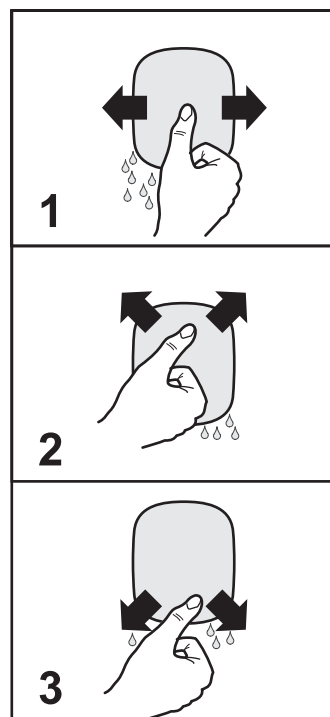
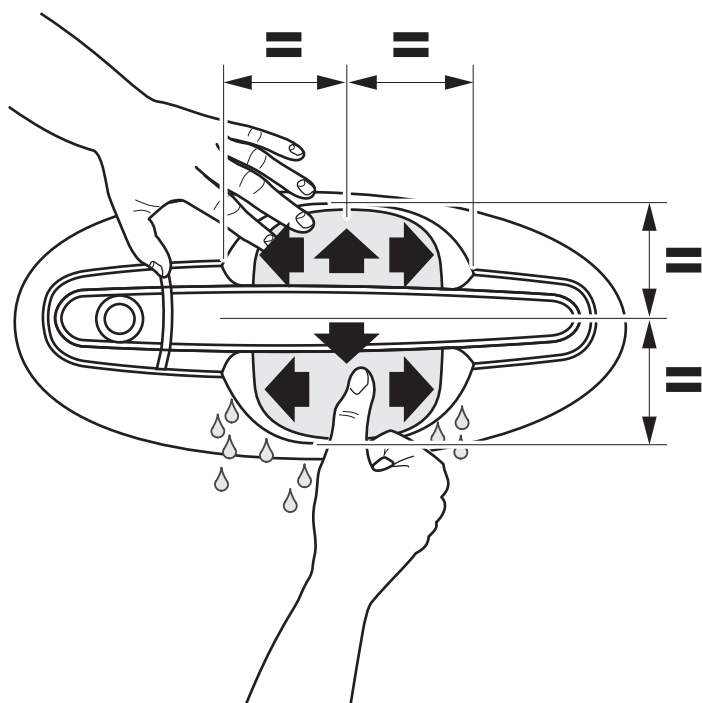


6

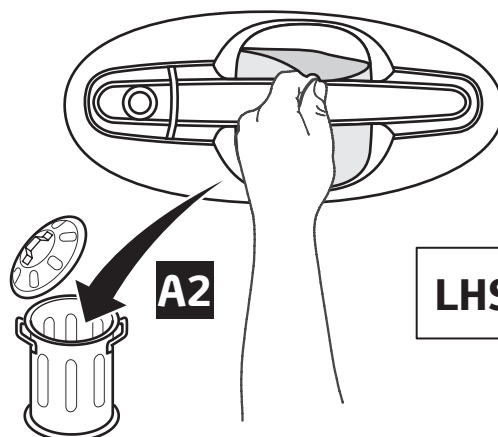


LHS = RHS

7

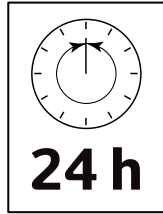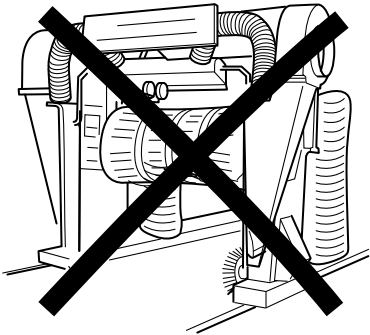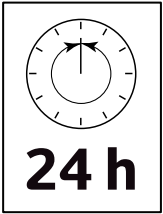

> 1 meter

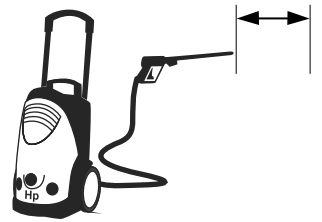

CHECK SHEET



TOYOTA

Model / Year Universal Door handle protection film

VIN n°

ALWAYS A BETTER WAY

P/N = OK

= OK

OK

OK

= OK

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp: