



TOYOTA

ALWAYS A
BETTER WAY

Land Cruiser

Sunroof wind deflector

Installation Instructions

Model year: 2009/09, 2013/08, 2017/08


Vehicle code: **J15**-G**E*W

Part number: PZ451-J0B10-ZA

Manual reference number: AIM 001 621-3


Revision record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	18/07/2013	3	1		x	
			2	x		
		6	Check Sheet		x	
2	27/07/2017	1, 6		x		
3	09/08/2017	1, 6		x		

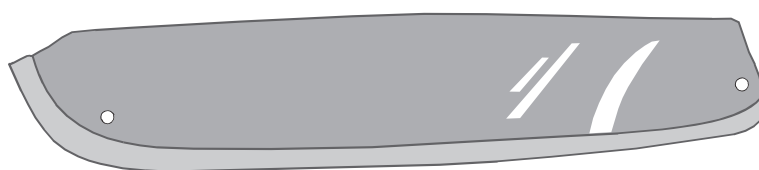


A

1x

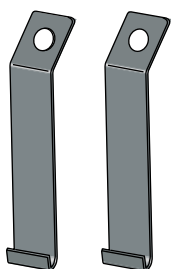

B

1x

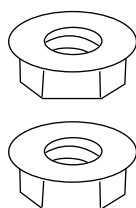

C

1x




D

1x






E

1x

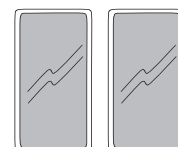


F


1x

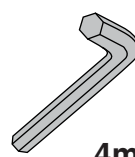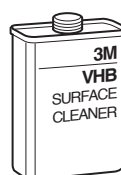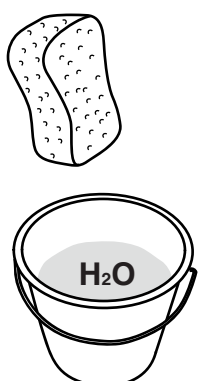


4mm

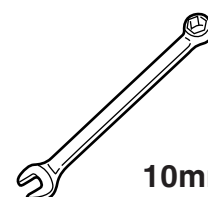

10mm

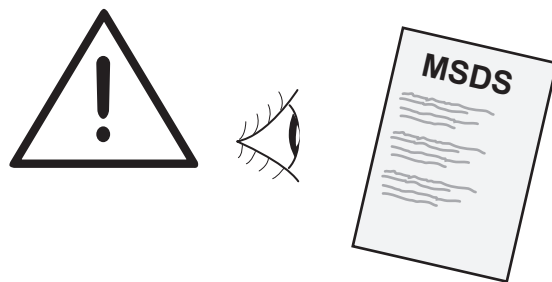


1

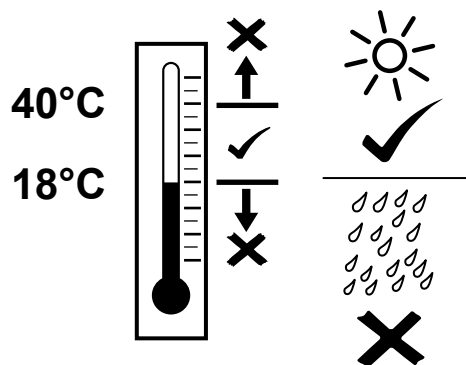


2




3

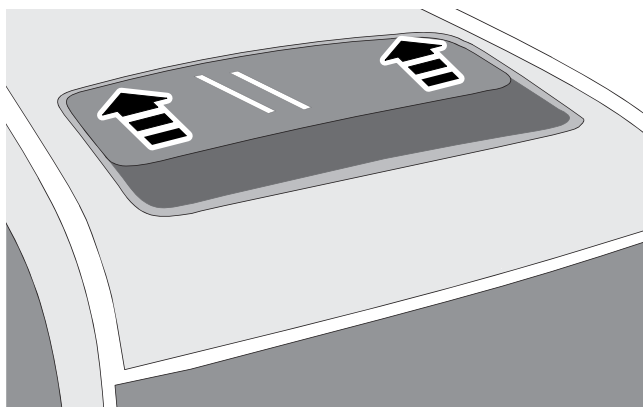


4

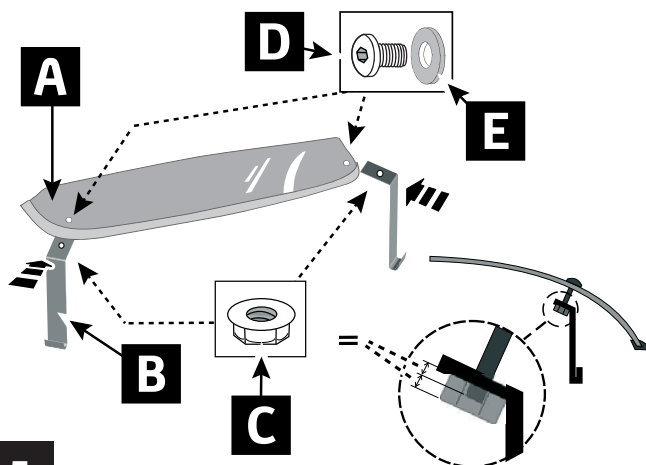


5

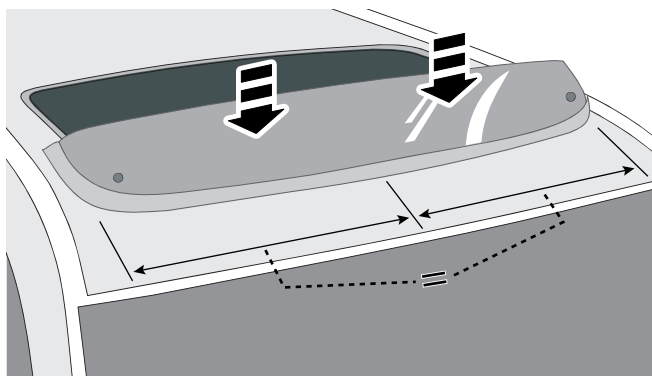


6

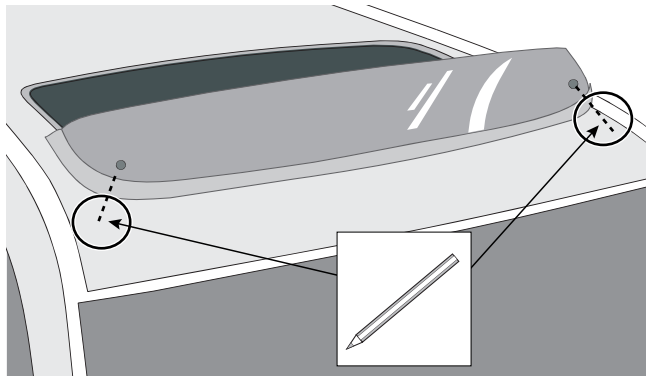


7

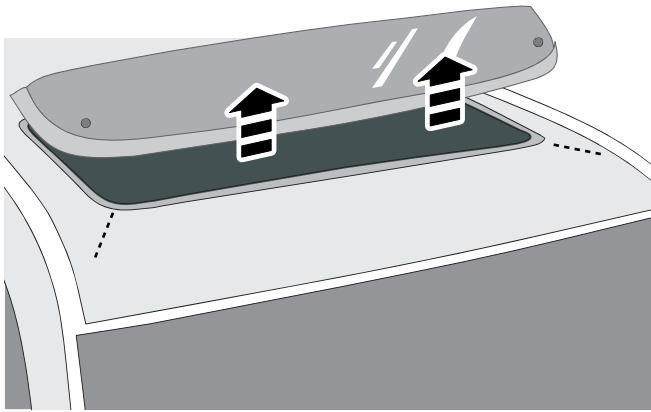


8

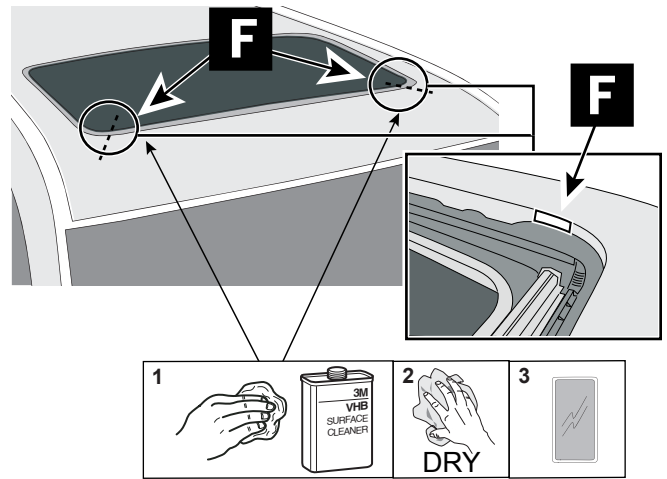


9

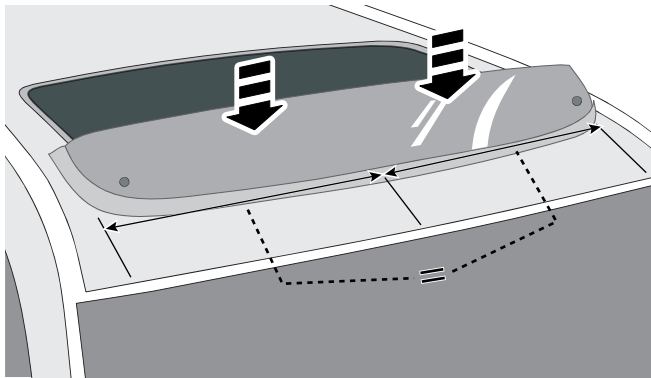


10

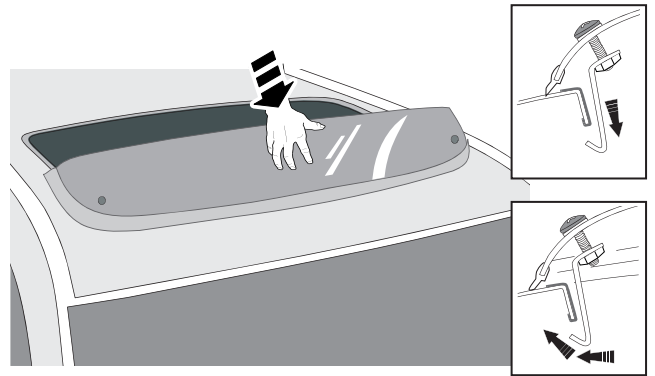


11

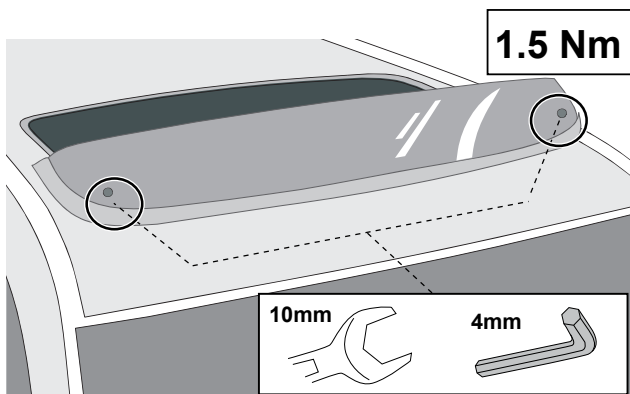

12

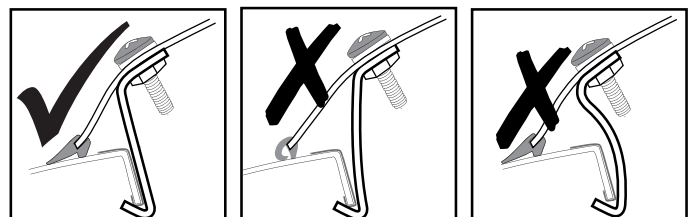

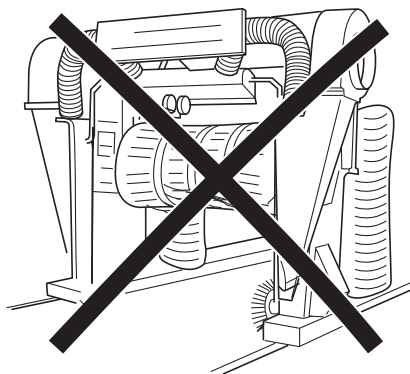

13



TOYOTA






ALWAYS A
BETTER WAY

CHECK SHEET

Model / Year **Land Cruiser**
2009/09, 2013/08, 2017/08

**Sunroof wind
deflector**

VIN n°

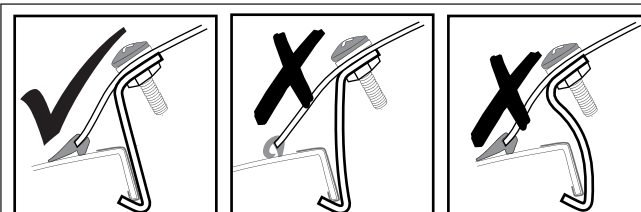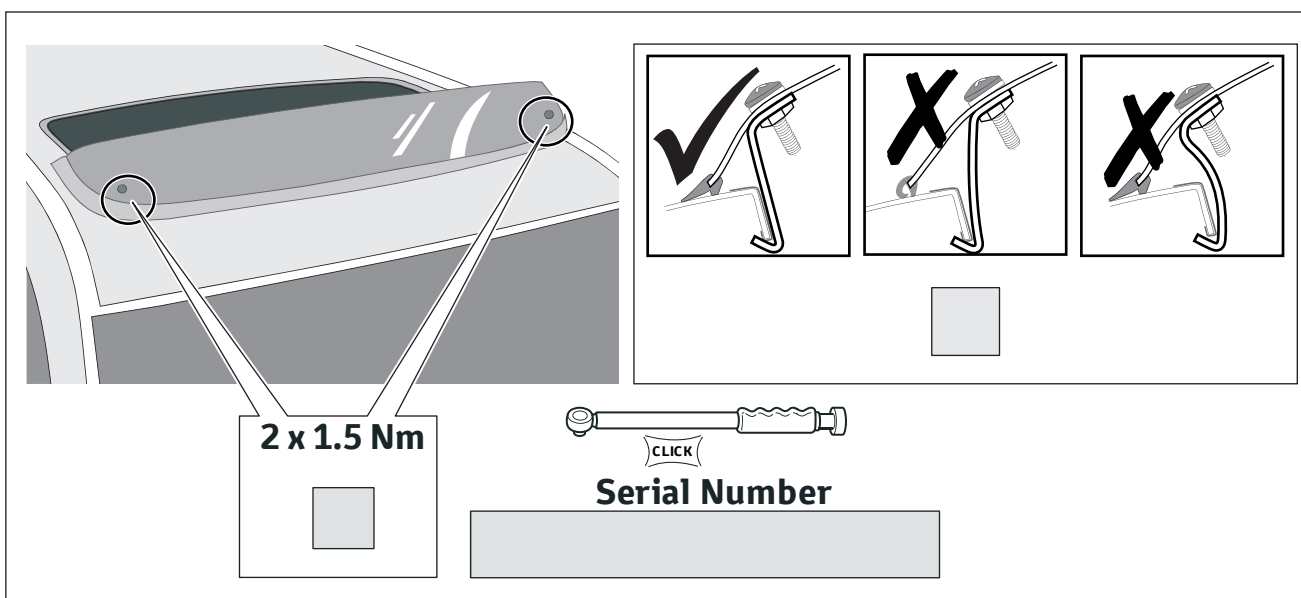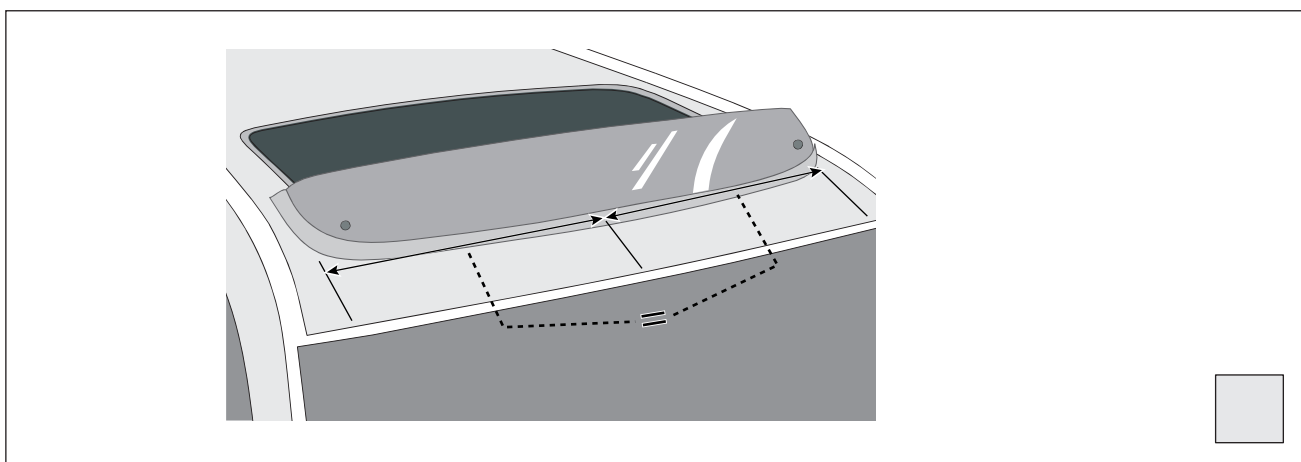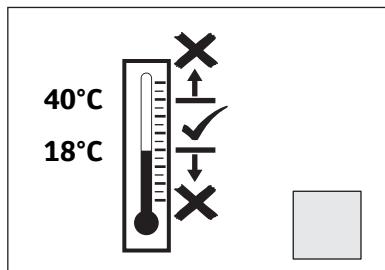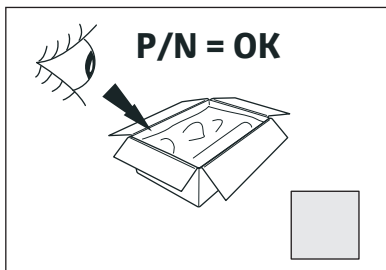

Serial Number

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: