



ProAce Verso

Trunkliner

Installation Instruction

ALWAYS A
BETTER WAY


Model year:	2016/03
Vehicle code:	MPY**1*-LB***W
Part number:	PZ4L1-H0300-00

Manual reference number: AIM 003 868 - 0

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps


PZ4L1-H0300-00

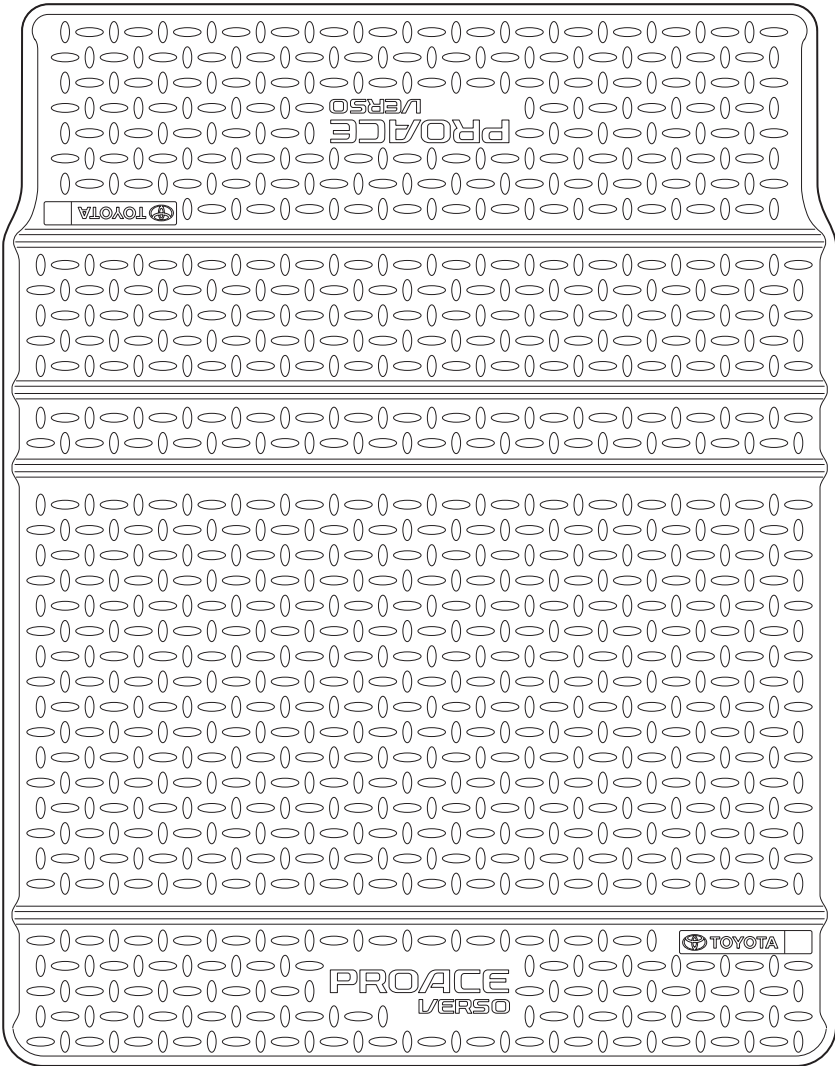



A

1x


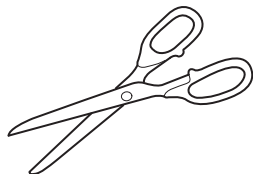


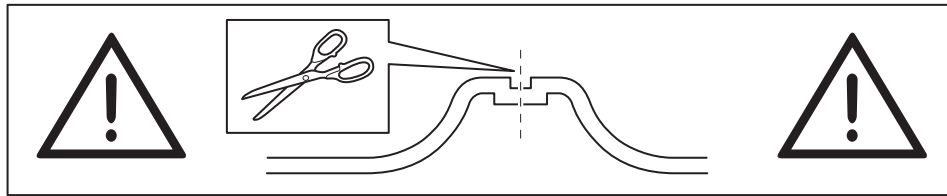



MPY*21*-LB*W**

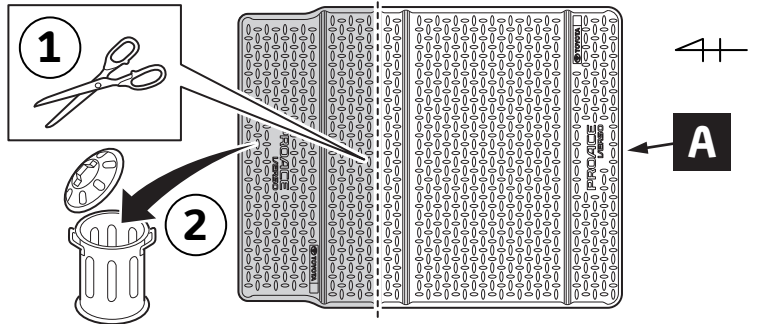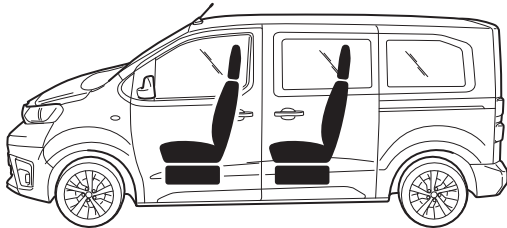



MPY*41*-LB*W**

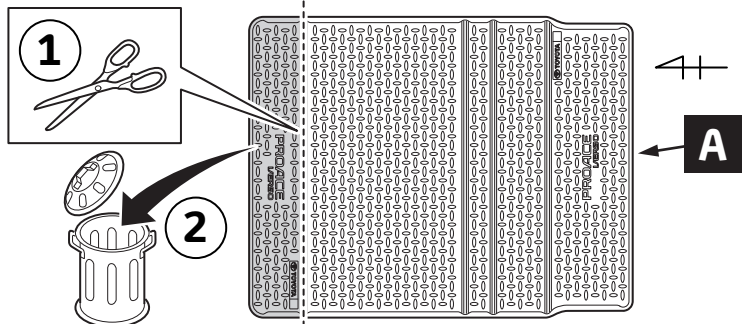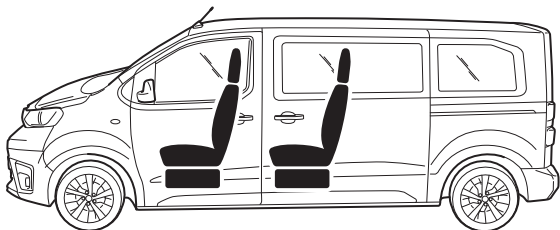



MPY*41*-LB*W**

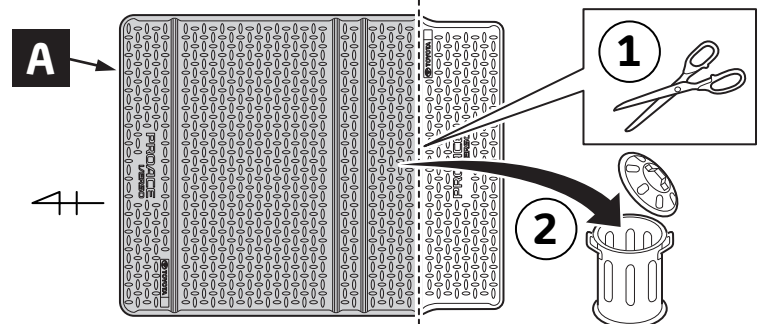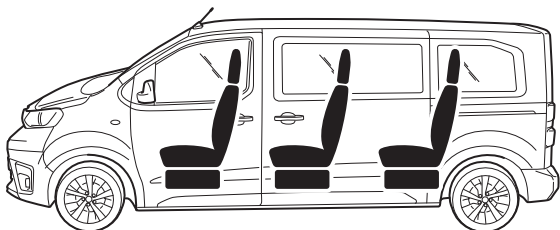


MPY*61*-LB*W**

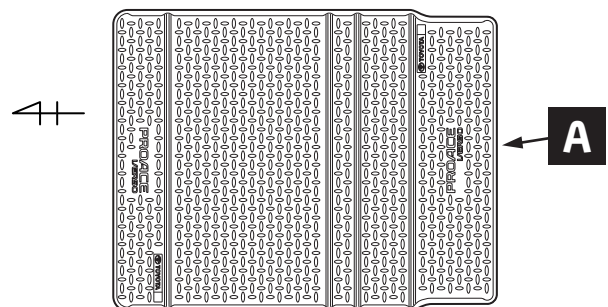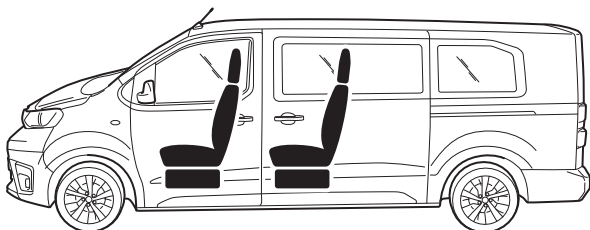

MPY*61*-LB*W**

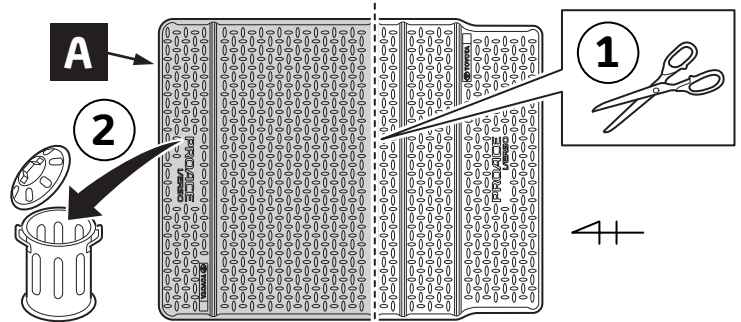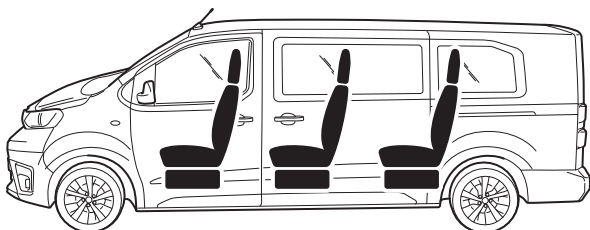

1

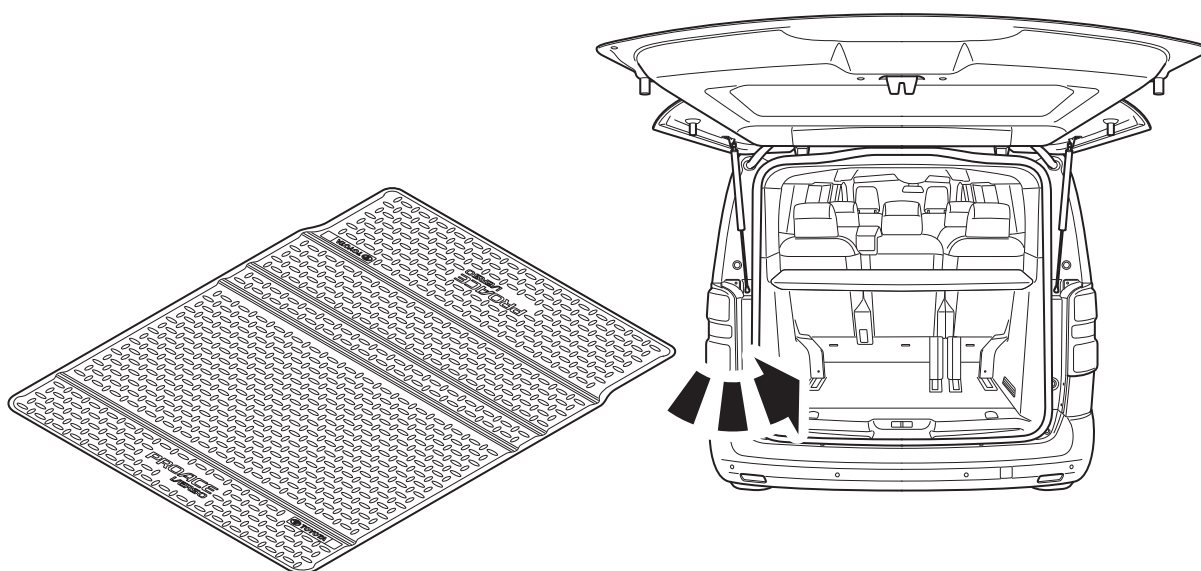

CHECK SHEET










TOYOTA

Model / Year ProAce 2016/03

Trunkliner

VIN n°

ALWAYS A
BETTER WAY

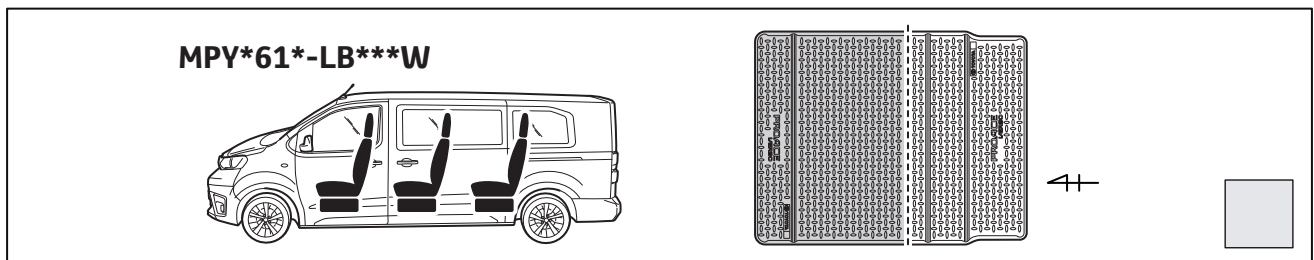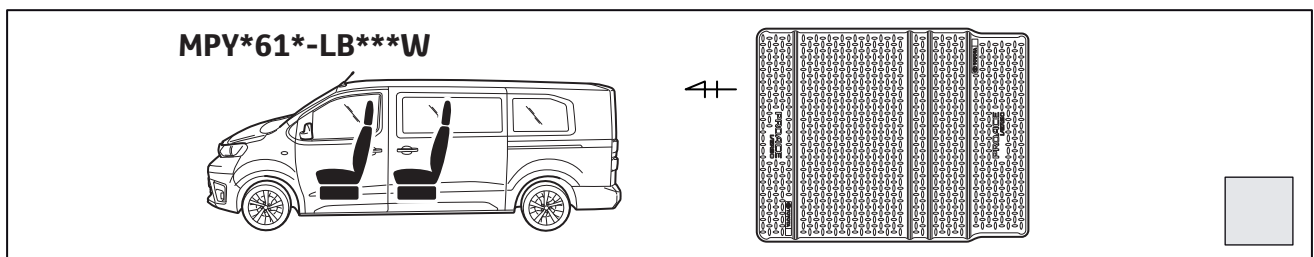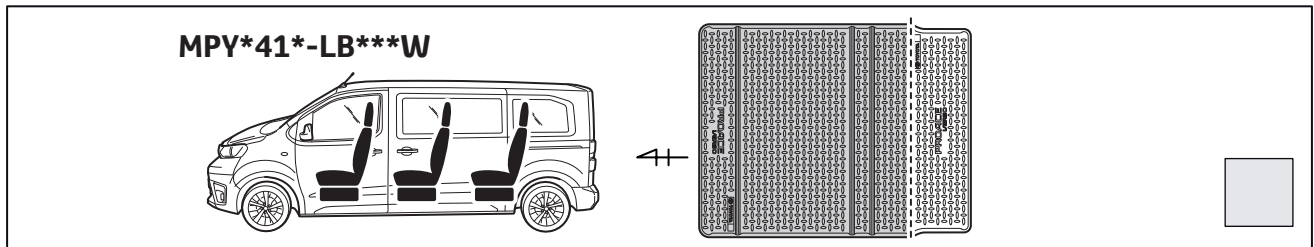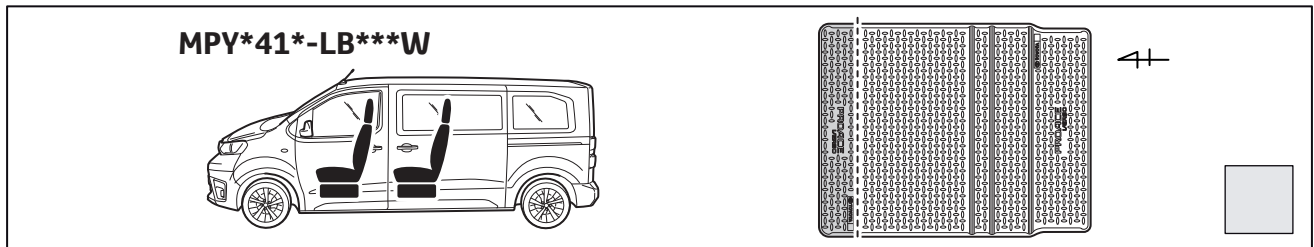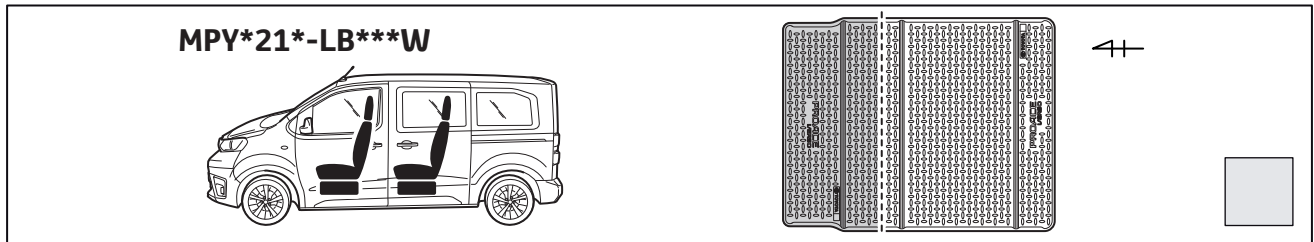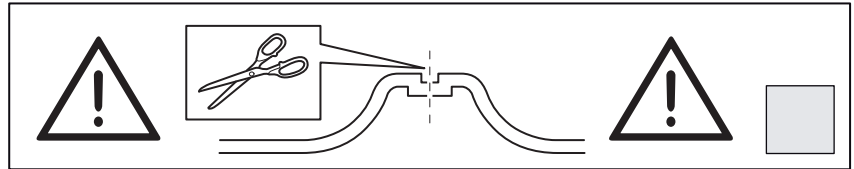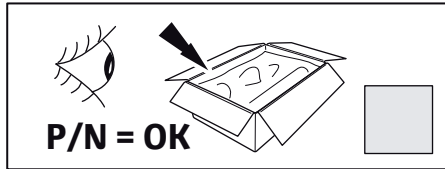

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: