



TOYOTA

ALWAYS A
BETTER WAY

Auris Touring Sports

Wind deflectors

Installation Instructions

Model year: 2015/05

Vehicle code: **E18**-DW***W





Part number: PW162-02001

Manual reference number: AIM 003 473-1



Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	14/12/2016	1-4, 6-7	2, 4, 5, 8	Kit, tools		




PW162-02001

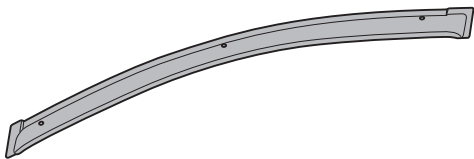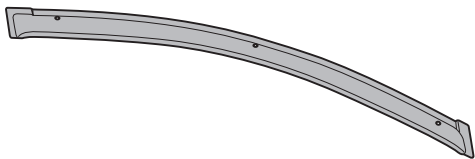A  1x	B  1x
C  1x	D  1x

PW162-02002

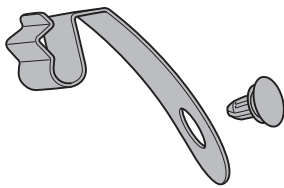E  10x	F  Adhesion promoter PZ415-00000-00 3M Adhesion promoter UV 4298 2x
--	--

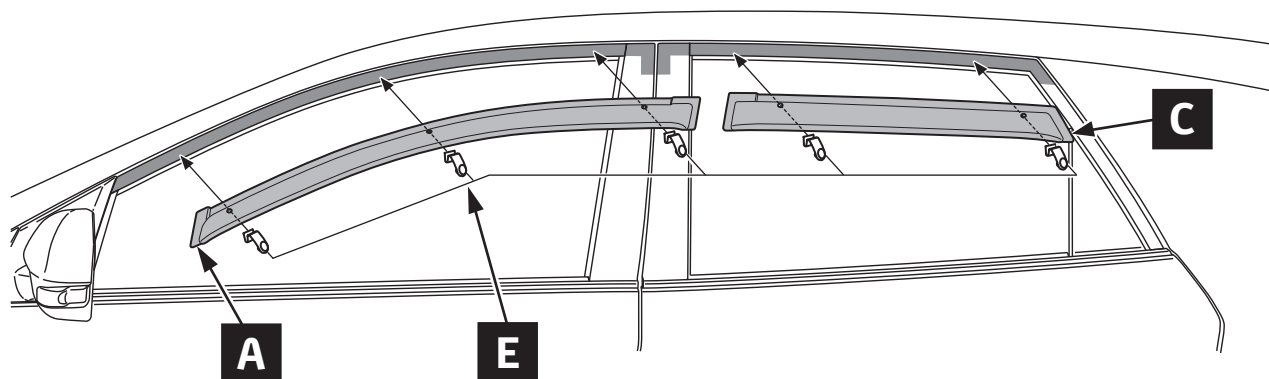

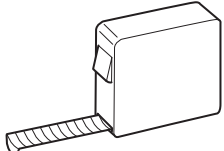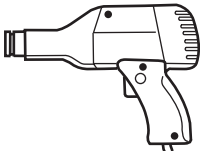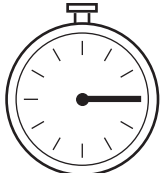 					 Roller
--	---	---	--	---	---




40°C


18°C




1

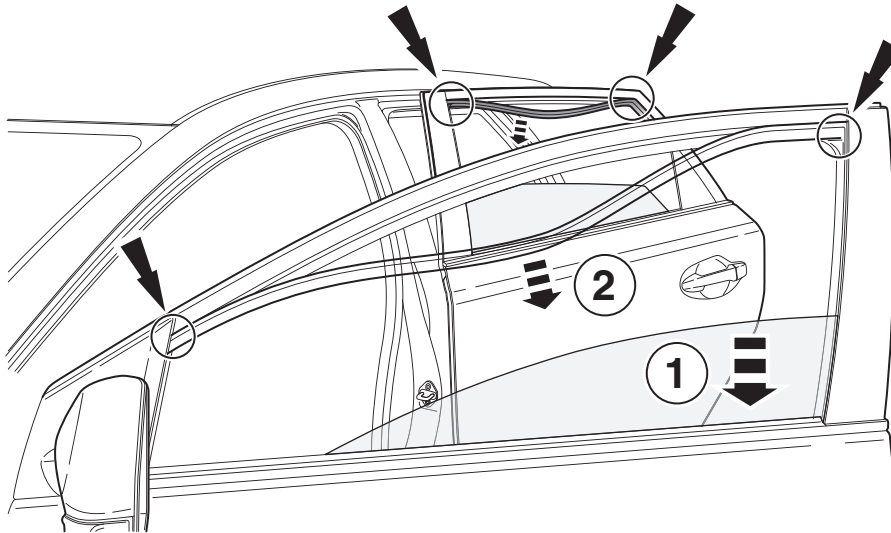


2

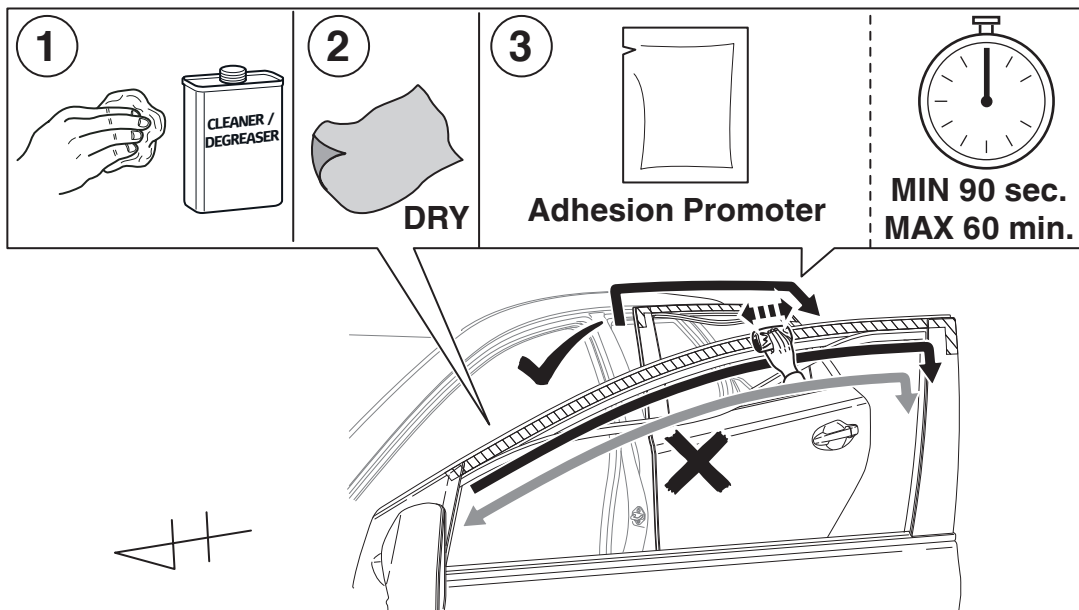


3


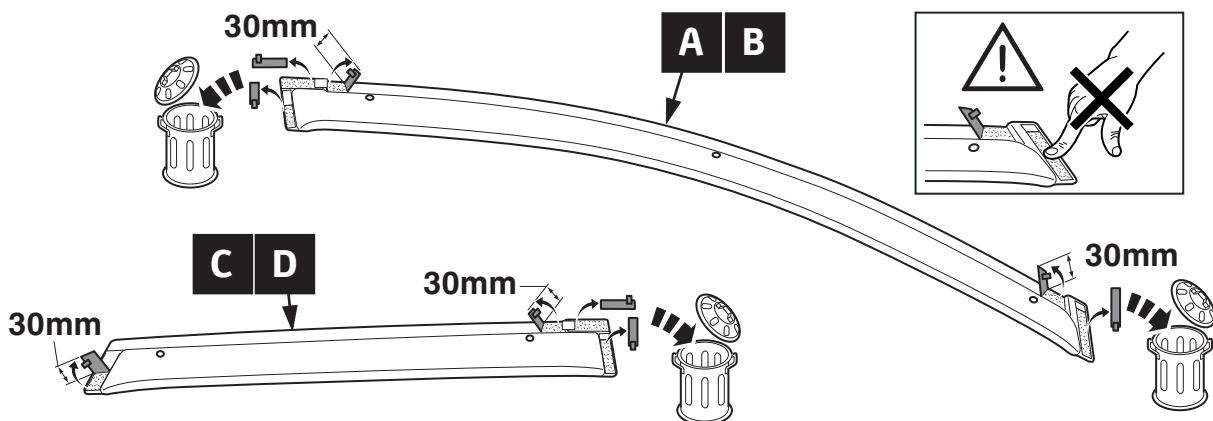


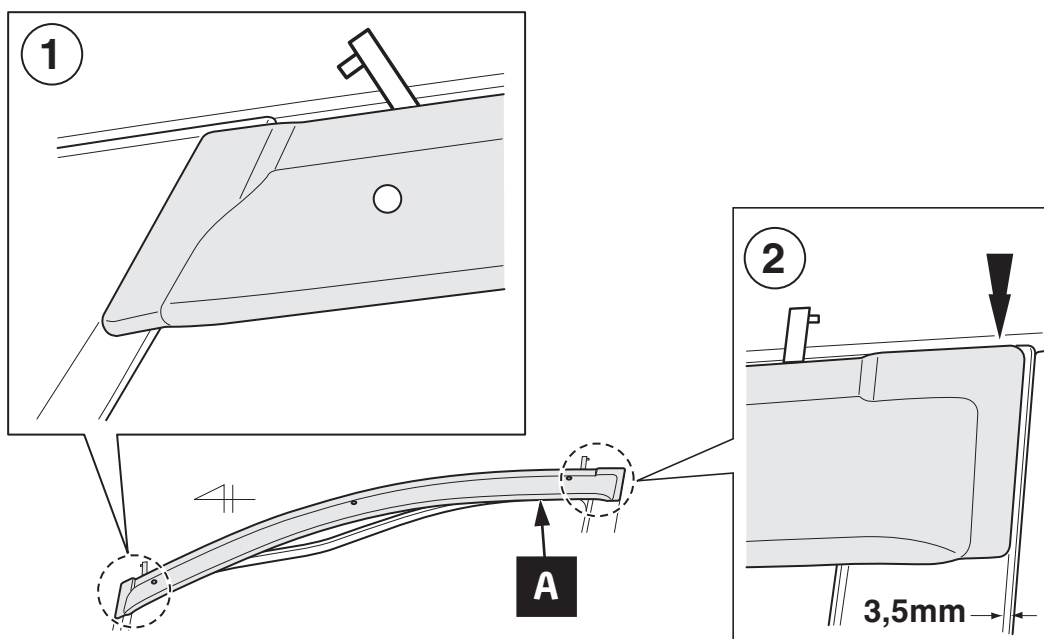



4

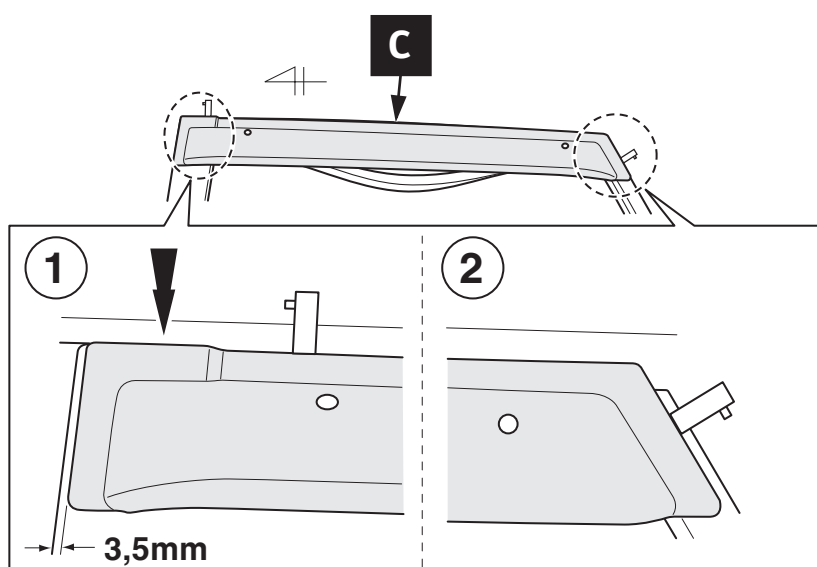




5

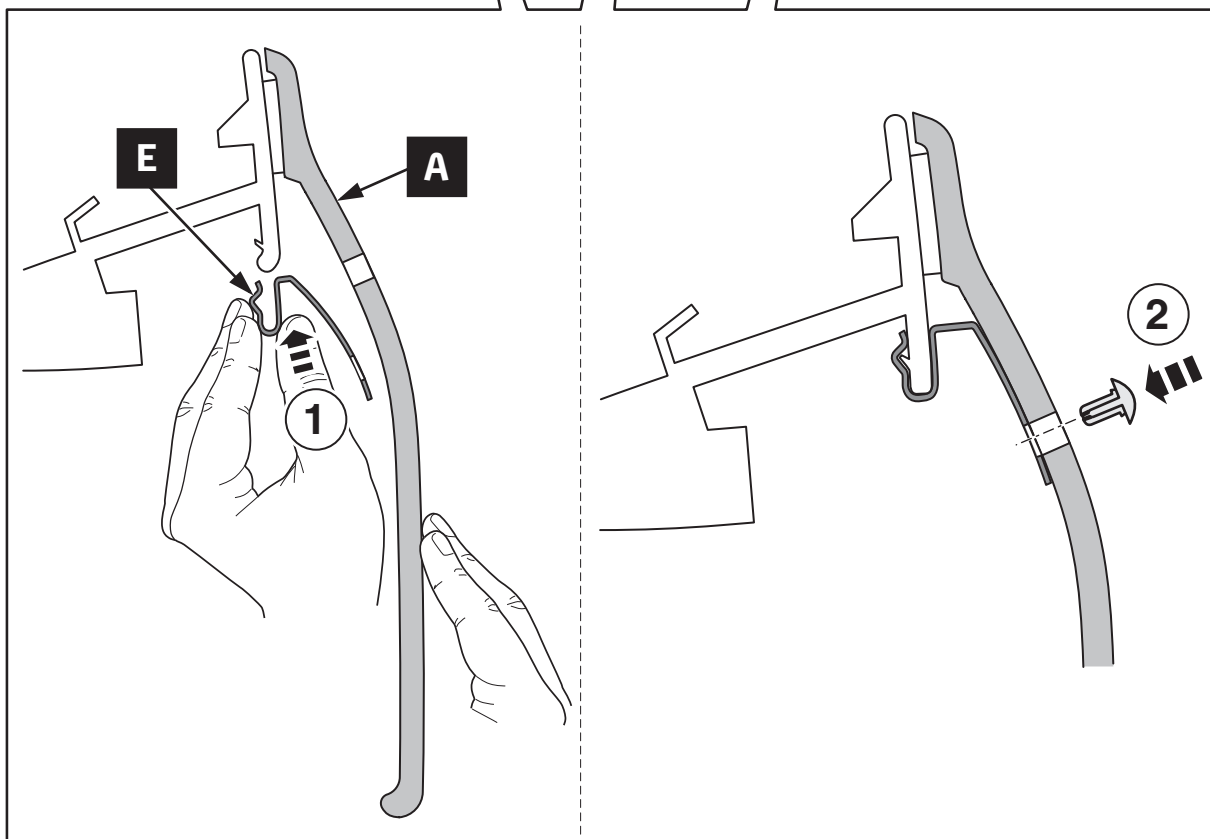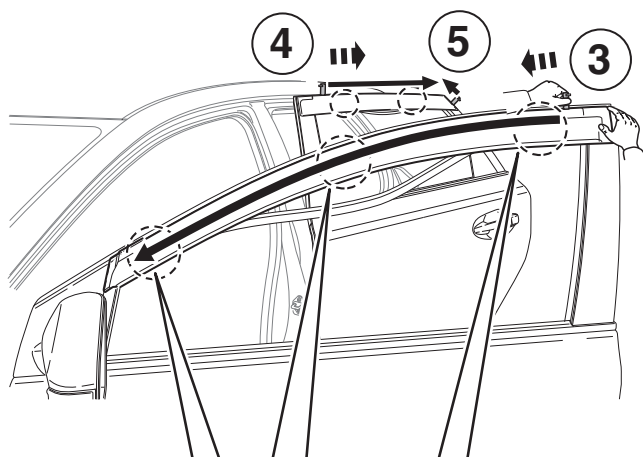



6

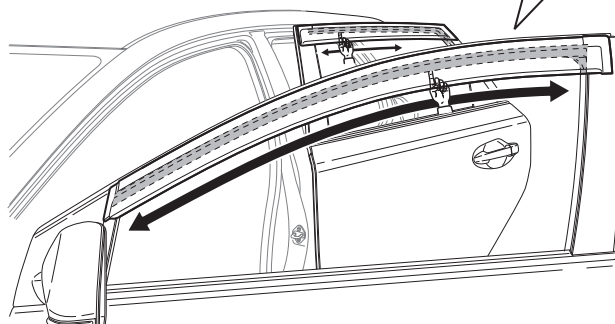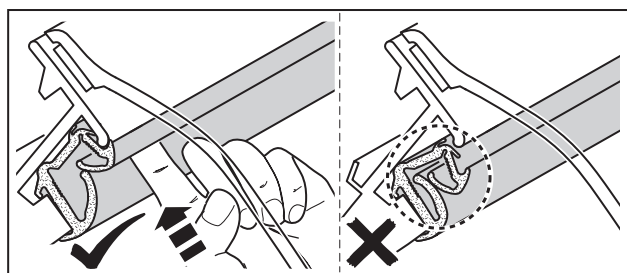

7

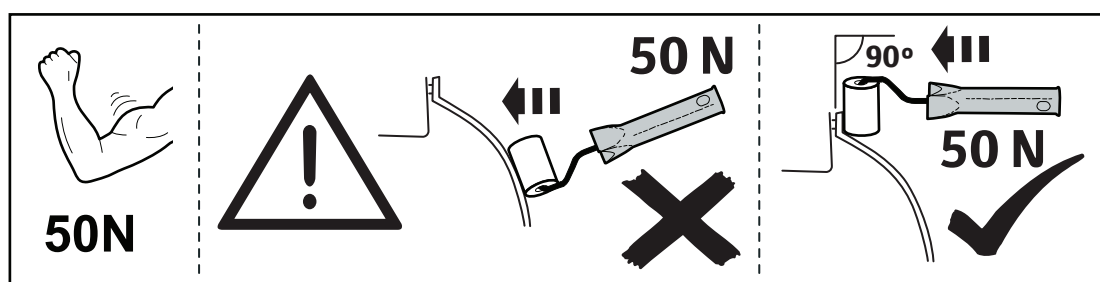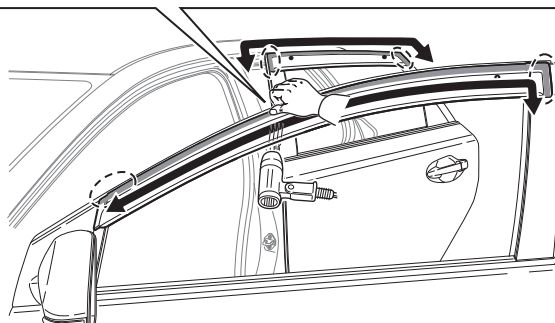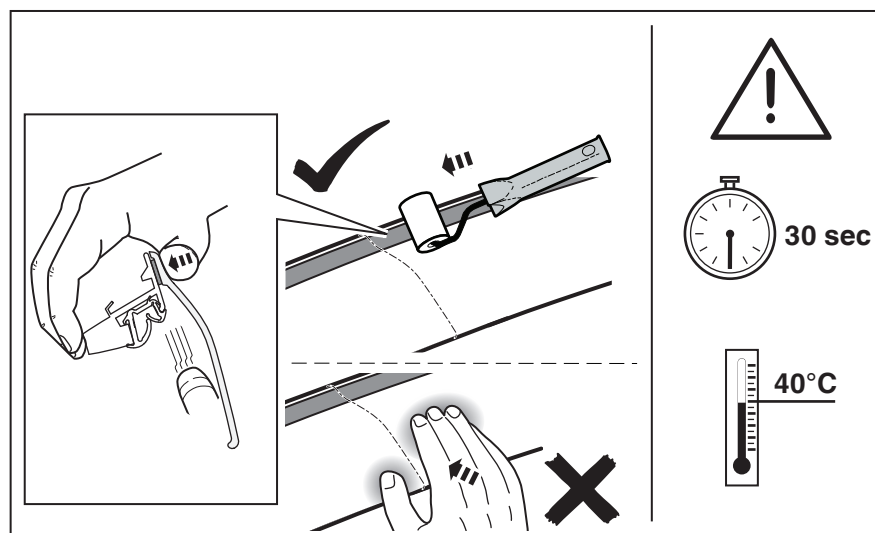


8

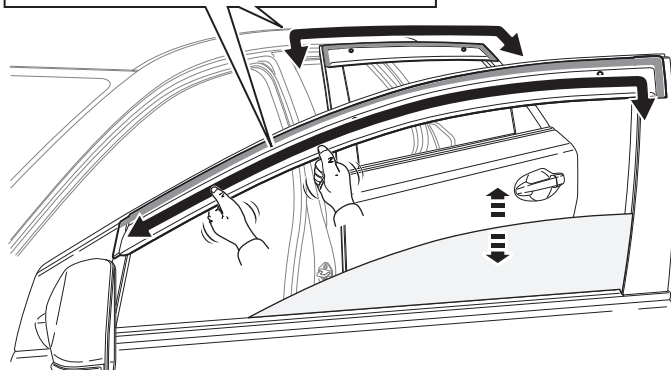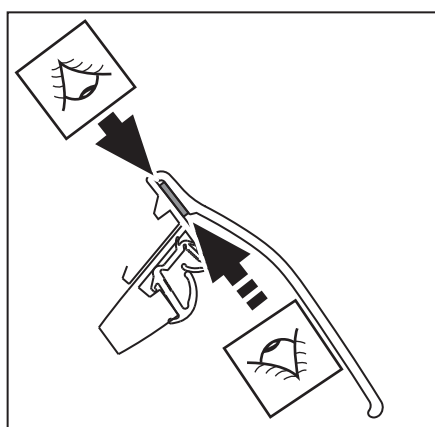

9

LHS = RHS

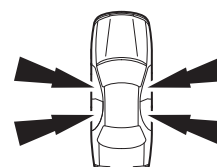

10

CHECK SHEET









TOYOTA

Model / Year **Auris Touring Sports 2015/05** Wind deflectors

VIN n°

ALWAYS A
BETTER WAY

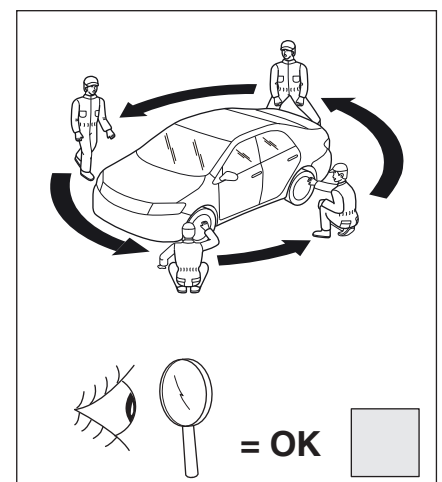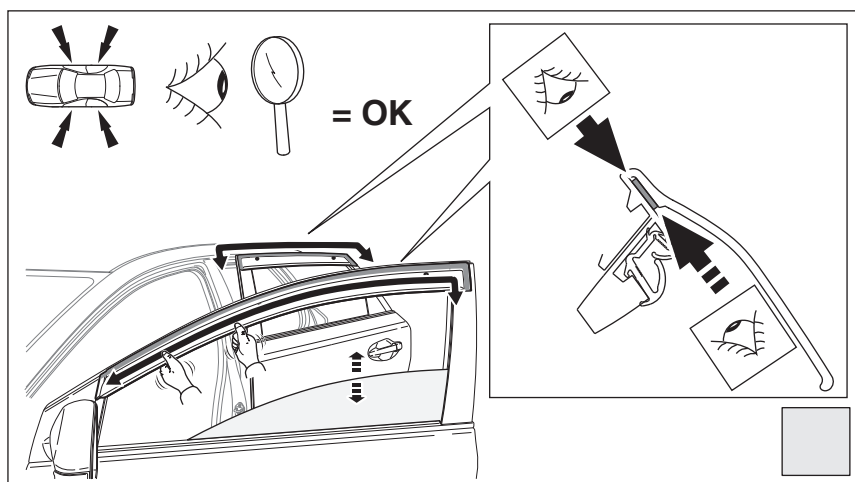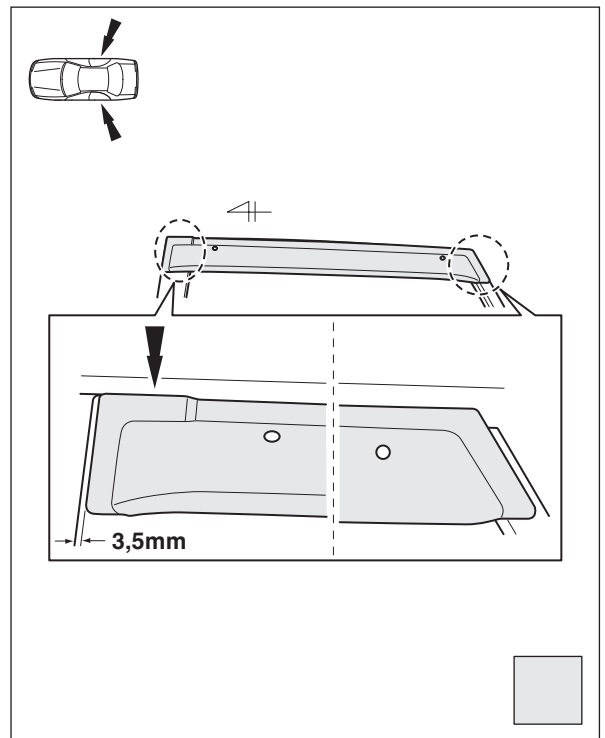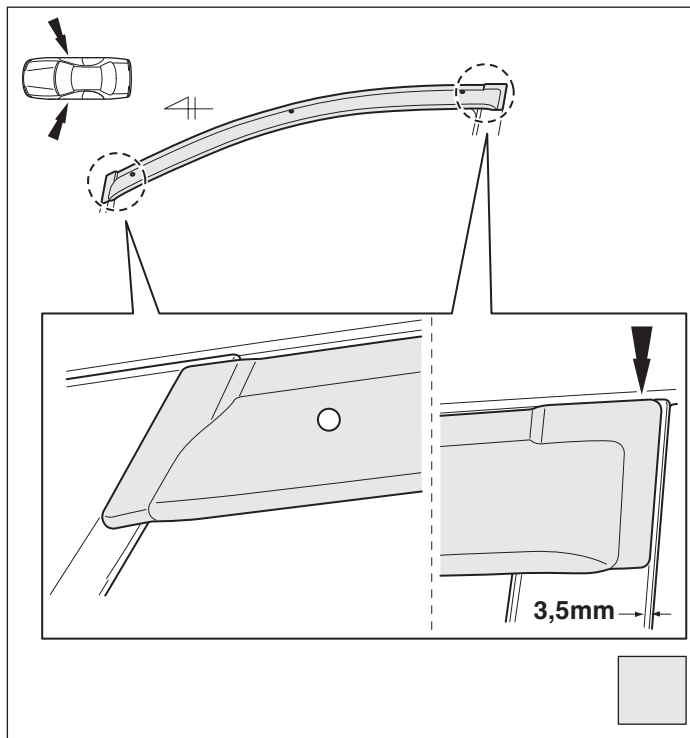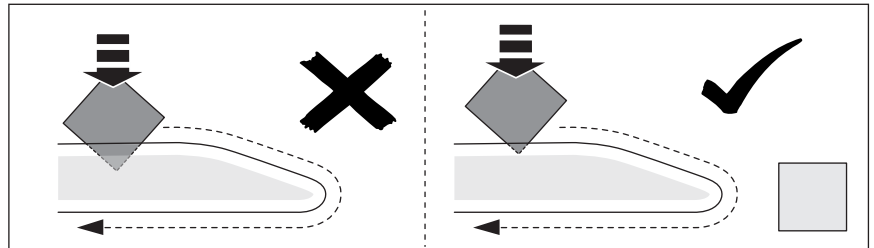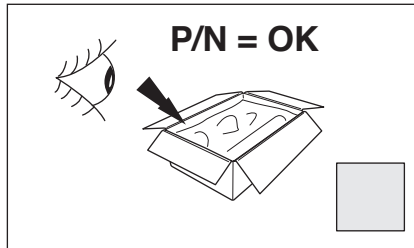

Installation Date:

... / ... / ...

Technician Name & Signature:

Stamp: