



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Wind deflectors

Installation instructions

Model year: As from 2016/10

Vehicle code: **X*0*-AH***W
ZGX*0L-AH***X
NGX*0L-AH***X

Part number:	PW162-10000	Front & rear set
	PW162-10002	Front set




Manual reference number: AIM 003 792 - 3

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	24.04.18	1		X		
Rev. No.	Date	Page	Step	Remarks		
<u>2</u>	29.05.19	1, 9	C/S	Model year added		
<u>2</u>	29.05.19	2, 3, 9	C/S	Update		
<u>3</u>	18.01.20	1, 8	C/S	Model year and Part number info updated		
<u>3</u>	18.01.20	4, 6	4, 5, 10	Check sheet reference added		
<u>3</u>	18.01.20	9	C/S	During and After Installation info added		

PW162-10000 Front & rear set


PW162-10002 Front set

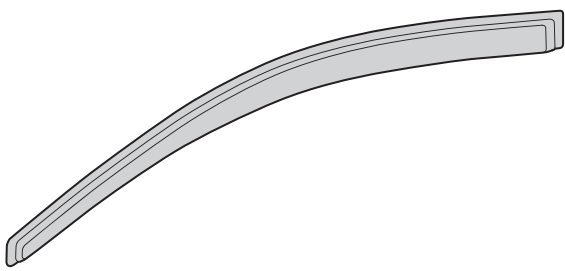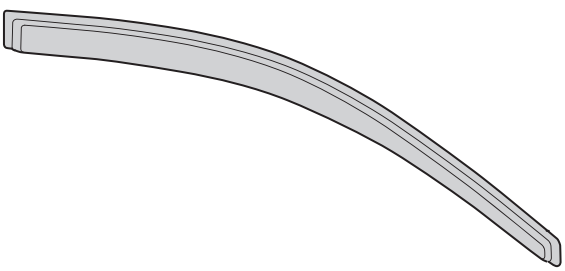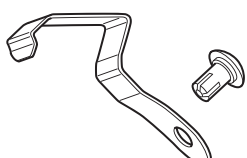 A 1x	 B 1x
 C 1x	 D 1x
 E 10x	

OVERVIEW



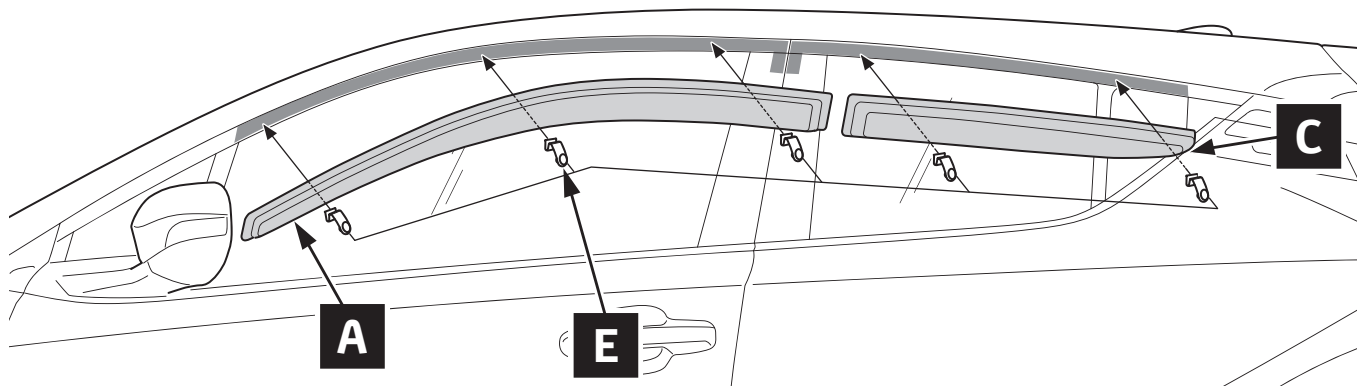




Material Safety Data Sheet

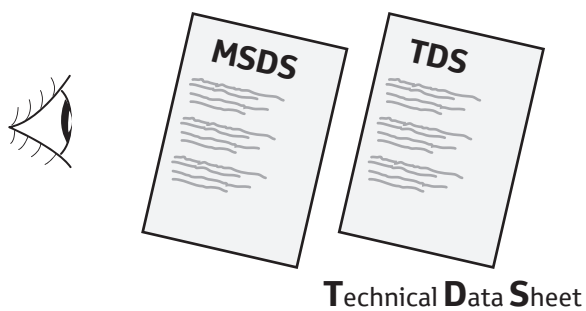




40°C

18°C

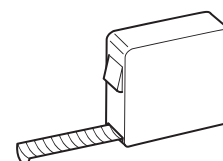
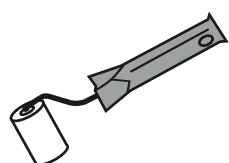
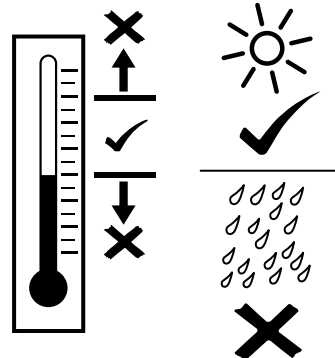


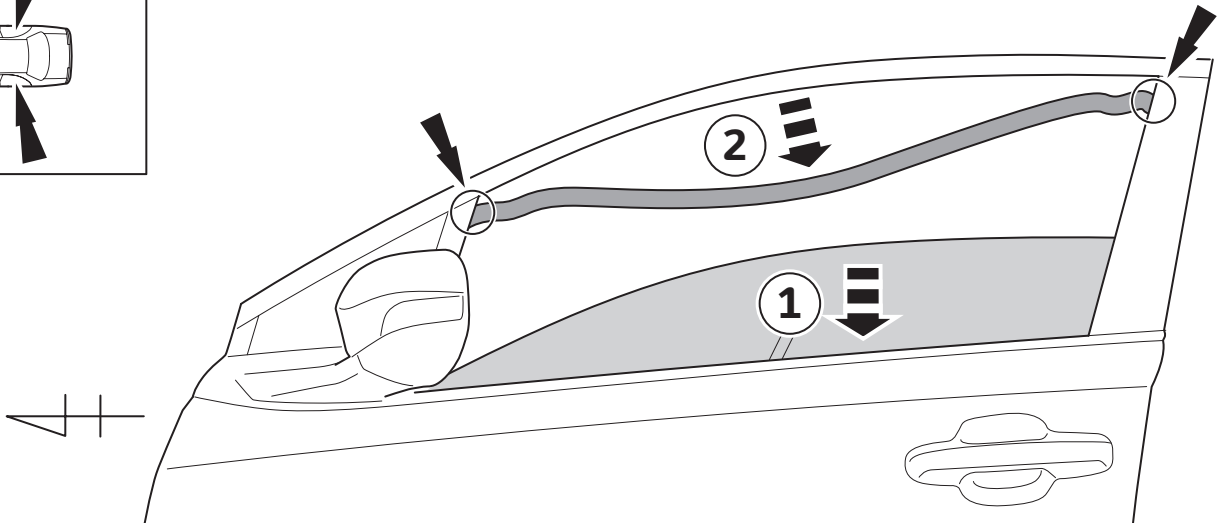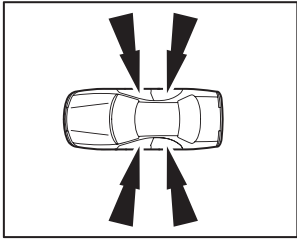

1

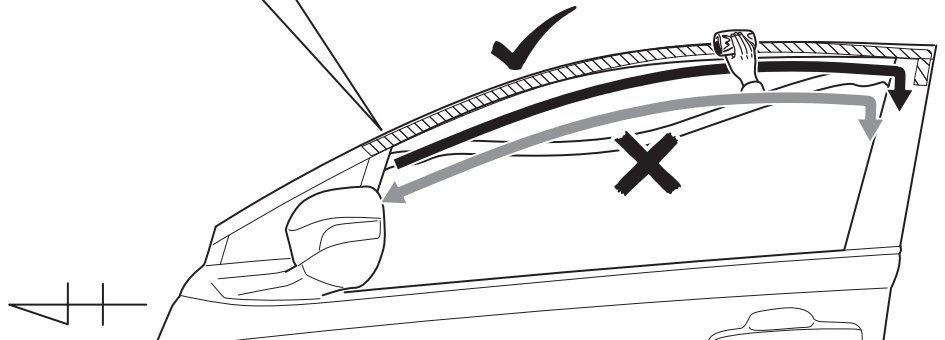
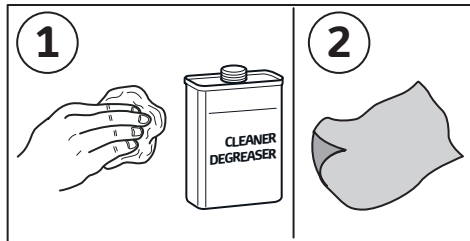
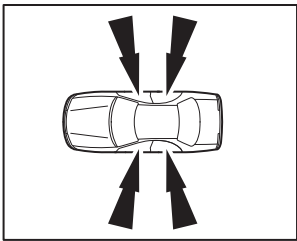


2

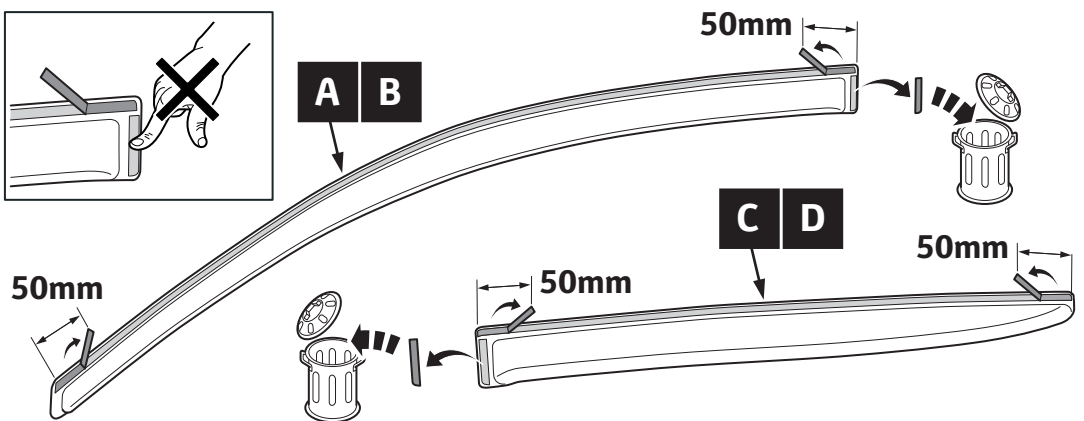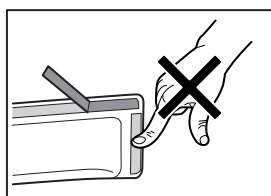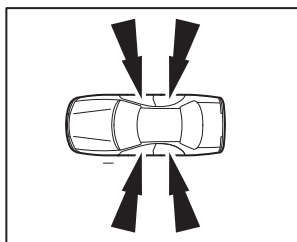


3

3

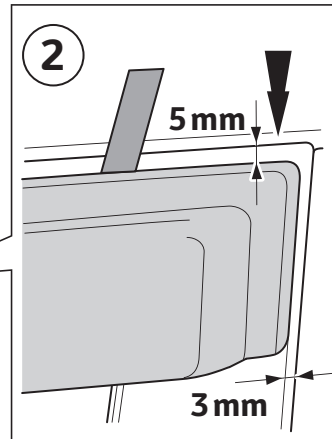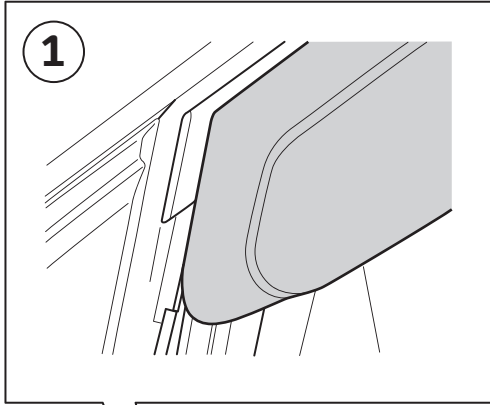
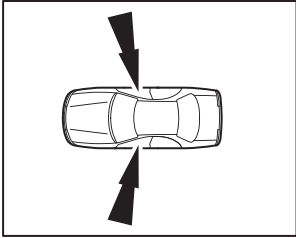


A



4

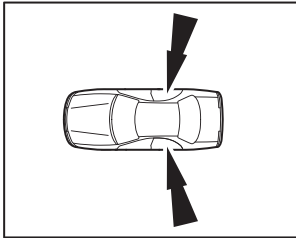




3

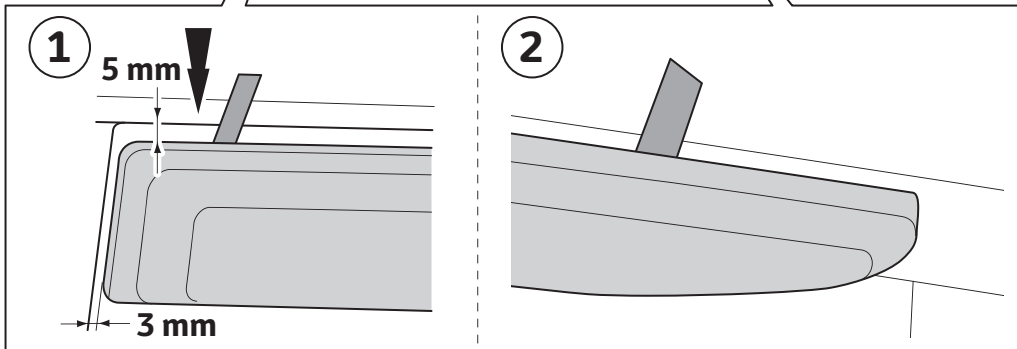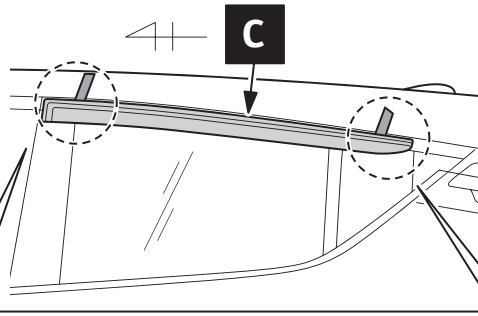

5

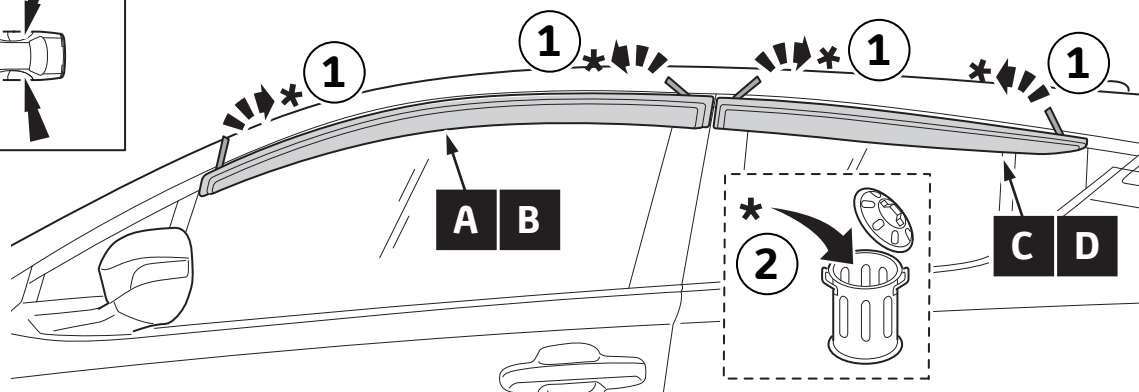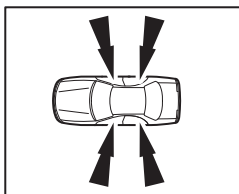


6

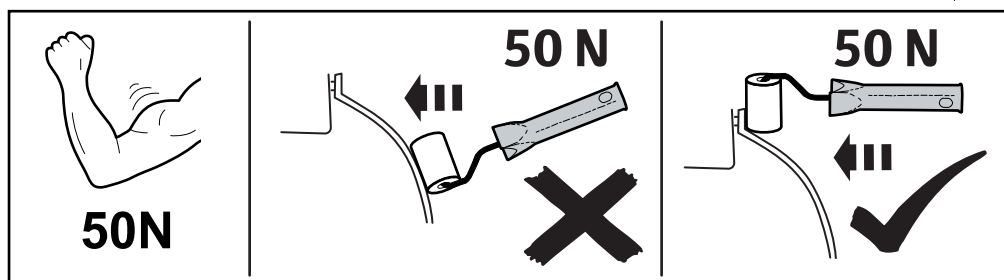
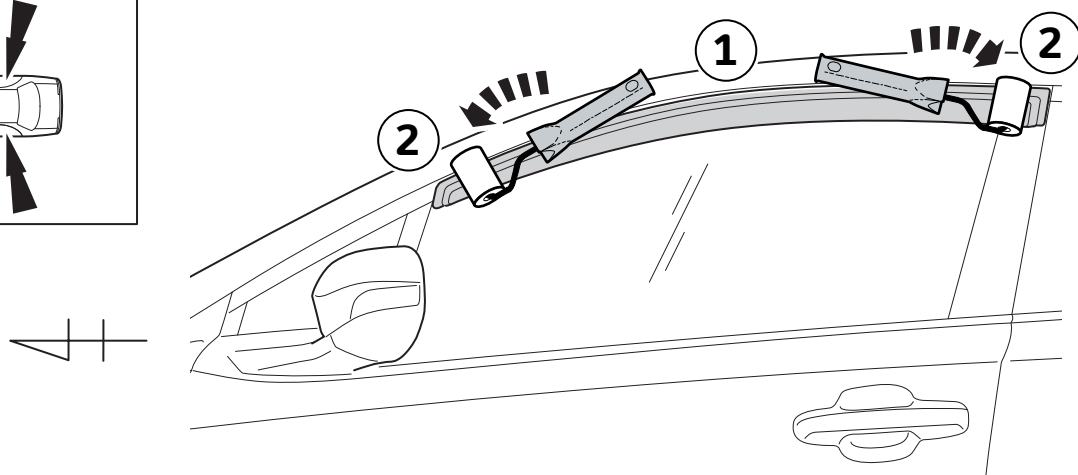
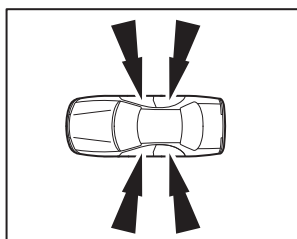


7



4 h




8

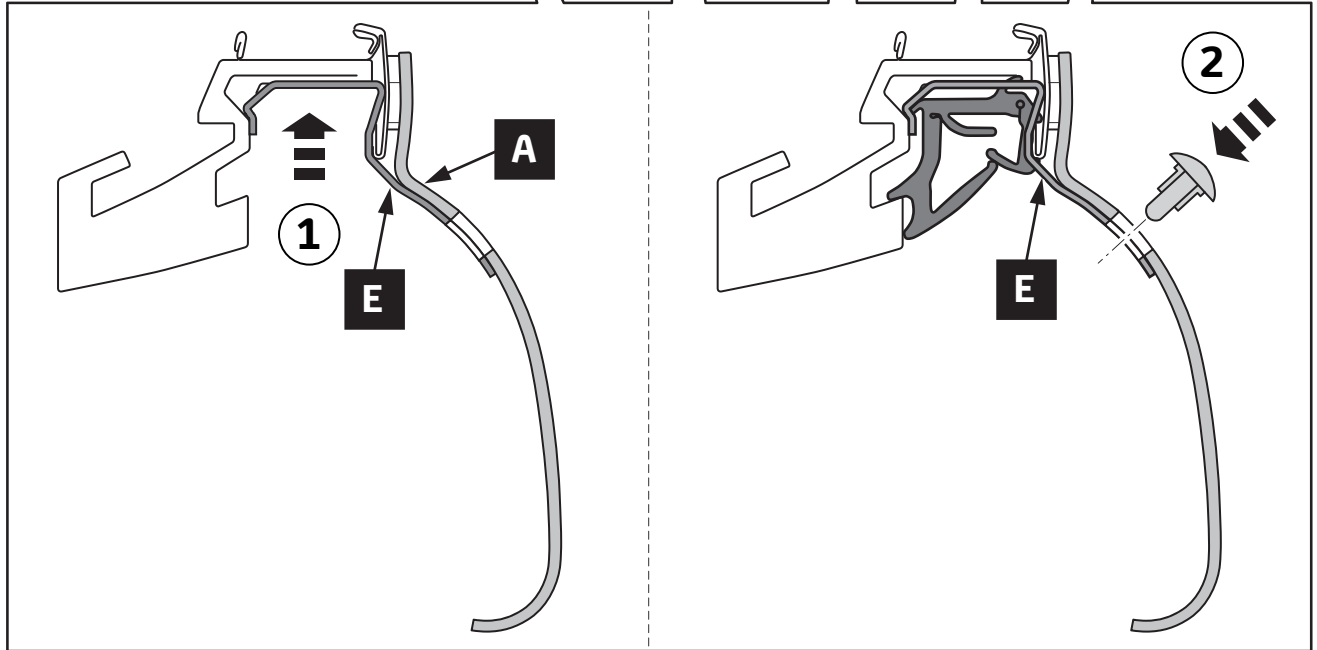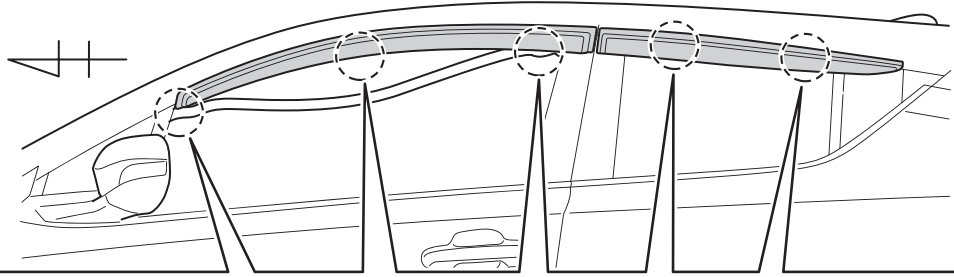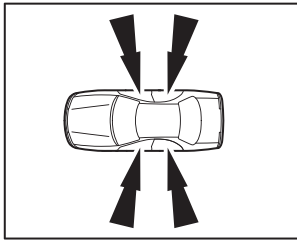




9

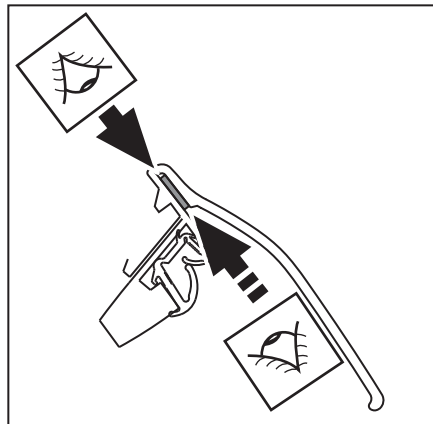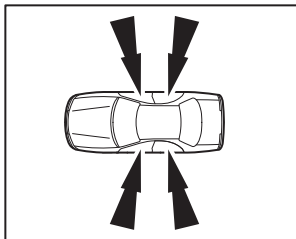



3

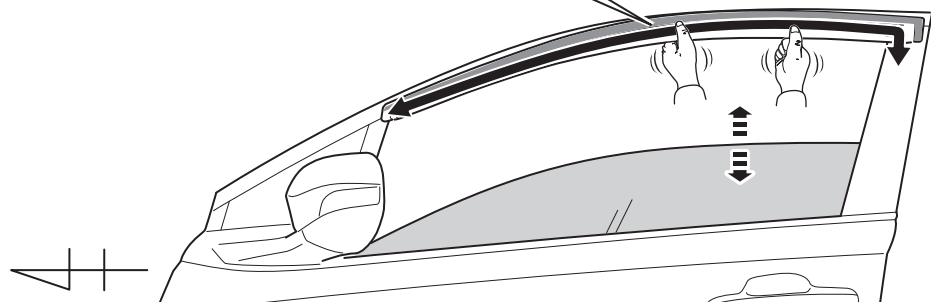

10

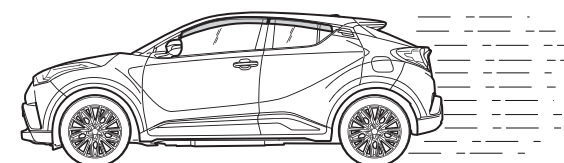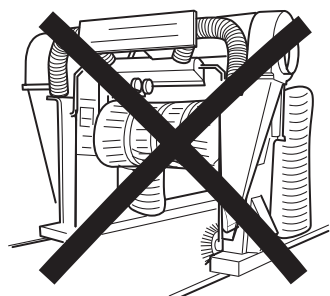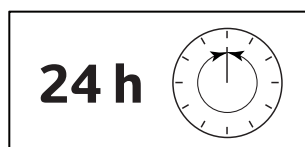

Max. 90 Km/h

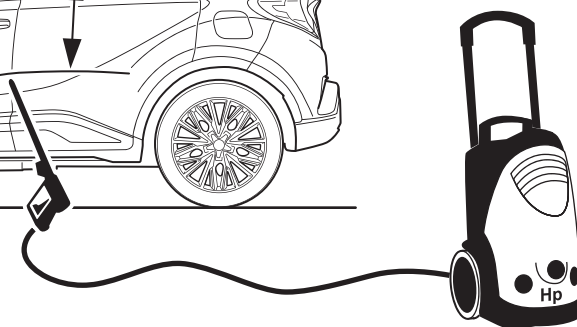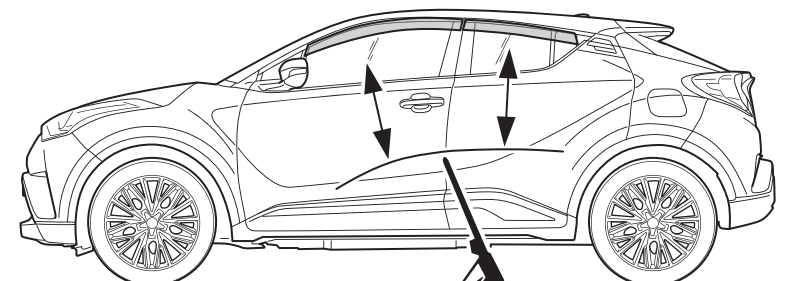

> 1 meter

CHECK SHEET Page 1 of 1



TOYOTA

Model / Year





Toyota C-HR
As from 2016/10

Wind deflectors



VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

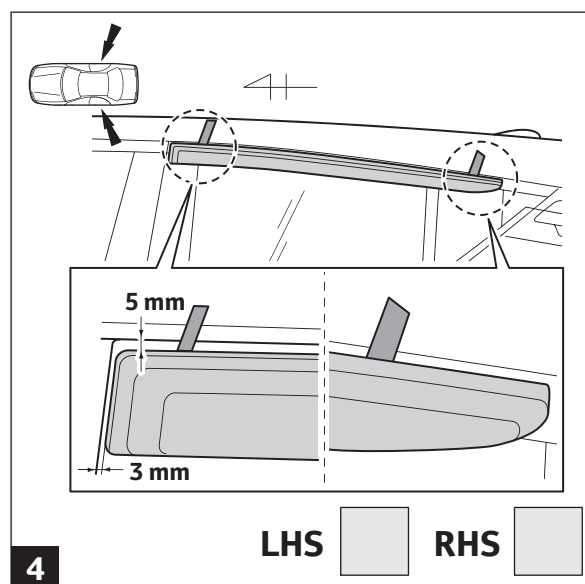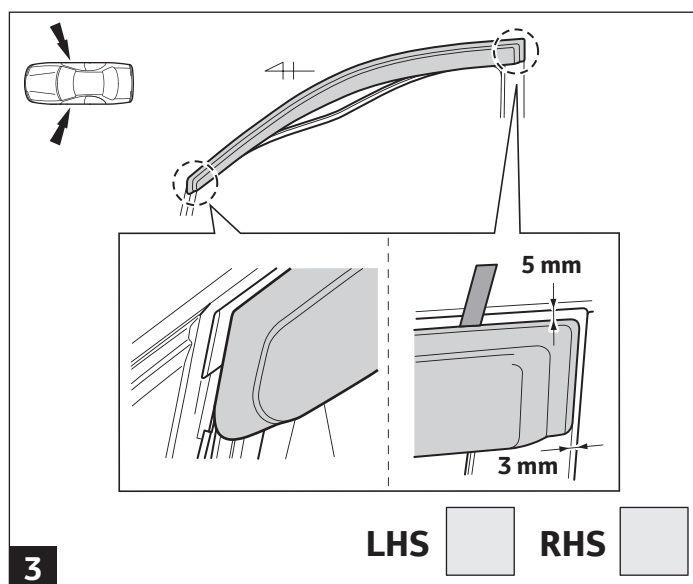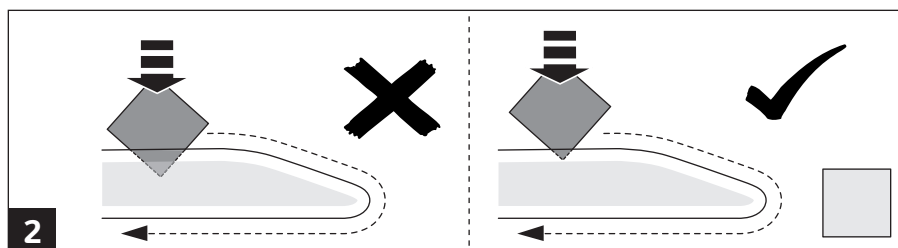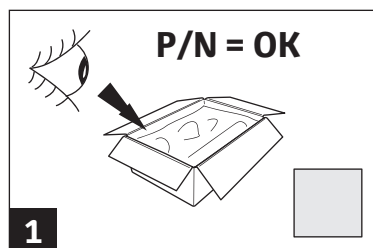

AFTER INSTALLATION

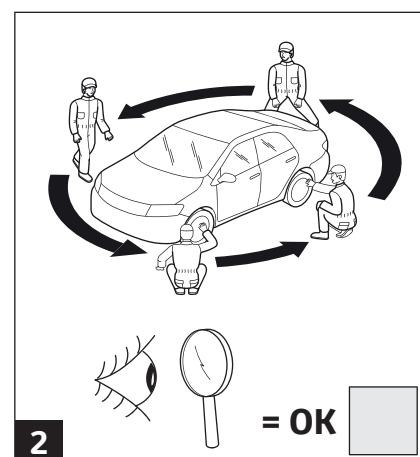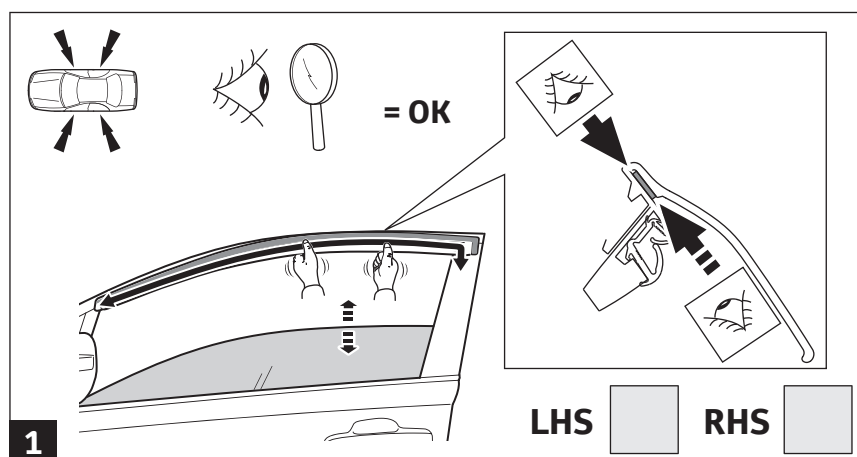

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: