



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Scuff Plates

Installation Instructions

Model year: 2016/10, 2019/10




Vehicle code: **X***-AH****


Part number: PW382-10000 Full Set
PW382-10001 Front Set

Manual reference number: AIM 004 114-3

Revision record


Rev. No.	Date	Page	Step	Remarks
1	30-04-18	1, 4, 8	4, 5, 14, 15	Vehicle code updated
2	09-10-18	2, 5, 9		Adhesion promoter, 6, 16
3	13-05-19	1, 11	Cover, CS	Model year added, vehicle code updated
3	13-05-19	1, 3	2	Part Number updated, Measurement updated

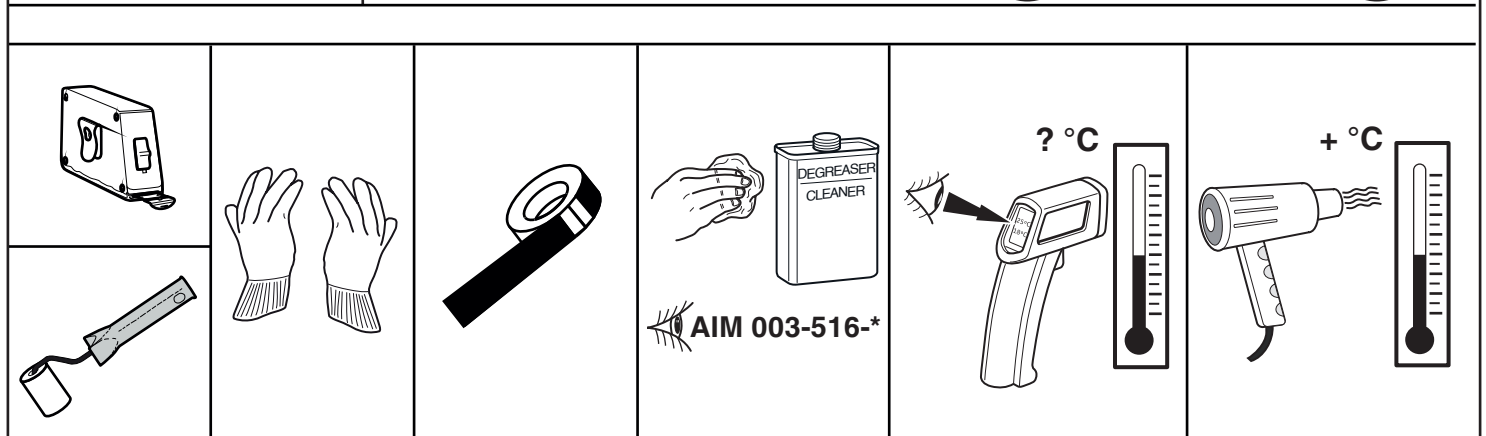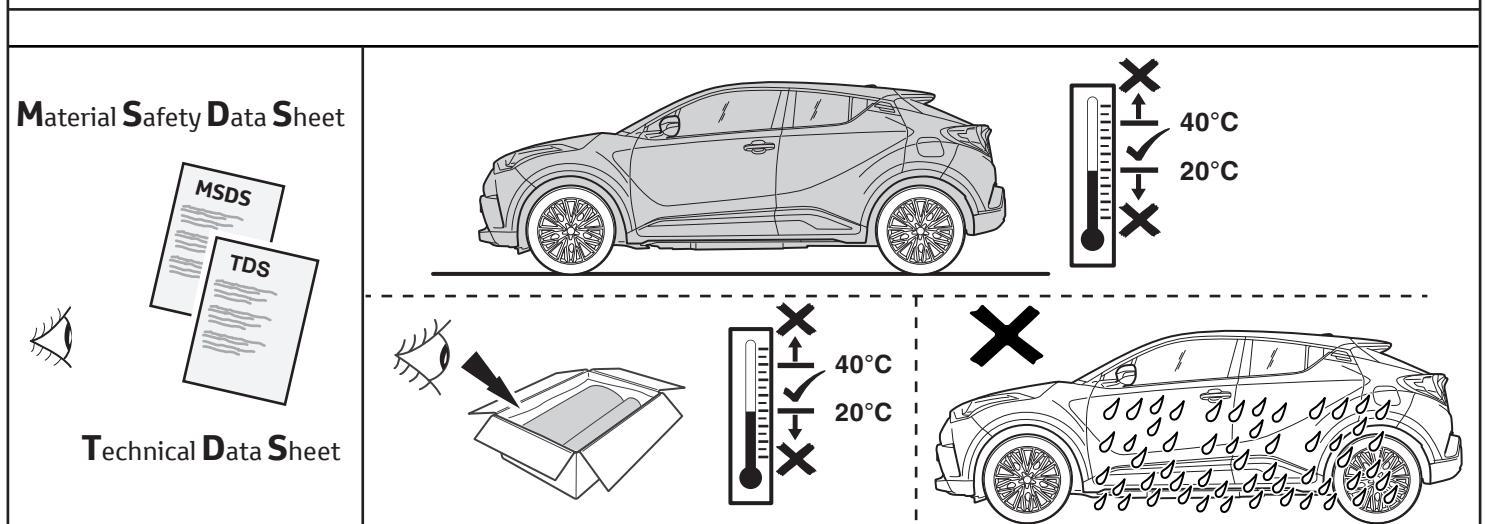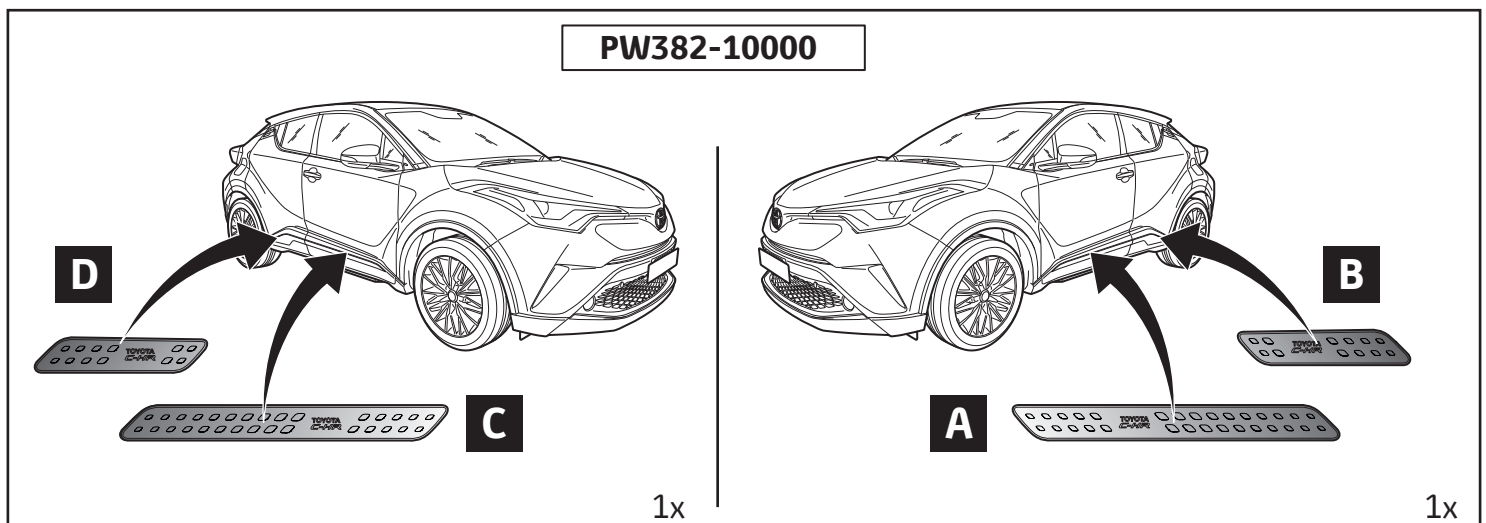

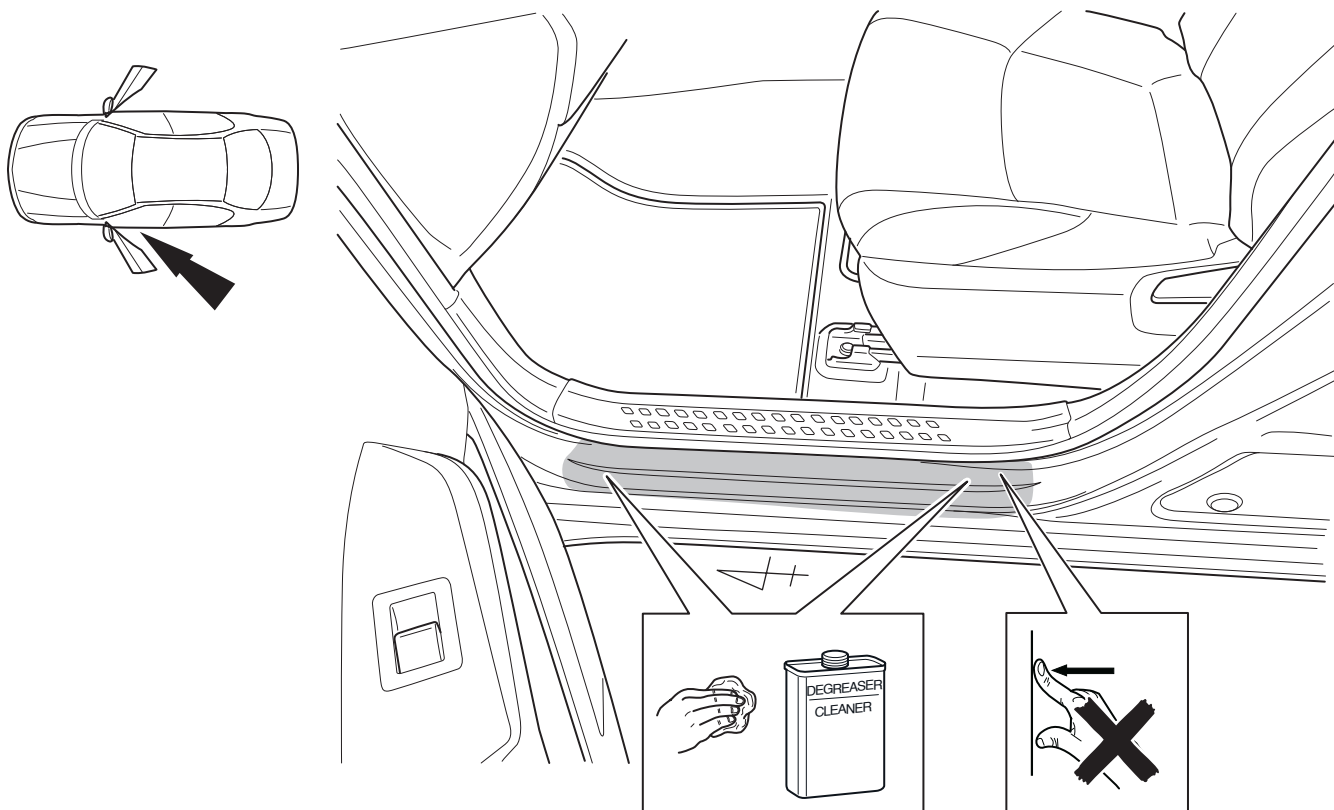


1

3

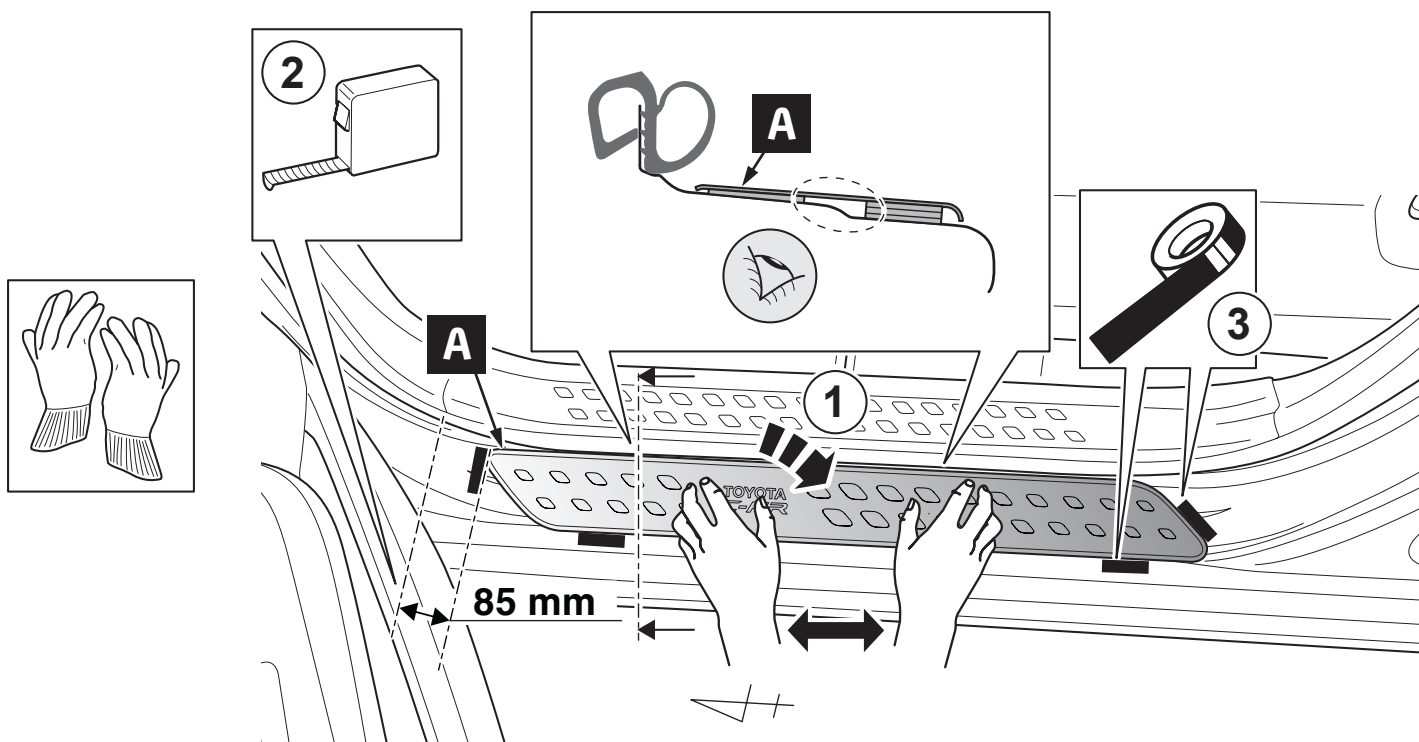


2

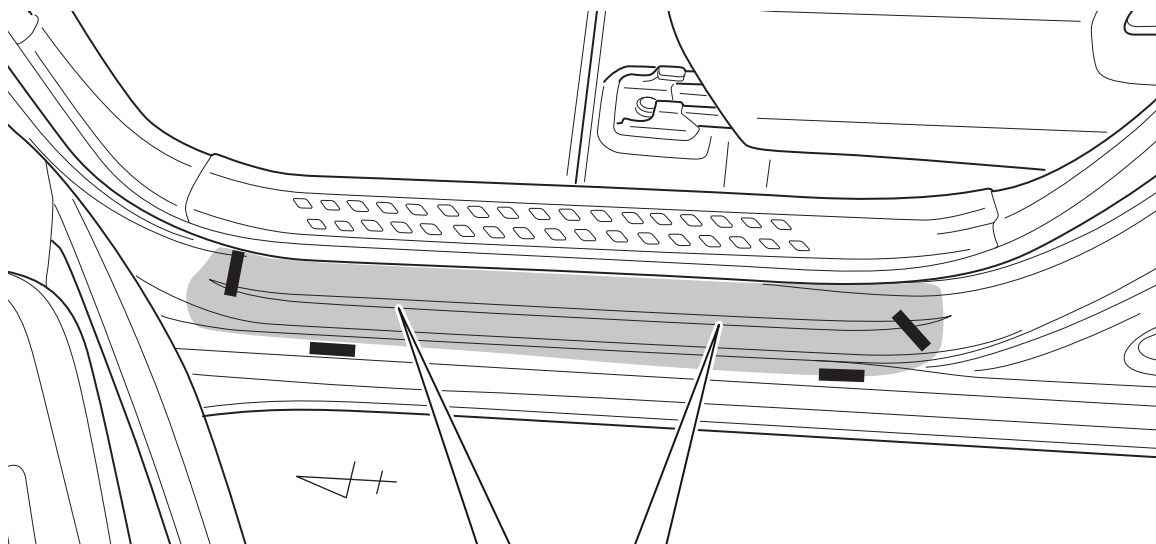


 1	< 20°C ➔ 2 20°C - 40°C ➔ 4	 2
 3	20°C - 40°C ➔ 4	INFO 3 ➔ 6

3

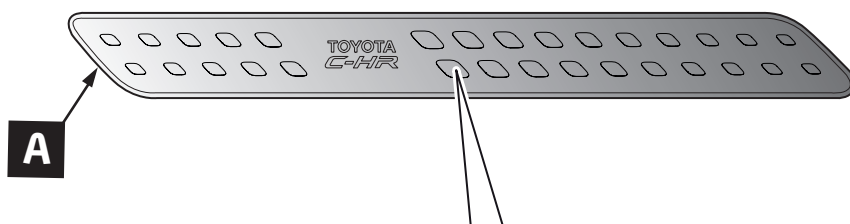


 1	< 20°C ➔ 2 20°C - 40°C ➔ 5	 2
 3	20°C - 40°C ➔ 5	INFO 4 ➔ 6


4

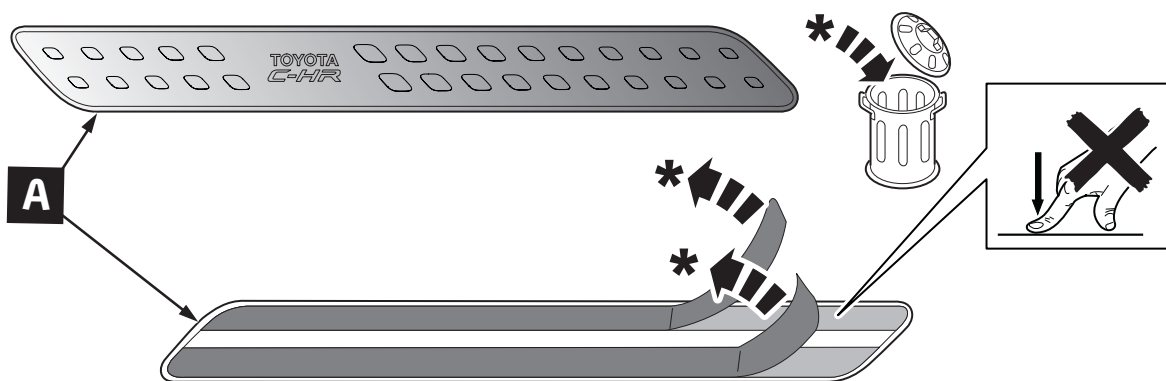


5

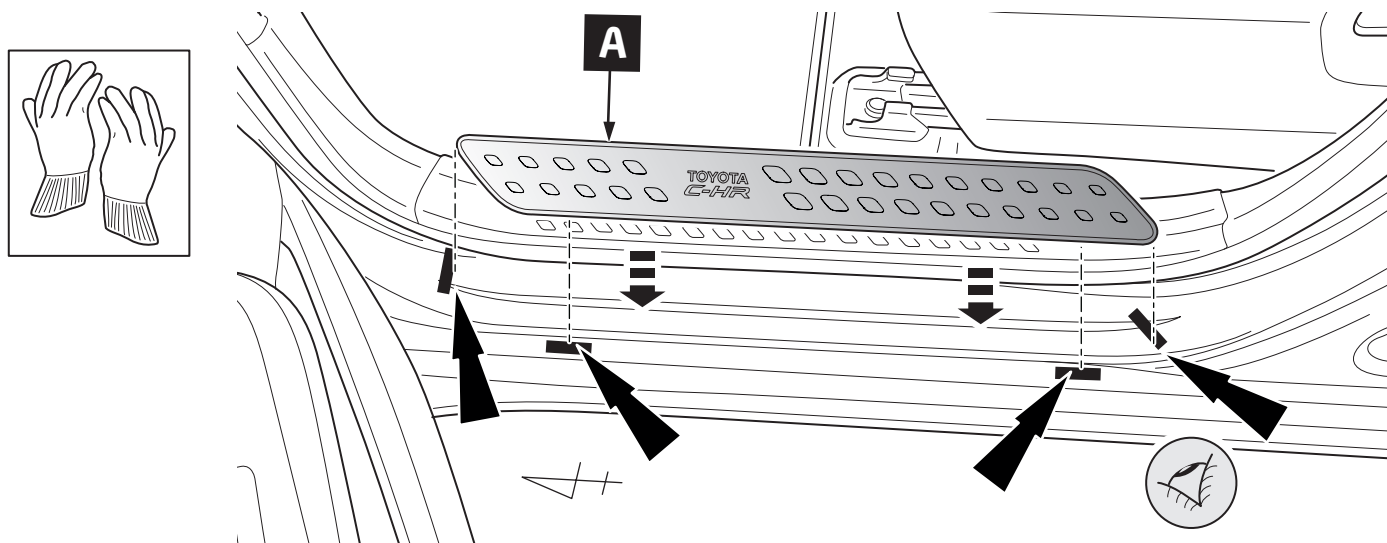


6

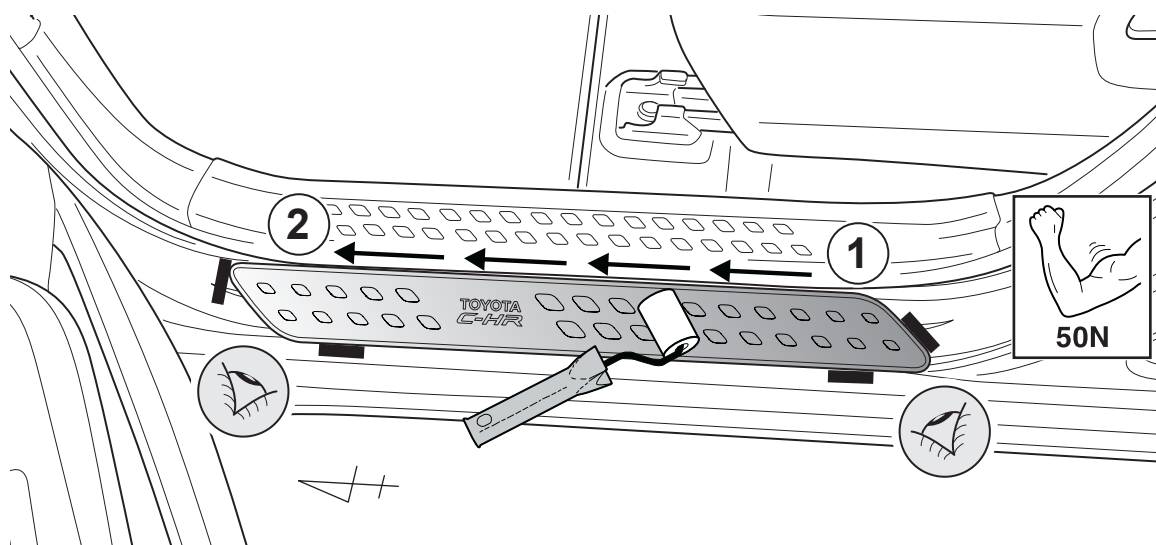



7

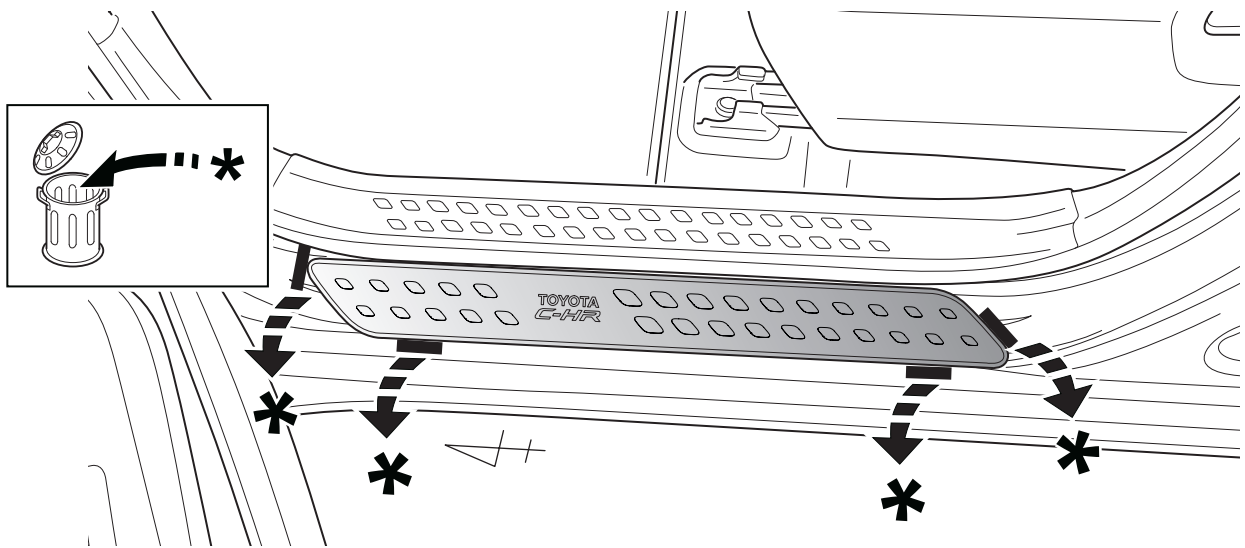





8

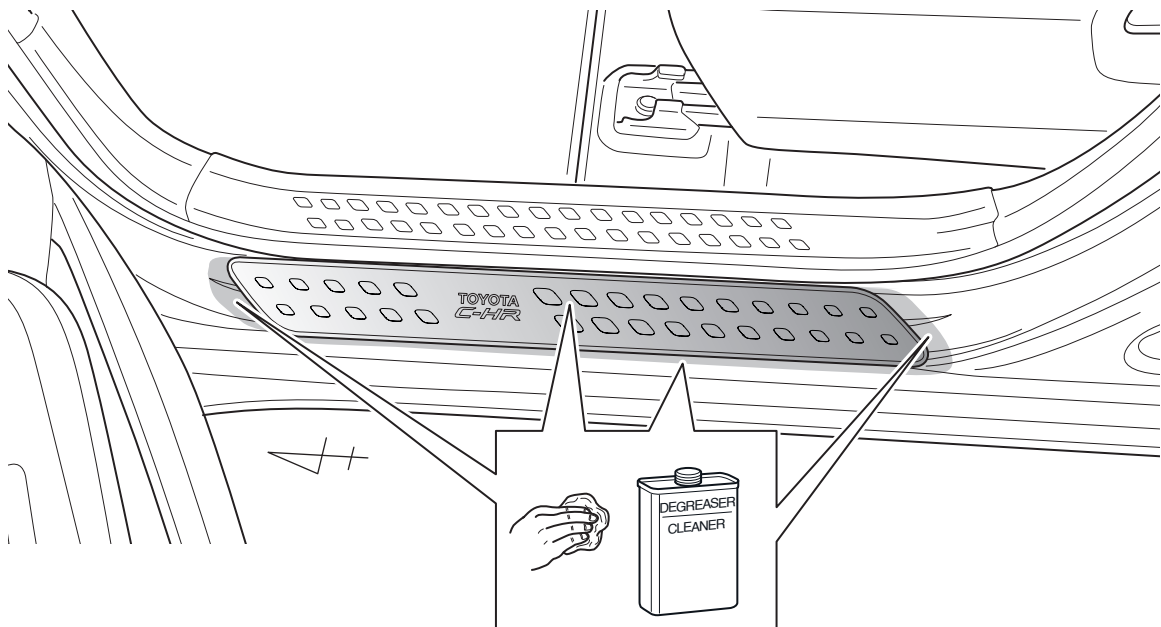


9

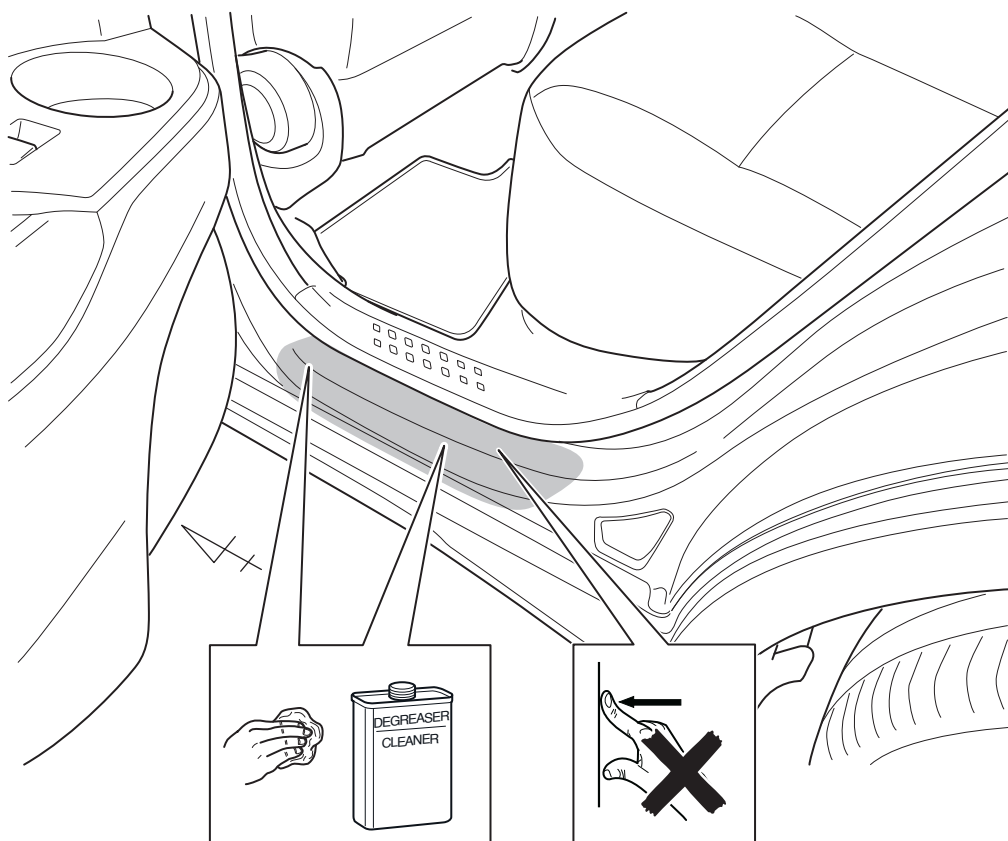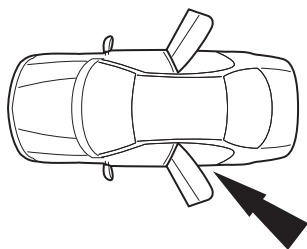

10

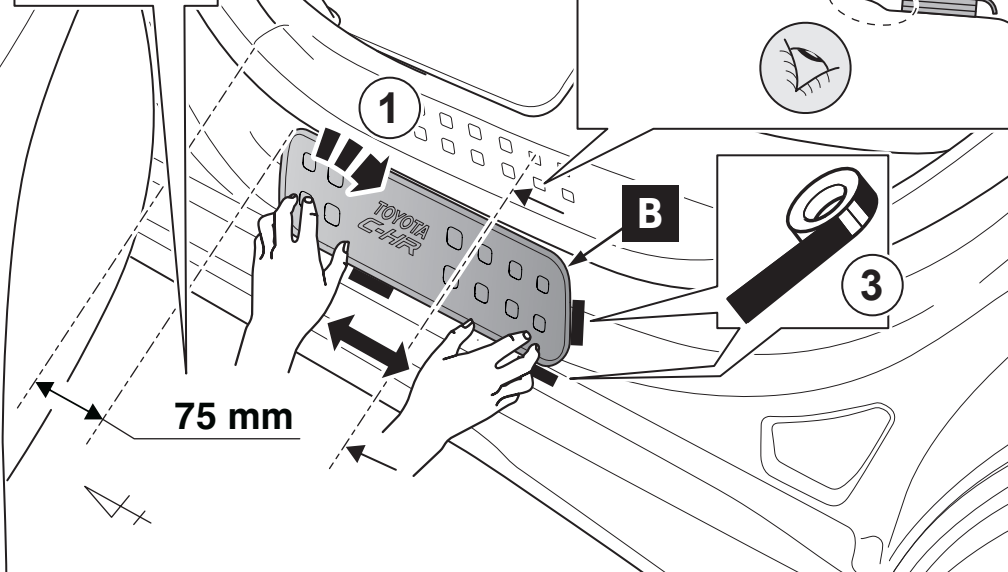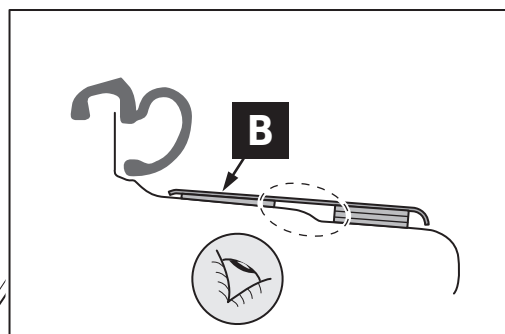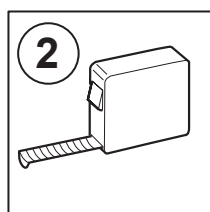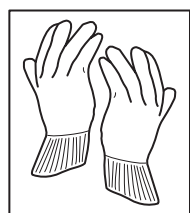


11

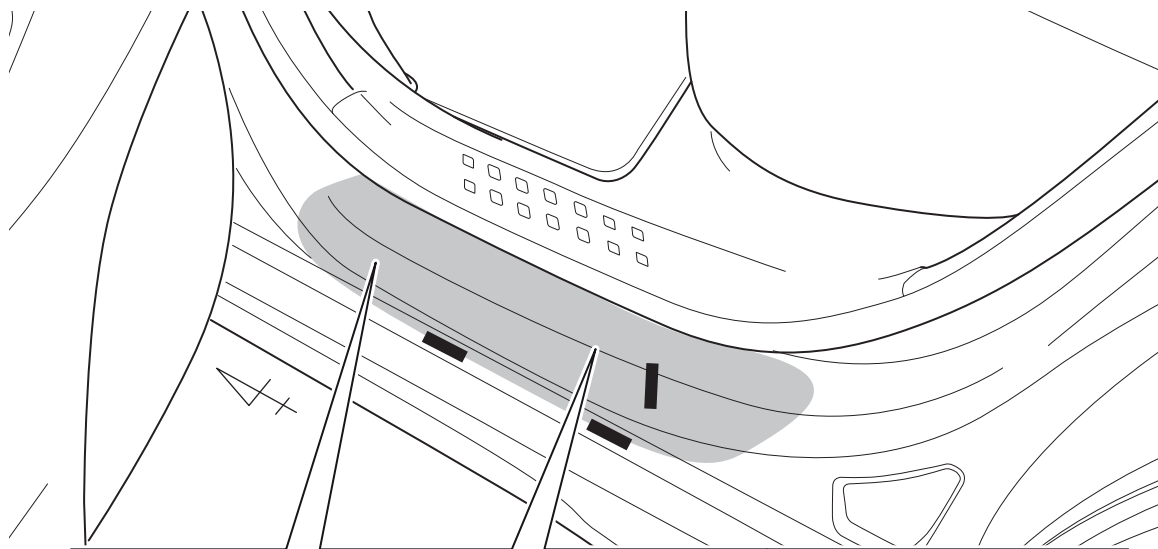


①	< 20°C ➔ ② 20°C - 40°C ➔ 13	②
③	20°C - 40°C ➔ 13	INFO 12 ➔ 15

12

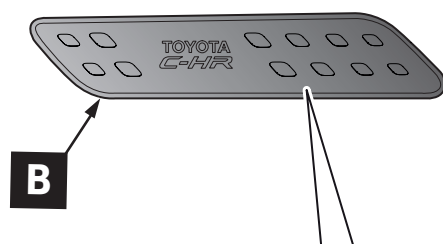


①	< 20°C ➔ ② 20°C - 40°C ➔ 14	②
③	20°C - 40°C ➔ 14	INFO 13 ➔ 15


13

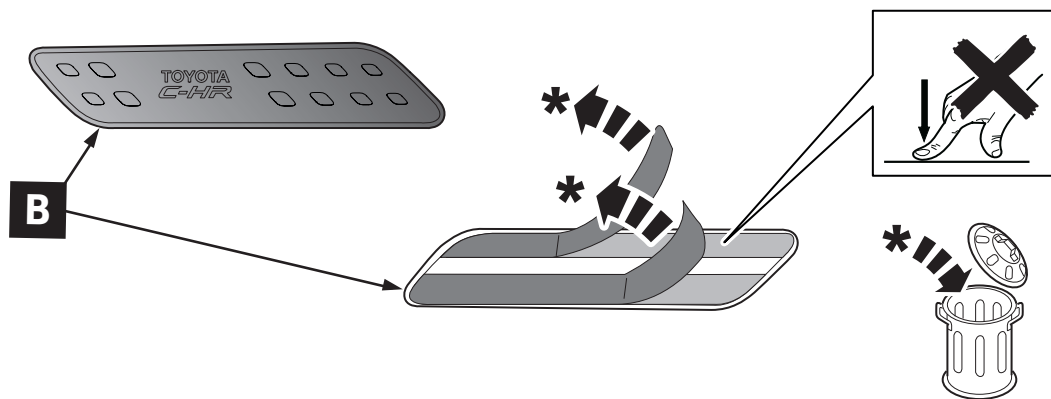



14

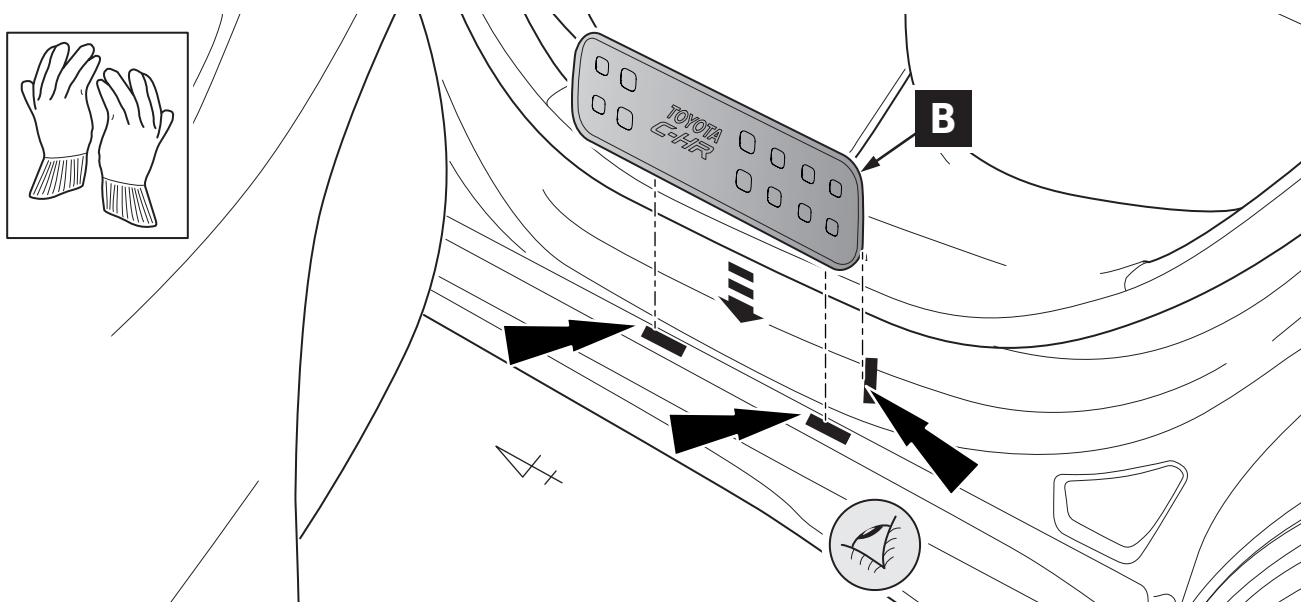


15

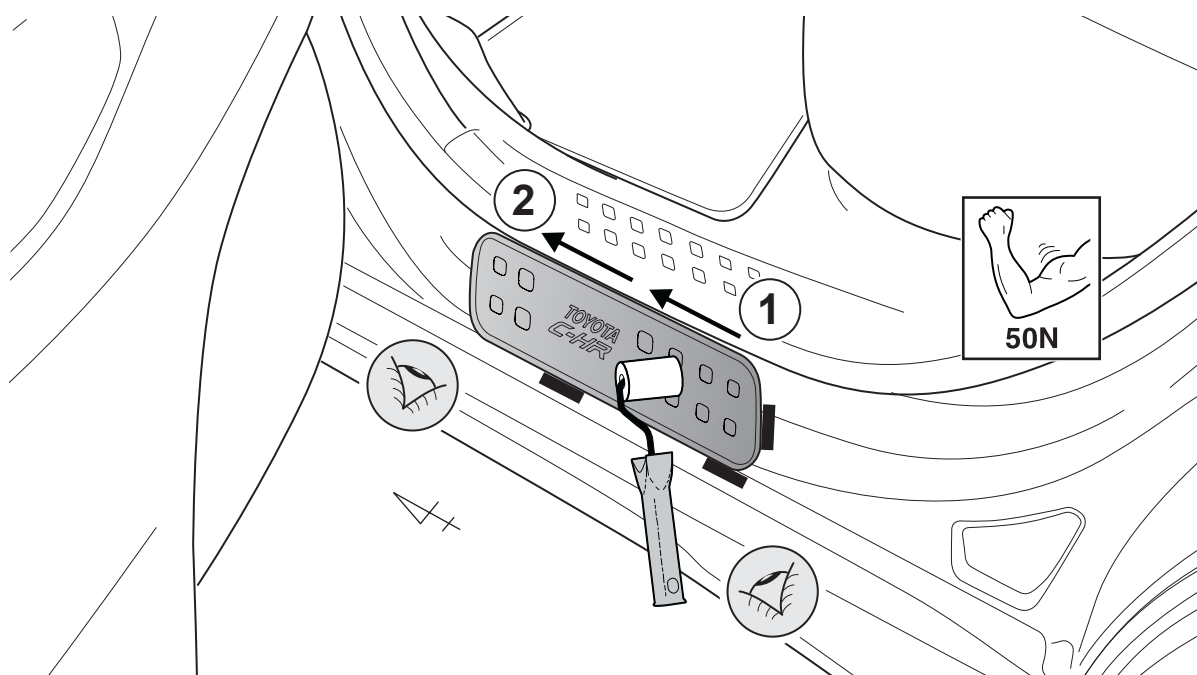



16

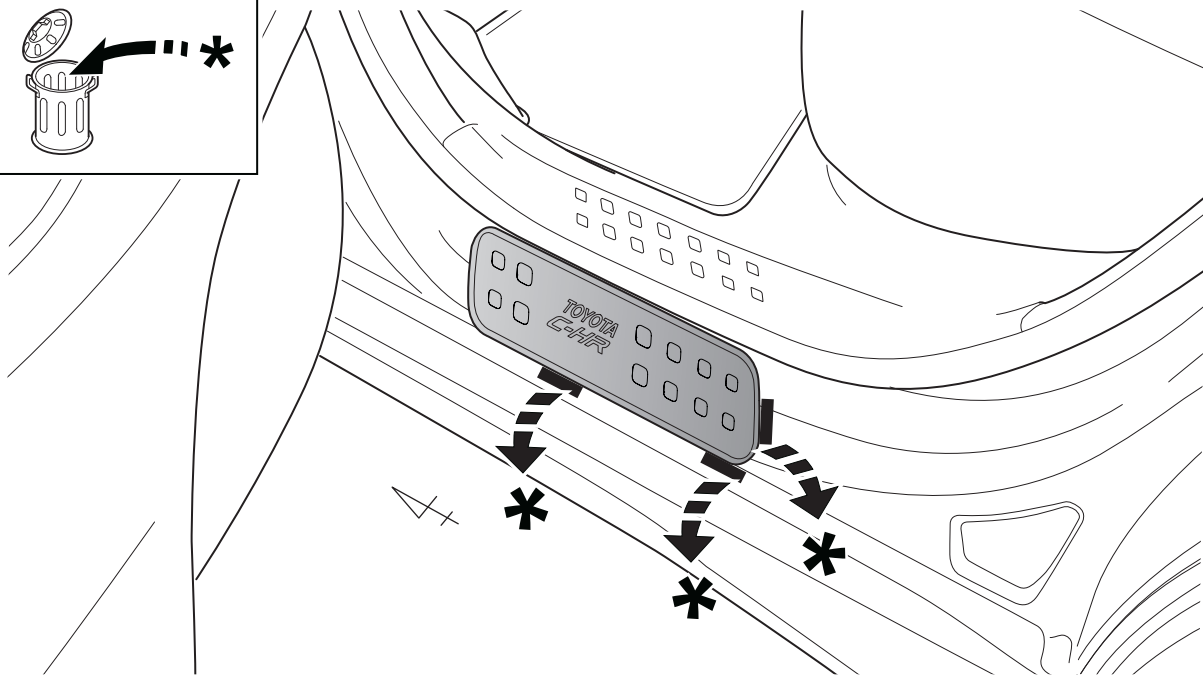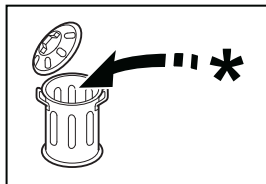

17

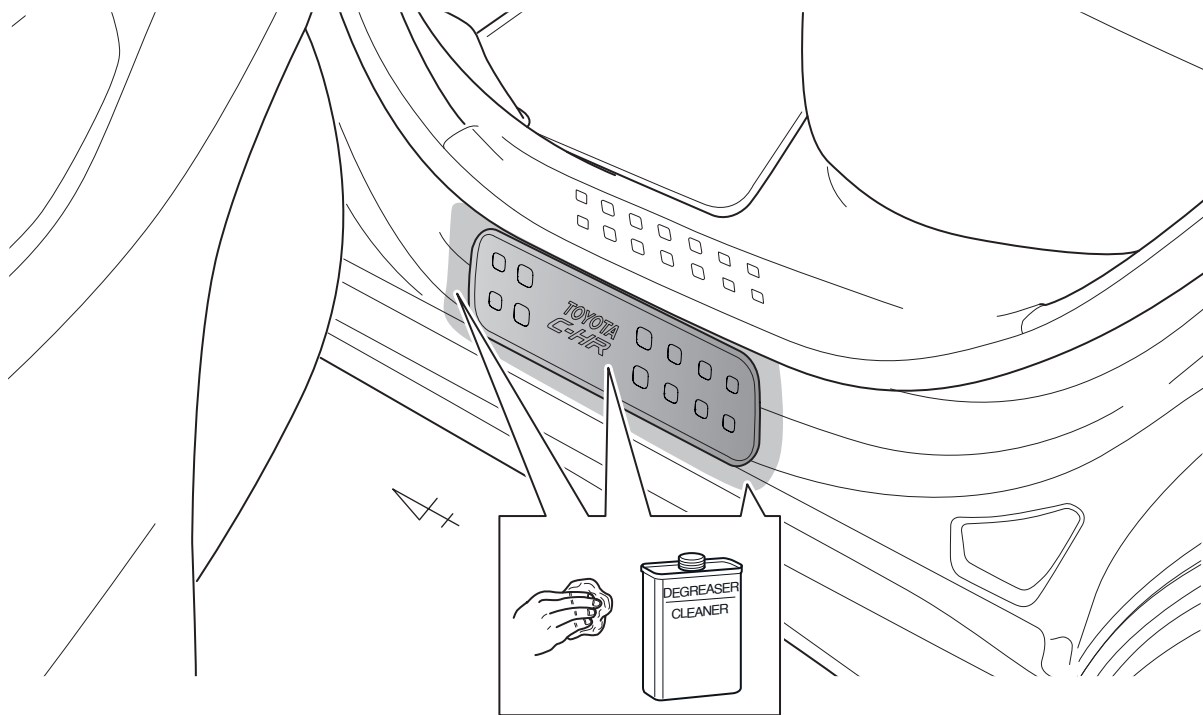

18

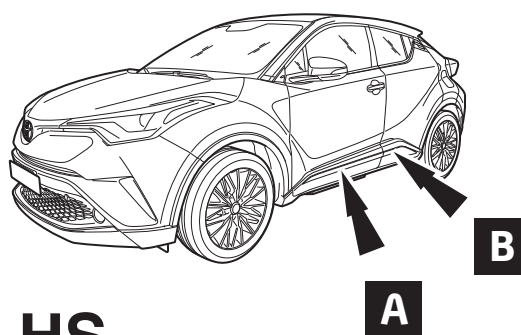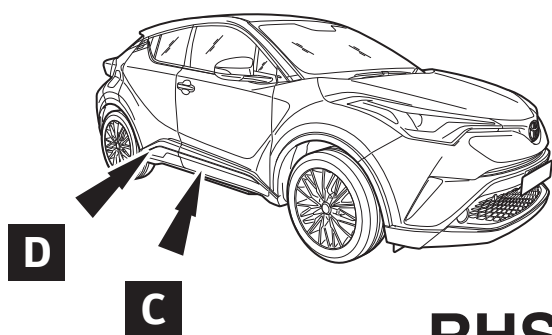

RHS = LHS

19

CHECK SHEET

Page 1 of 1



TOYOTA

ALWAYS A
BETTER WAY


Model/Year

Toyota C-HR
2016/10, 2019/10




Scuff Plates

VIN n°

DURING INSTALLATION

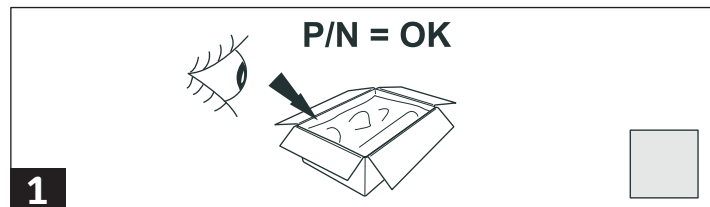

AFTER INSTALLATION

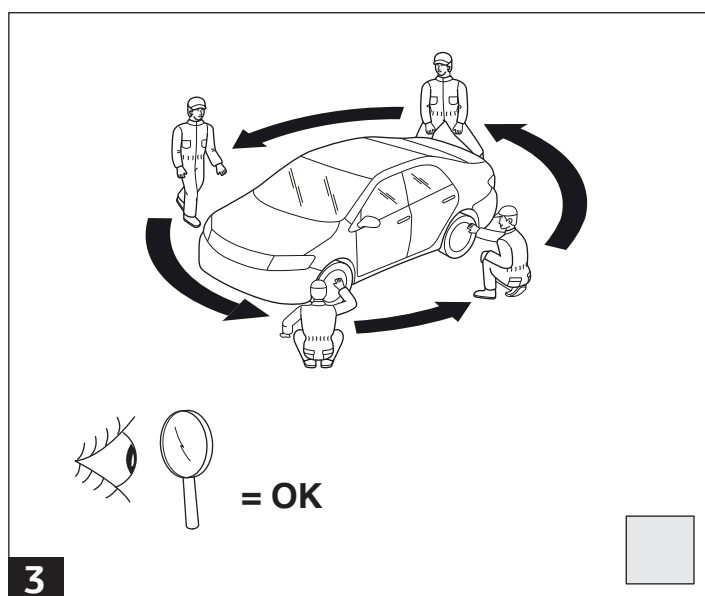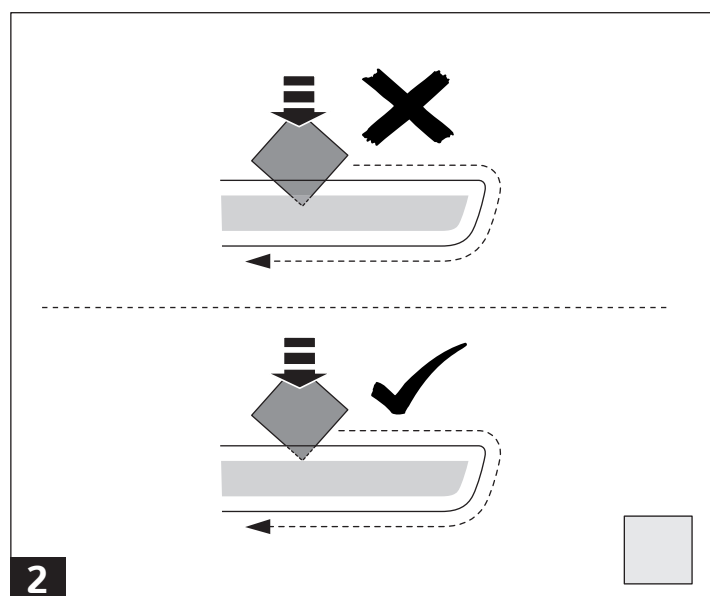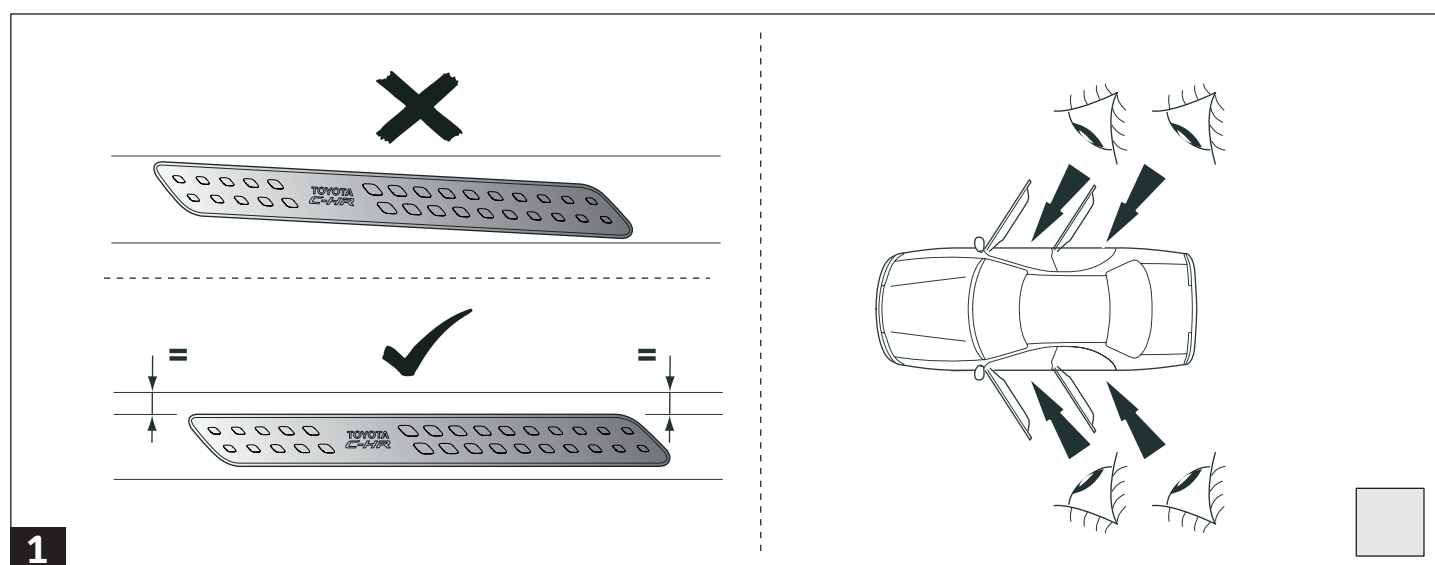

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: