



TOYOTA

ALWAYS A
BETTER WAY

Yaris

Front mudflaps

Installation Instructions

Model year: As from 2020/06

Vehicle code: **P*11*-BH***W



Part number: PW389-0D000

Manual reference number: AIM 004 614-0

Revision record

Rev. No.	Date	Page	Step	Remarks


PW389-0D000

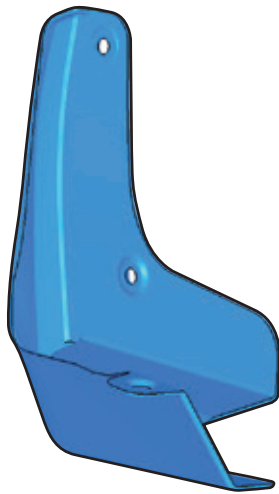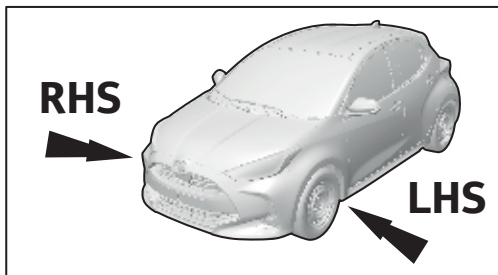

A

LHS


x1

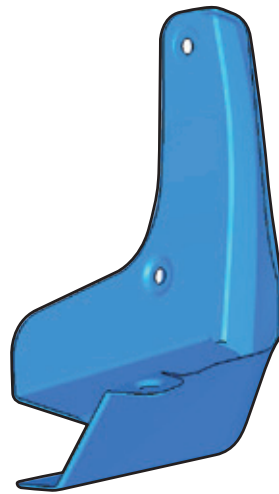

B

RHS

x1

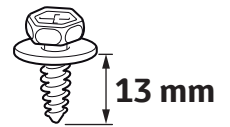


C

x2




 **AIM 003 516-***


Material Safety Data Sheet

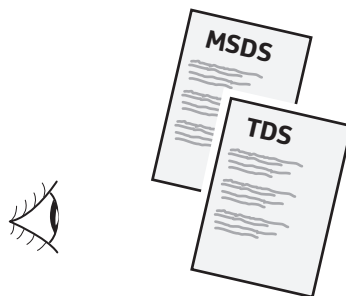


Technical Data Sheet

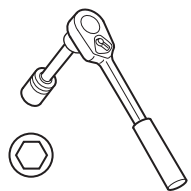


10 mm

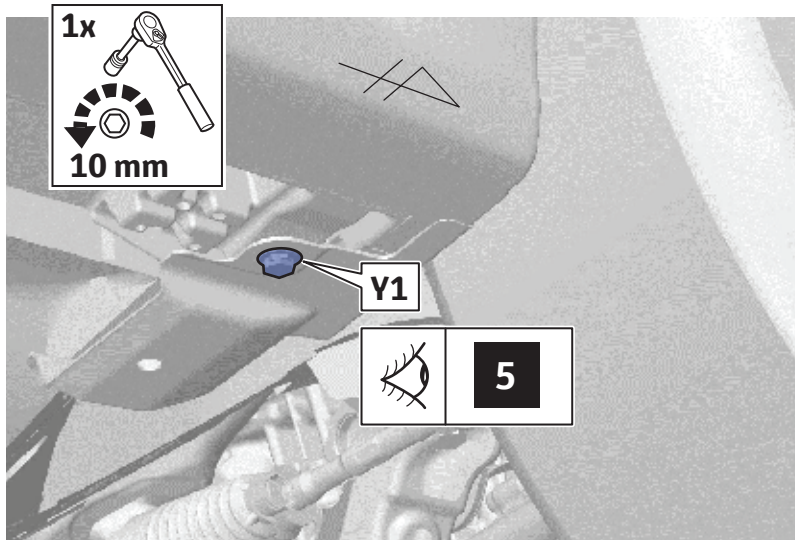


1

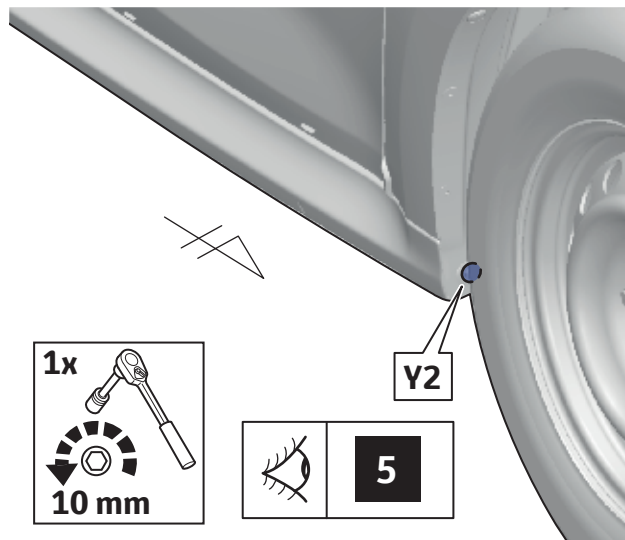


2

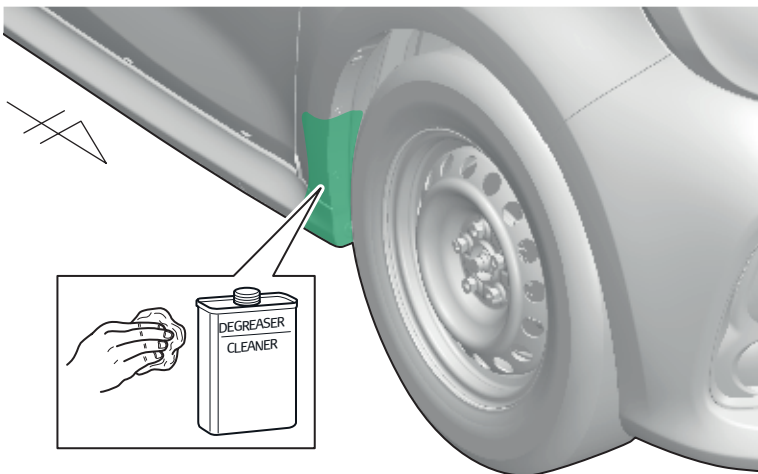


3

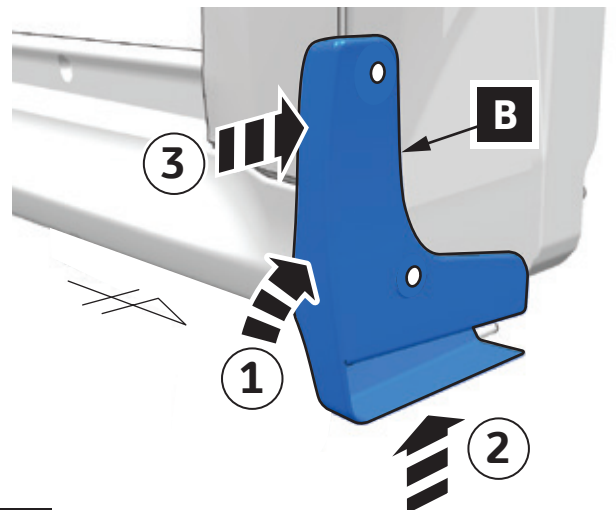

4

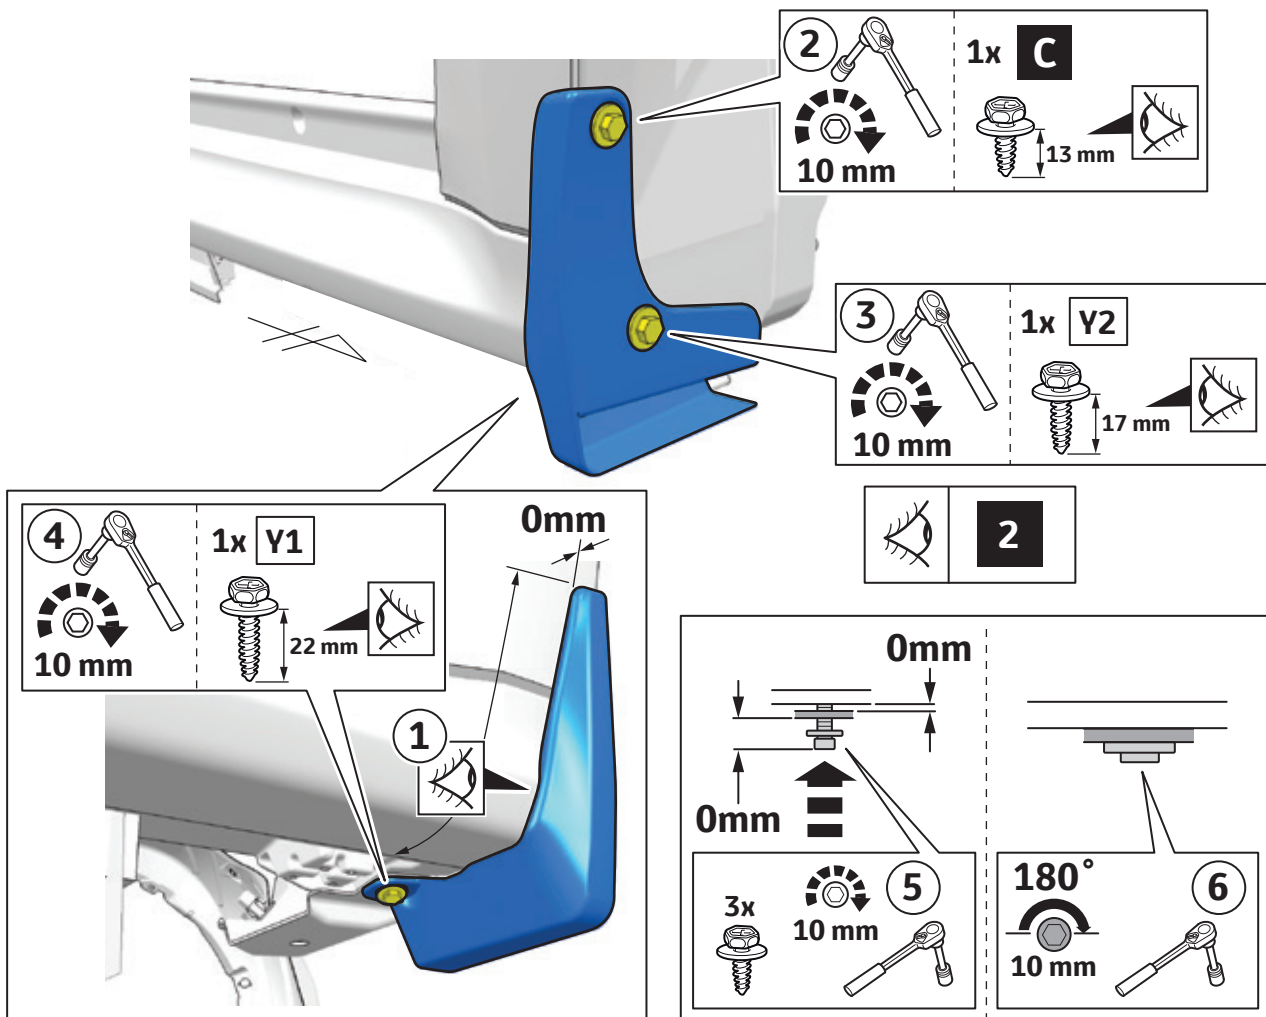

5

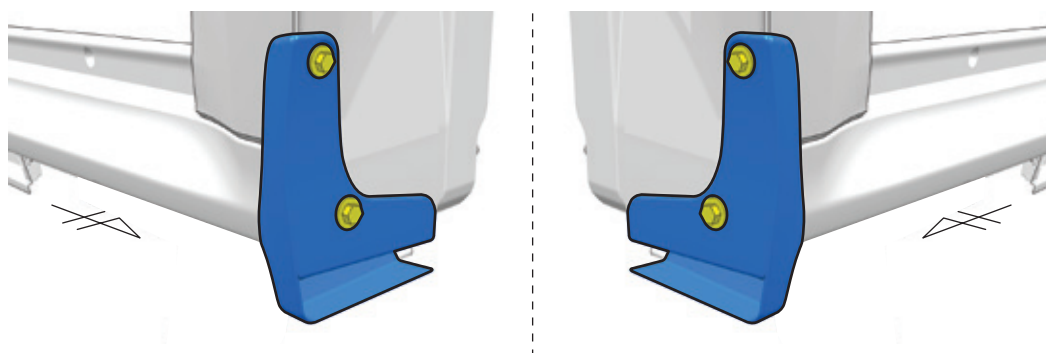

RHS = LHS



6



TOYOTA

CHECK SHEET

Page 1 of 1

Yaris

Model/Year

As from 2020/06

Front mudflaps

VIN n°

ALWAYS A BETTER WAY

DURING INSTALLATION

1

P/N = OK

2

1x C
13 mm

1x Y2
17 mm

1x Y1
22 mm

RHS

LHS

= OK

LHS RHS

AFTER INSTALLATION

1

0mm

= OK

LHS RHS

2

= OK

Installation Date:
... / ... / ...

Technician Name & Signature:

Stamp:

