



TOYOTA

ALWAYS A
BETTER WAY

Corolla

Mirror Cover Protection Film

Installation Instructions





Model year:	As from 2019/05
Vehicle code:	NRE210*-D***ZW ZWE211*-DHX*BW MZEH12*-DHX*BW
Part number:	PW169-02000

Manual reference number: AIM 006 064-0


Revision record



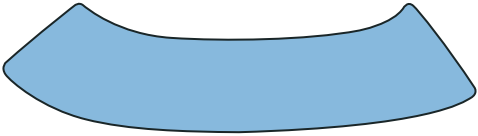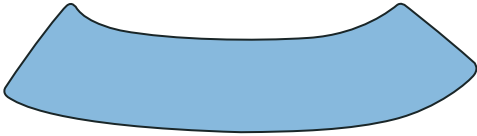





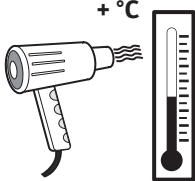
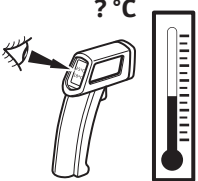
Rev. No.	Date	Page	Step	Remarks

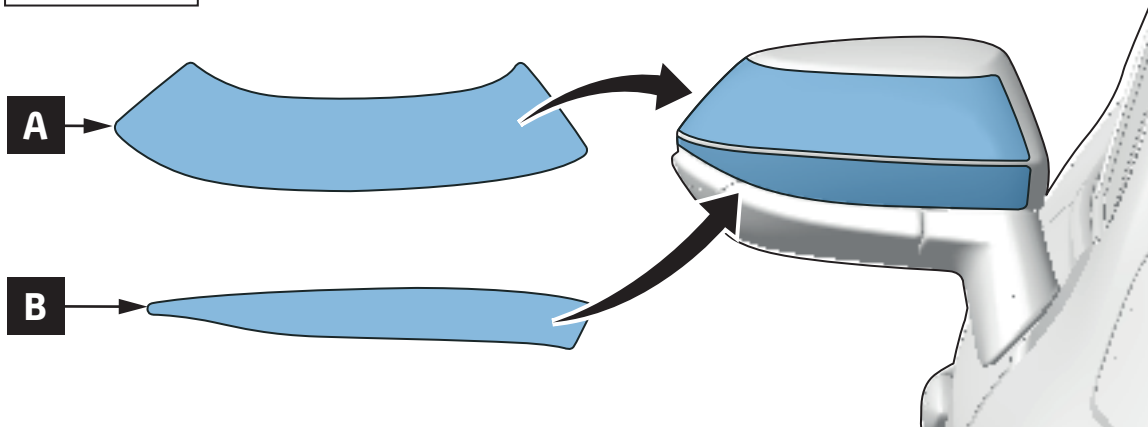PW169-02000

A	RHS 	-	LHS 	1x
B	RHS 	-	LHS 	1x

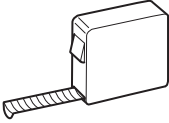LHS=RHS



  AIM 003-516-*		  3M Gold squeegee + Low friction sleeve NOT INCLUDED		
		 Sprayer		

INFO










Material **S**afety **D**ata **S**heet



Technical **D**ata **S**heet


LHS=RHS

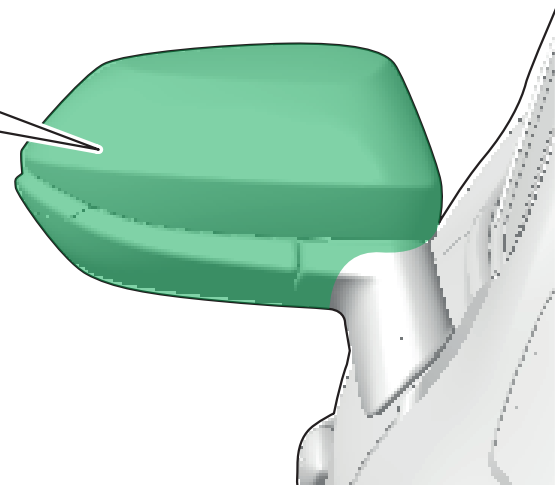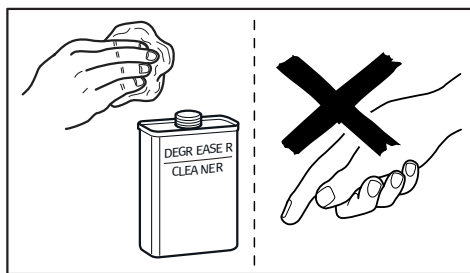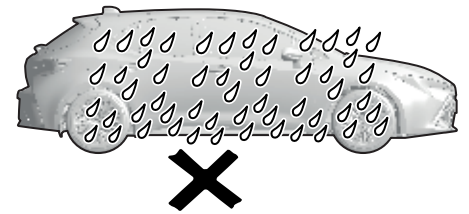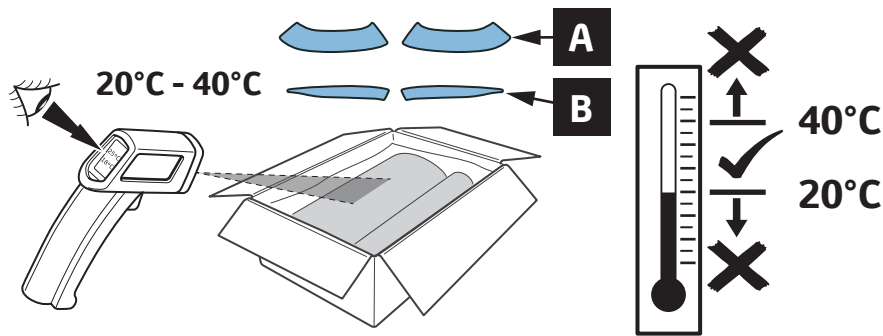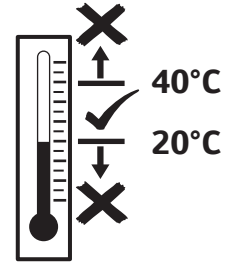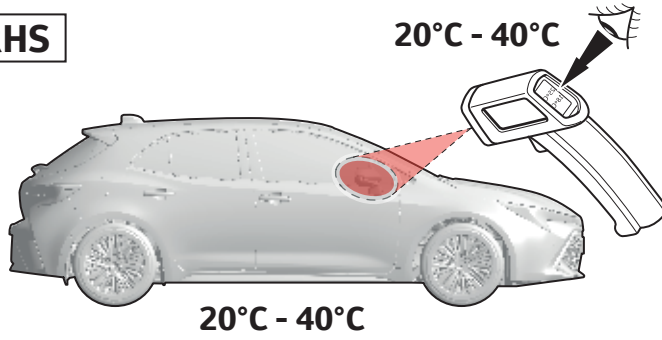

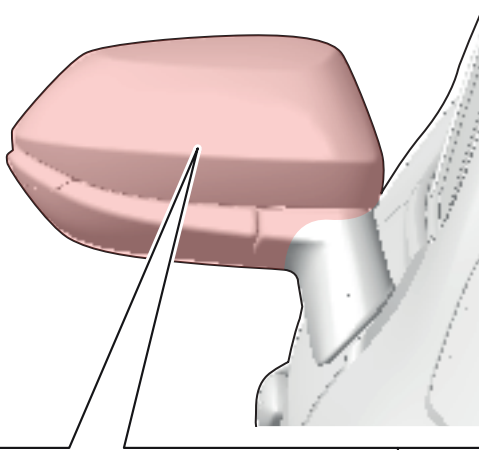




<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 3</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 3</p>	<p>INFO</p>




2

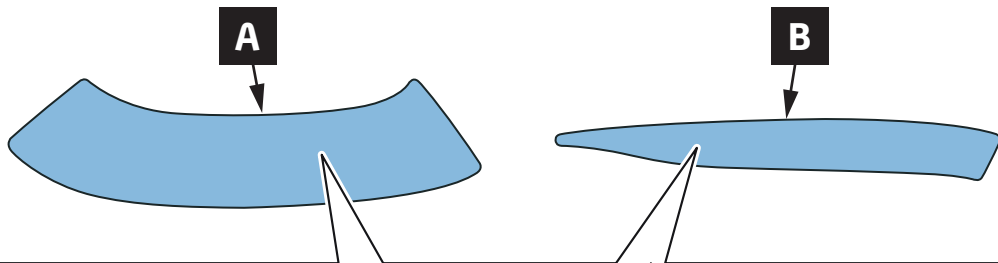


<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 3</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 3</p>	<p>INFO</p>


3

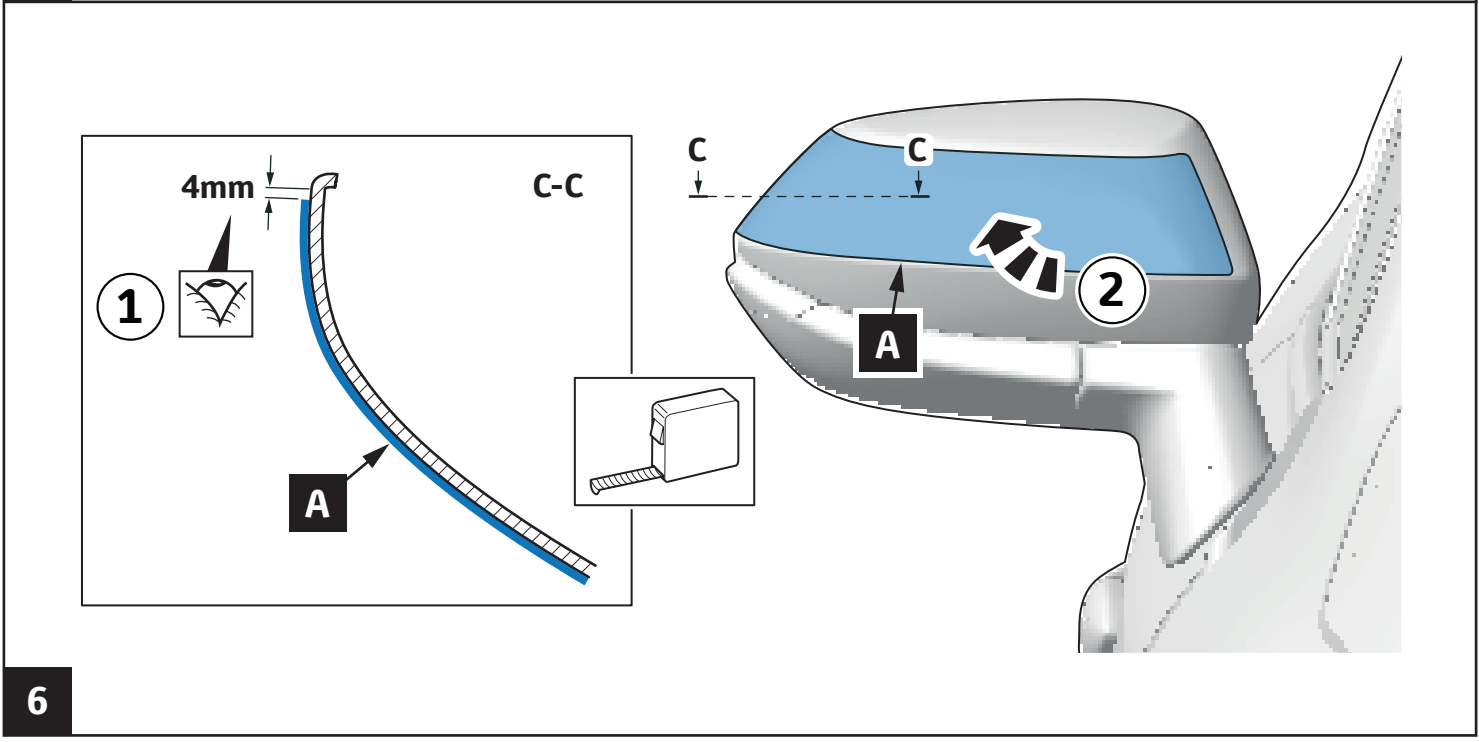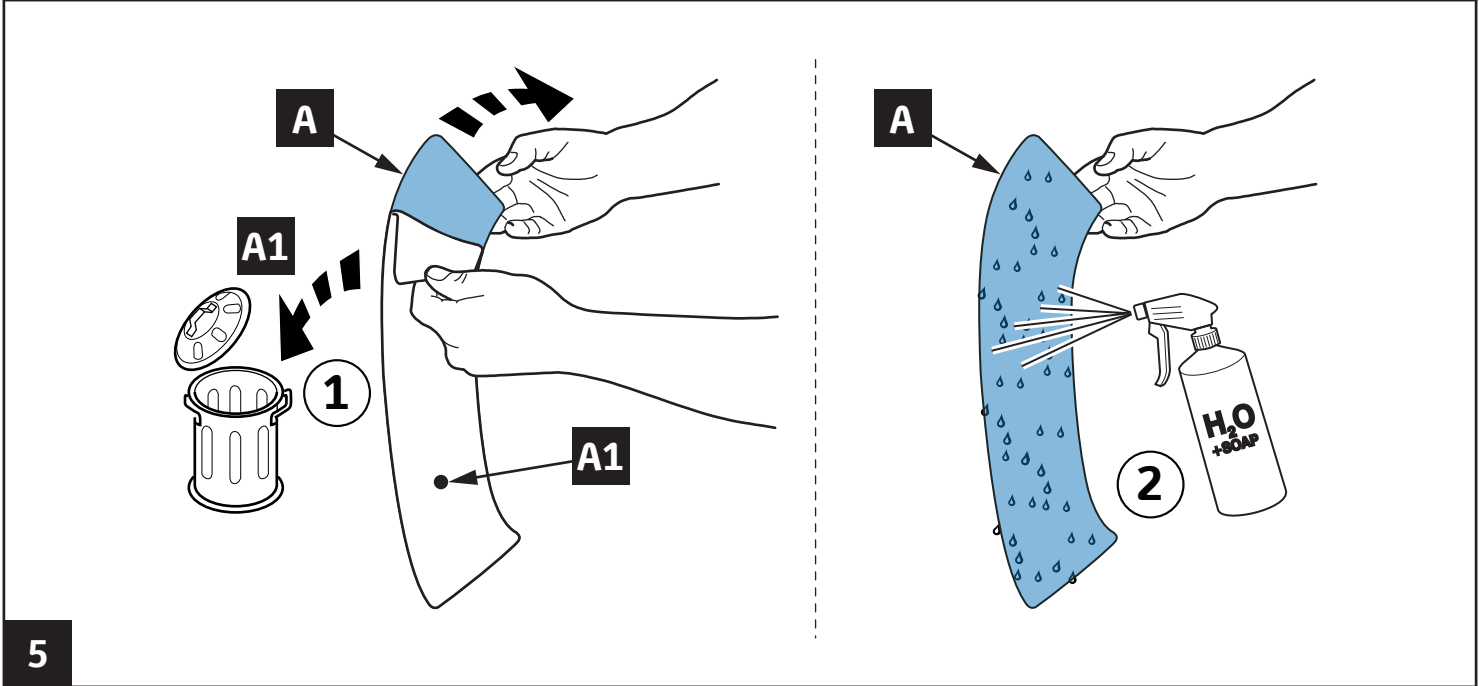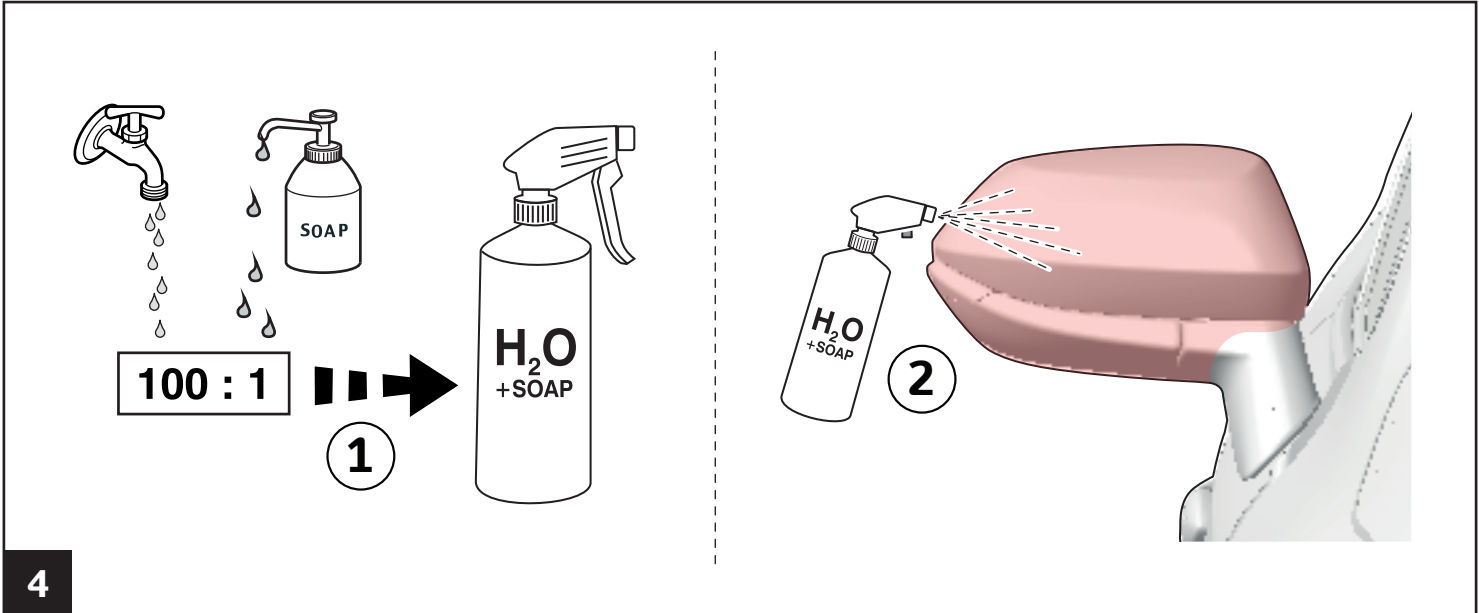

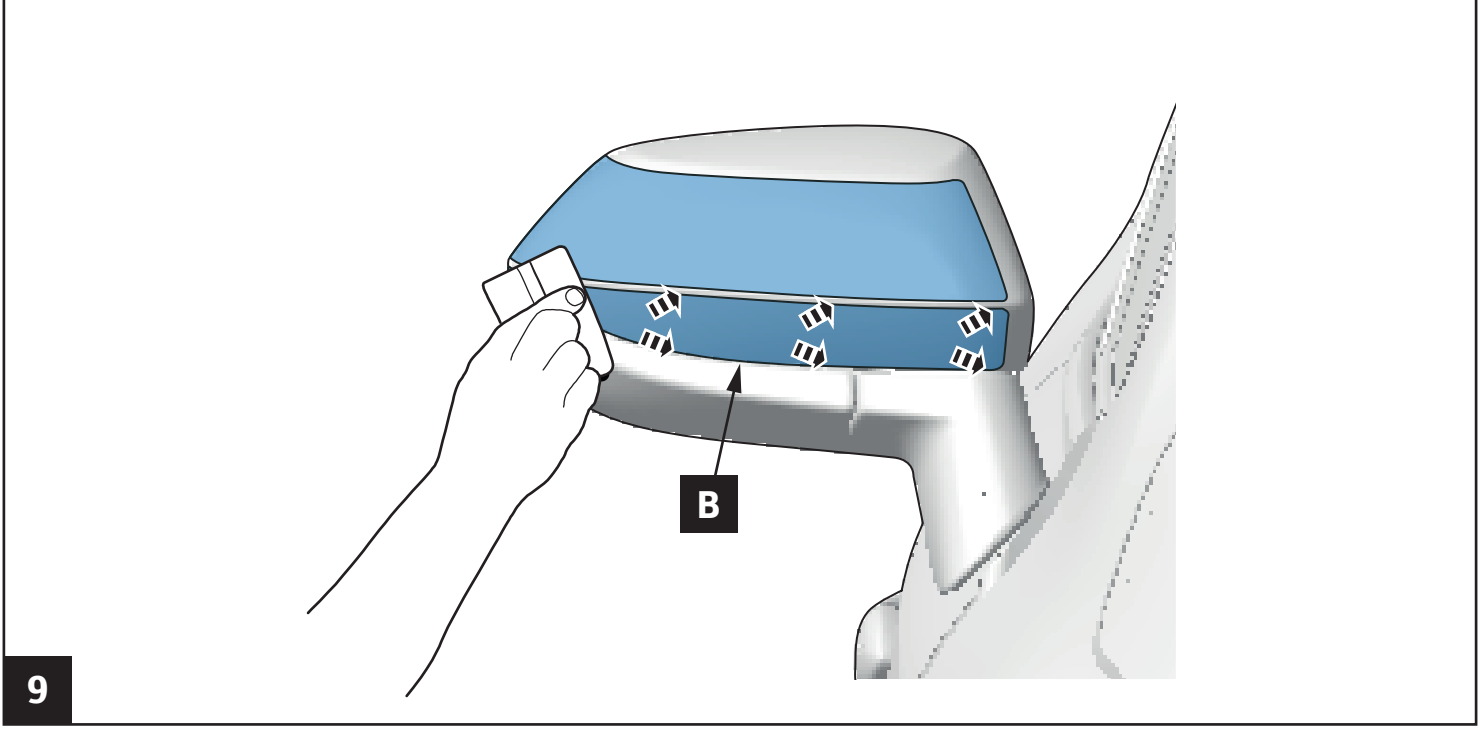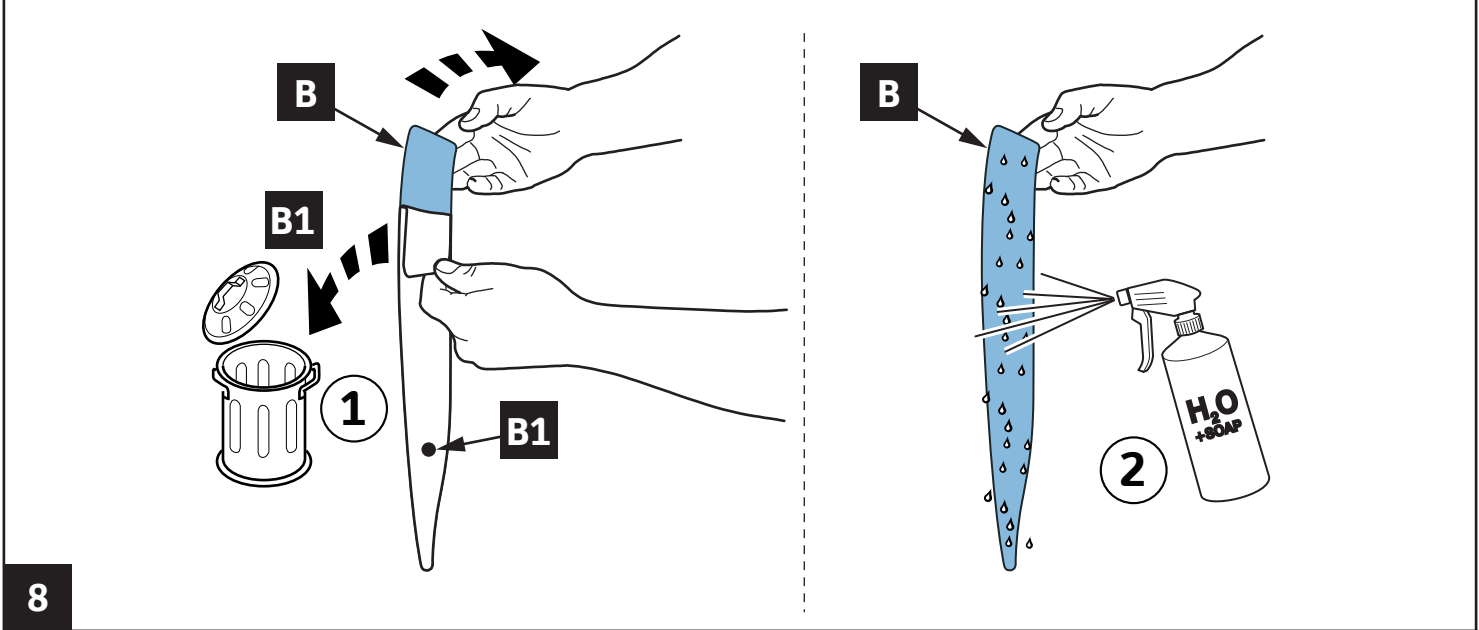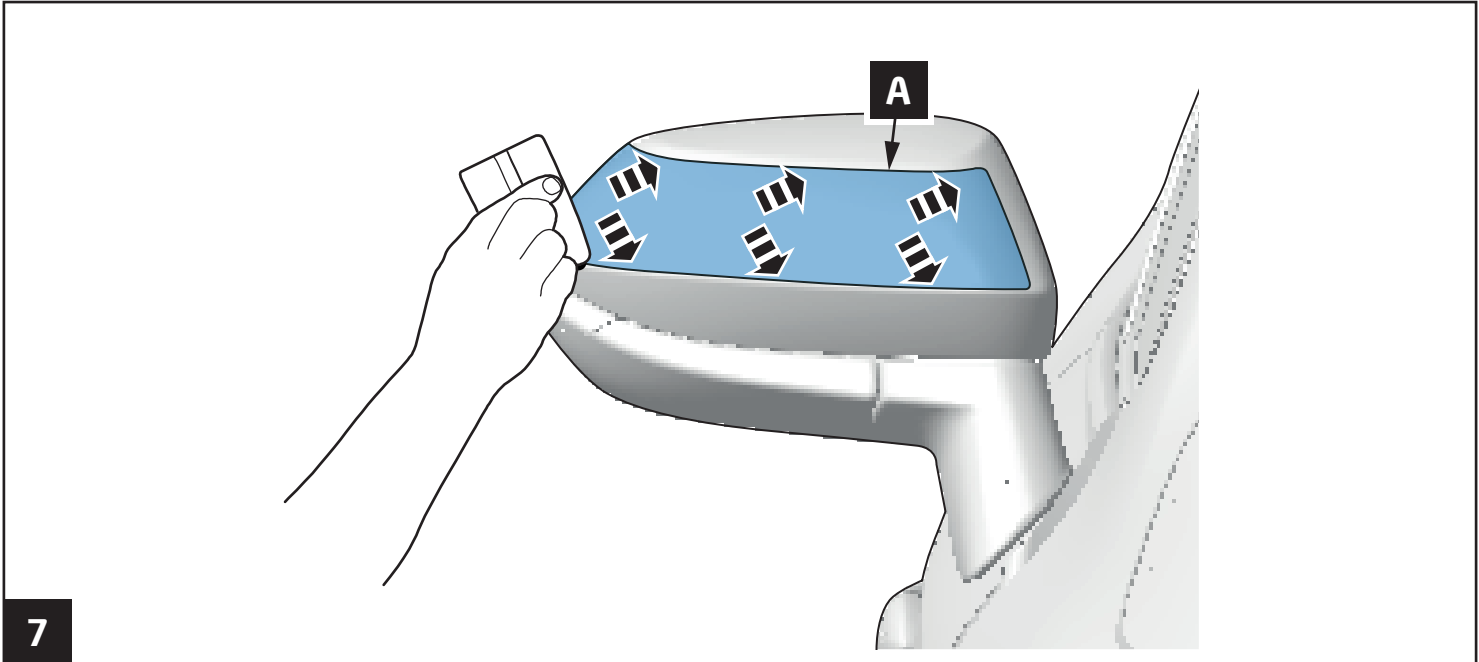





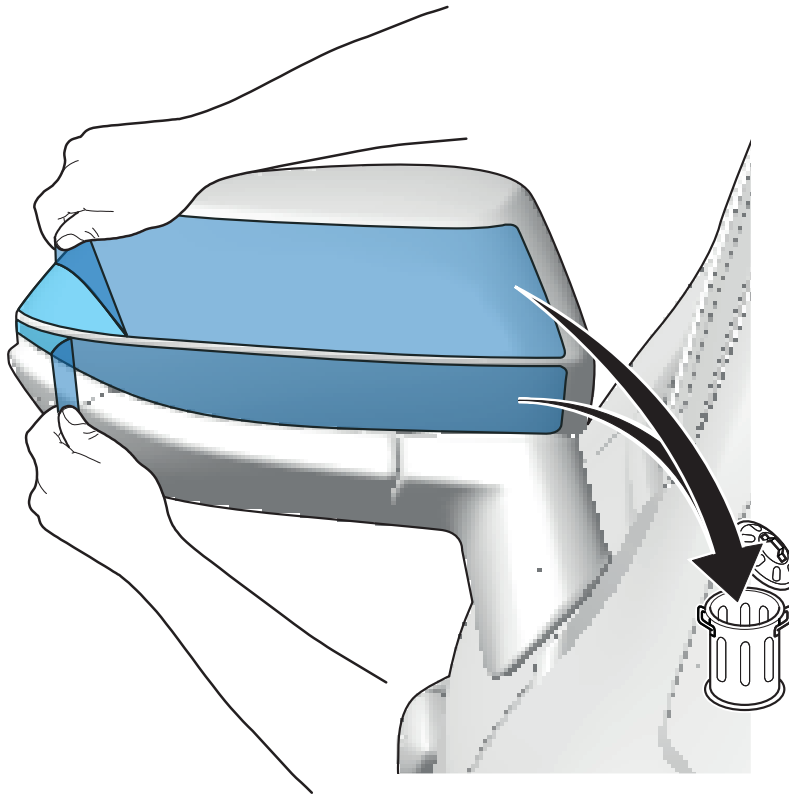


10


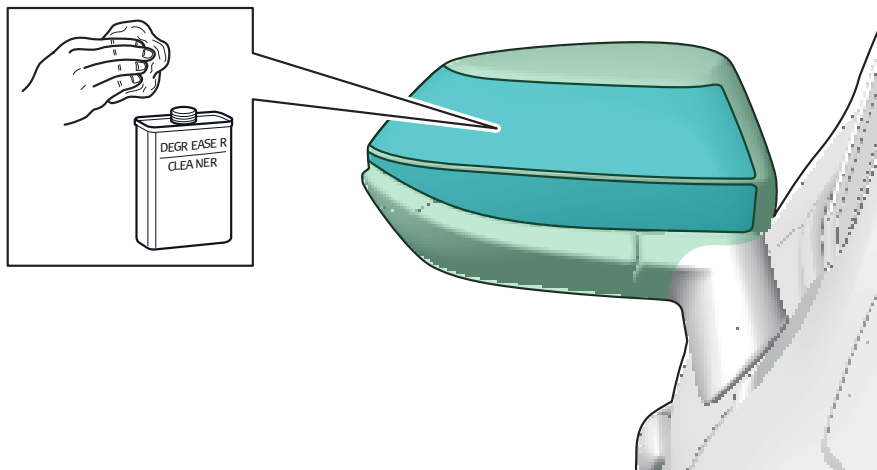


11

INFO

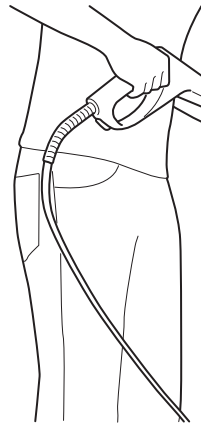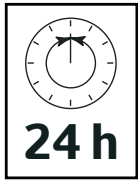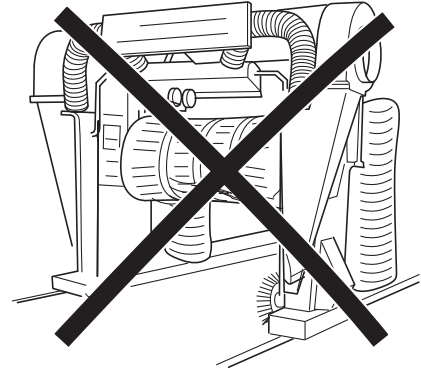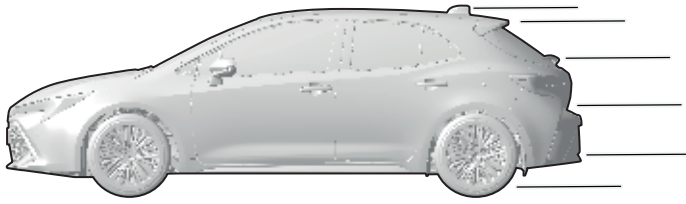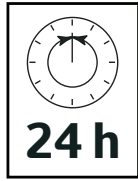

**Minimum
50cm**

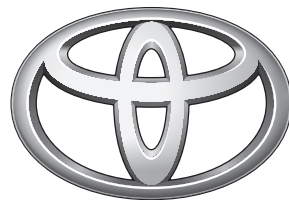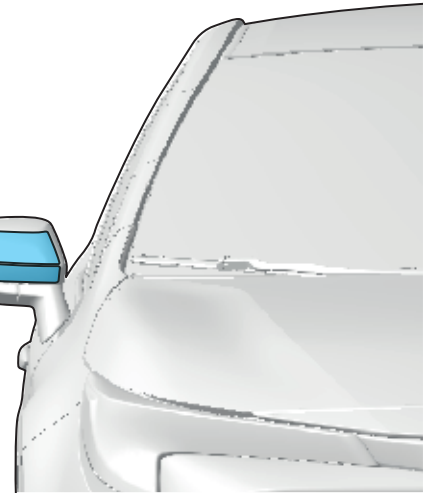

TOYOTA



TOYOTA

ALWAYS A
BETTER WAY

CHECK SHEET

Page 1 of 1

Corolla

Mirror Cover

As from 2019/05

Protection Film

Model/Year

VIN n°

DURING INSTALLATION

1

P/N = OK

2

= OK

LHS **RHS**

4mm

C-C

A

LHS **RHS**

A

B

C

AFTER INSTALLATION

1

= OK

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp:

