



TOYOTA

ALWAYS A
BETTER WAY

Yaris

Vertical cargo net

Installation Instruction

Model year: 2011/07, 2014/07, 2017/03

Vehicle code: **P13**-C***W


Part number: PZ472-B0342-ZA

Manual reference number: AIM 003 222 - 1

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	02.01.17	1		X		

PZ472-B0342-ZA

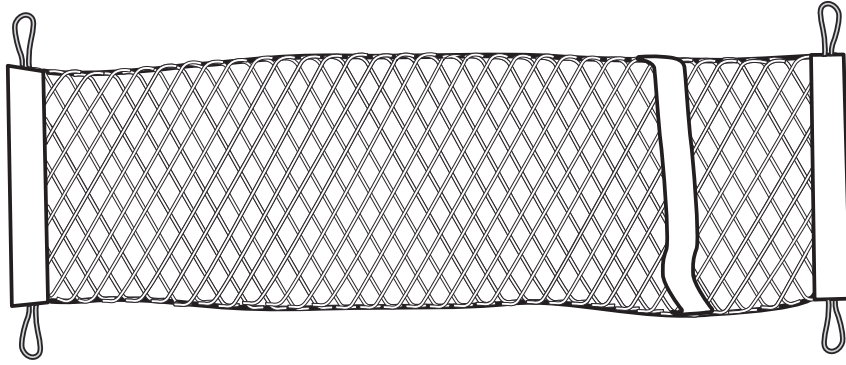


A

1x



B

2x

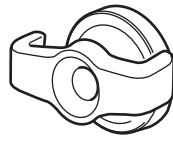


C

2x




D

2x




E

2x

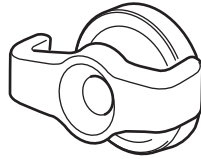






F




2x




G


2x

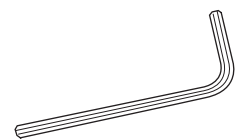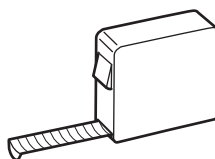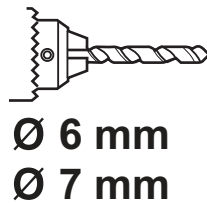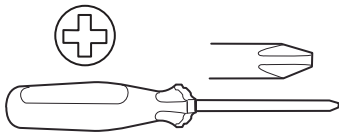

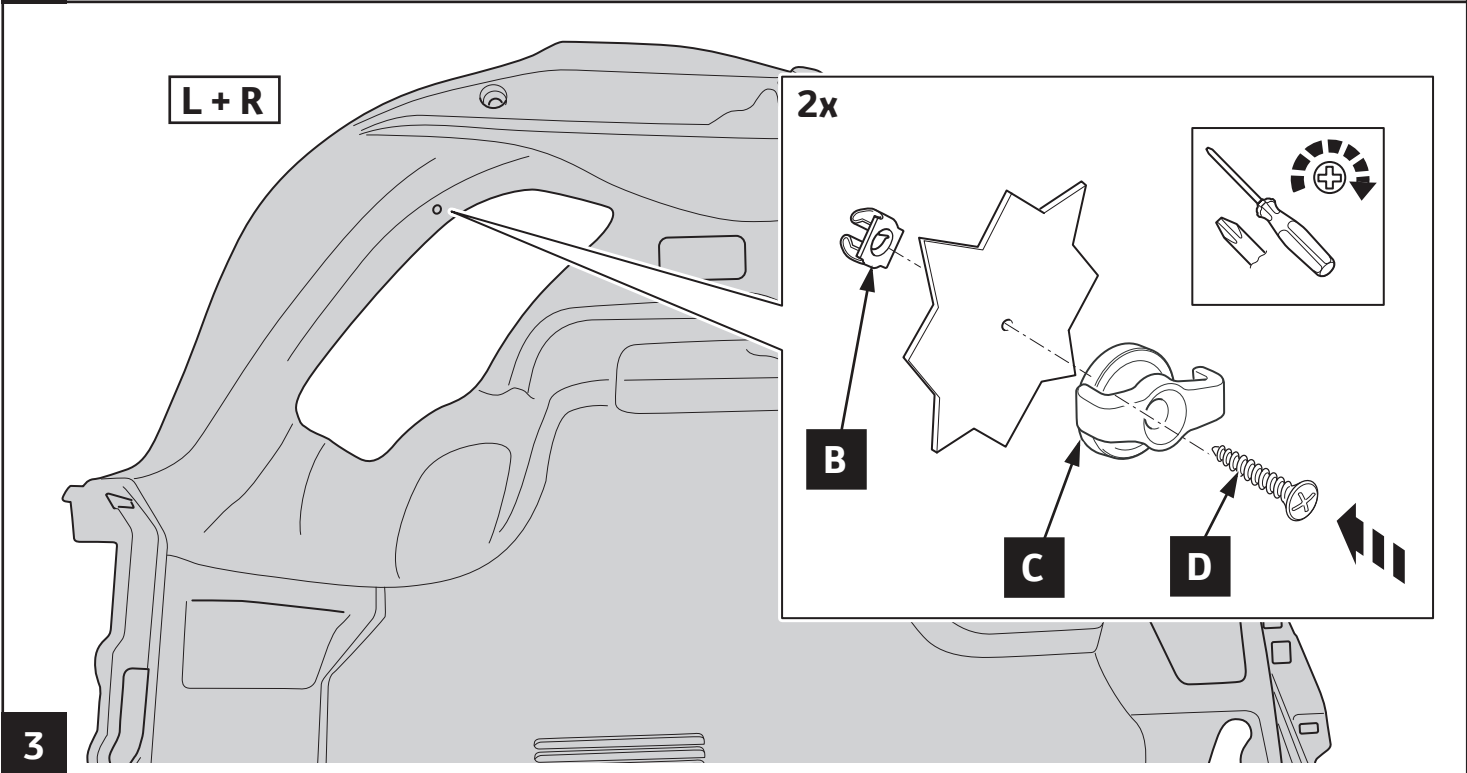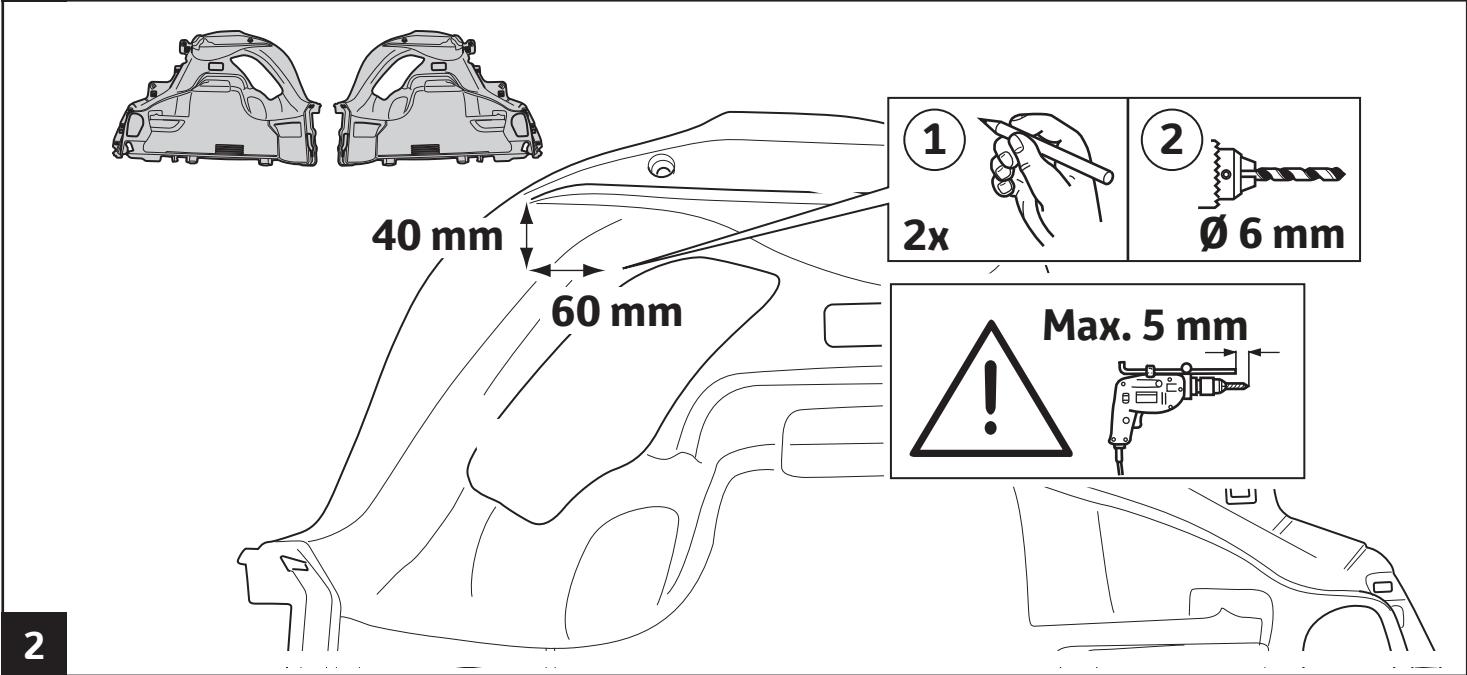
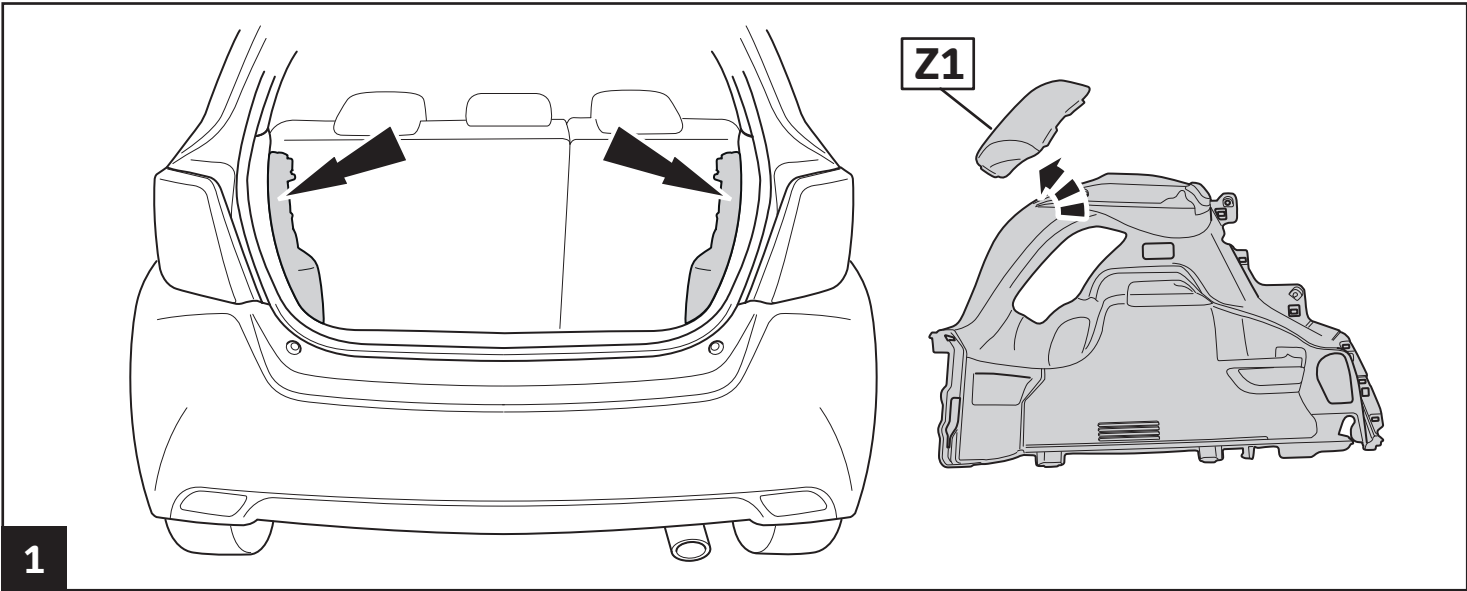


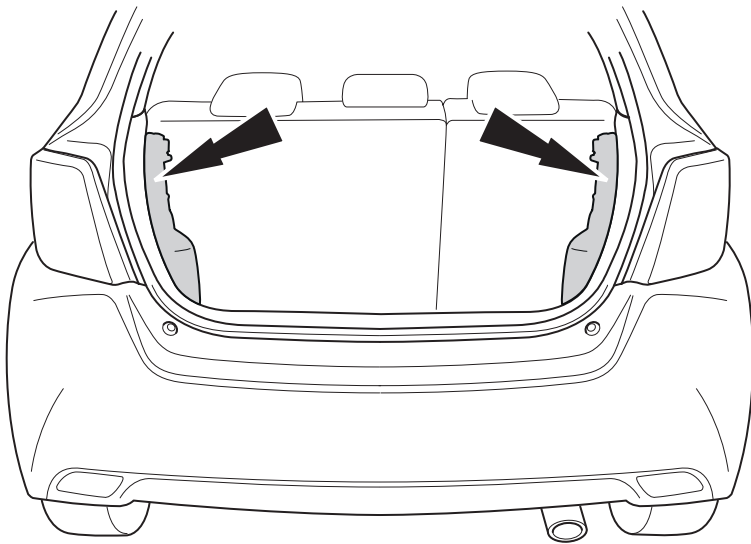

Z1



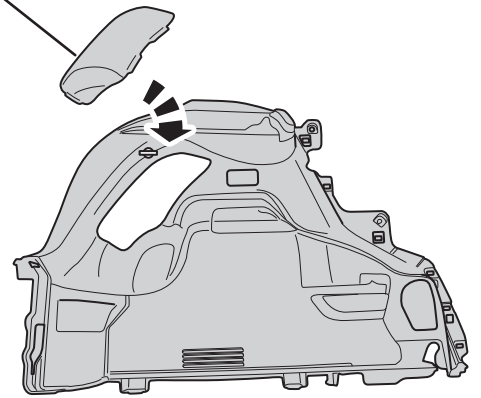


4

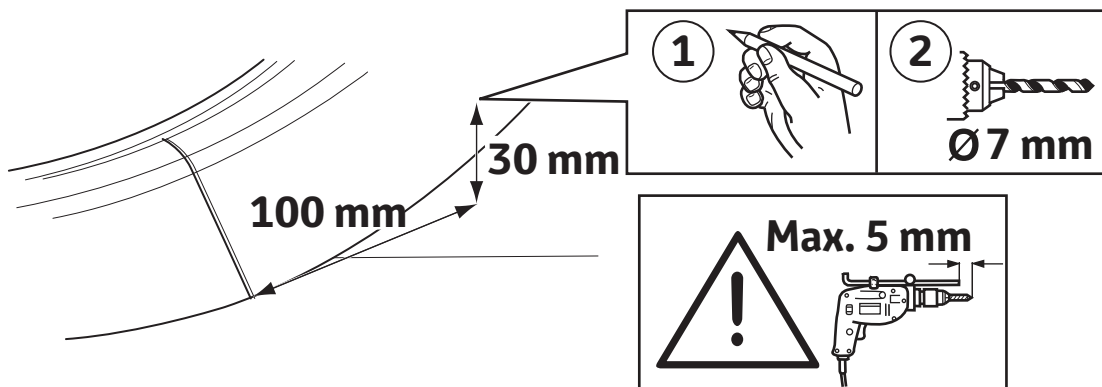
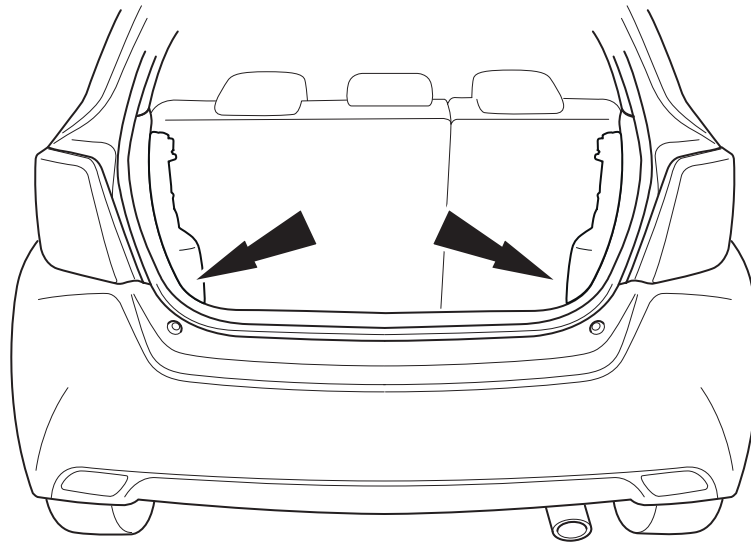


5


L+R

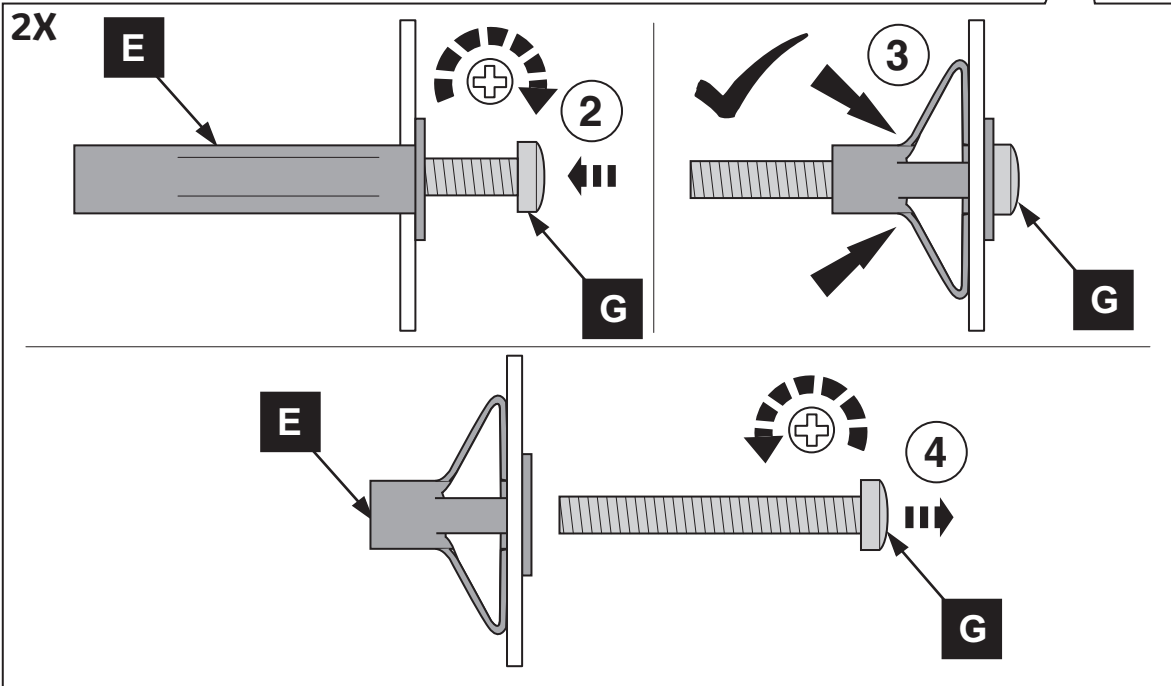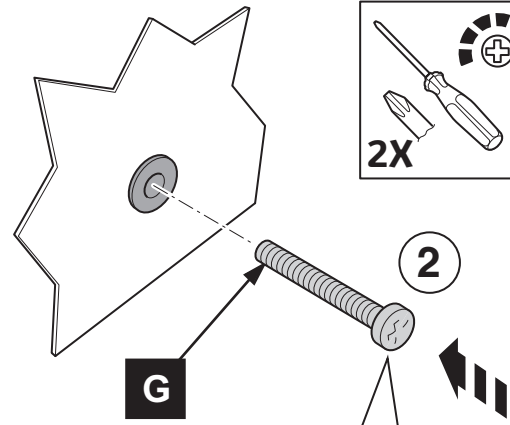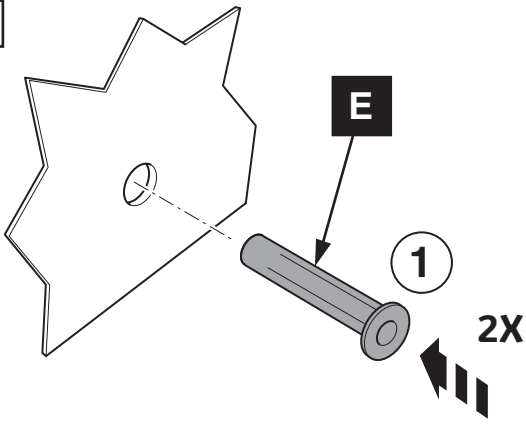

6

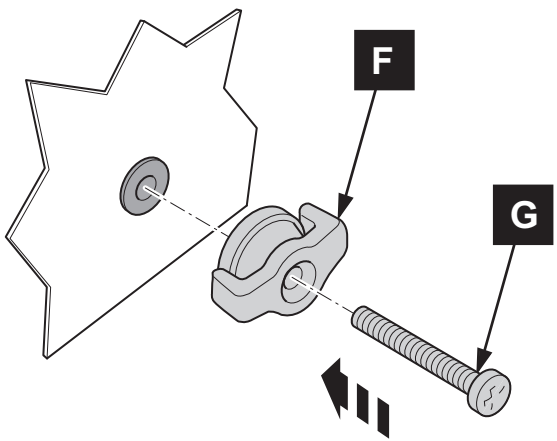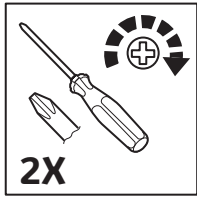

7

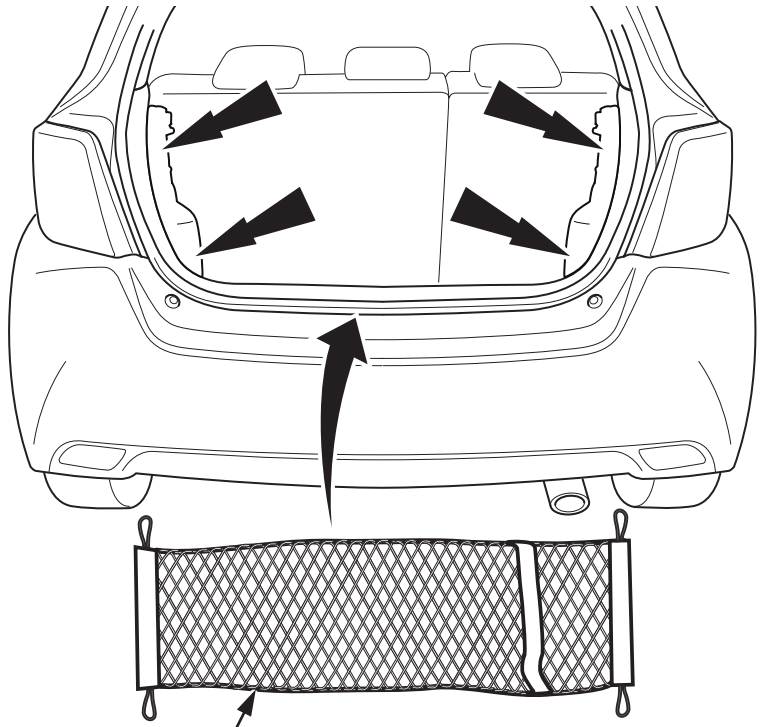

8