



Hilux - Extra / Double Cab

High over bar

Installation instructions

ALWAYS A
BETTER WAY


Model year:	as from 2015/04	
Vehicle code:	GUN1***-D****W GUN1***-C****W	
Part number:	PW3B0-0K000	(stainless steel)
	PW3B0-0K015	(stainless steel)
	PW3B0-0K017	(painted matt black)

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	04.05.16	4, 5, 10, 11, 12, 13, 14	6, 8, 9, 11	X		
2	10.06.16	4, 6, 7, 8, 9, 13	2, 3, 4, 5, 11	X		
3	23.06.16	7	14	X		
4	10.08.16	1, 3		X		
5	11.04.17	1		X		
6	16.08.17	1-3		X		
7	23.08.17	1		X		
8	17.11.17	1, 4, 7, 8, 10, 13, 14	3, 4, 6, 11	X		








Rev. No.	Date	Page	Step	Remarks
<u>9</u>	14.08.19	4, 10, 11	6, 8	Increased drilling diameter & hex socket size updated
<u>10</u>	27.07.20	1		Model year & vehicle code updated
<u>10</u>	27.07.20	14	C/S	CheckSheet updated

OVERVIEW

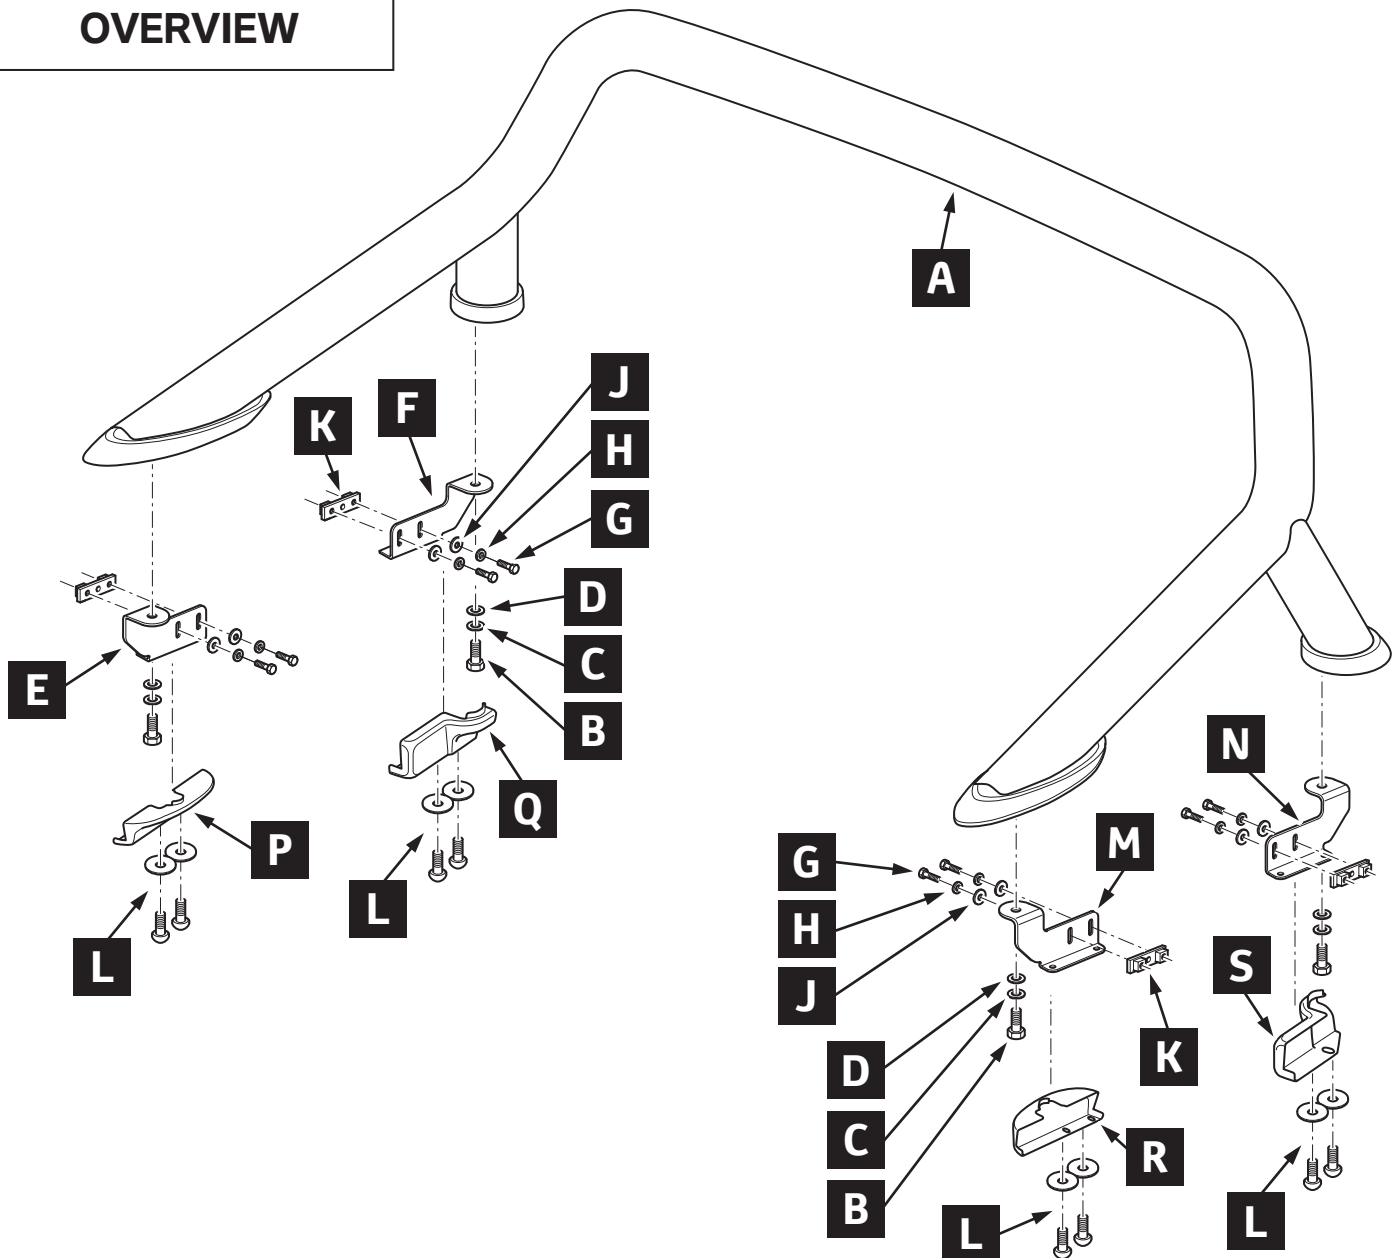

PW3B0-0K000 (STAINLESS STEEL)
PW3B0-0K015 (STAINLESS STEEL)
PW3B0-0K017 (PAINTED MATT BLACK)

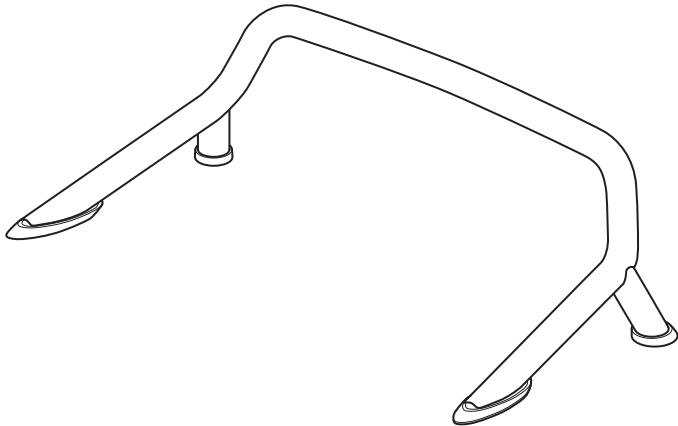

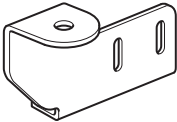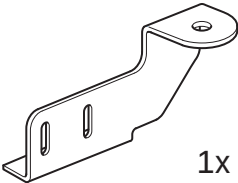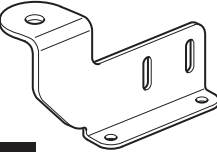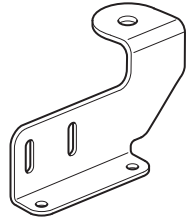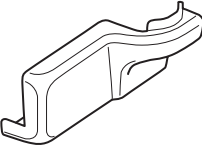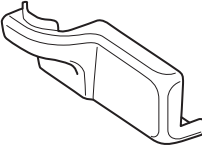A								1x
D		E		F				
 4x		 1x		 1x				
C		M		N		G		
 4x		 1x		 1x				
B						H		
 4x								
						J		
								
						K		
						 4x		
						L		
						 8x		
P		Q		R		S		
 1x		 1x		 1x		 1x		
















SPARE PARTS

PW3B0-0K007

 1x		 1x		 2x	
--	--	--	--	--	--

PW3B0-0K008

 1x		 1x		 4x	
--	--	--	--	--	--

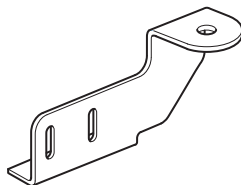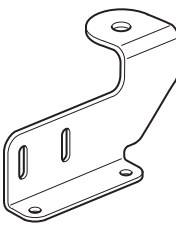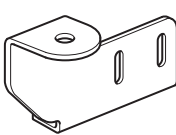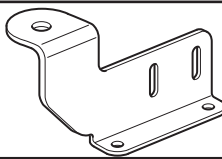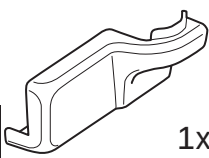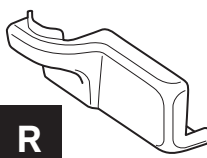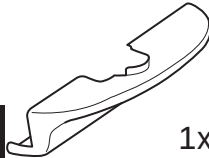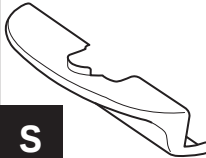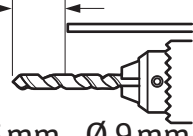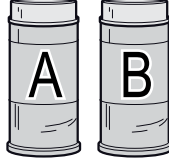PW3B0-0K009																							
F		1x	B		1x	C		1x	D		1x	G		2x	H		2x	J		2x	K		1x
PW3B0-0K010																							
N		1x	B		1x	C		1x	D		1x	G		2x	H		2x	J		2x	K		1x
PW3B0-0K011																							
E		1x	B		1x	C		1x	D		1x	G		2x	H		2x	J		2x	K		1x
PW3B0-0K012																							
M		1x	B		1x	C		1x	D		1x	G		2x	H		2x	J		2x	K		1x
PW3B0-0K013							PW3B0-0K014																
Q		1x	R		1x	L	 	4x	P		1x	S		1x	L	 	4x						
 5mm		 13mm 17mm				cobalt drill bits max. 10mm  Ø 3mm Ø 9mm																	
			 CLEANER DEGREASER		 A:PRIMER B:ACTIVATOR		A:Standex® Etching Adhesion Primer 020 16167 B:Standex® Etching Adhesion Activator 020 16168 or A:Sikkens® primer surfacer EP II B:Sikkens® primer surfacer EP II Hardener																



Material Safety Data Sheet





Technical Data Sheet


40°C


18°C

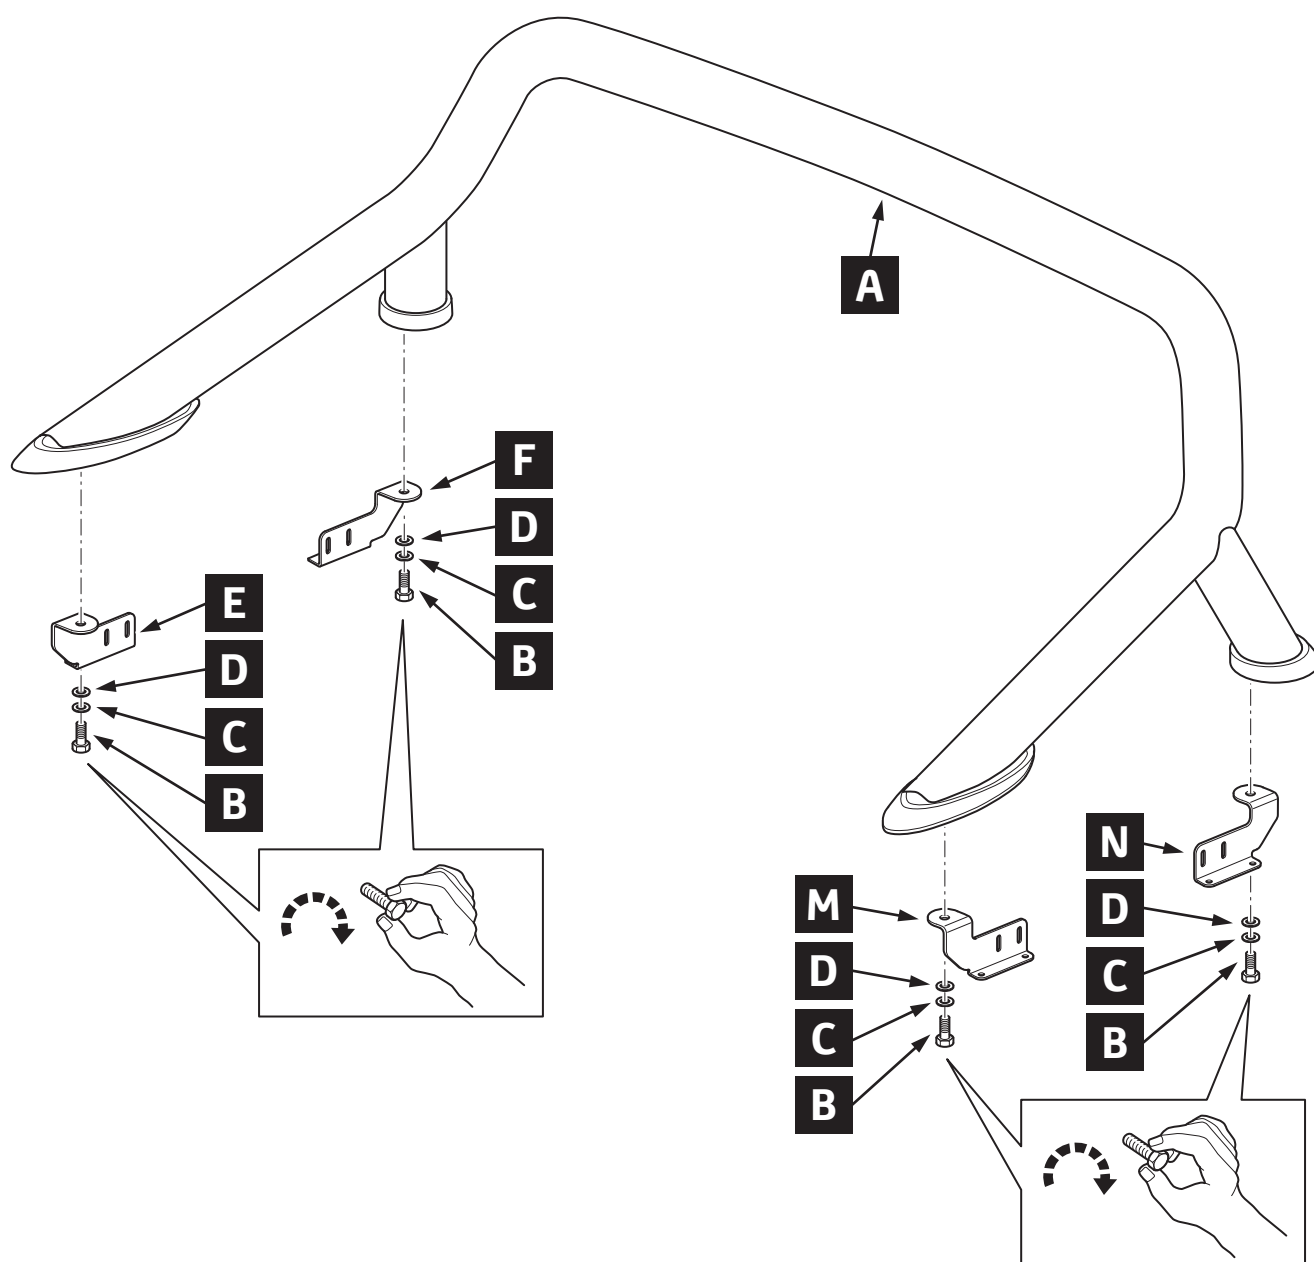
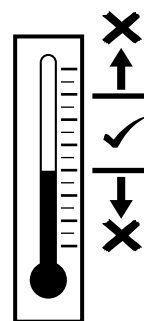






1

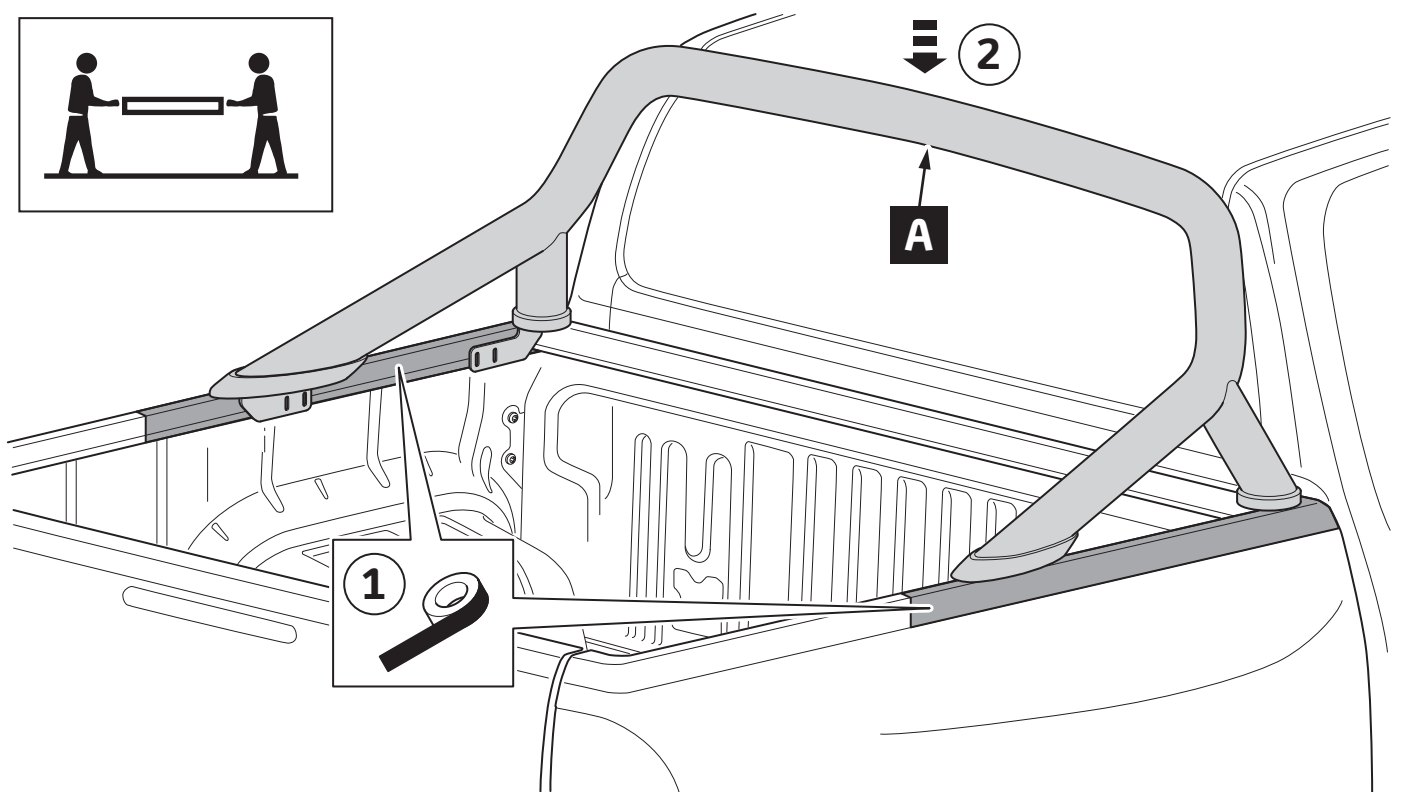
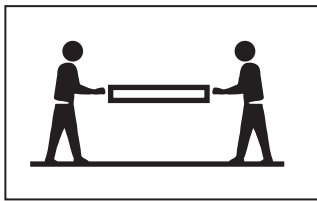


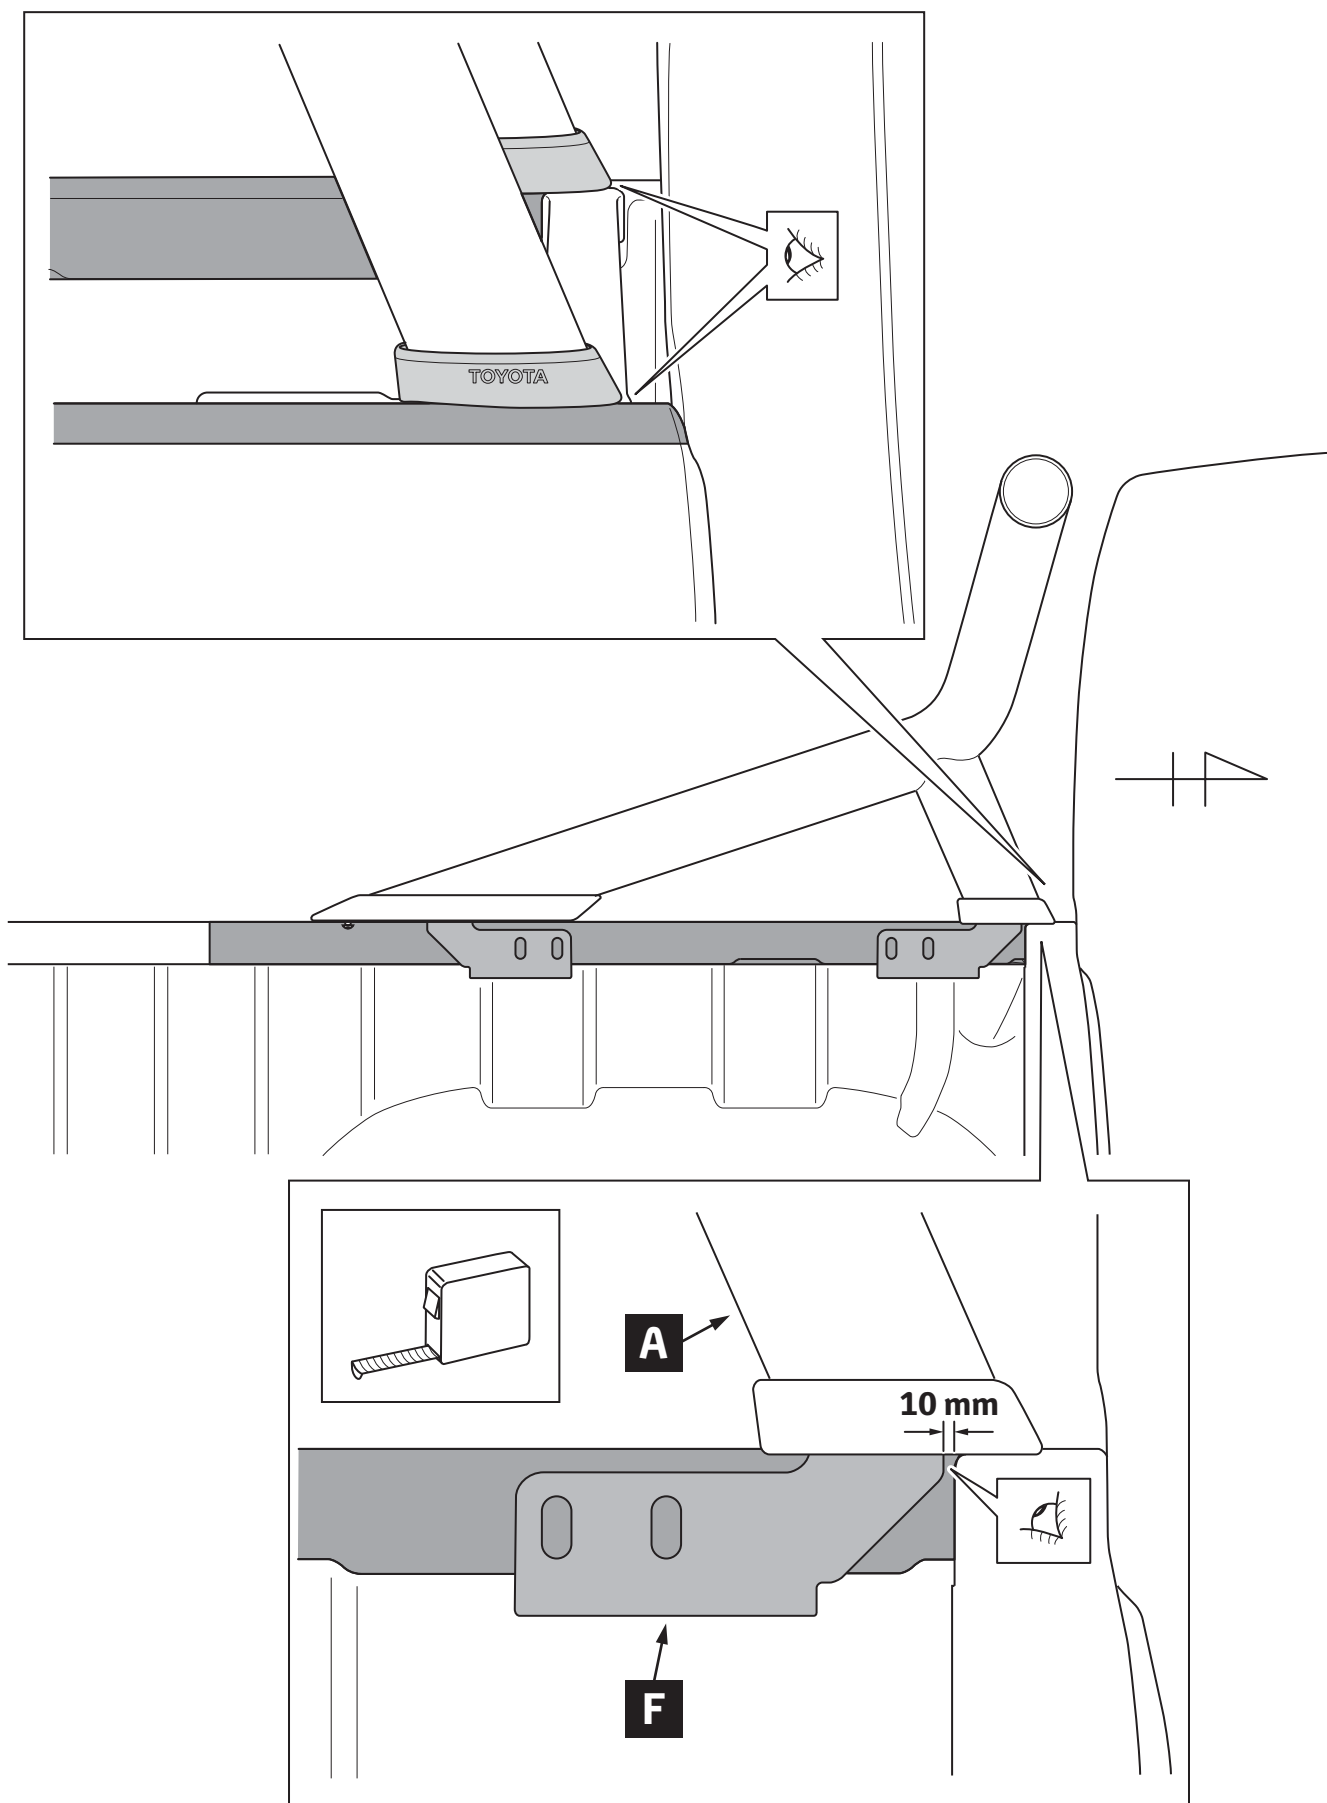



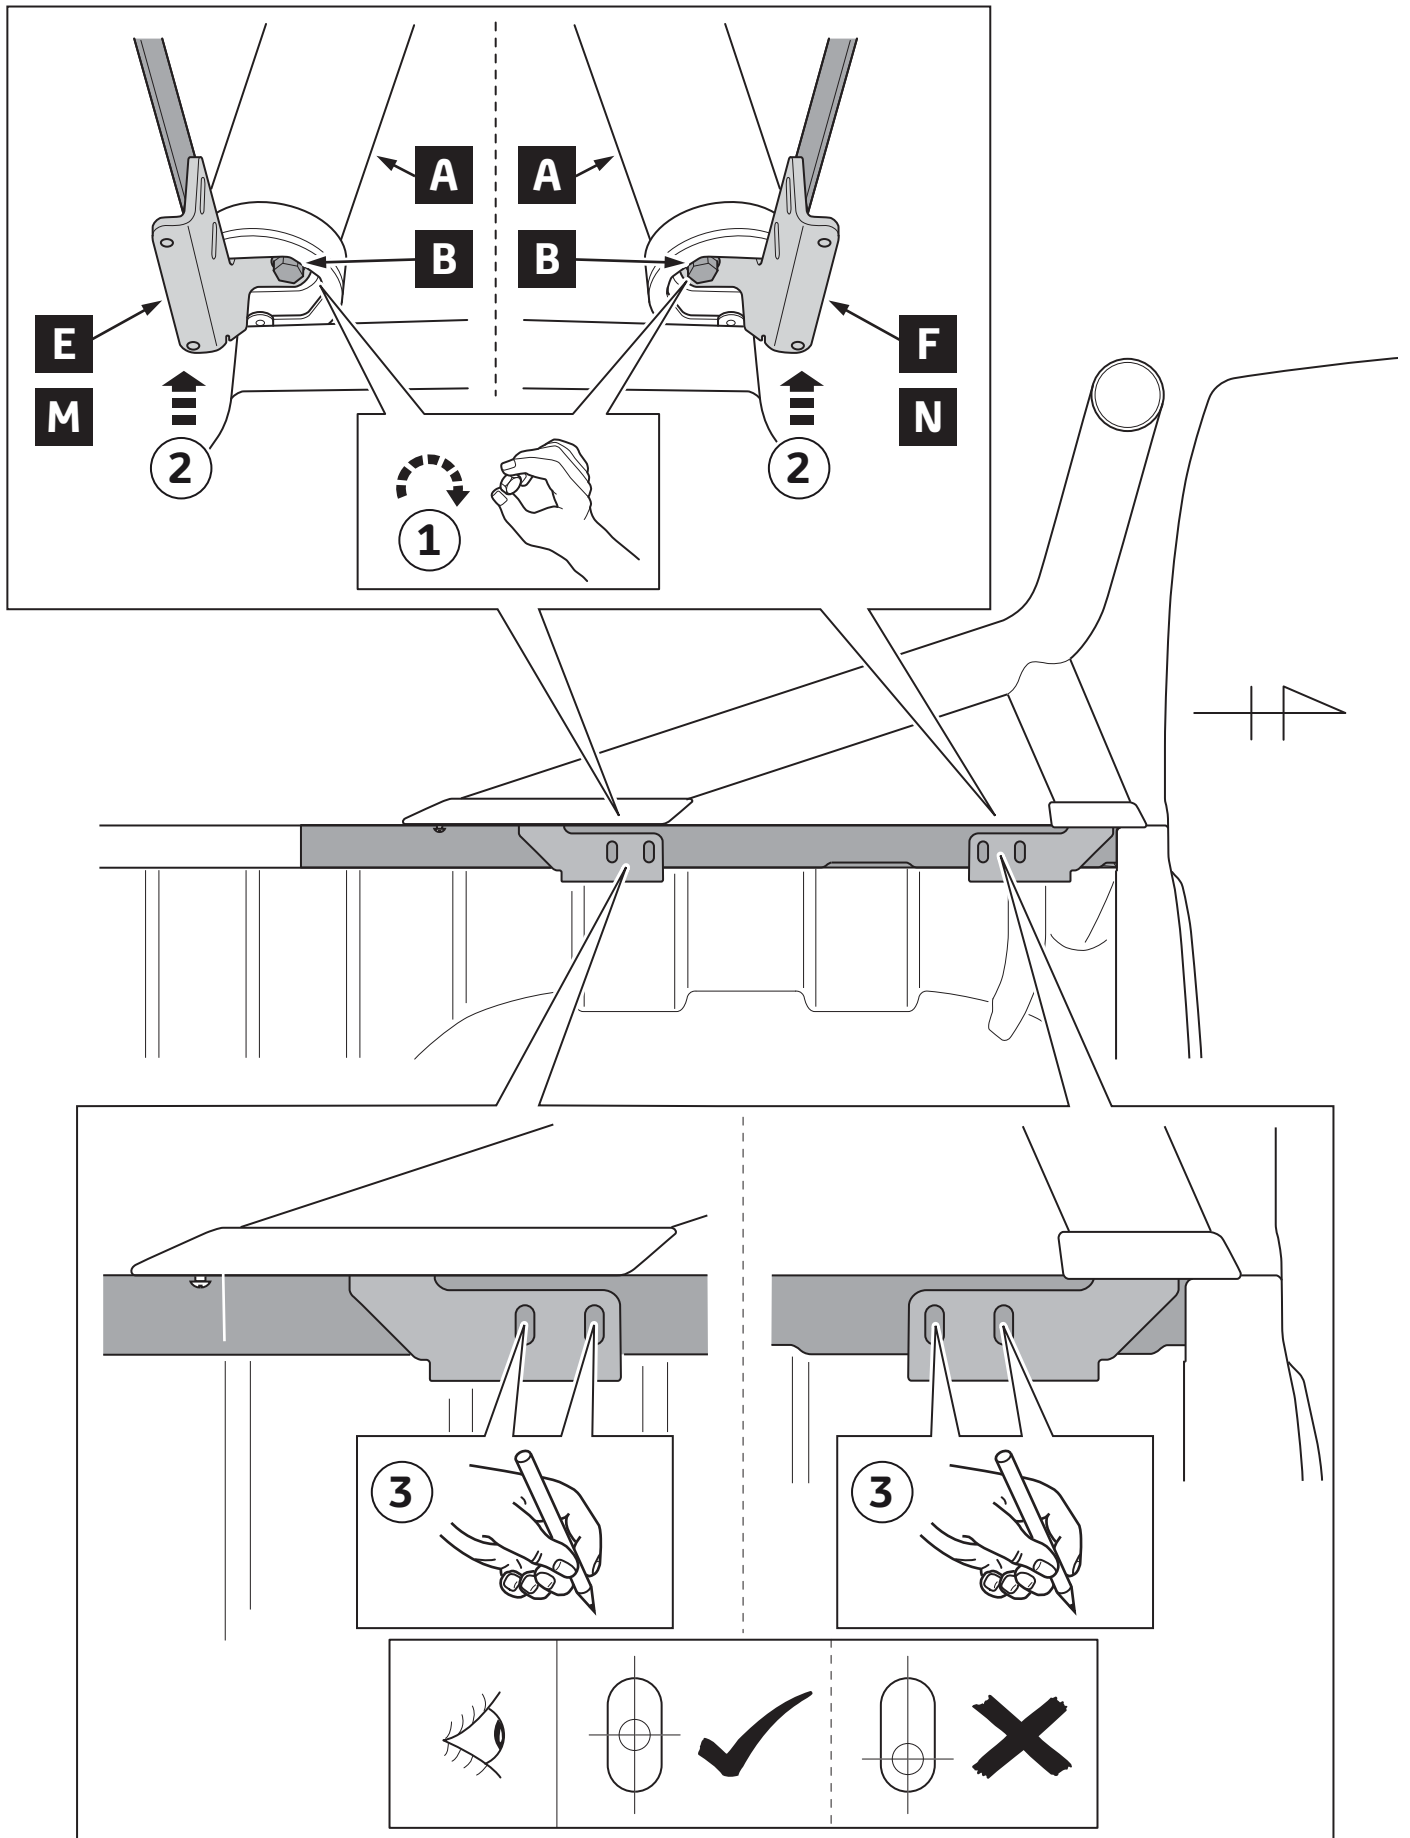


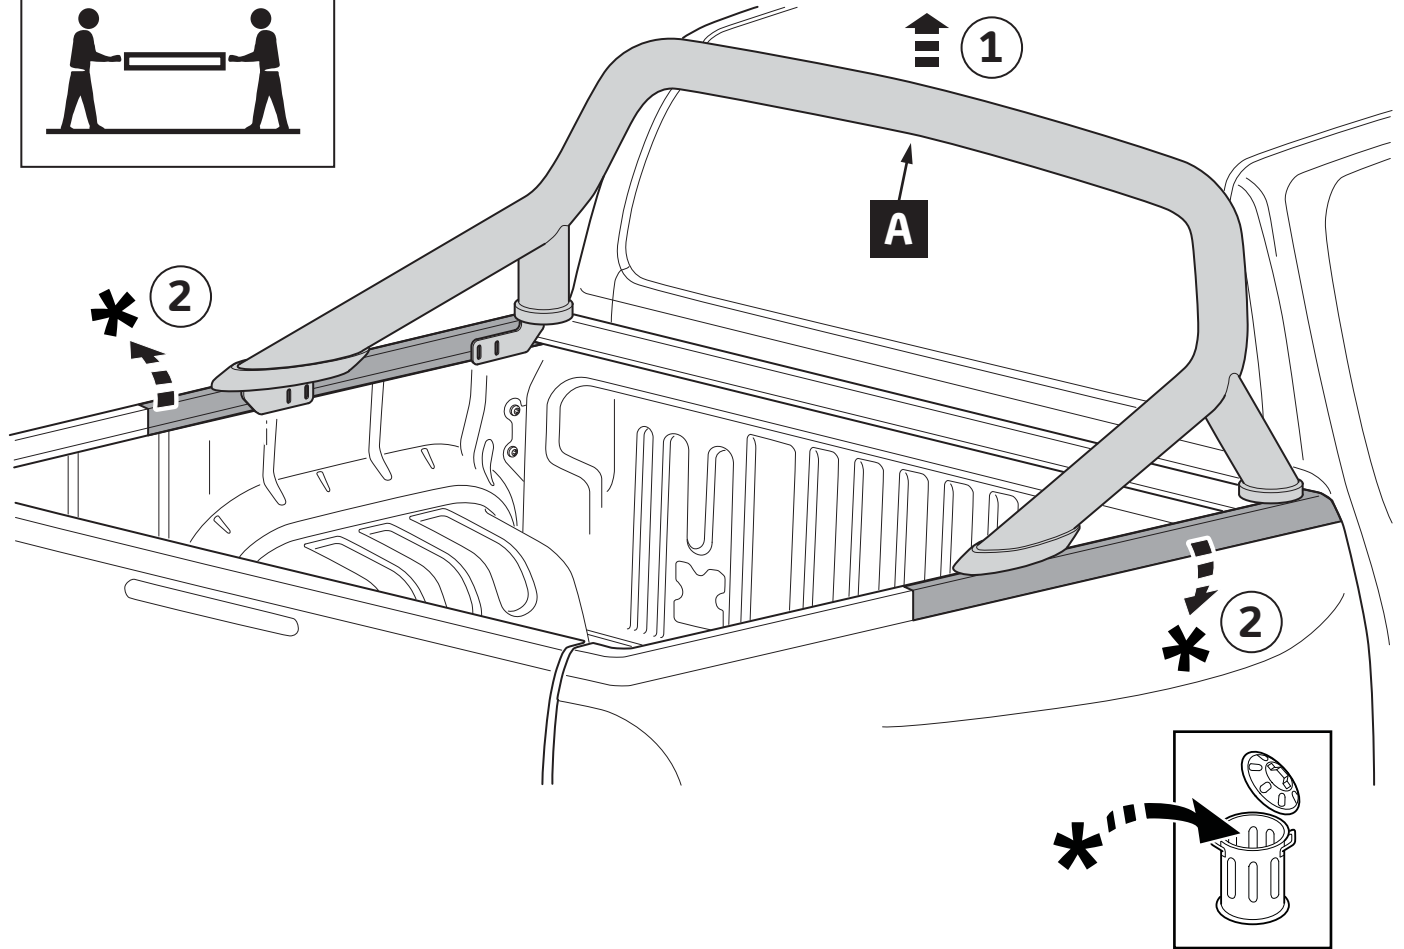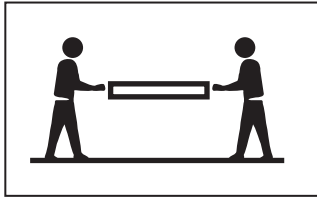

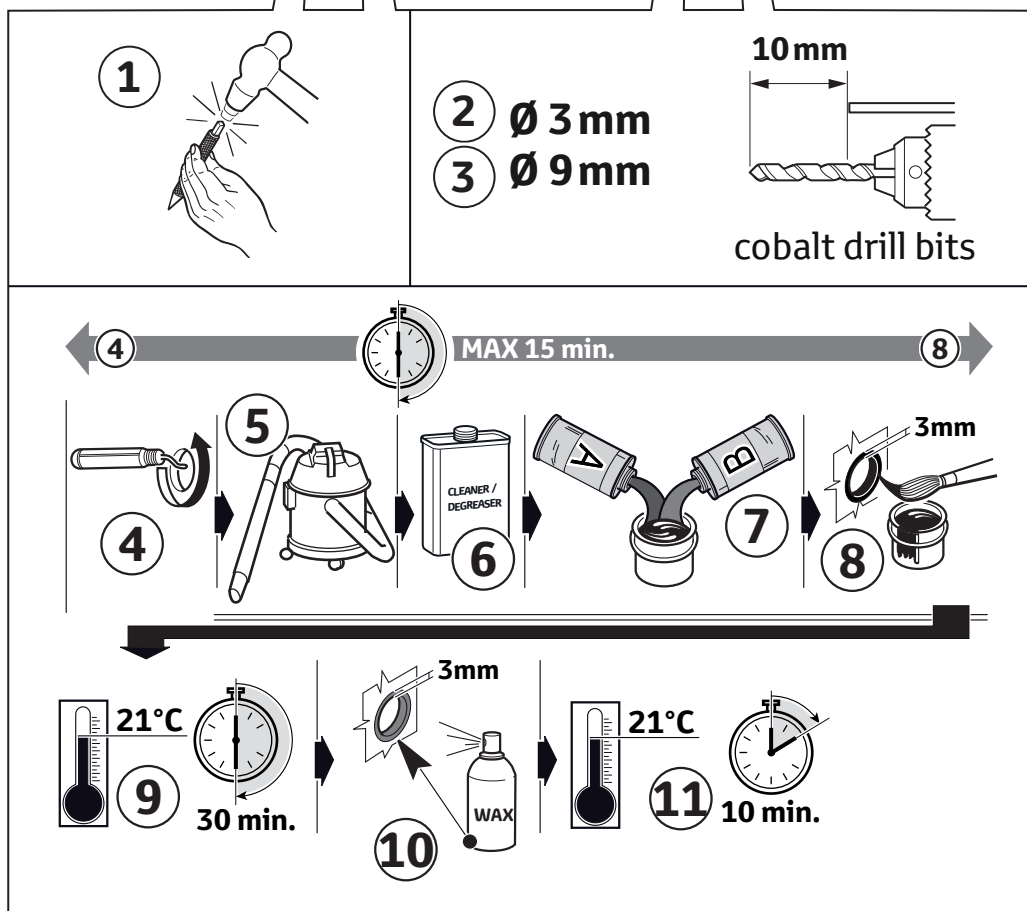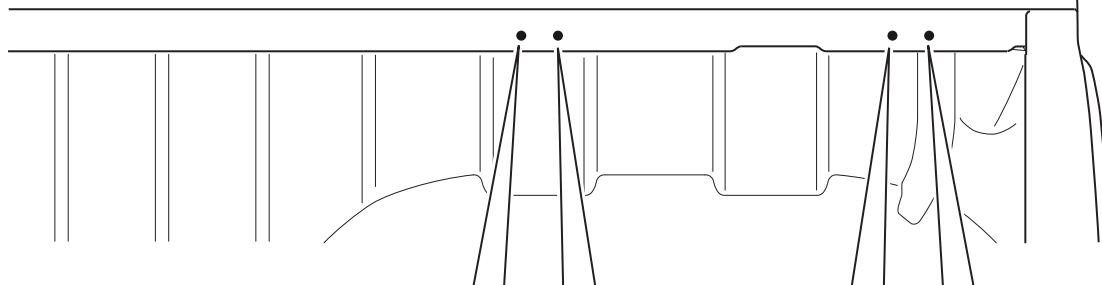
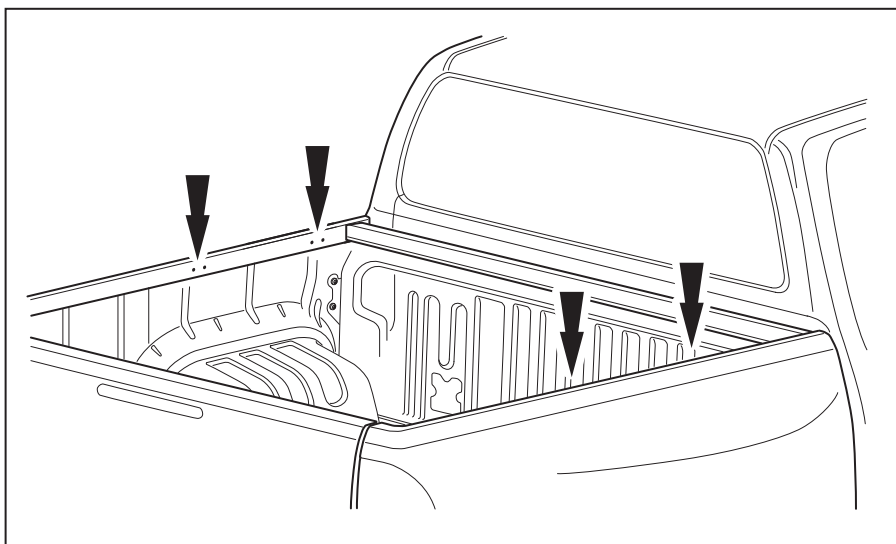


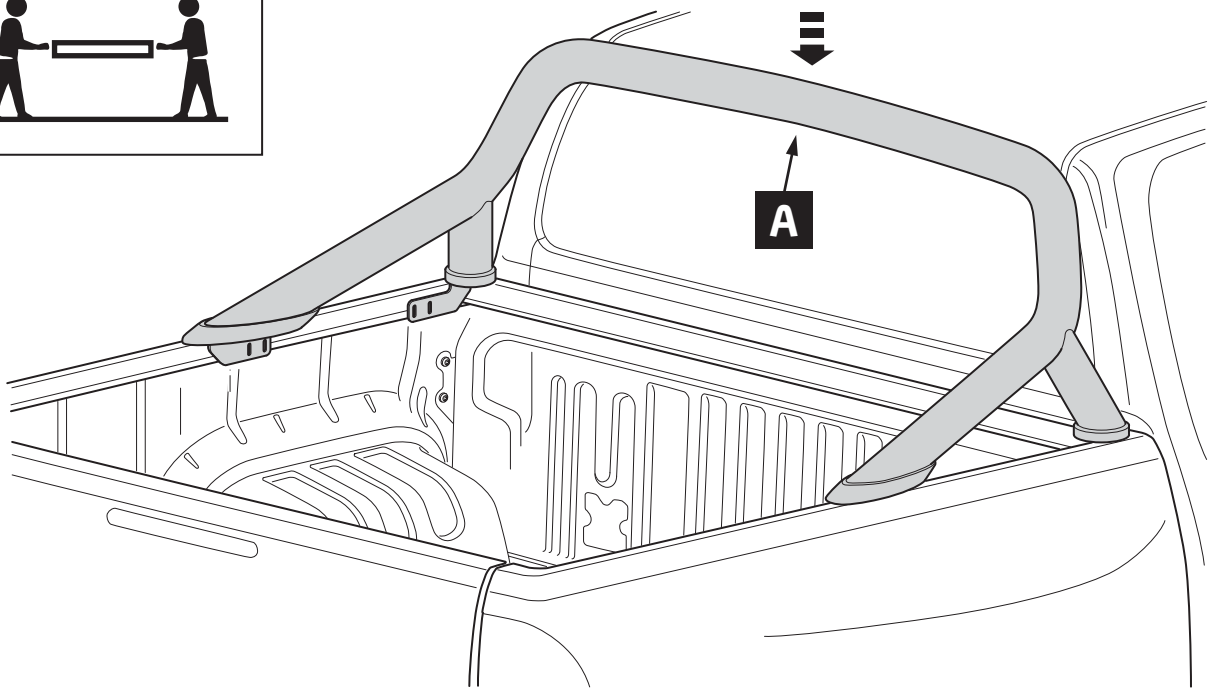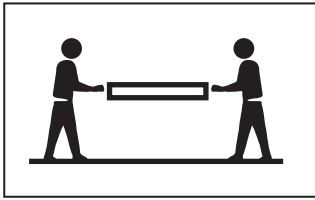



7

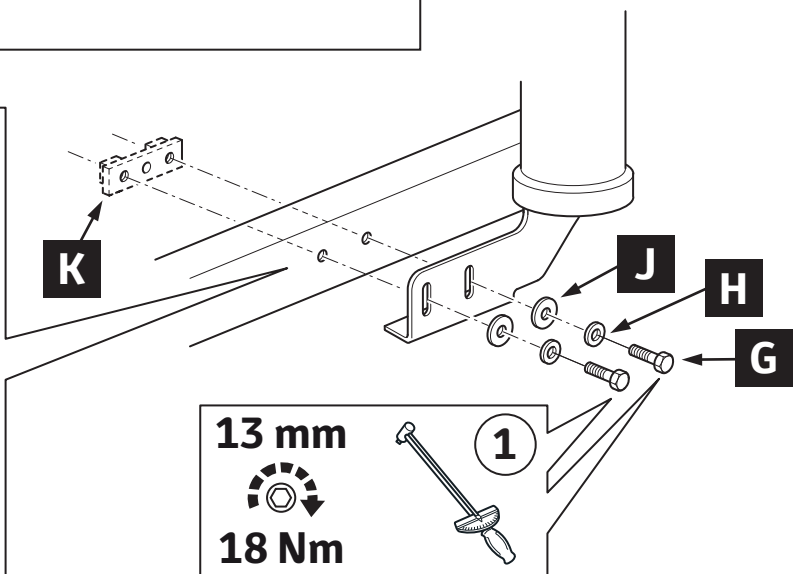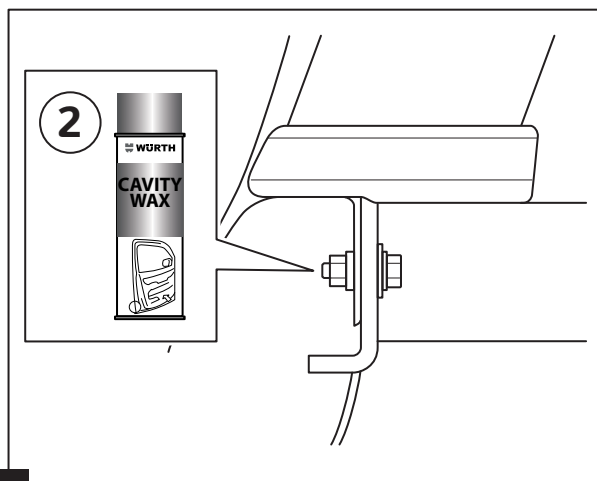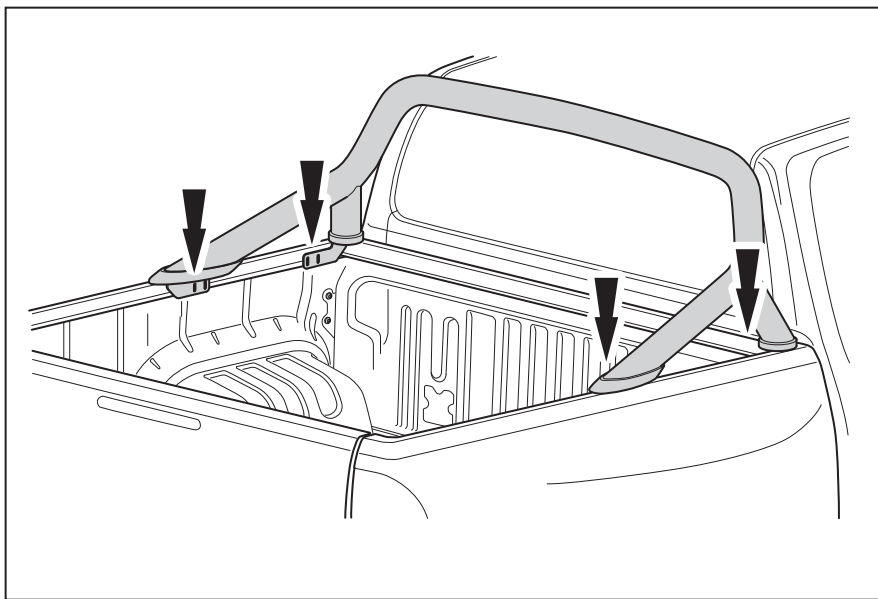



8

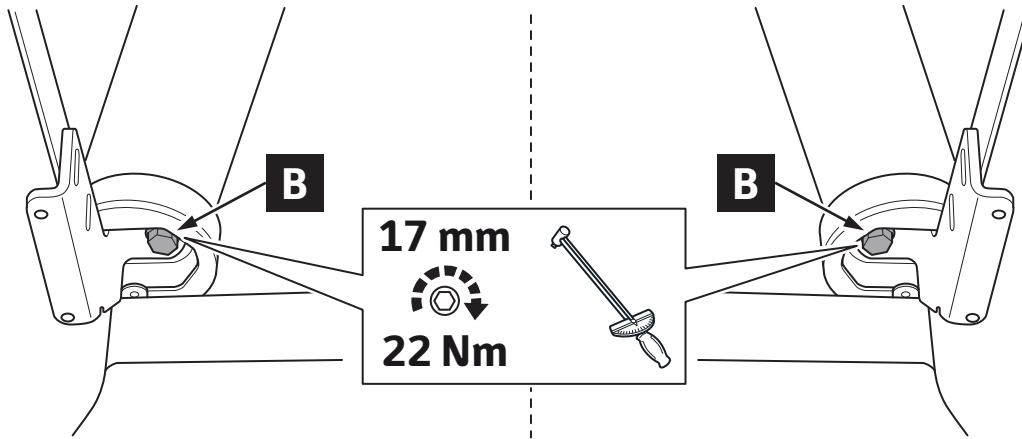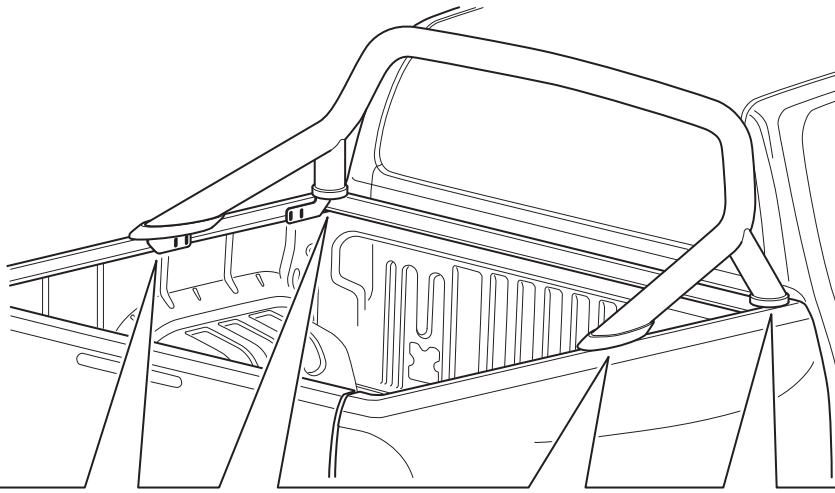

9

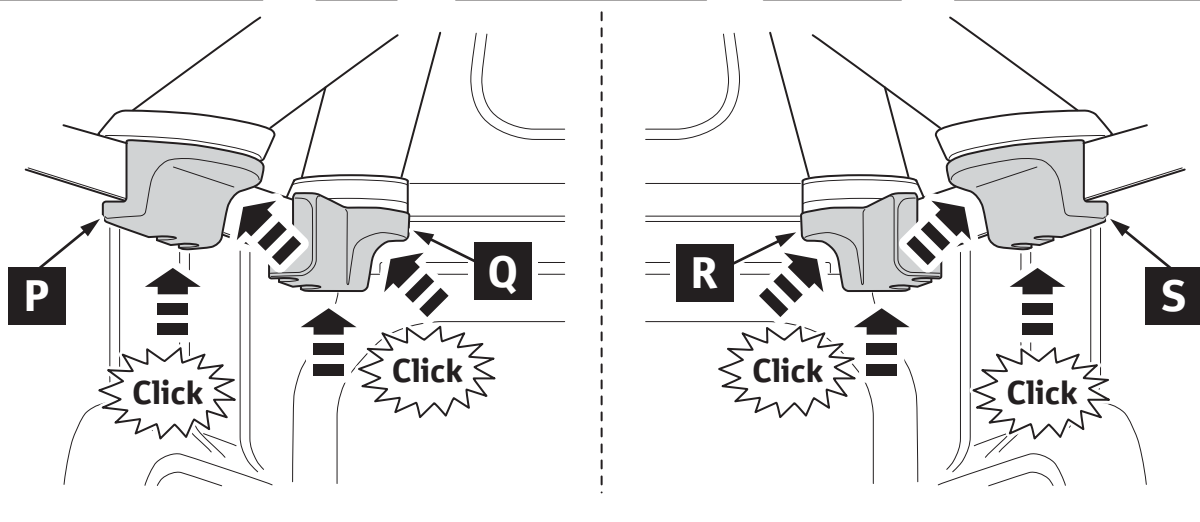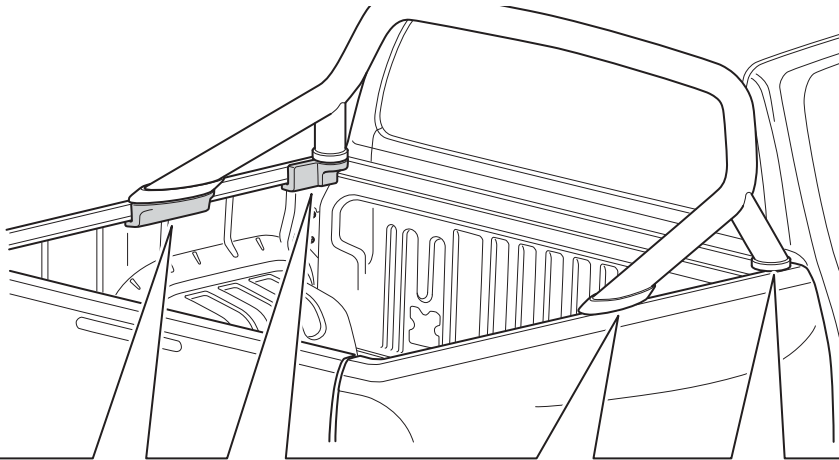

10

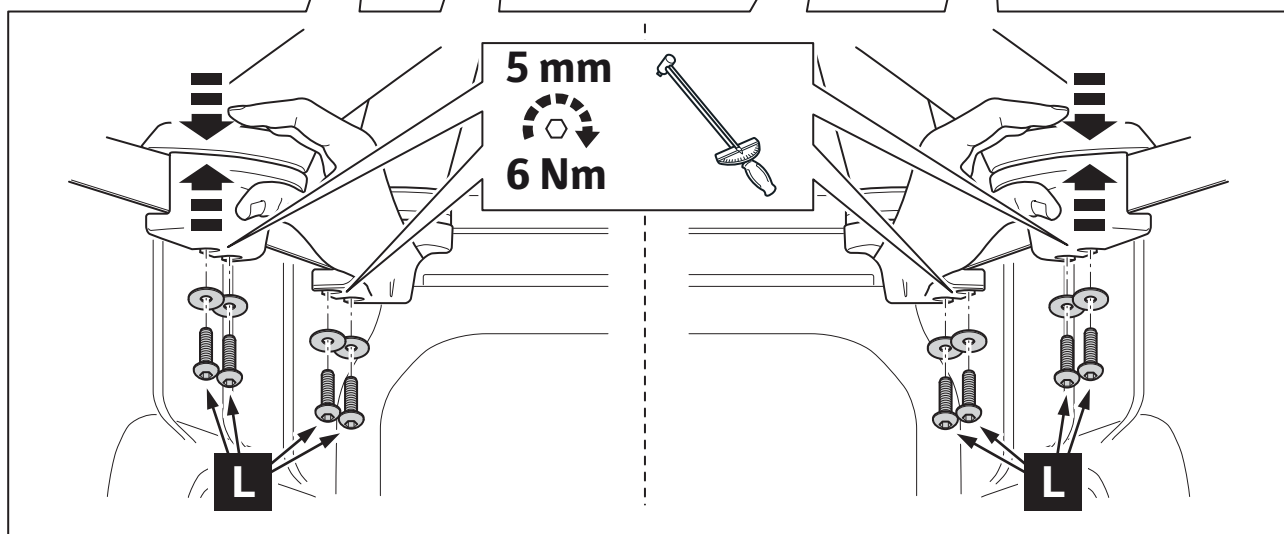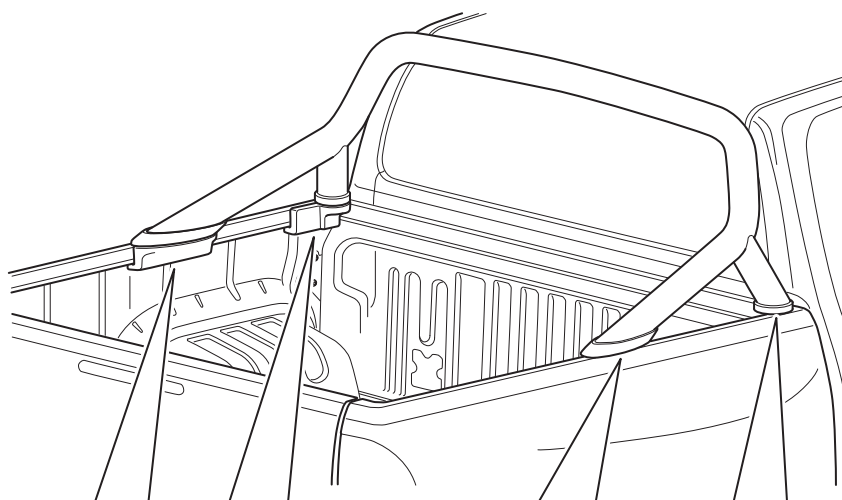

CHECK SHEET Page 1 of 1



TOYOTA






Model / Year Hilux - Extra/Double Cab High over bar
as from 2015/04

VIN n°


ALWAYS A
BETTER WAY

DURING INSTALLATION

1

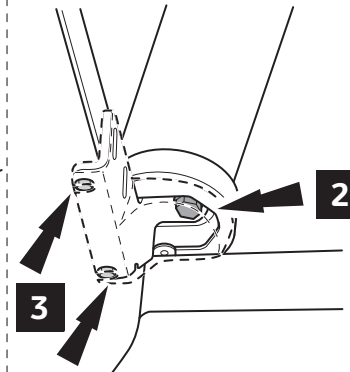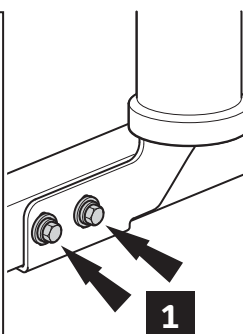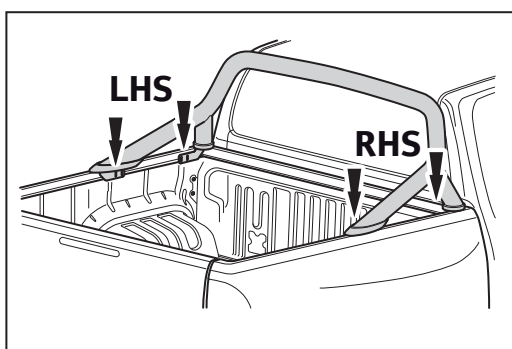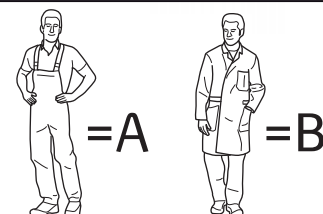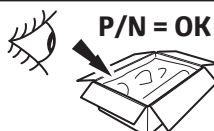

2



Serial Number


1	
2	
3	

	LHS	
	A	B
18 Nm 4x		
22 Nm 2x		
6 Nm 4x		<input checked="" type="text"/>

	RHS	
	A	B
18 Nm 4x		
22 Nm 2x		
6 Nm 4x		<input checked="" type="text"/>

AFTER INSTALLATION

1

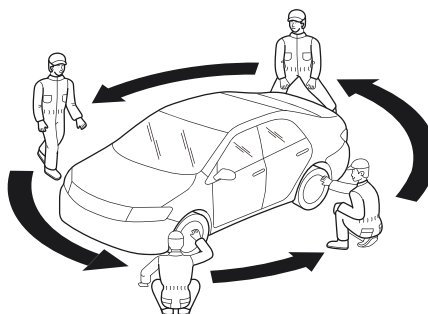

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: