



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Front skirt

Installation instructions




Model year: 2019/10
Vehicle code: *****-H*****W
Part number: PW154-10002


Manual reference number: AIM 005 002 - 0




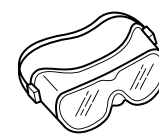

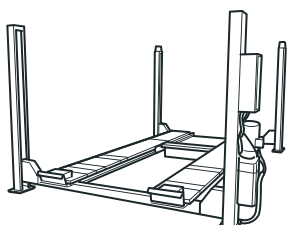






Revision Record


Rev. No.	Date	Page	Step	Remarks

PW154-10002


PW417-10002	90167-40057	90467-05170
		
A 1x	B 2x	C 4x

 = 	 = 	 = 	  = 	 = 
 = 	 = 	 = 	  = 	 =  START







 10 mm					
 Ø5 mm		  CLEANER / DEGREASER	 AIM 003 516-*	 10 mm	

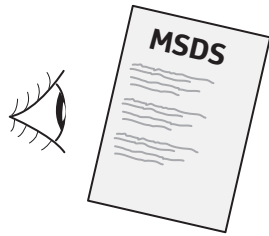


Material Safety Data Sheet


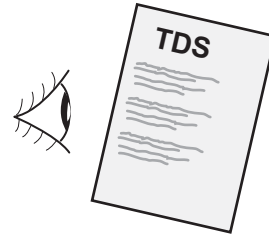


Technical Data Sheet

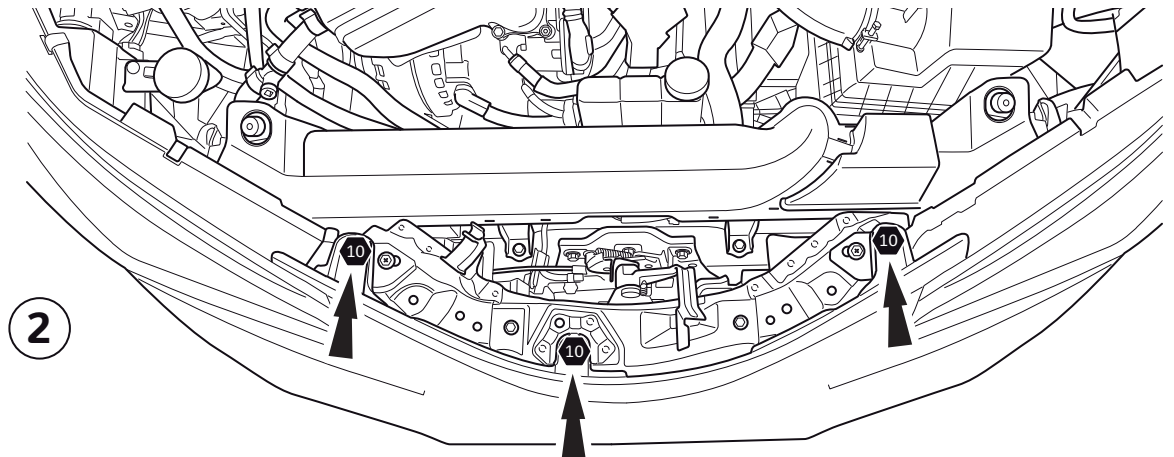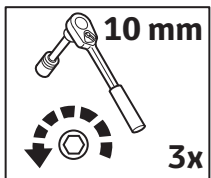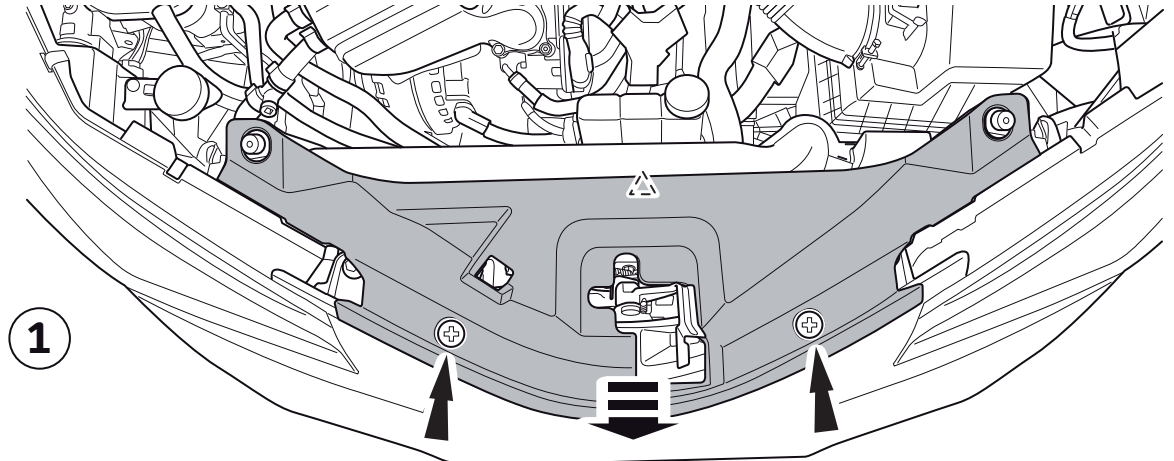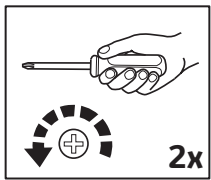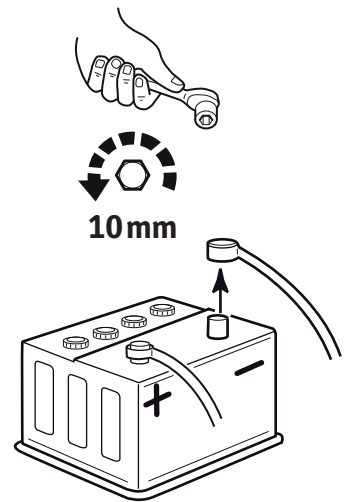
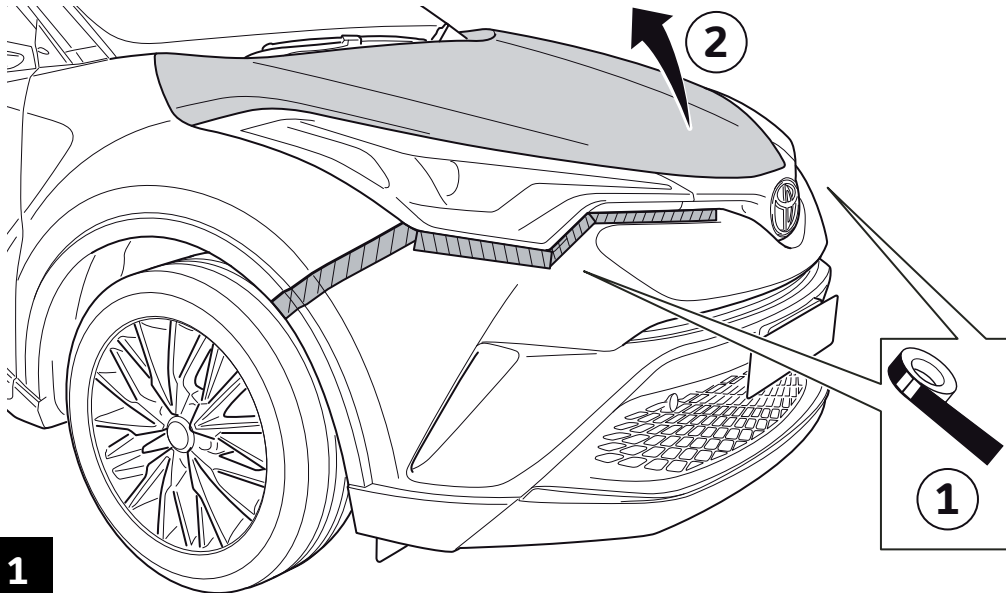


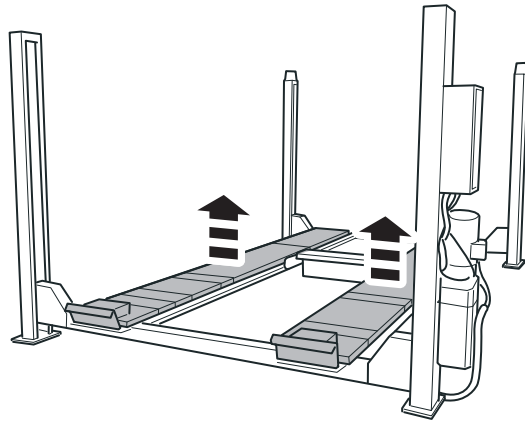


4

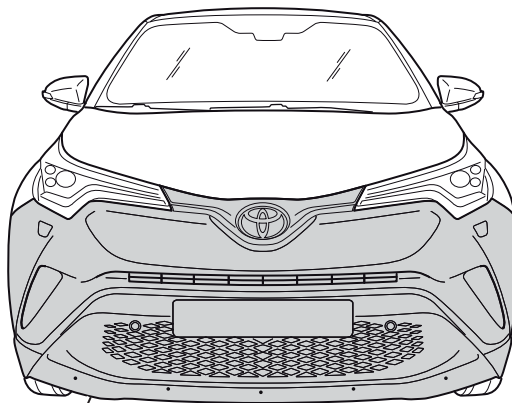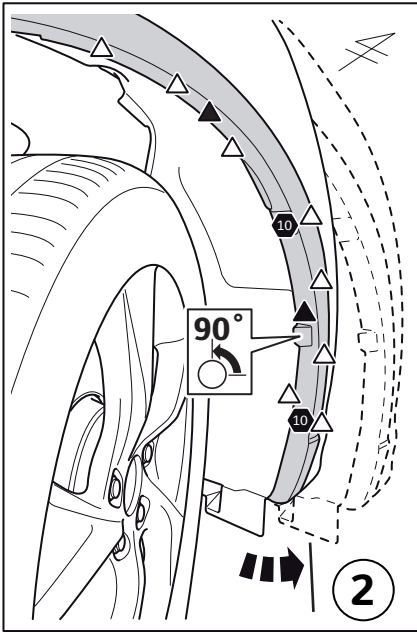




Y1

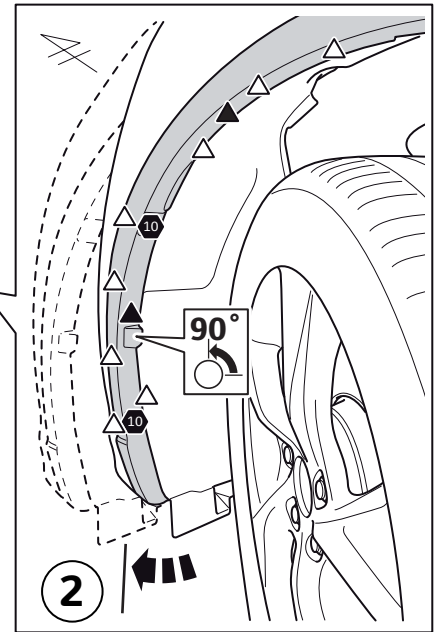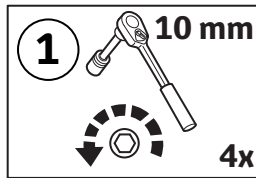

5

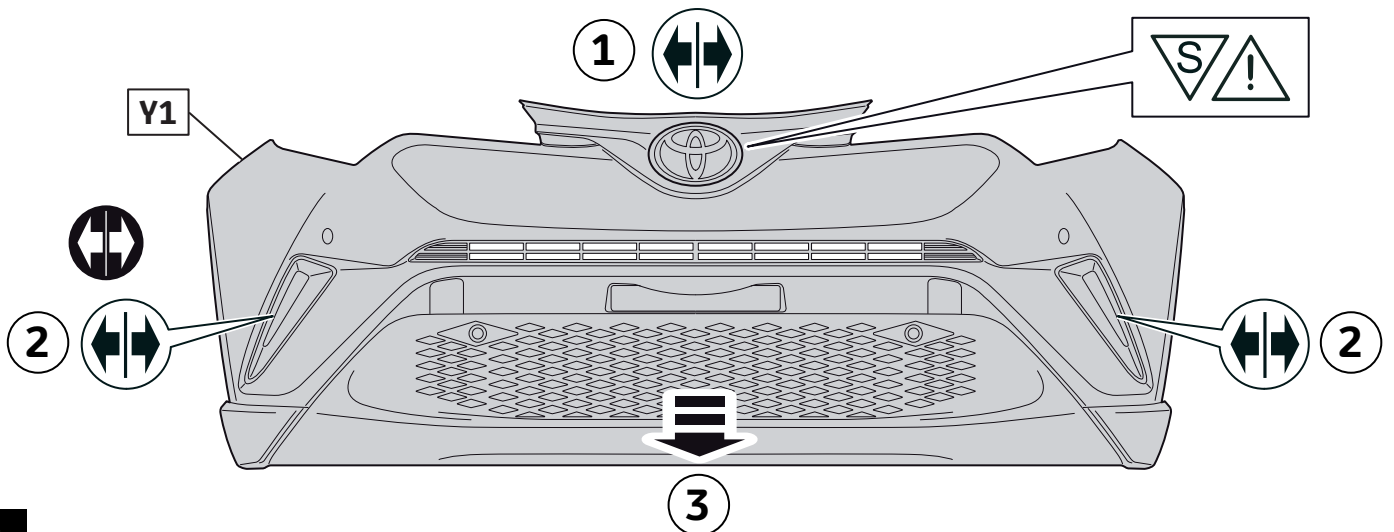



6

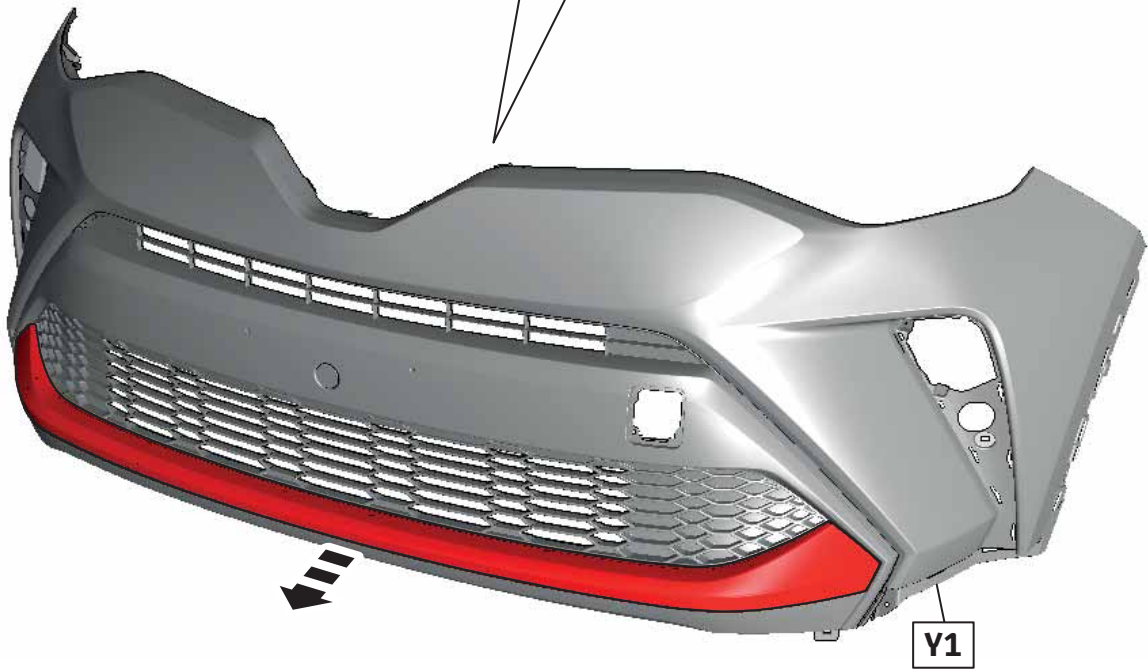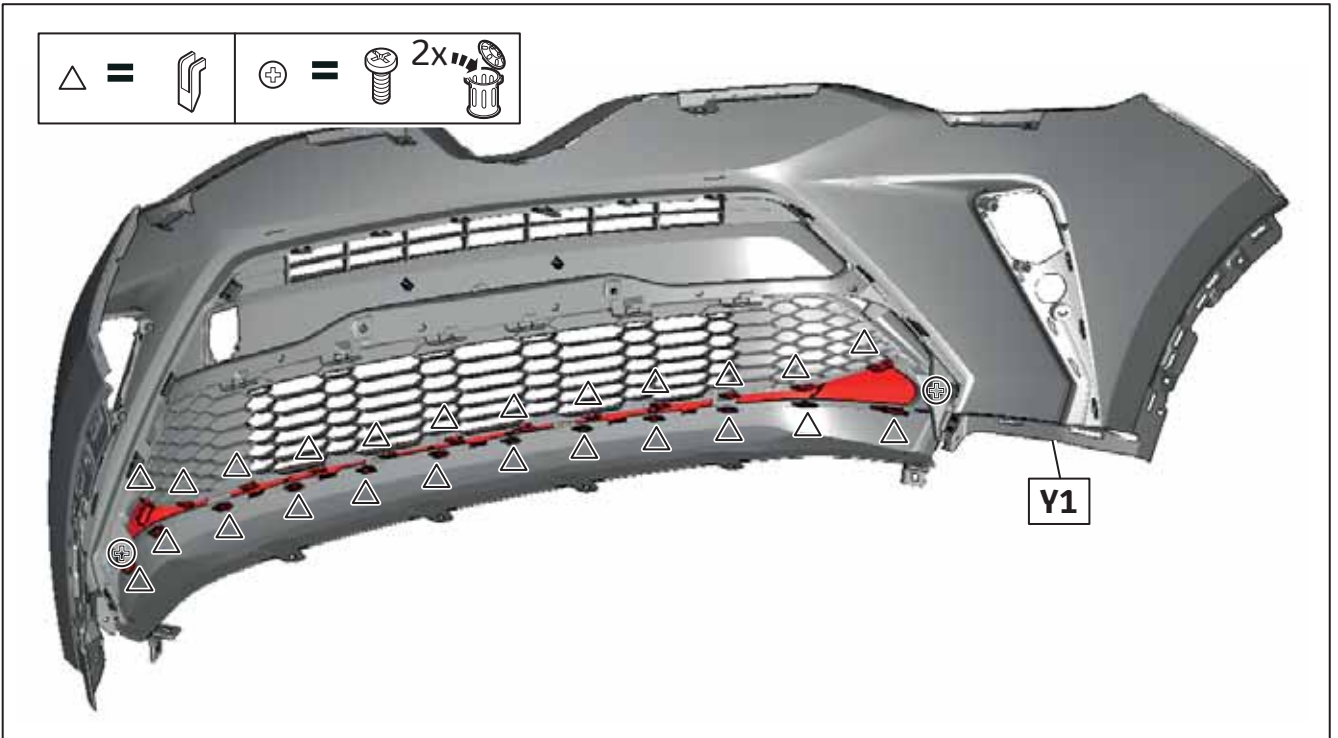



7

V1

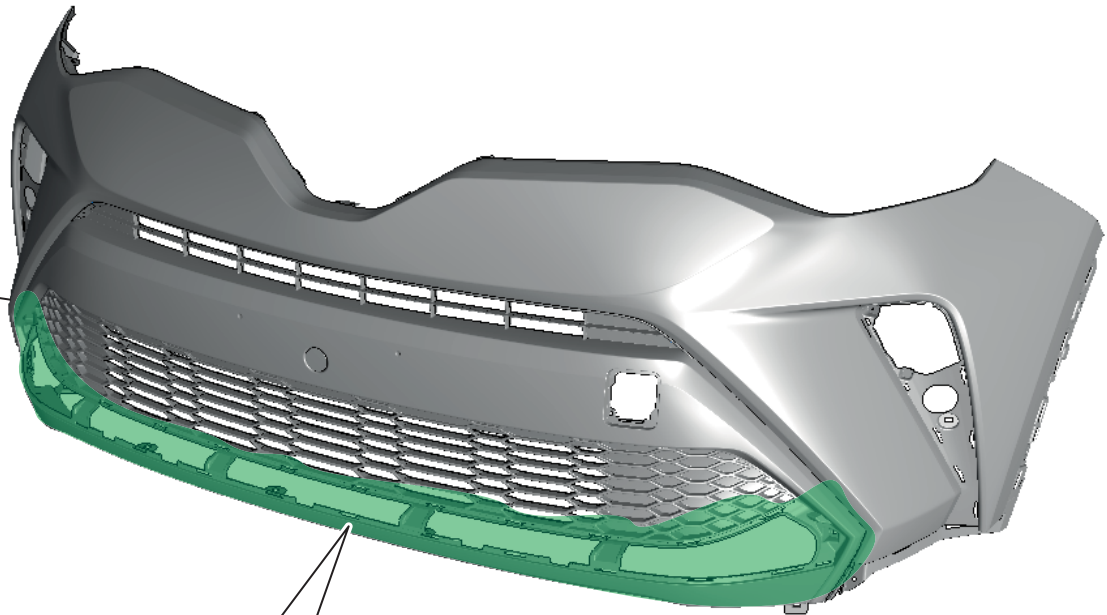









Y1

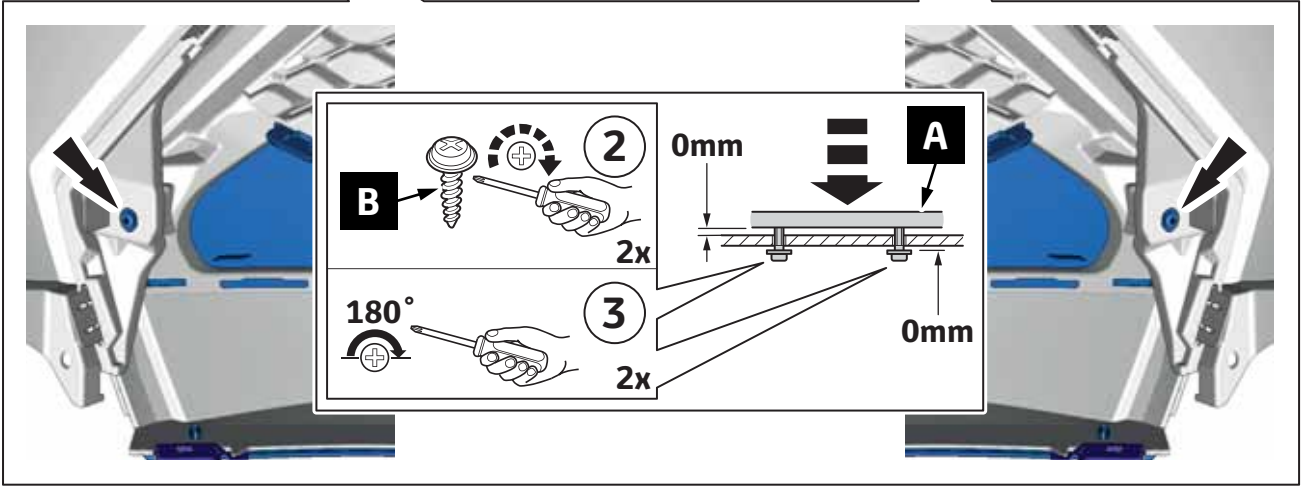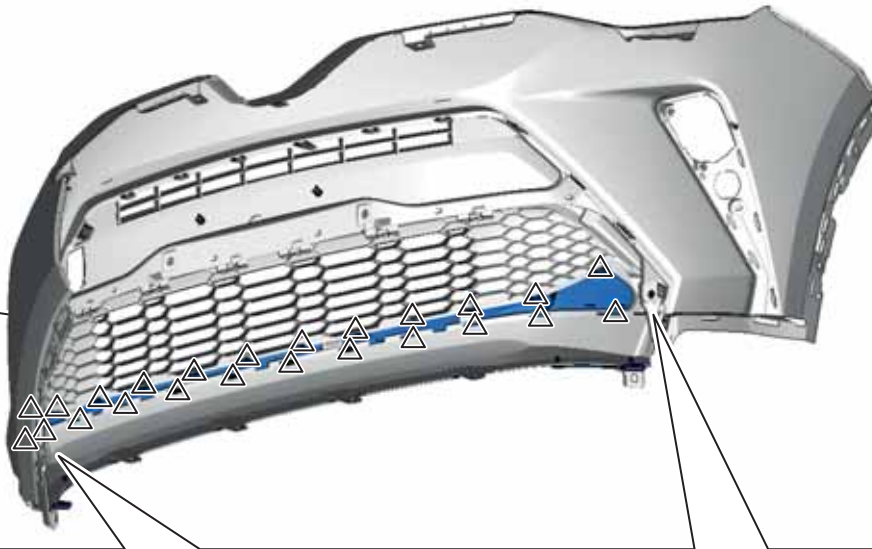

Y1

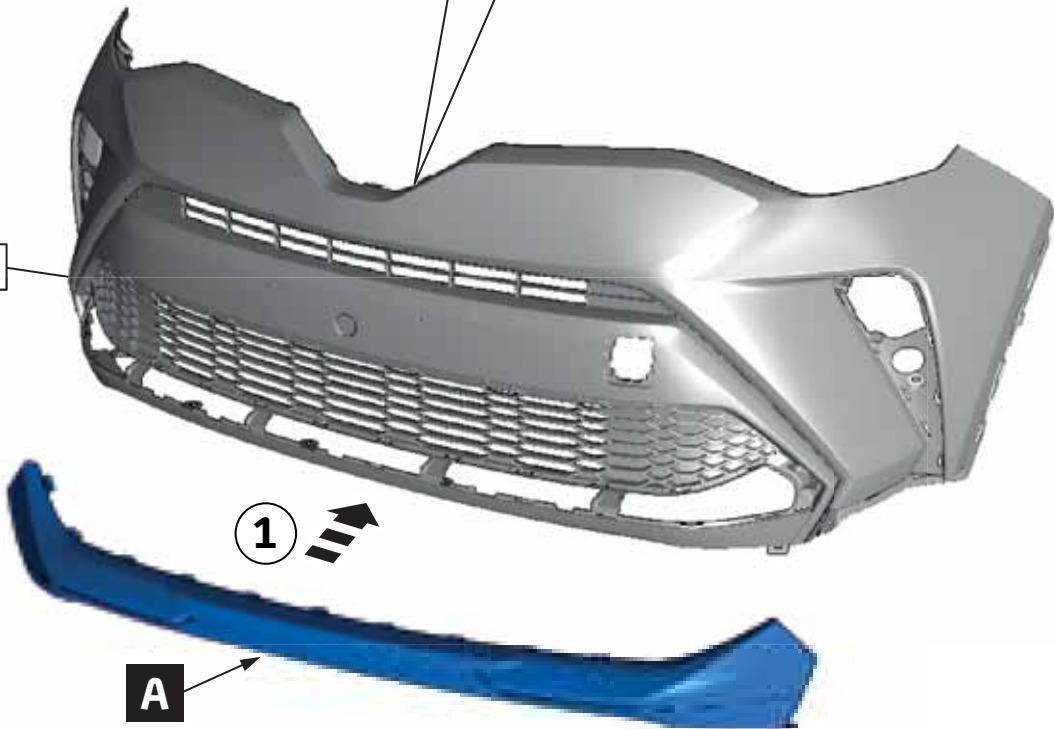


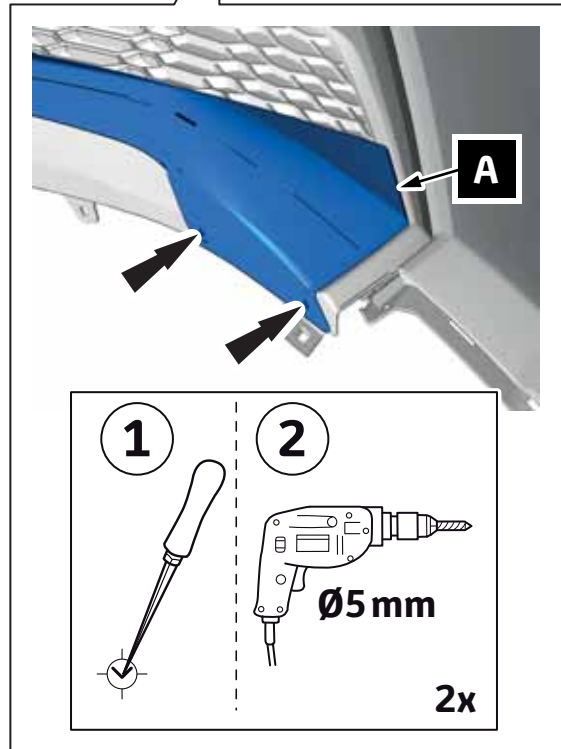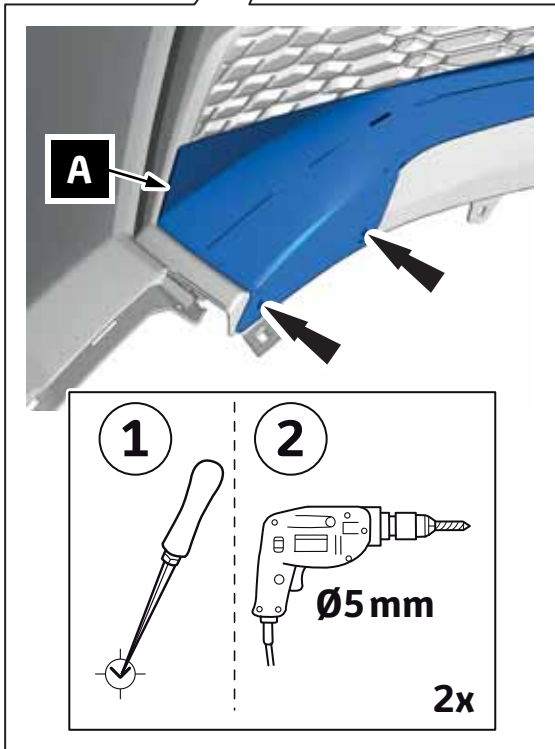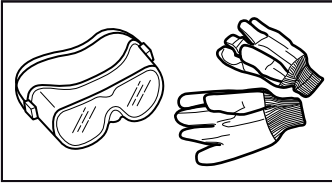

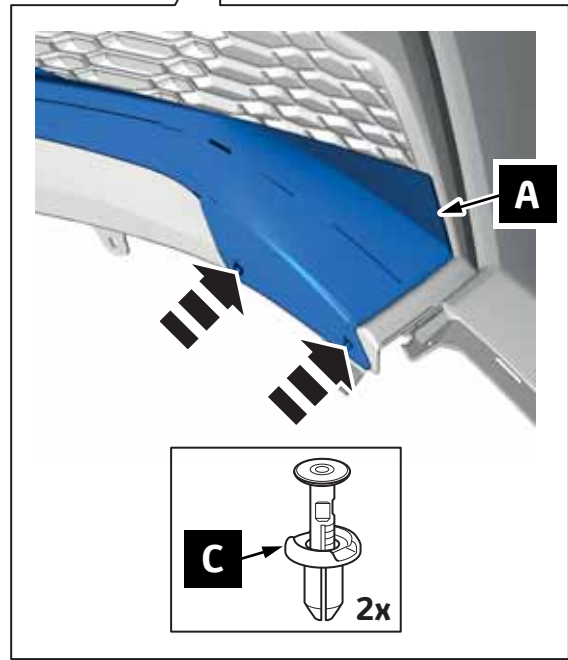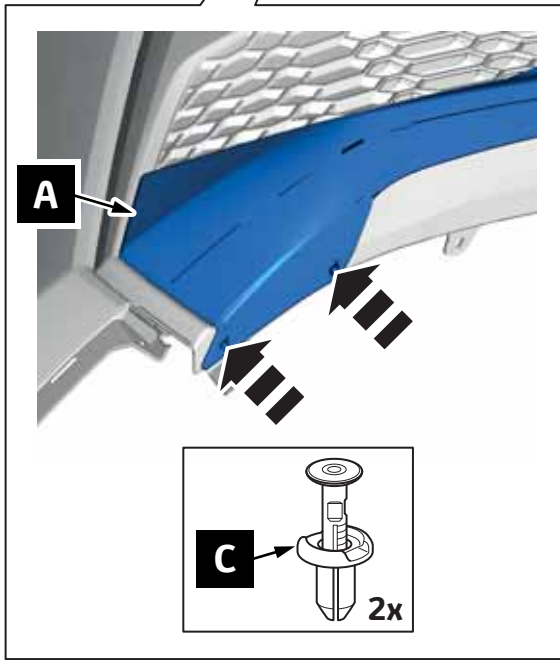


11

INFO

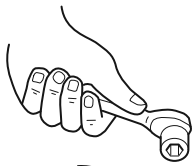


10mm


5,4 Nm

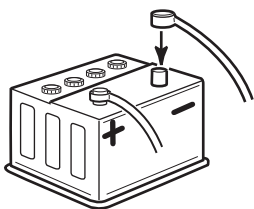

> 50 cm

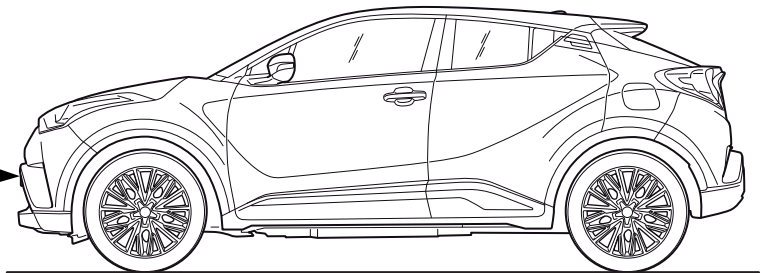

12

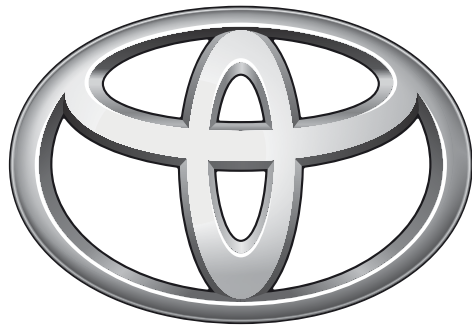

TOYOTA

CHECK SHEET

Sheet 1 of 2



TOYOTA

Model / Year Toyota C-HR
2019/10

Front skirt

VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

1

P/N = OK

=A =B

2

= OK

A B

3

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp:

CHECK SHEET

Sheet 2 of 2



TOYOTA

Model / Year Toyota C-HR
2019/10

Front skirt

VIN n°

ALWAYS A
BETTER WAY

AFTER INSTALLATION

1

5,4 Nm

CLICK

Serial Number

2

3

4

No DTC = OK

5

7

T1/T2/T3/T4

Beep

8

Installation Date:

... / ... /

Technician Name & Signature:

Stamp: