



Prius Plug-in

Front & rear set mudflaps

Installation instructions

ALWAYS A
BETTER WAY

Model year: 2016/09, 2019/05

Vehicle code: ZVW5**-AHX***

Part number: PW389-47000/2

Manual reference number: AIM 003 809 - 1

Revision Record

Rev. No.	Date	Page	Step	Remarks
⚠️1	29.03.19	1		Model year added

A 1x




B 1x




C 6x


Ø 3 mm

10 mm
21 mm


Ø10mm

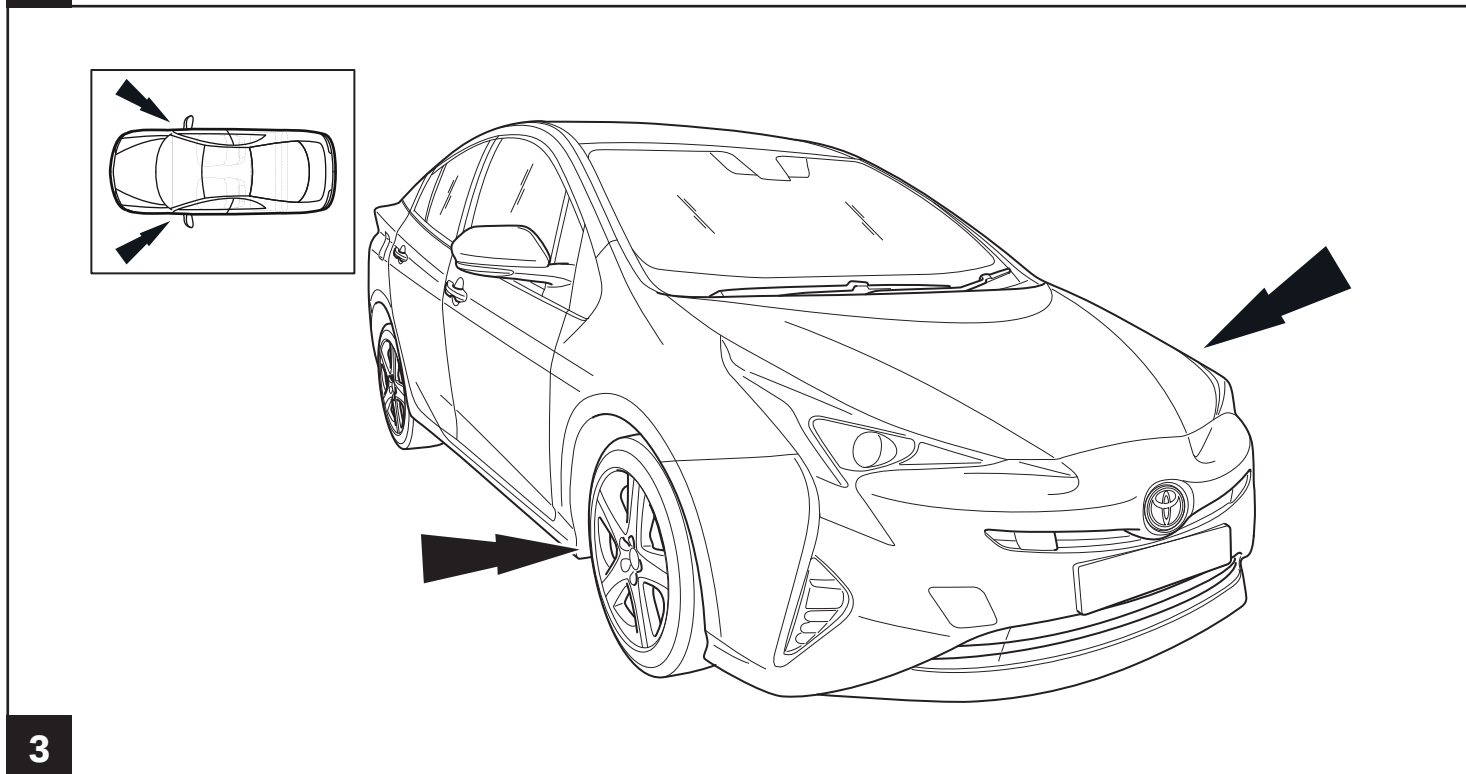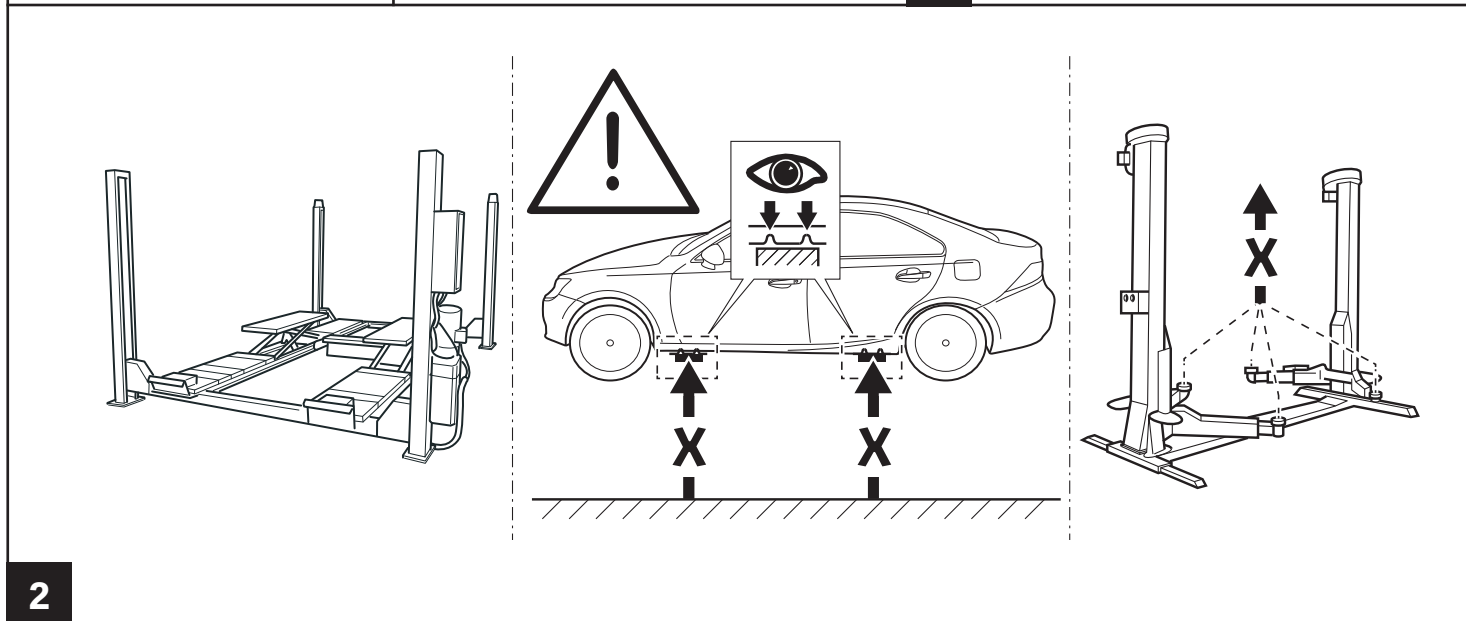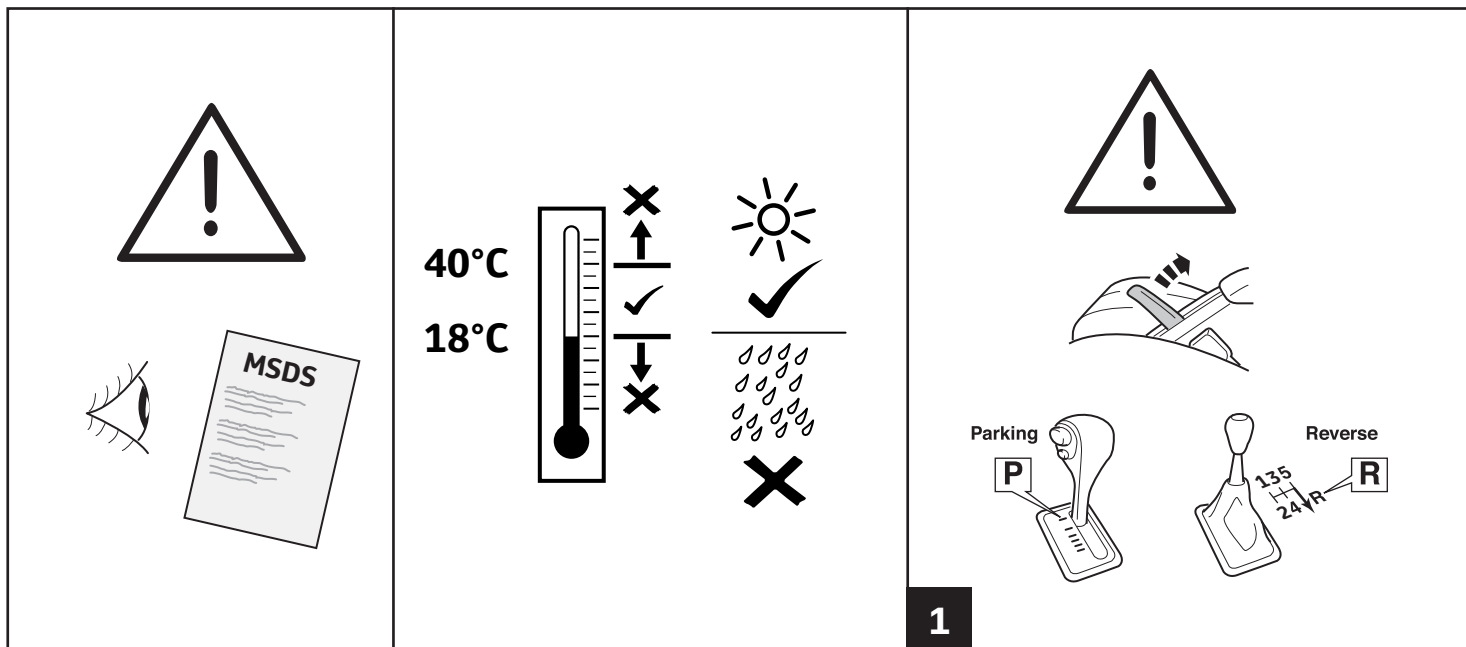

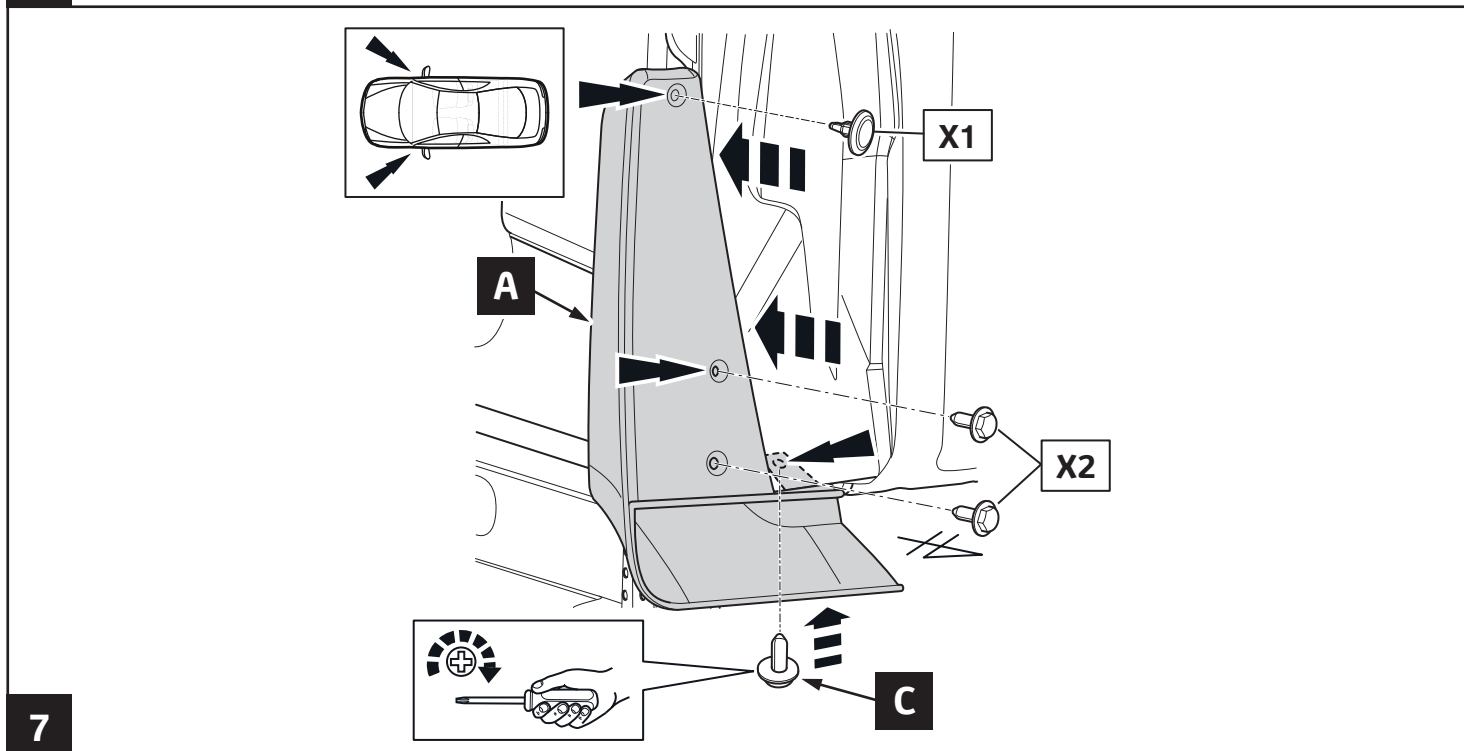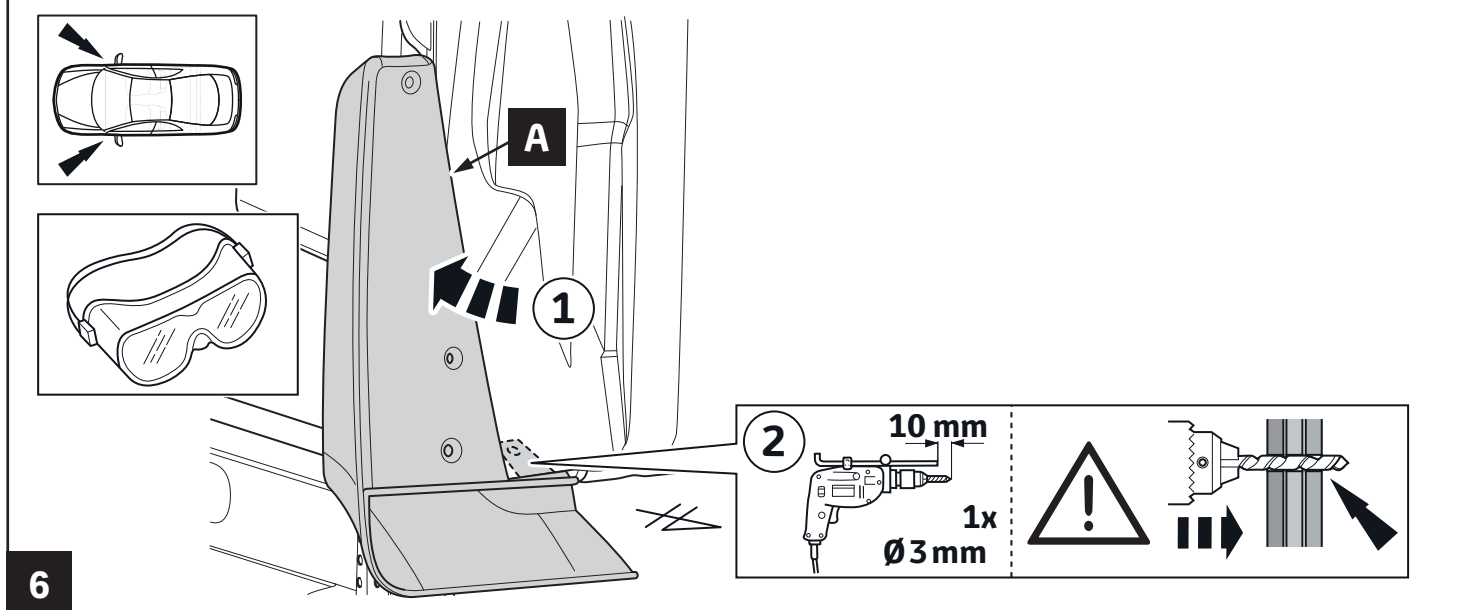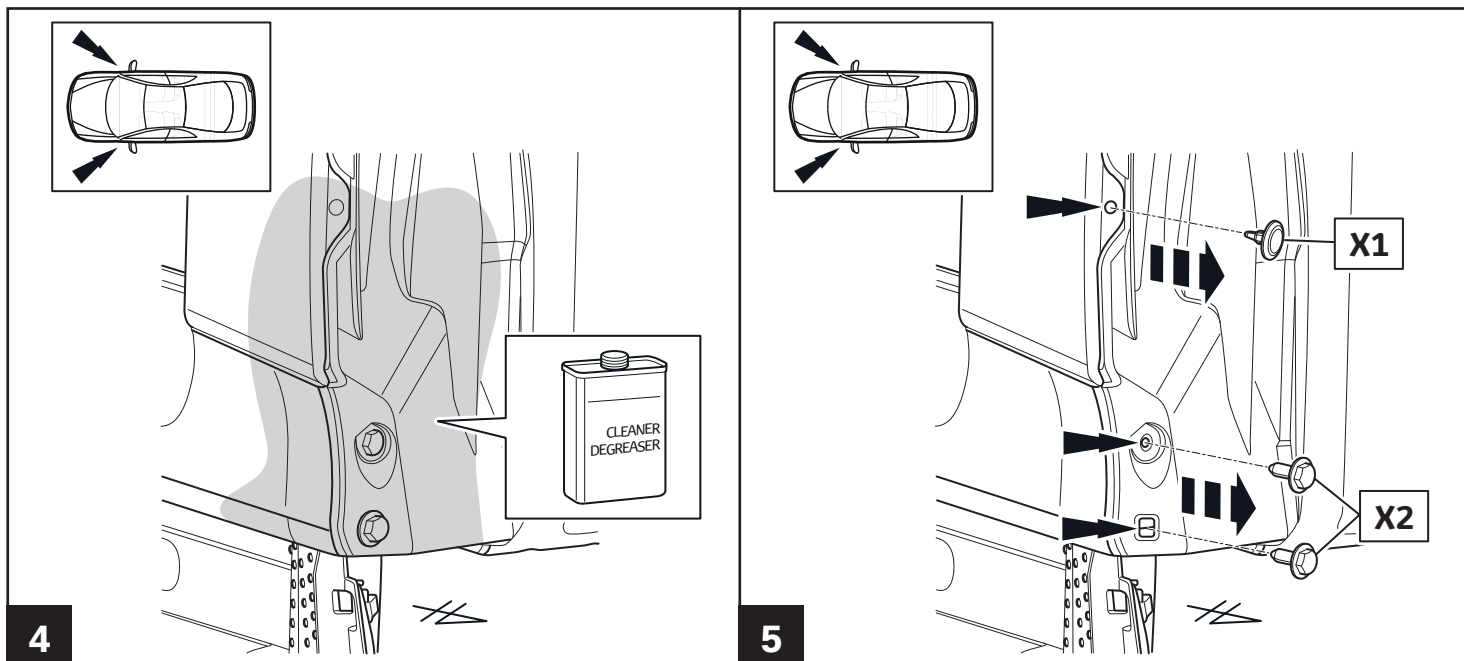


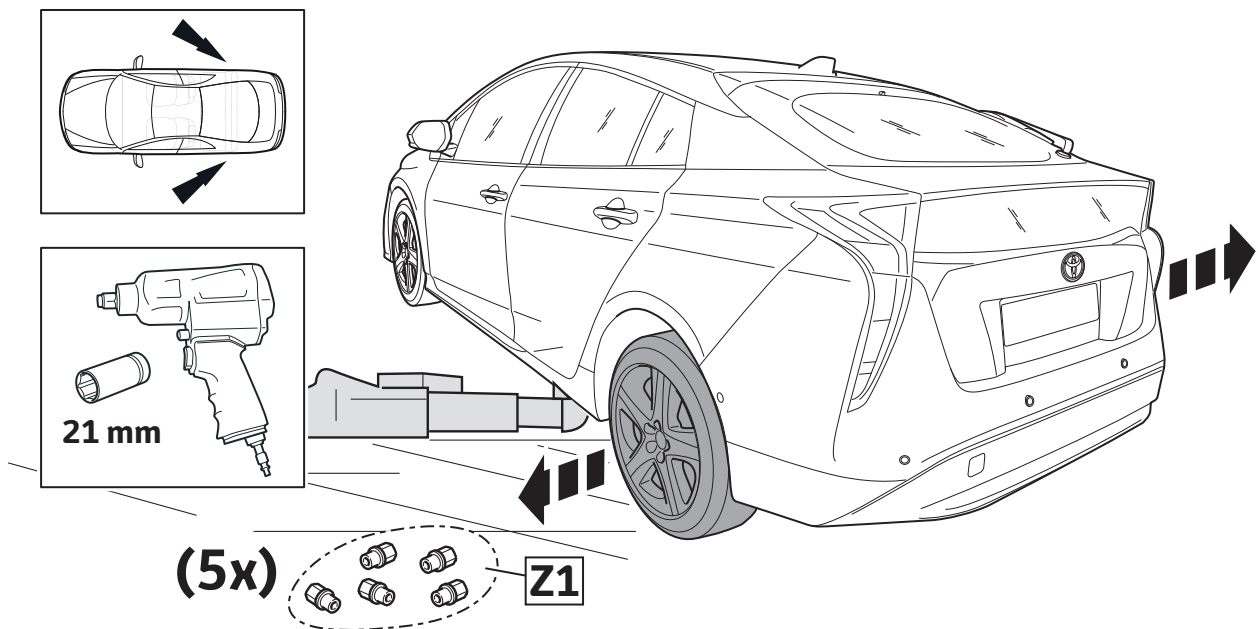


8

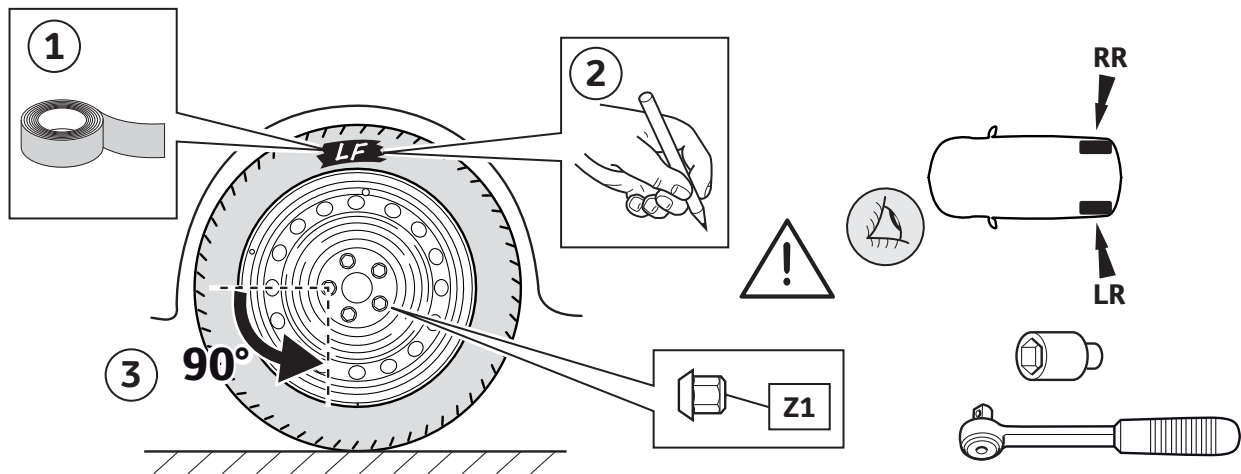



9

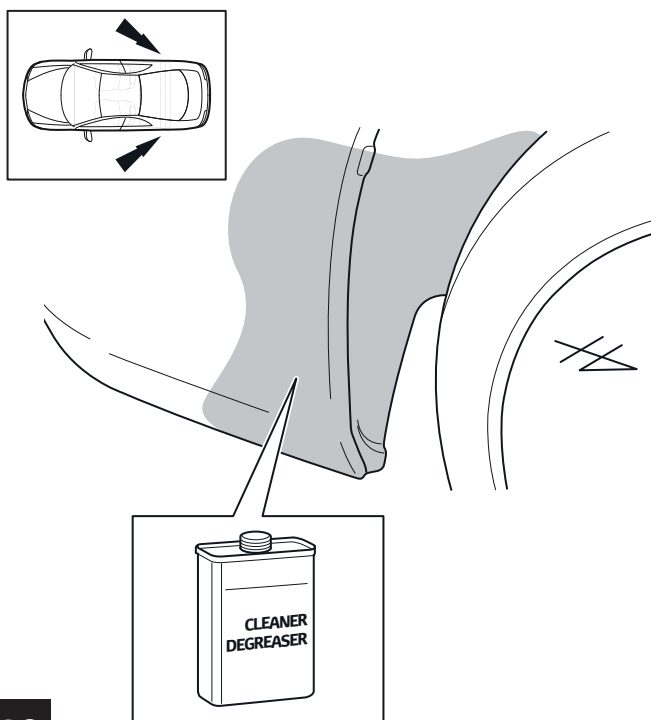


10

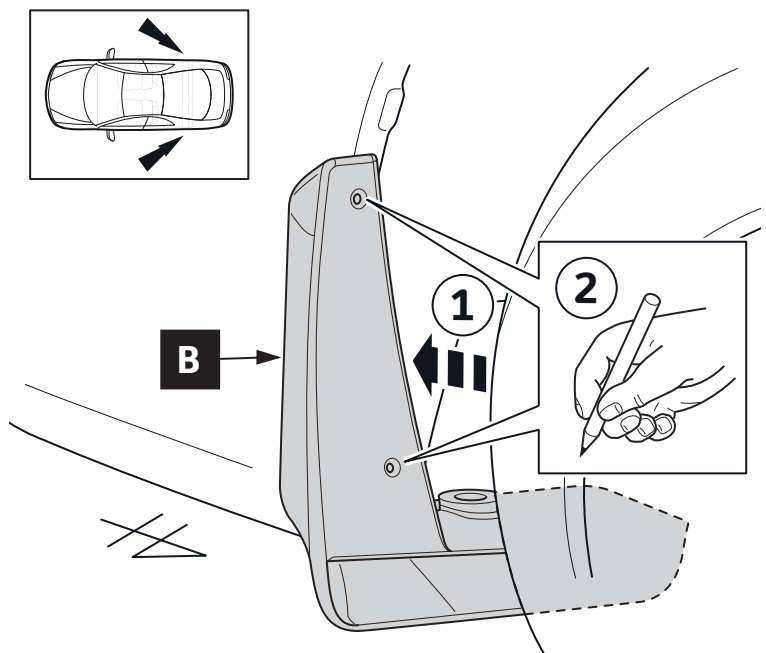


11

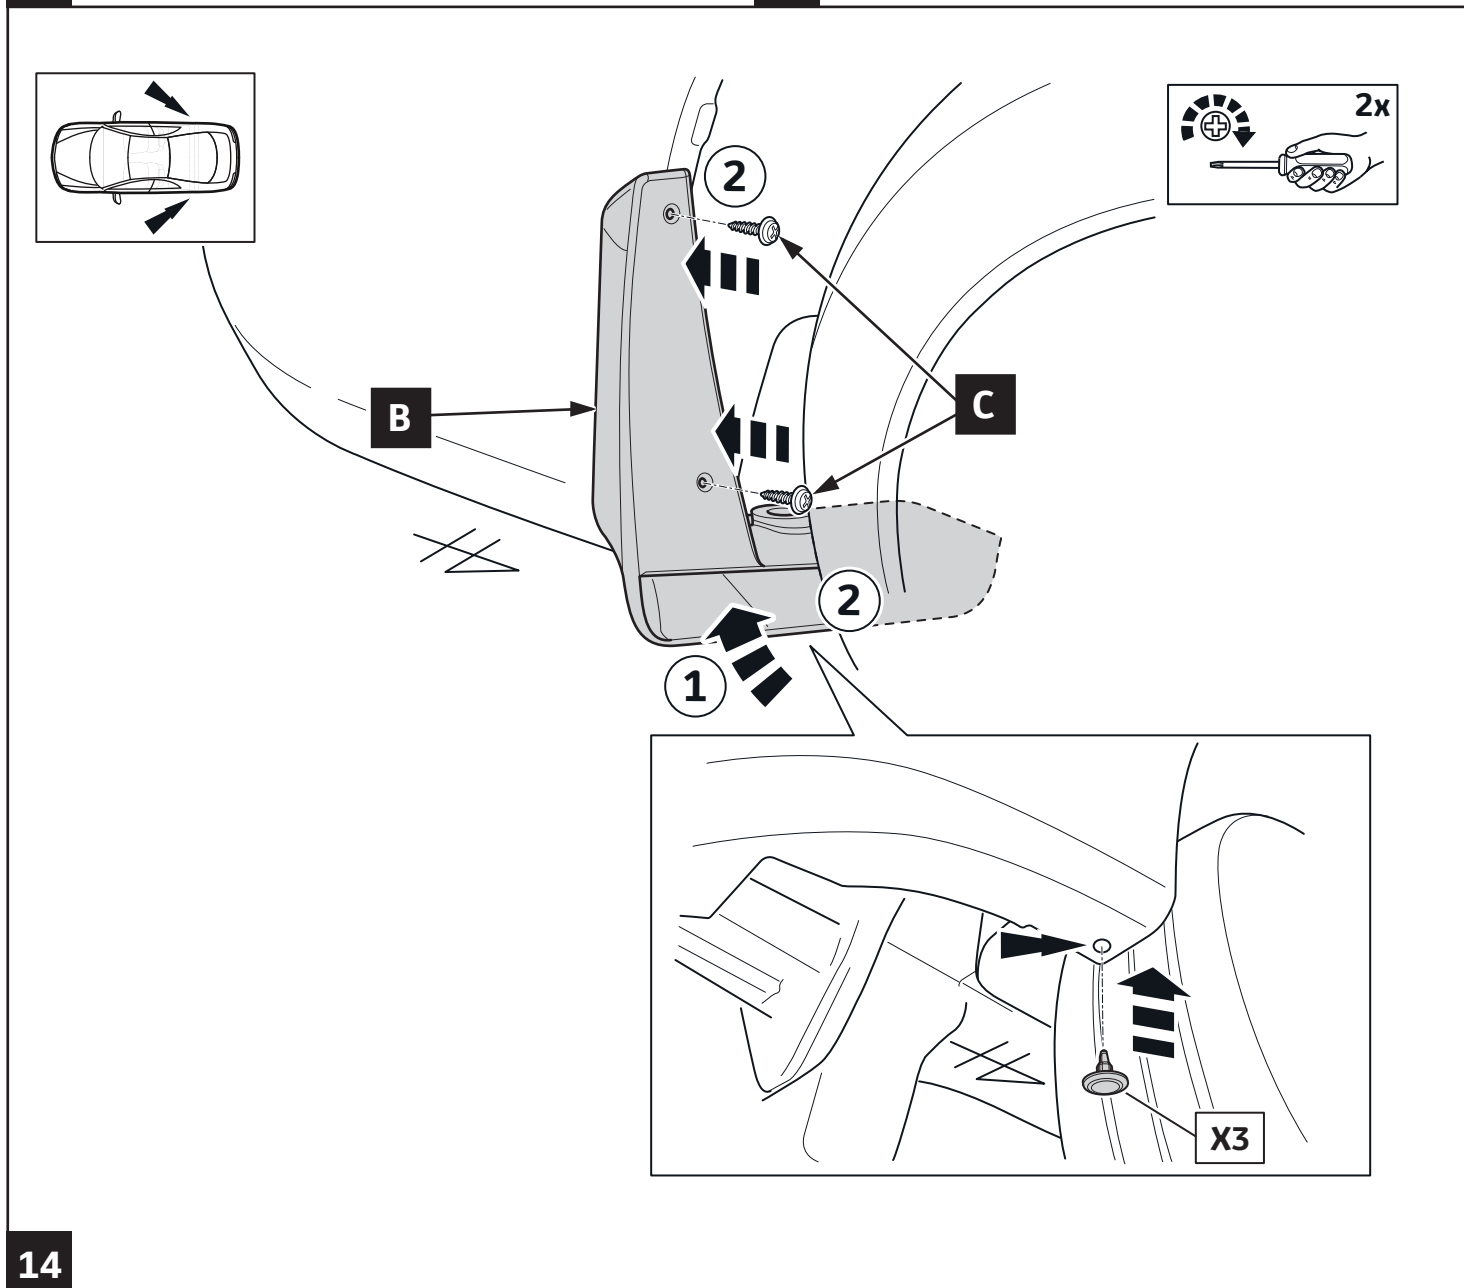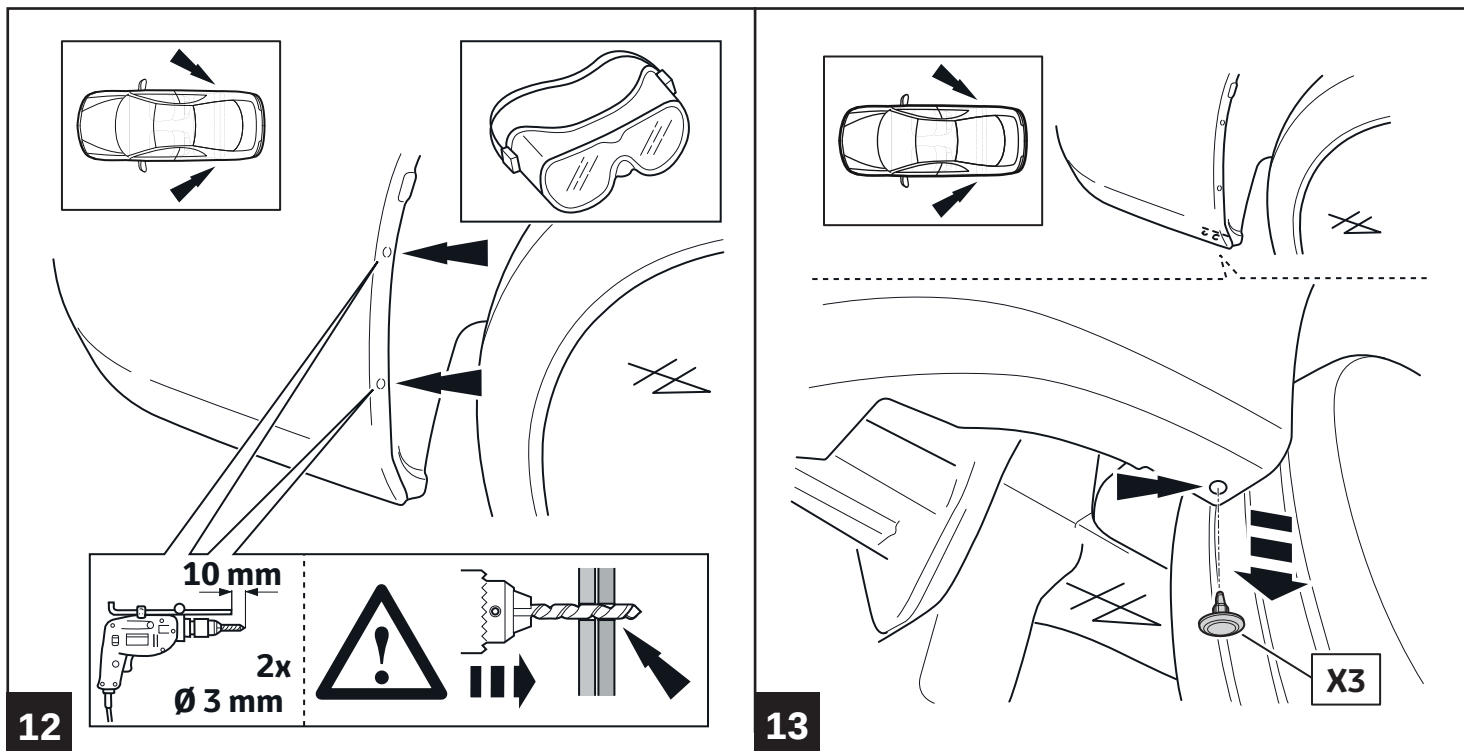


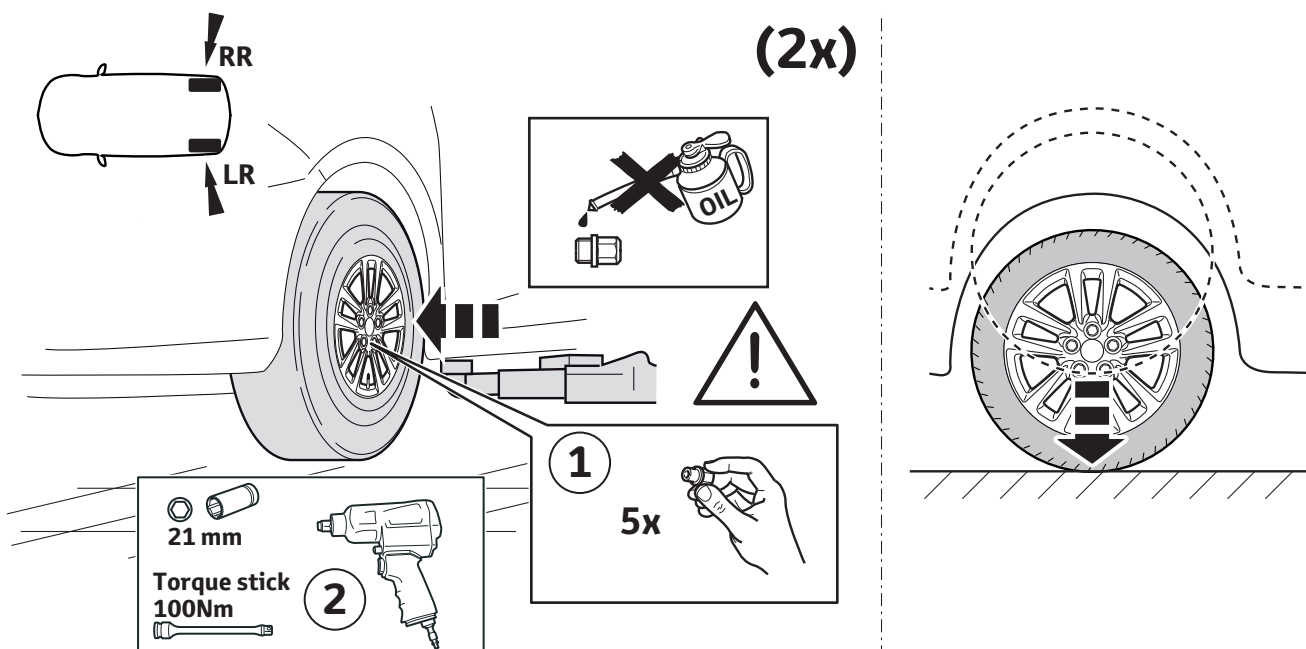

15

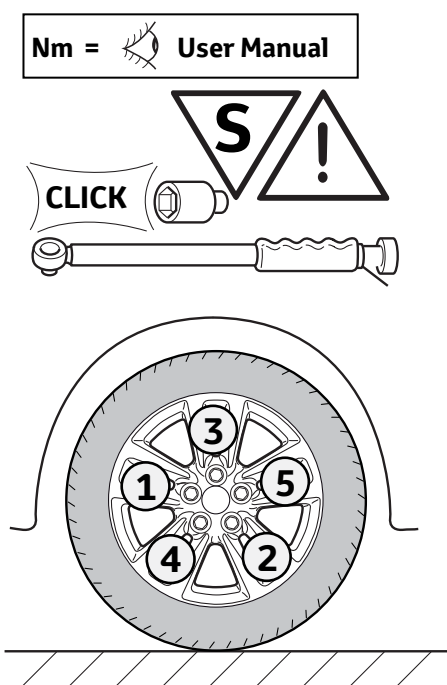

16

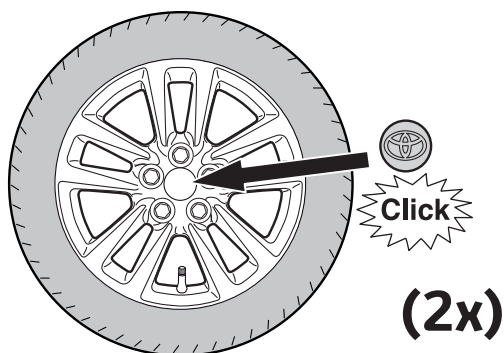

17

CHECK SHEET



TOYOTA

ALWAYS A
BETTER WAY

Model / Year


Prius Plug-in

Front & rear set



2016/09, 2019/05

mudlaps



VIN n°

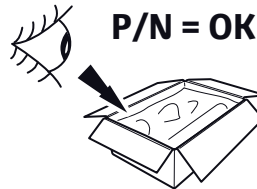


☐

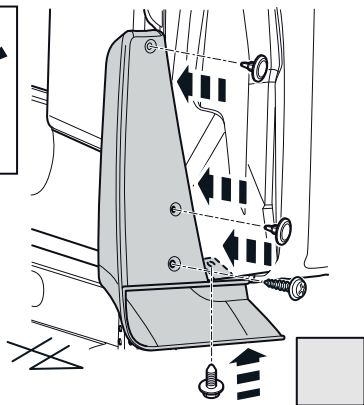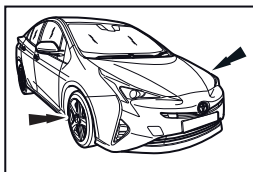

☐

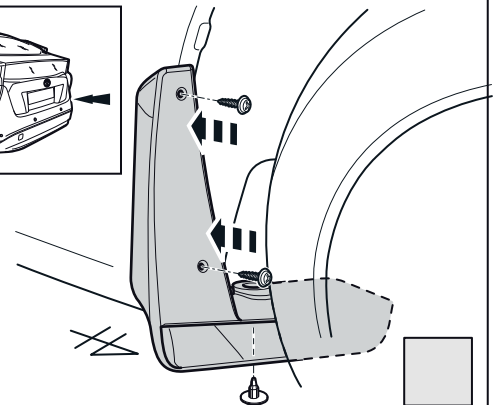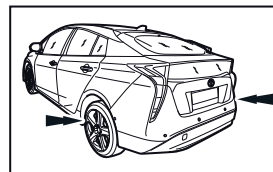

☐

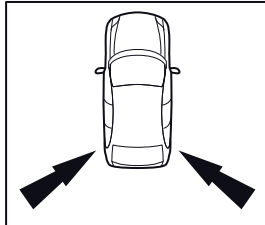

103 Nm



Serial Number




☐

=A




☐

=B

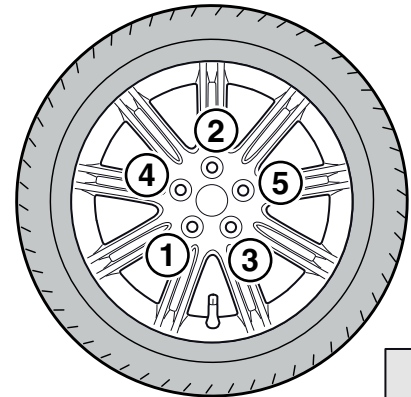

☐

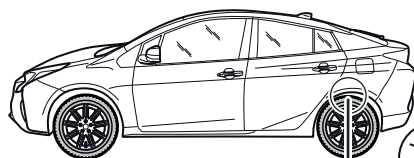


LR = LR = OK

A

☐

B

☐

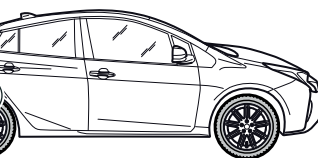

RR = RR = OK

A

☐

B

☐

Installation Date:

... / ... / ...

Technician Name & Signature:

Stamp: