



TOYOTA

ALWAYS A
BETTER WAY

Avensis

Mudflaps, front set

Installation instructions

Model year: 2008/11, 2011/11, 2015/05


Vehicle code: **T27**-A****W

Part number: PZ416-T0969-00

Manual reference number: AIM 003 416 - 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

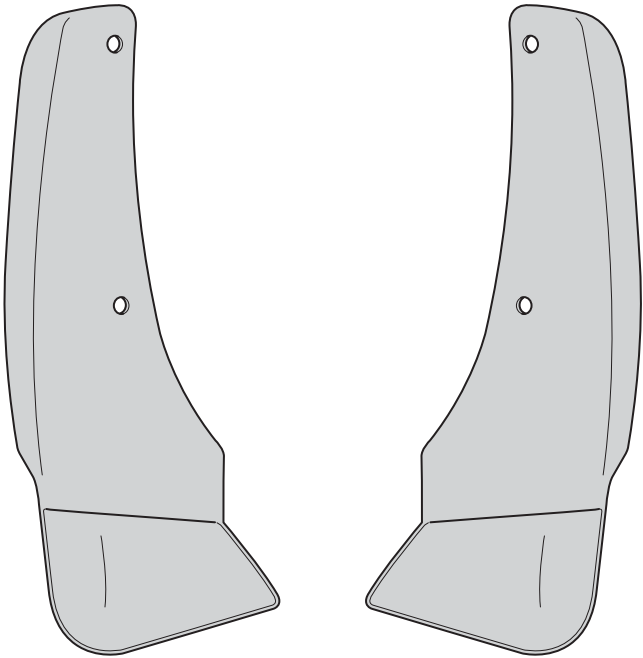

A

1x







B

2 x





10 mm



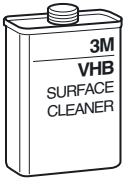


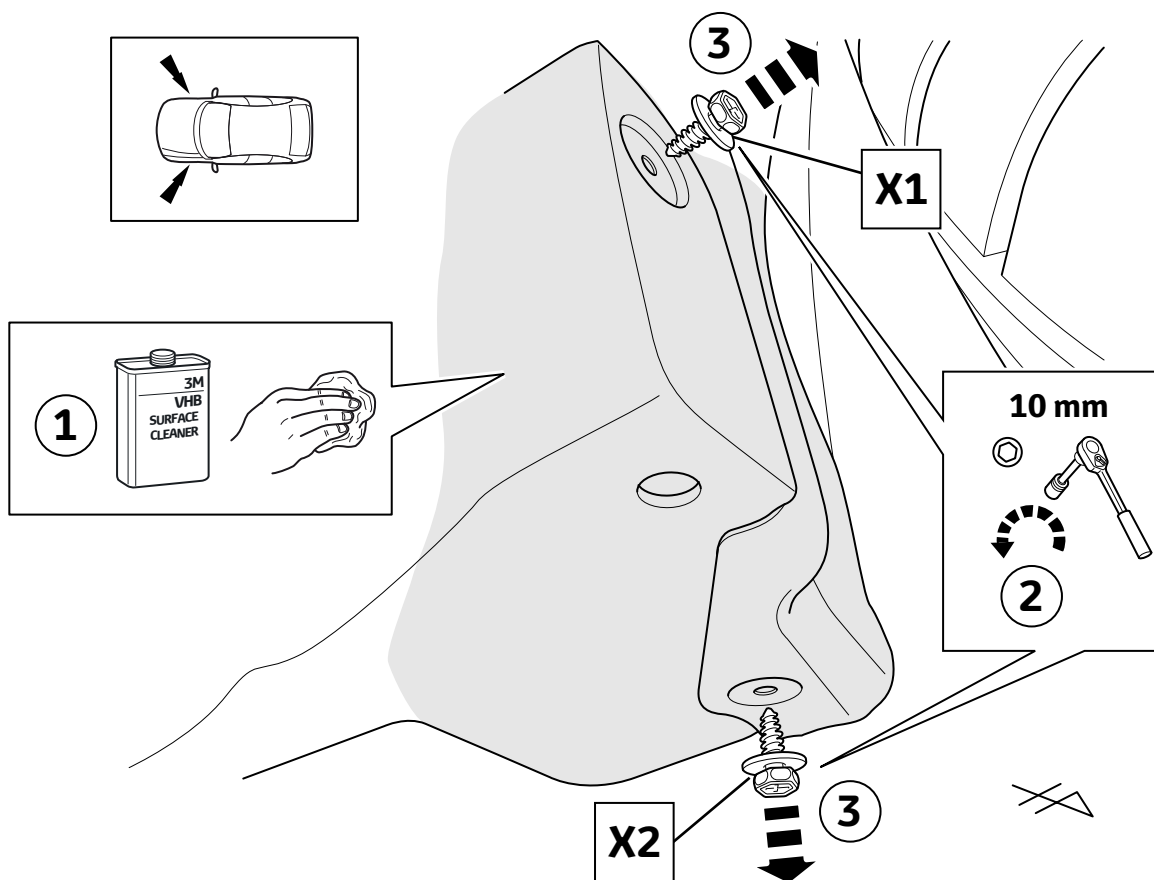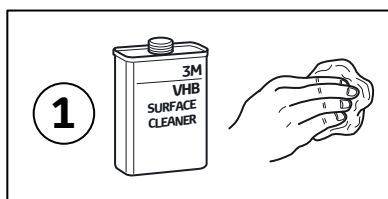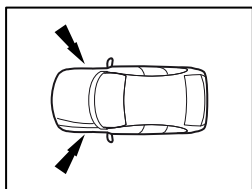

1

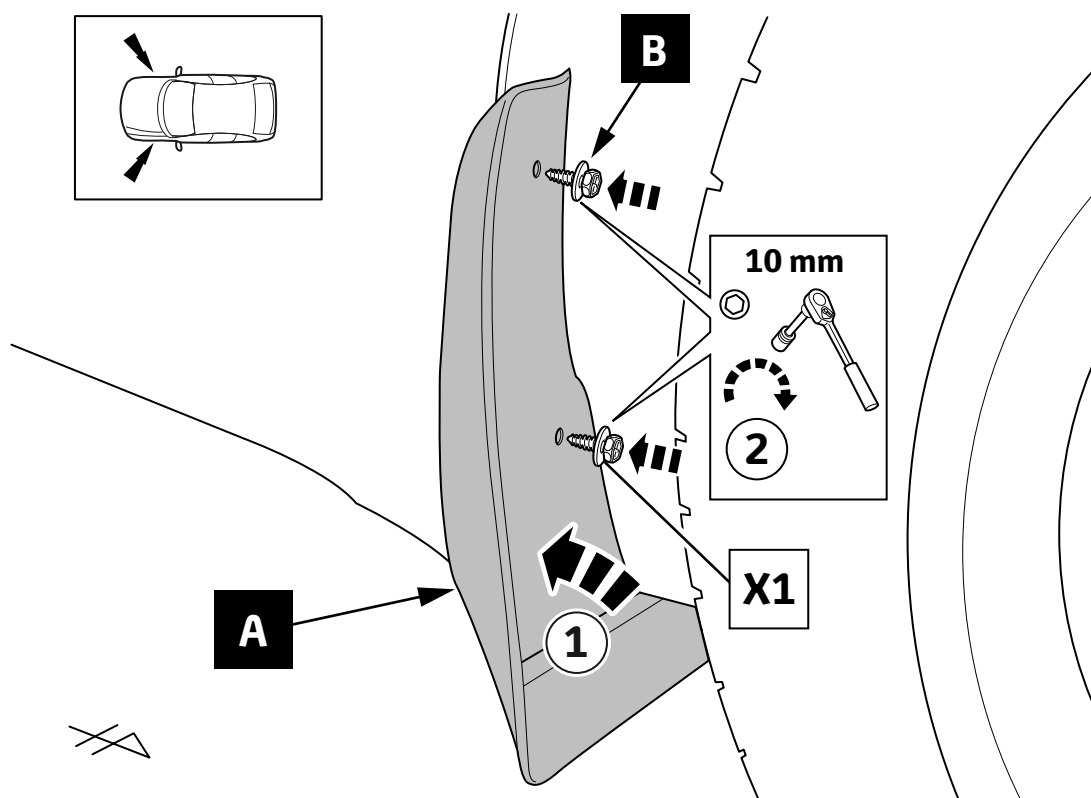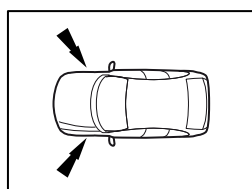

2

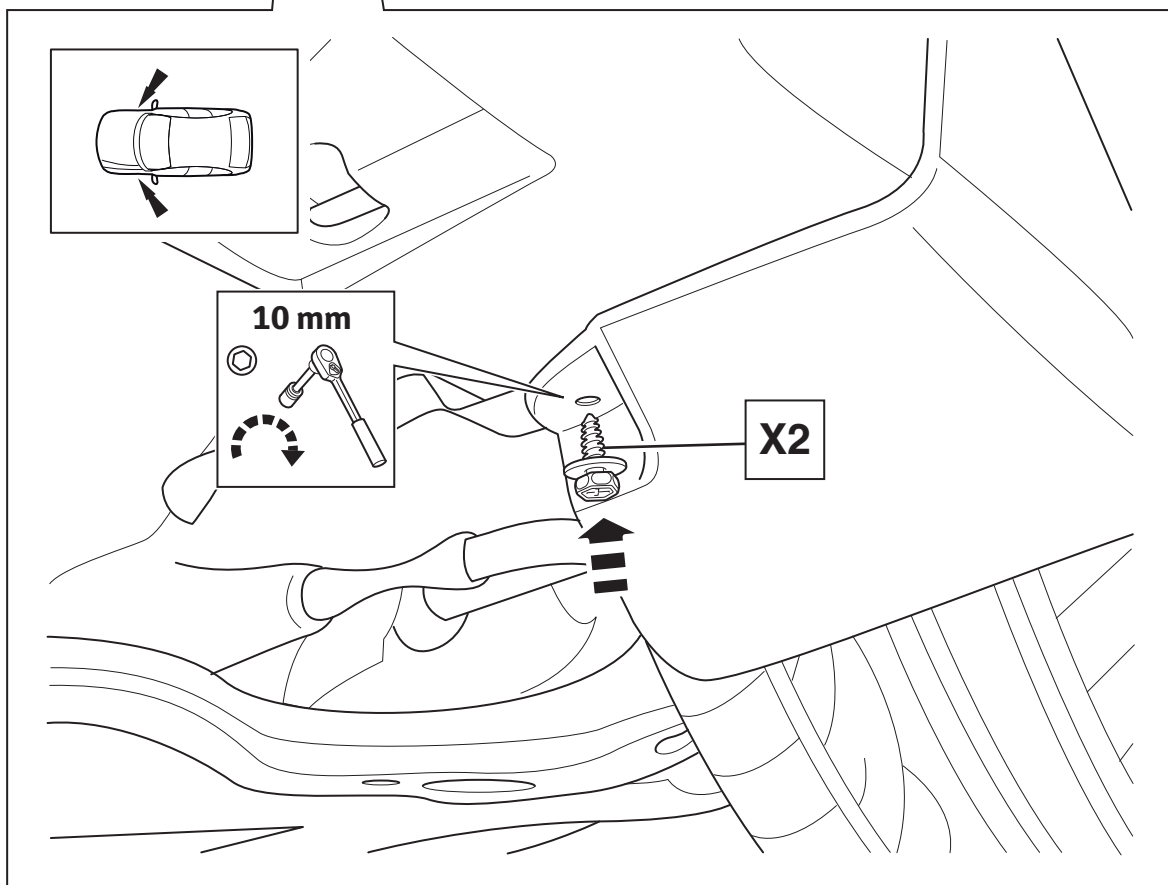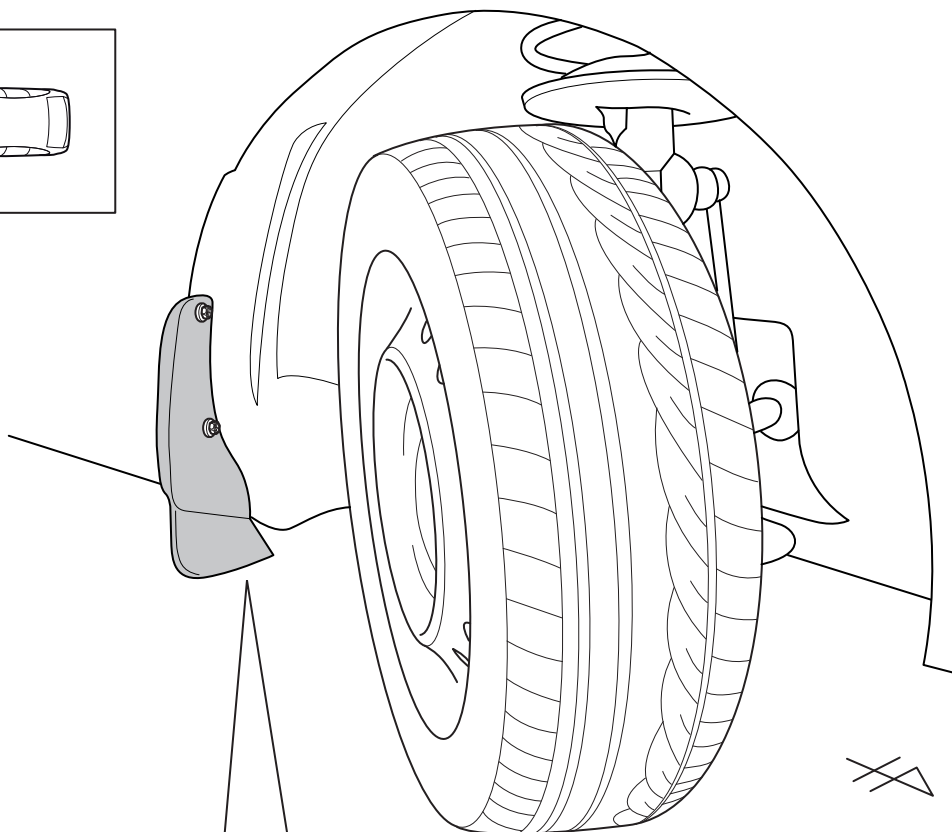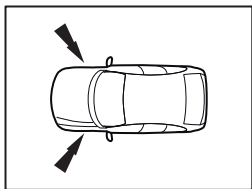

CHECK SHEET




TOYOTA


Model / Year **Avensis 2008/11** **Mudlaps, front set**
2011/11, 2015/05


VIN n°

ALWAYS A
BETTER WAY


P/N = OK


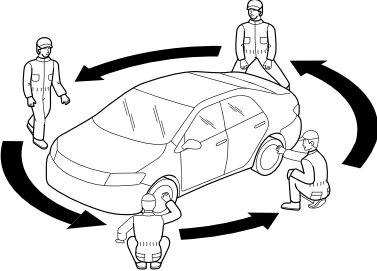
☐

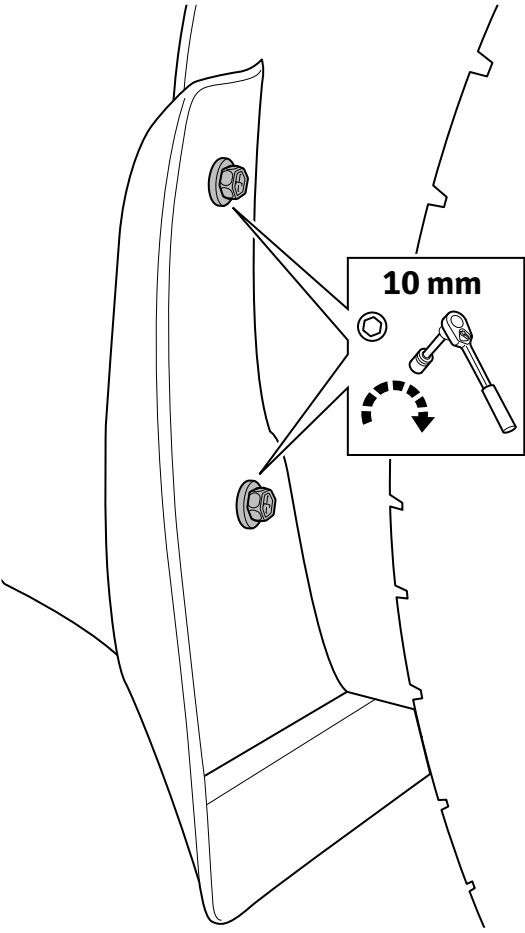

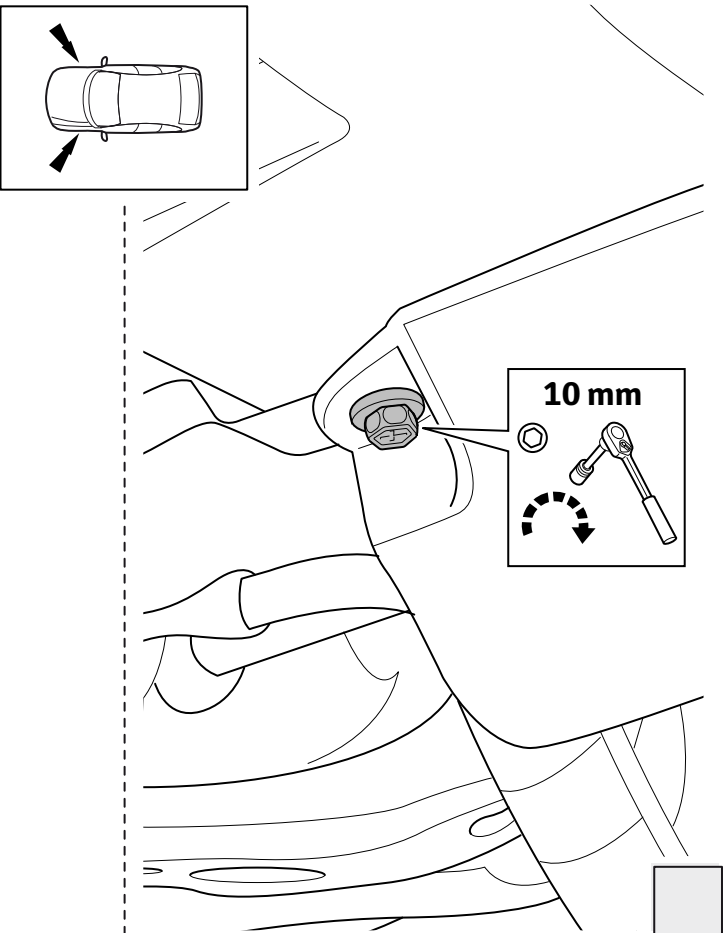☐





= OK

☐

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: