



GT86

Front & Rear Set Mudflaps

Installation instructions

ALWAYS A
BETTER WAY

Model year:	2012/04, 2016/08
Vehicle code:	ZN6-AKE*, ZN6-ALE*
Part number:	PU060-18013-P1

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	31.05.16	1, 2		X		
1	31.05.16	3	1-4	X		
1	31.05.16	4	6, 8-10	X		
1	31.05.16	5	11-17	X		
1	31.05.16	6	18	X		
1	31.05.16	7			X	

PU060-18013-P1

A

1x 1x

B

1x 1x

C

C1
M5x20mm 4x

C2
M5 4x

C3
2x

C4
2x

D

D1
M5x20mm 6x

D2
M5 2x

D3
M5 4x

D4
2x







21 mm

max 10 mm


Ø 6 mm


Ø 8 mm

CLEANER /
DEGREASER

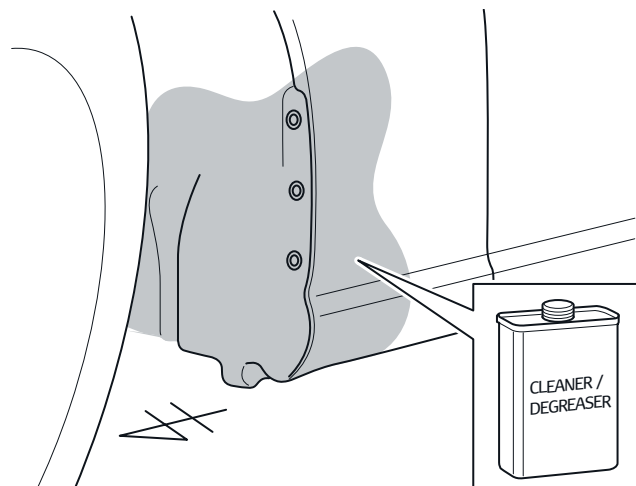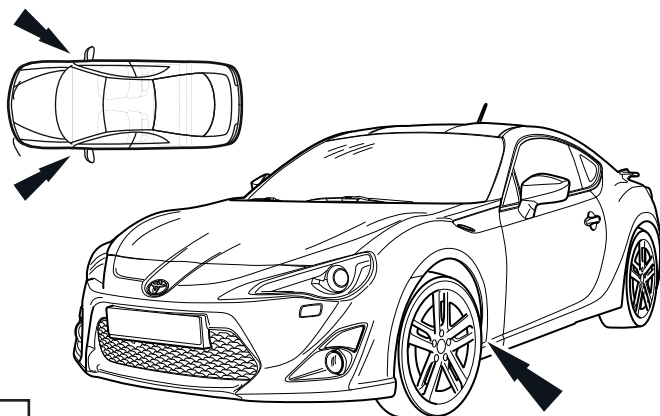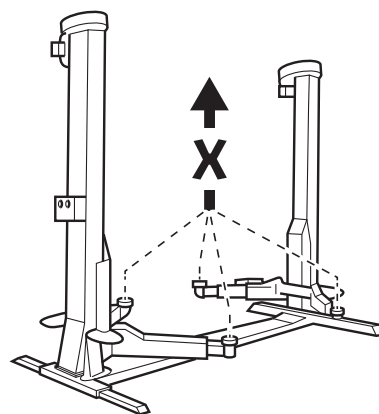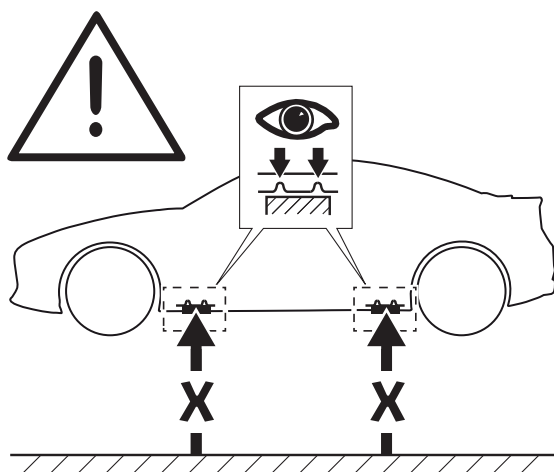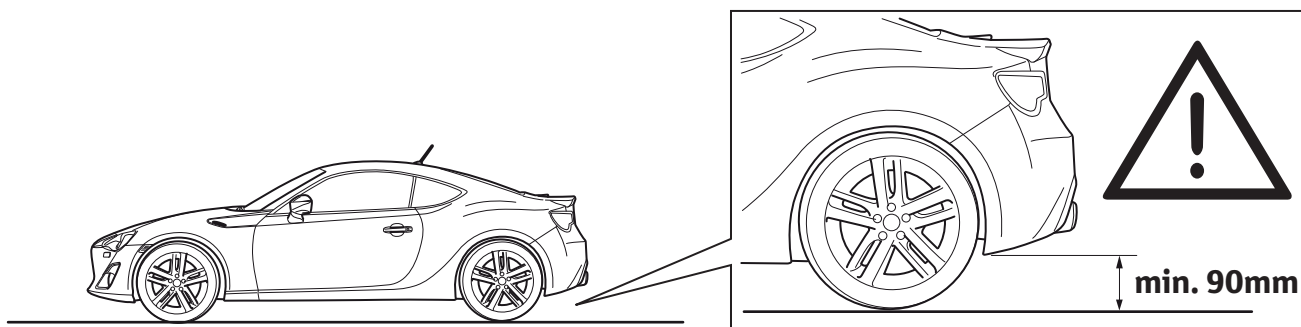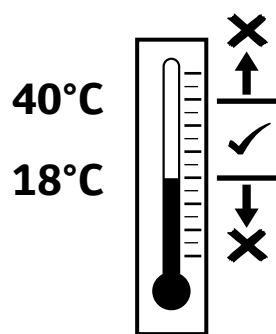


1


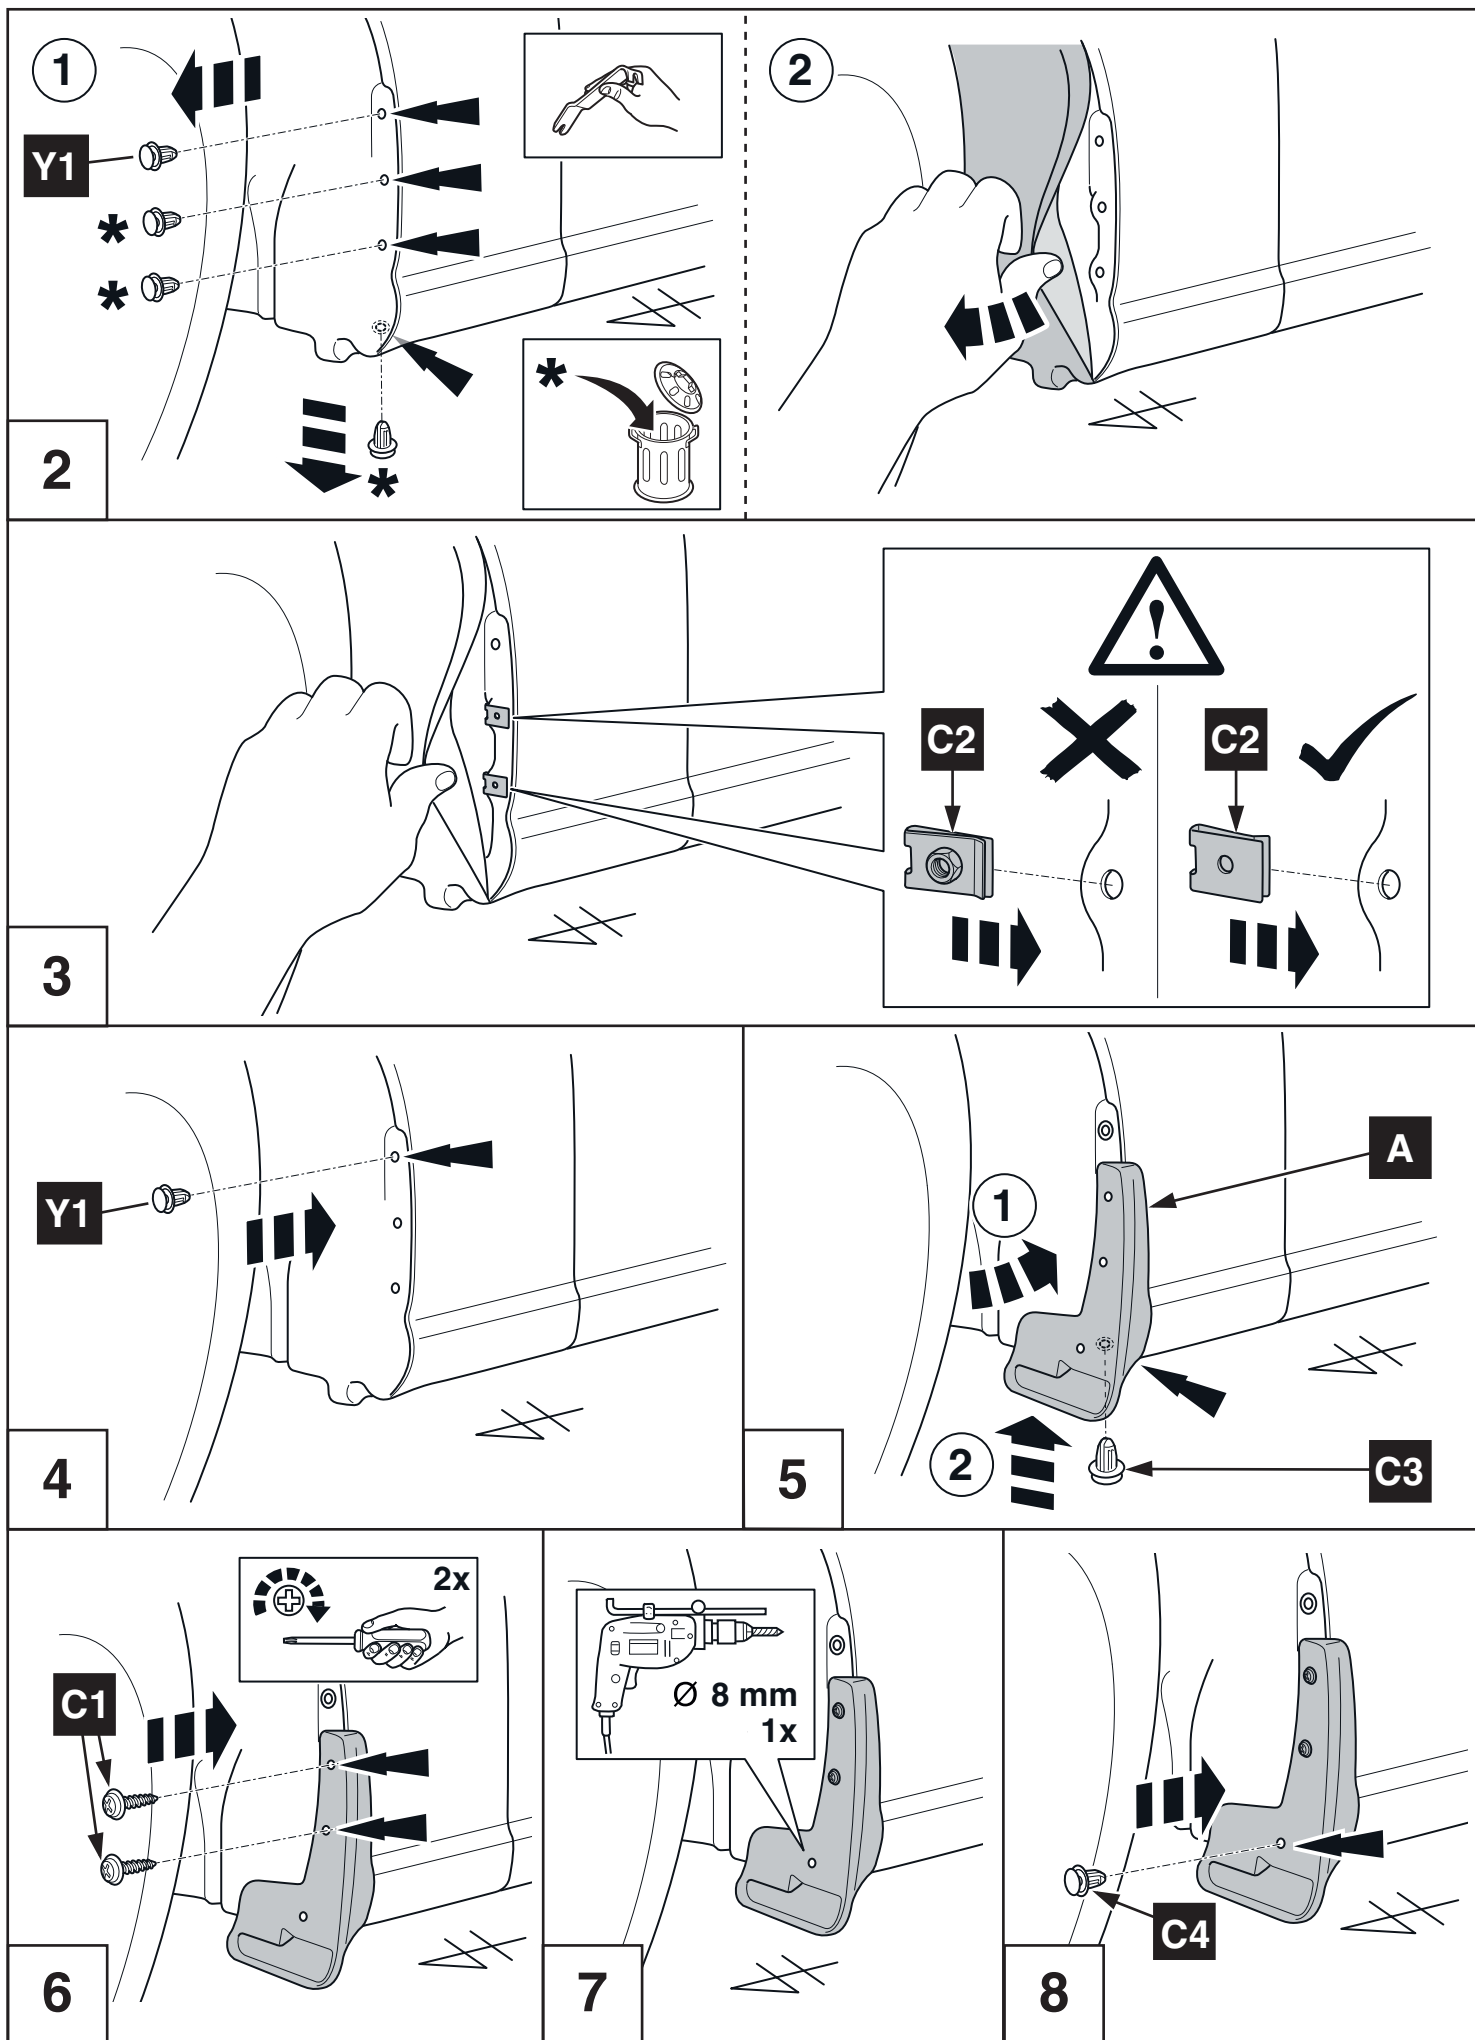


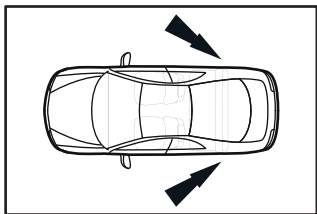


AIM 002 828 - *

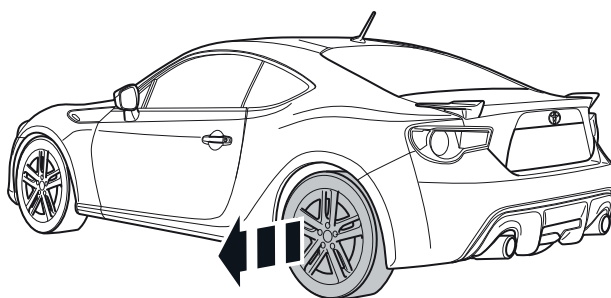


9

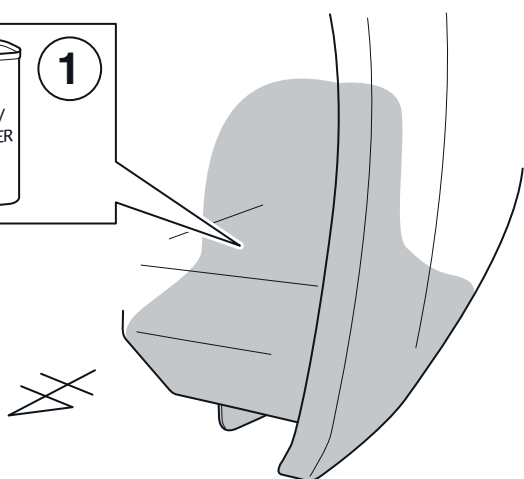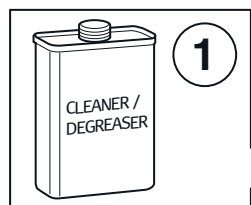


10

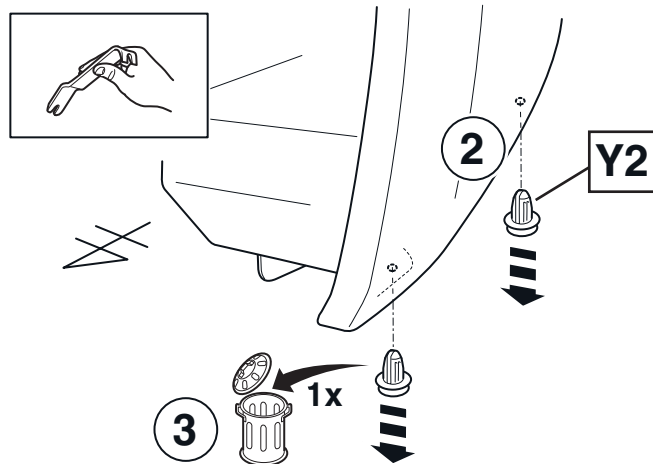


10

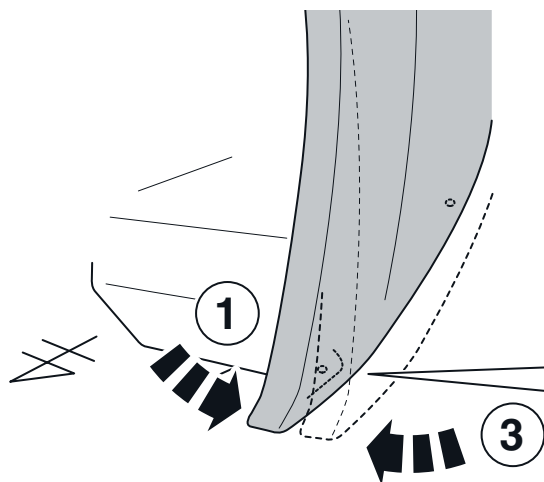



11

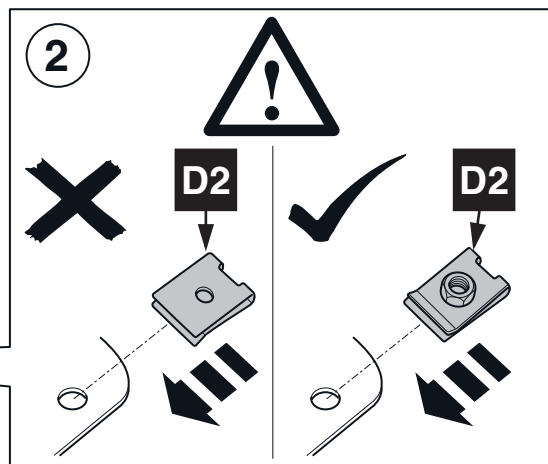


11

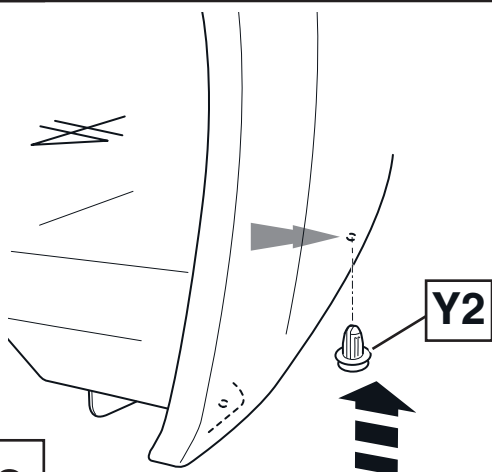


12

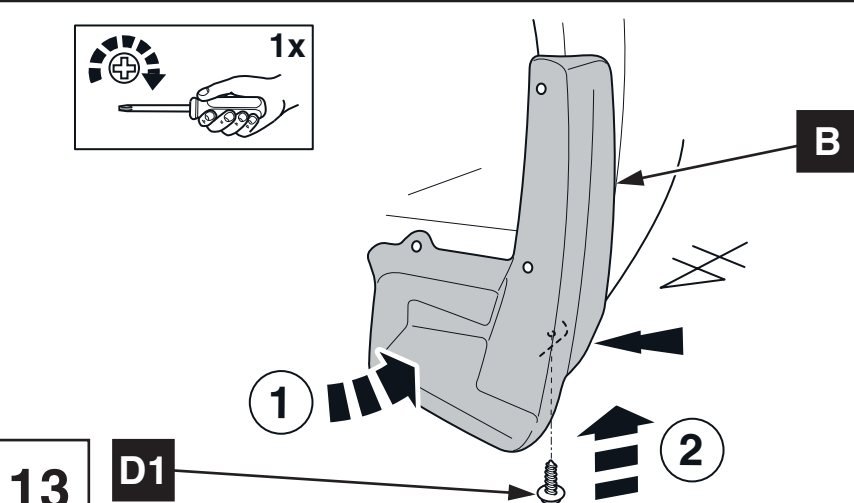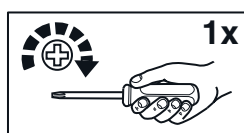


13

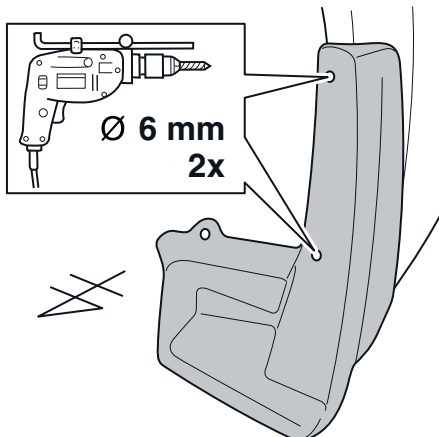


14

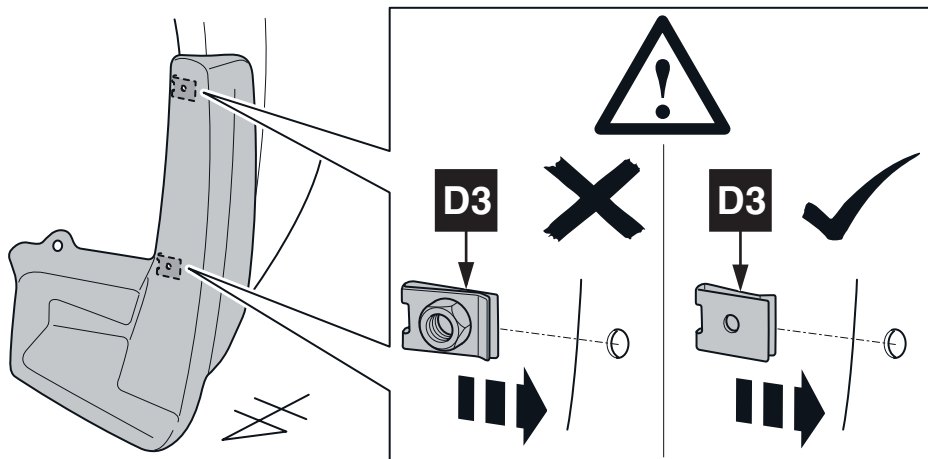


15

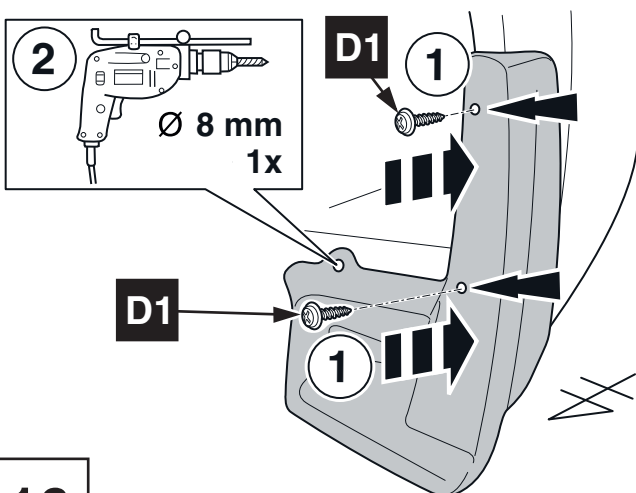

16

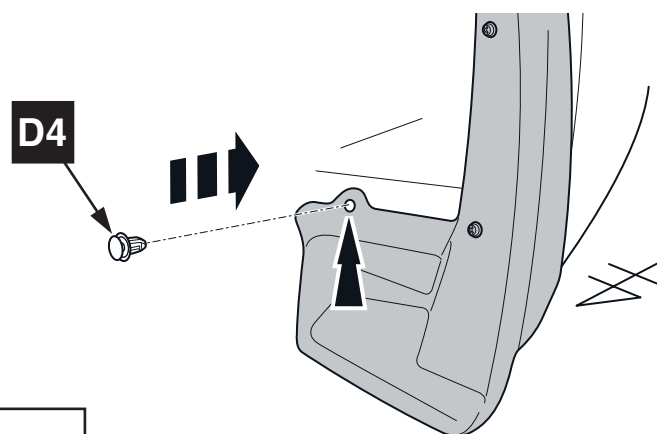


17

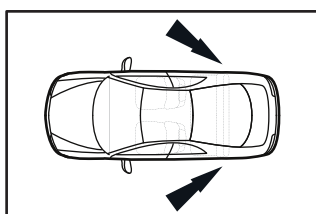

 **AIM 002 828 - ***

120 Nm

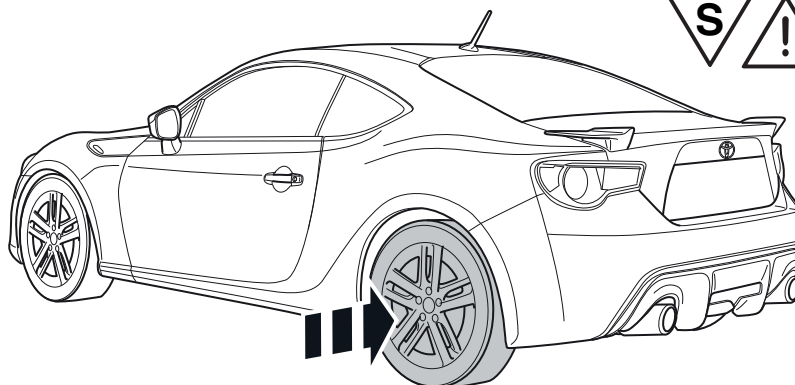

18

CHECK SHEET







TOYOTA


Model / Year GT86 2012/04,
2016/08

**Front & Rear
Set Mudflaps**


VIN n°

ALWAYS A
BETTER WAY

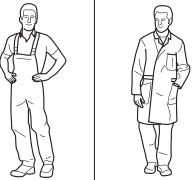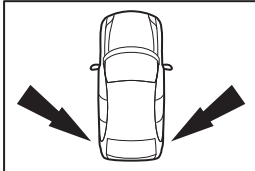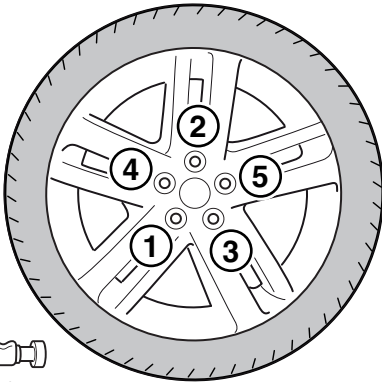 =A =B	P/N = OK 	   120 Nm  Serial Number A B
---	---	--

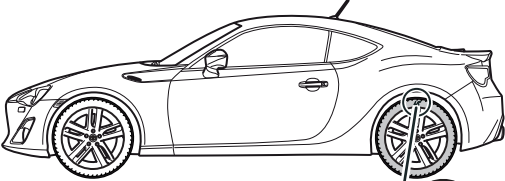




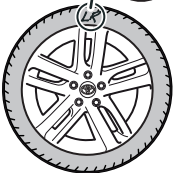

A
B

LR = LR = OK

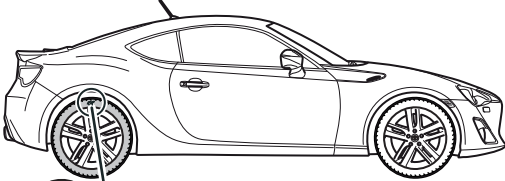







A
B


RR = RR = OK

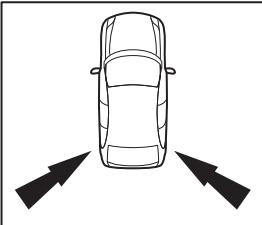




= OK

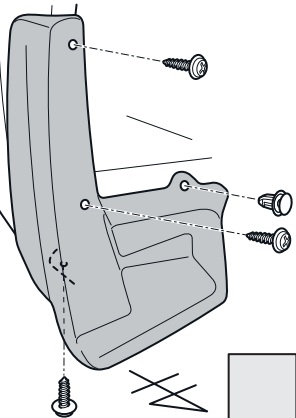

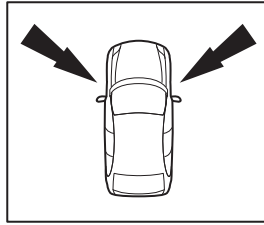



= OK

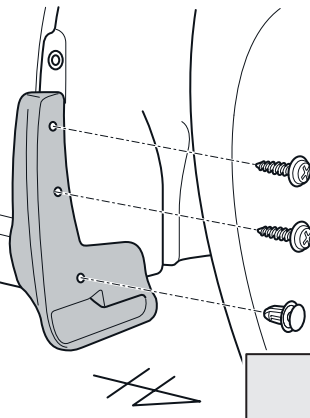

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: