



TOYOTA

ALWAYS A
BETTER WAY

Yaris

Full Top Separator for N1 kit

Installation Instructions


Model year:	As from 2020/06
Vehicle code:	MXPA11*-BH**BW KSP211*-BHM*KW MXPH11*-BHX*BW
Part number:	PW710-0D004

Manual reference number: AIM 006 111-0

Revision record


Rev. No.	Date	Page	Step	Remarks

PW710-0D004

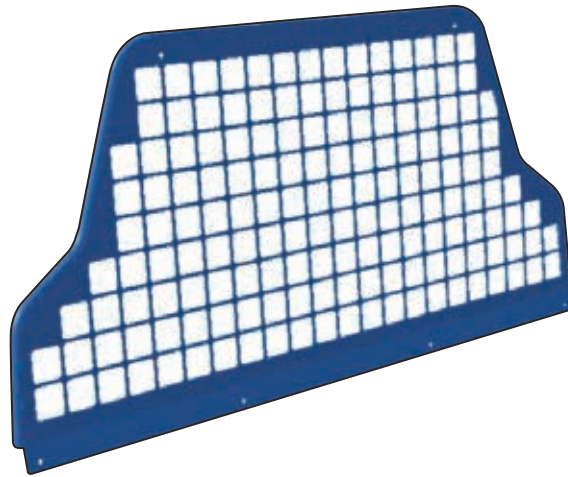


A

x1

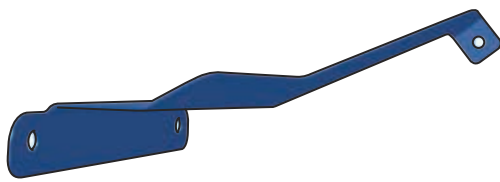


B

x1

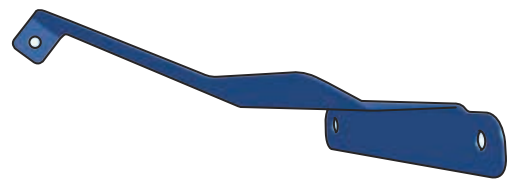

C

x1



D

x4



E

x4

(6x20)



F

x4



G

x8

(15018622)



H

x4

(6,4x15x1,5)



I

x8

(6x16)







J

x2



K

x2

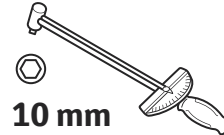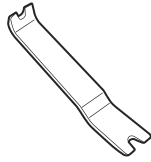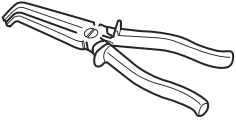

INFO

PETROL



HYBRID







PETROL






HYBRID





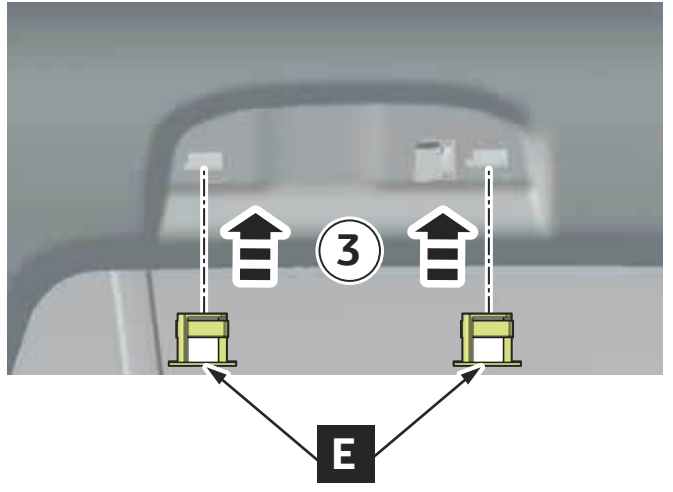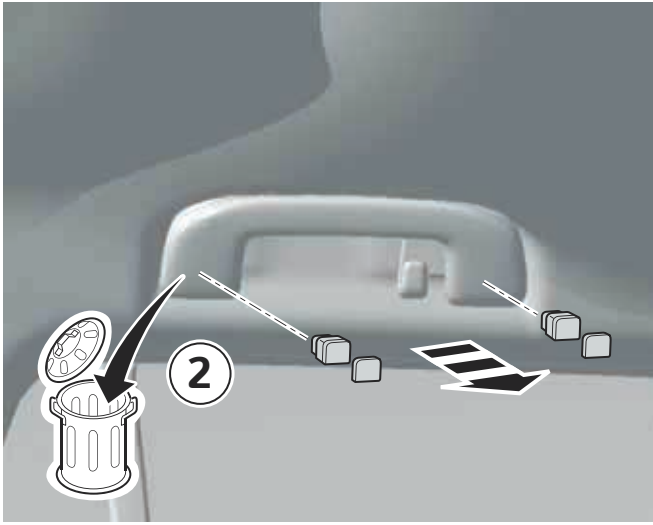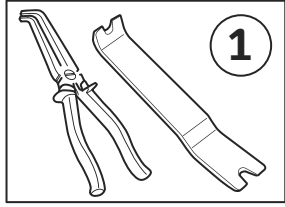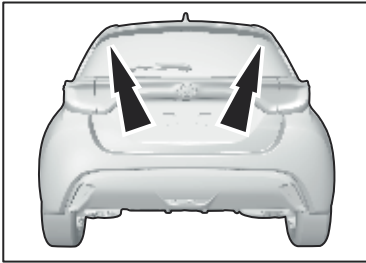





1

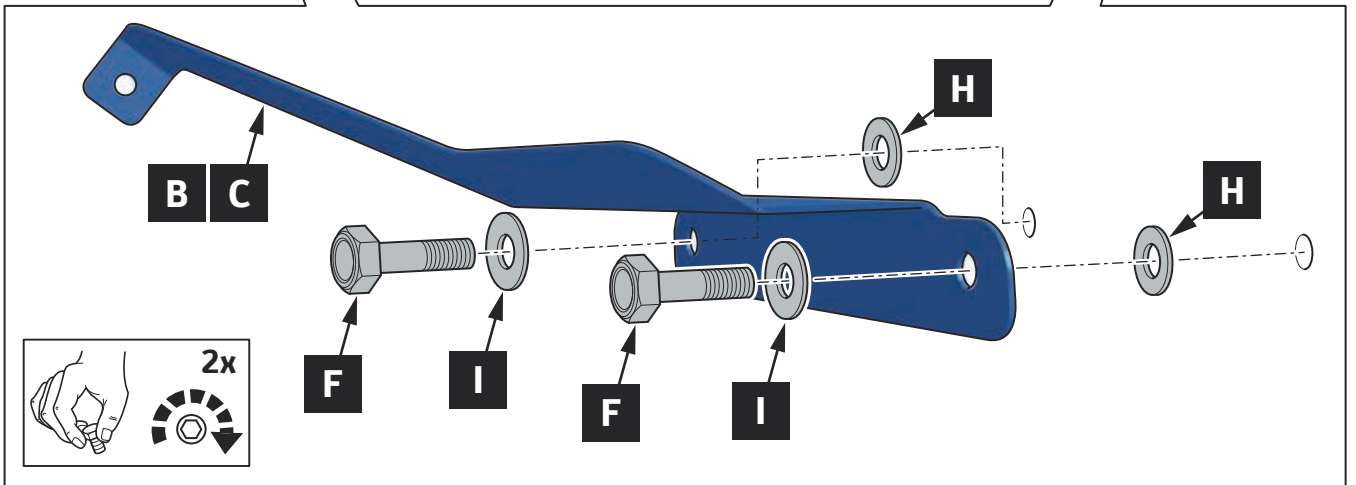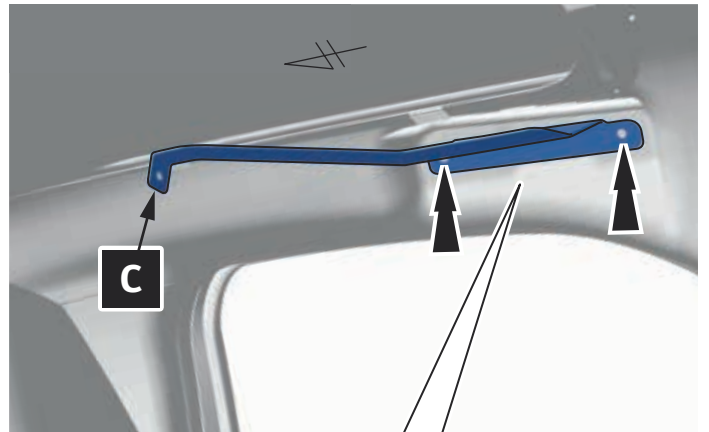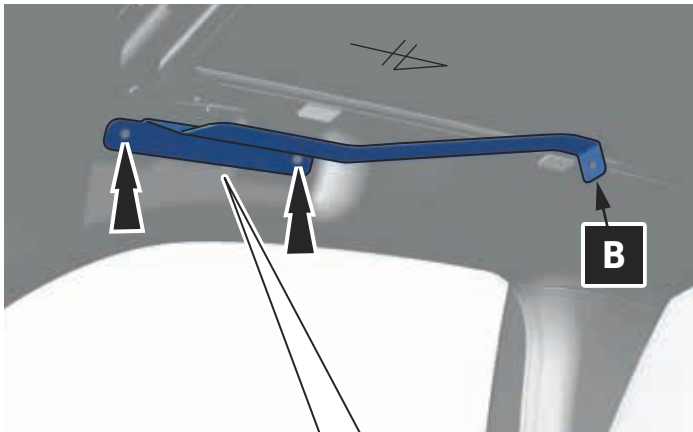


2

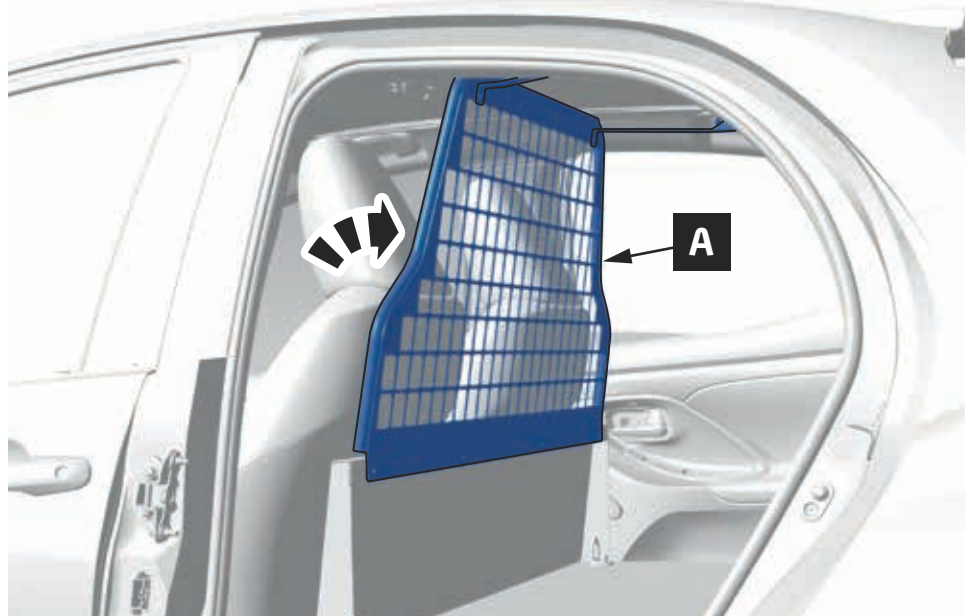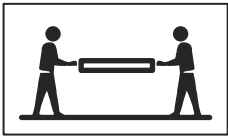


3

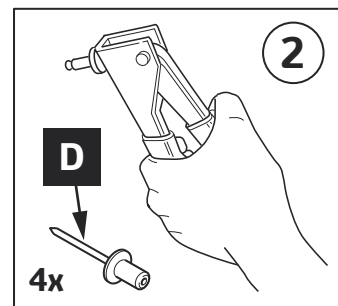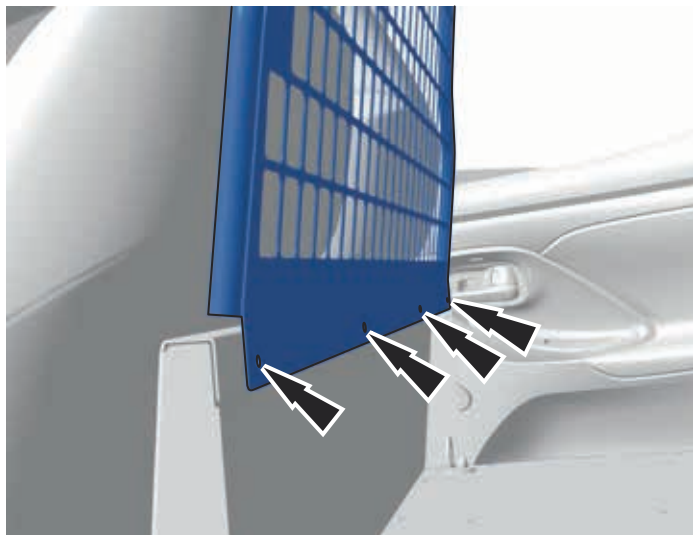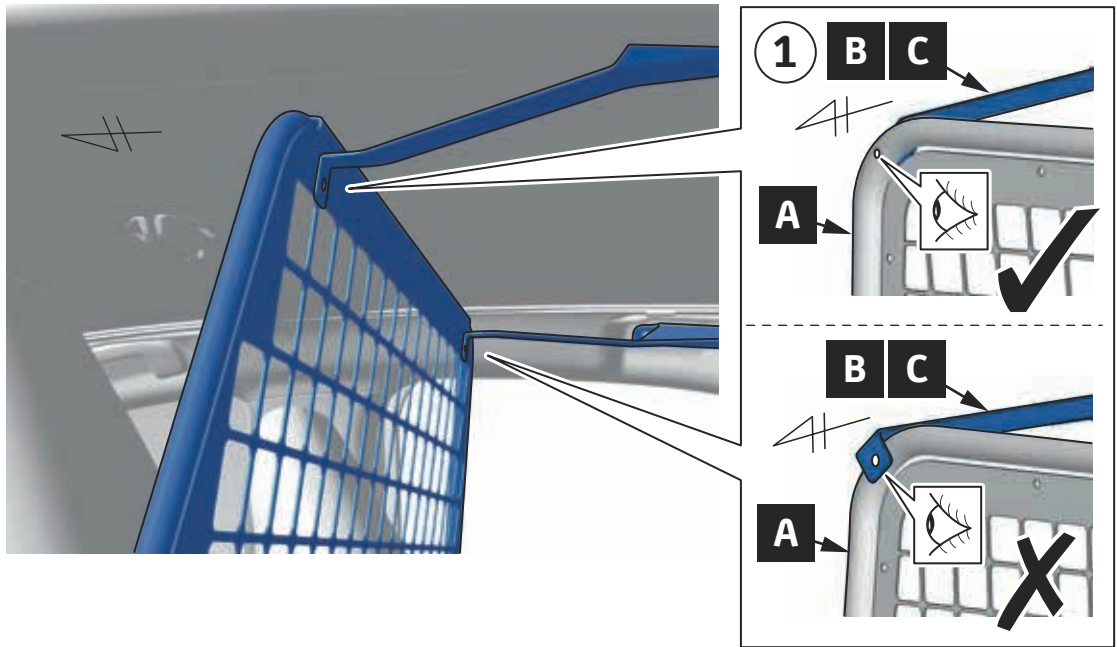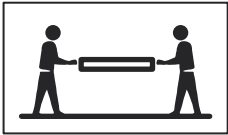

4

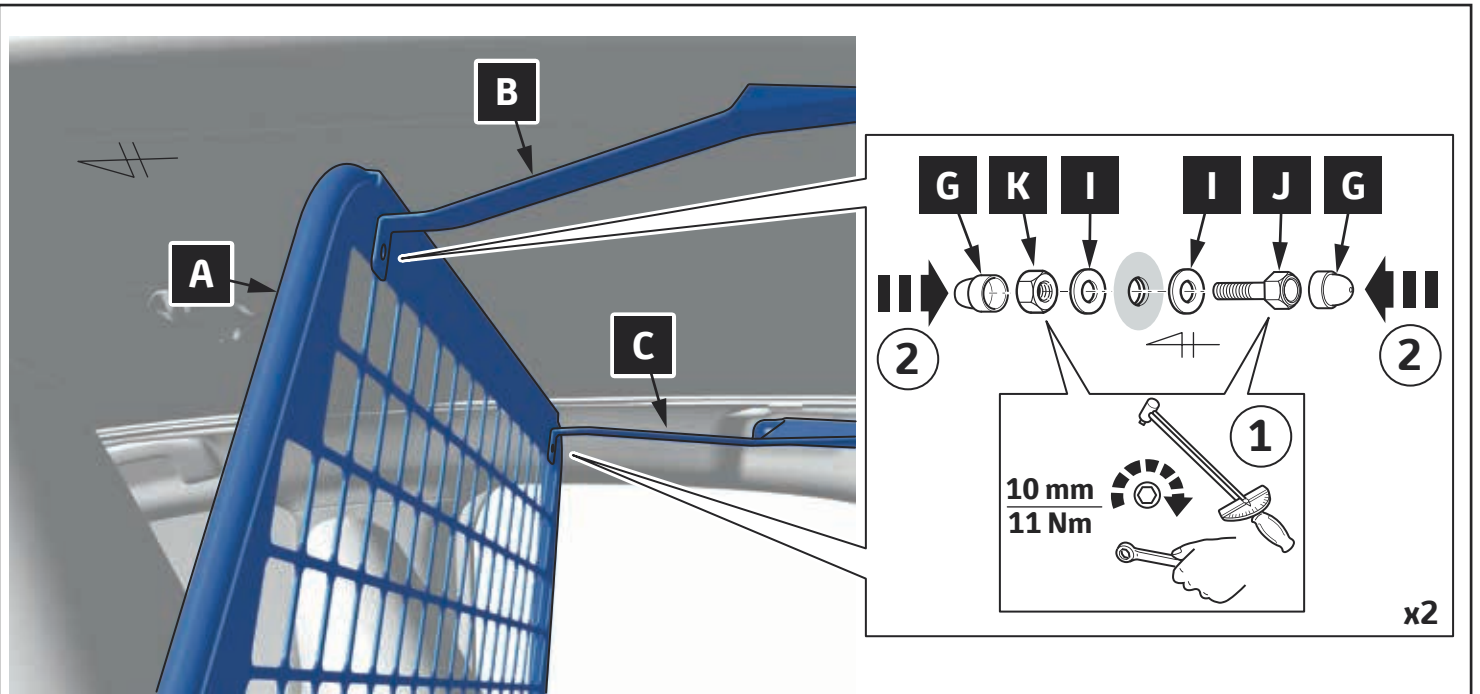

5

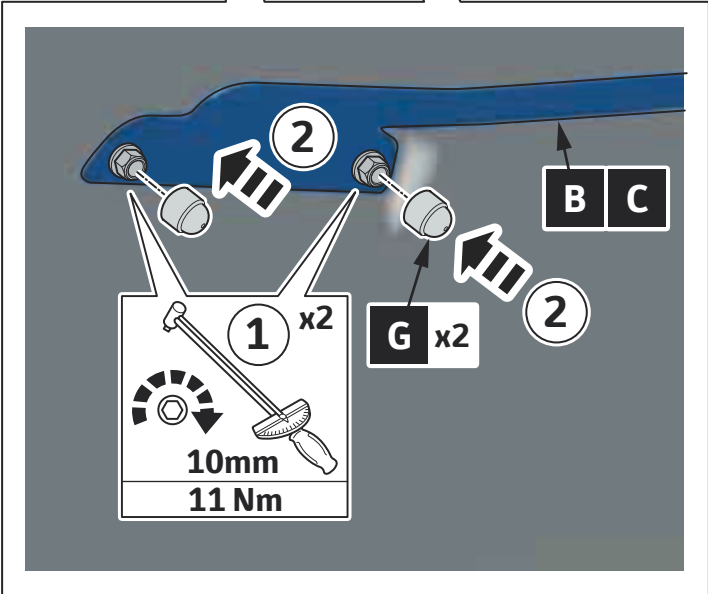

6



TOYOTA

Model/Year

YARIS
As from 2020/06

Full Top Separator
for N1 kit

VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

1

P/N = OK

2

(6x) 11 Nm

Click
Serial Number

AFTER INSTALLATION

1

= OK

Installation Date:

.. / .. / .. .

Technician Name & Signature:

Stamp:

