



Toyota C-HR 2.0 HV

Rear under guard

Installation instructions

ALWAYS A
BETTER WAY


Model year:	2019/10
Vehicle code:	MAXH10-*H***W
Part number:	PW158-10003

Manual reference number: AIM 004 552 - 0

Revision Record

Rev. No.	Date	Page	Step	Remarks

PW158-10003

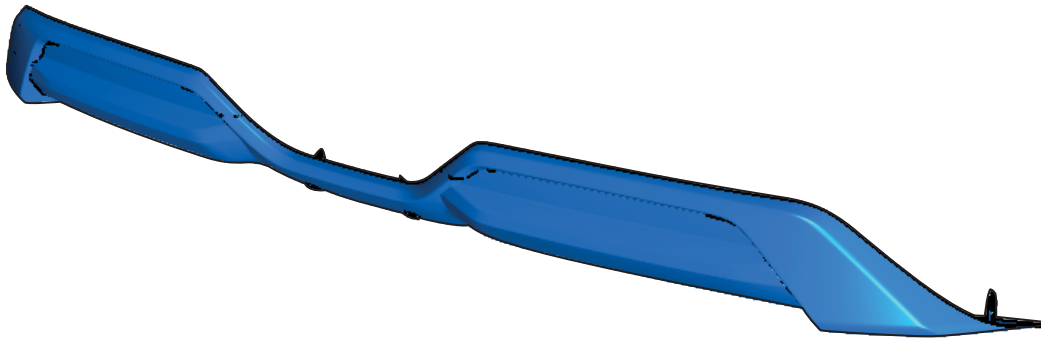


A

1x



B **52161-02030**

11x



C **90167-40057**

6x


=	=	=	=	=
=	=	=	=	= START




10 mm



Ø 3,5 mm
Ø 9 mm

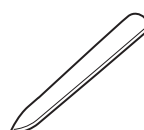


10 mm

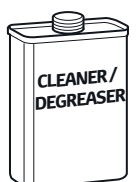


AIM 003-516-*




Material Safety Data Sheet

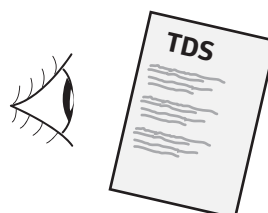





Technical Data Sheet

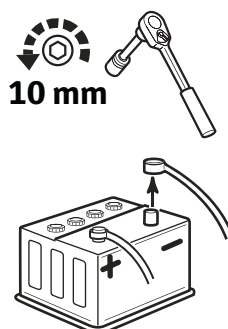




1

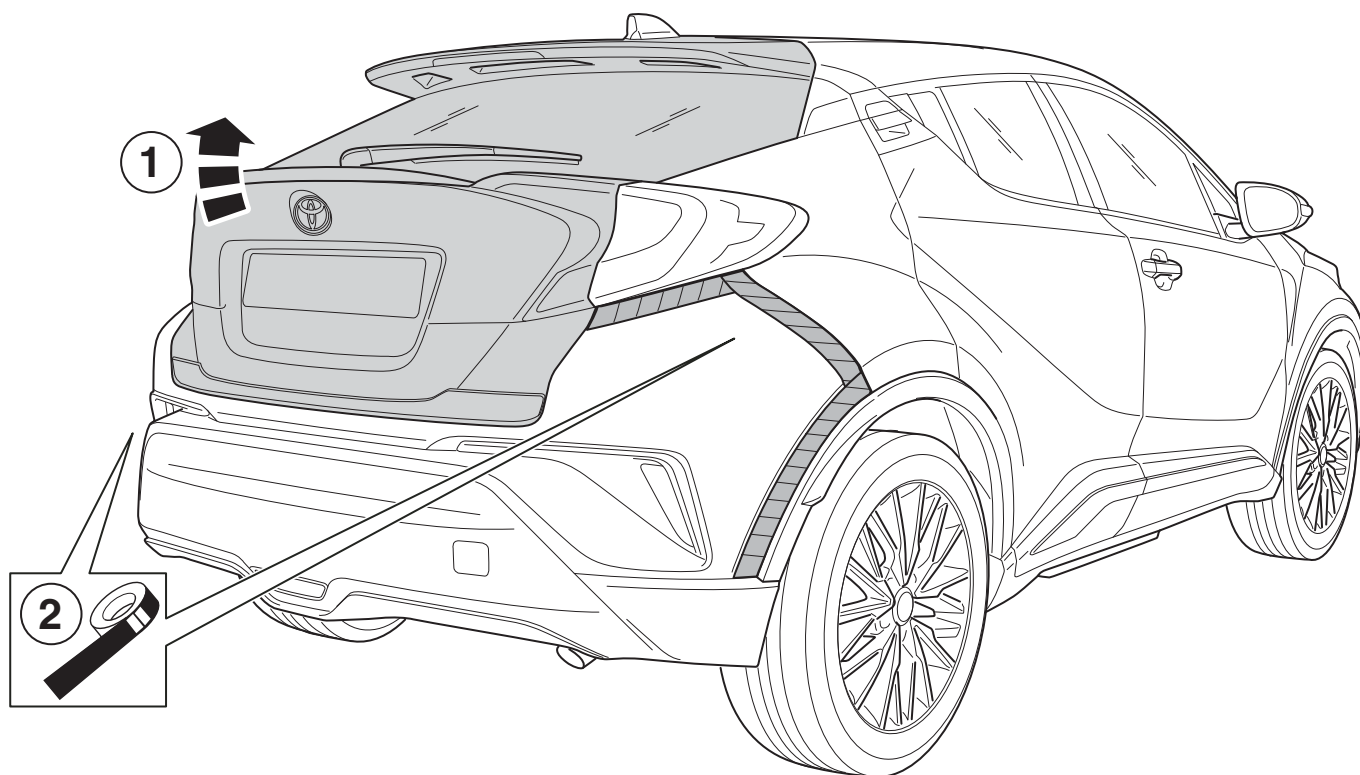


2

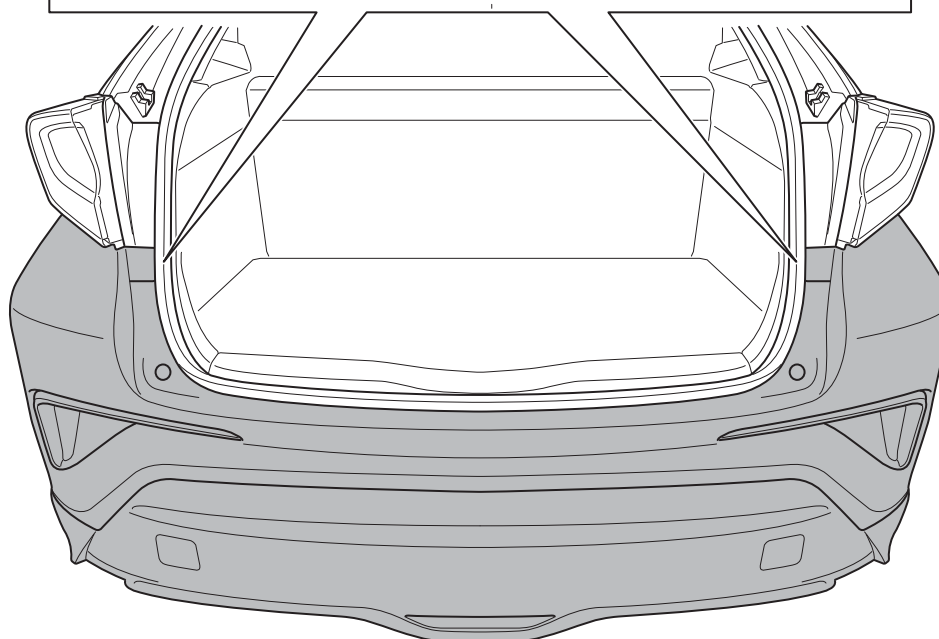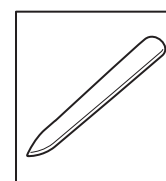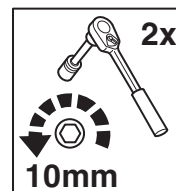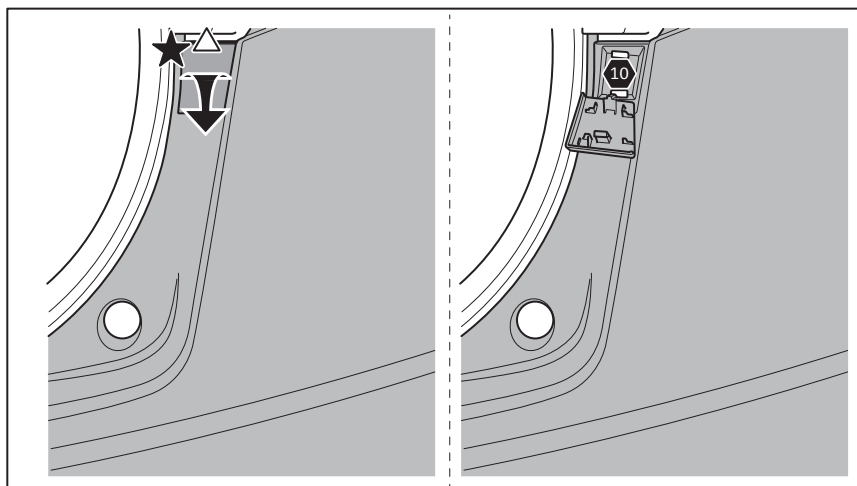


3

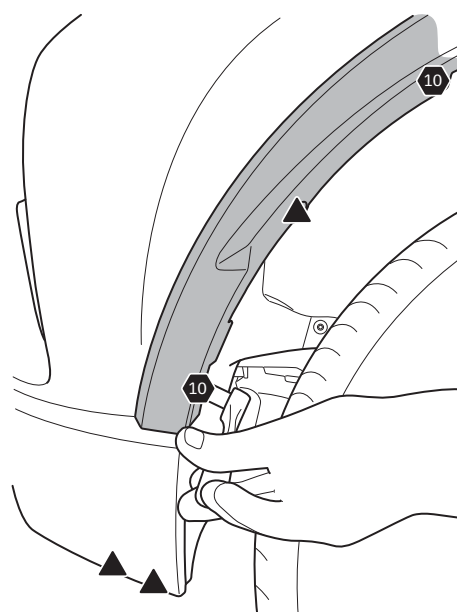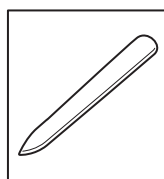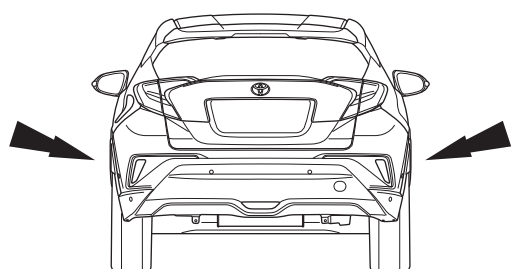


4

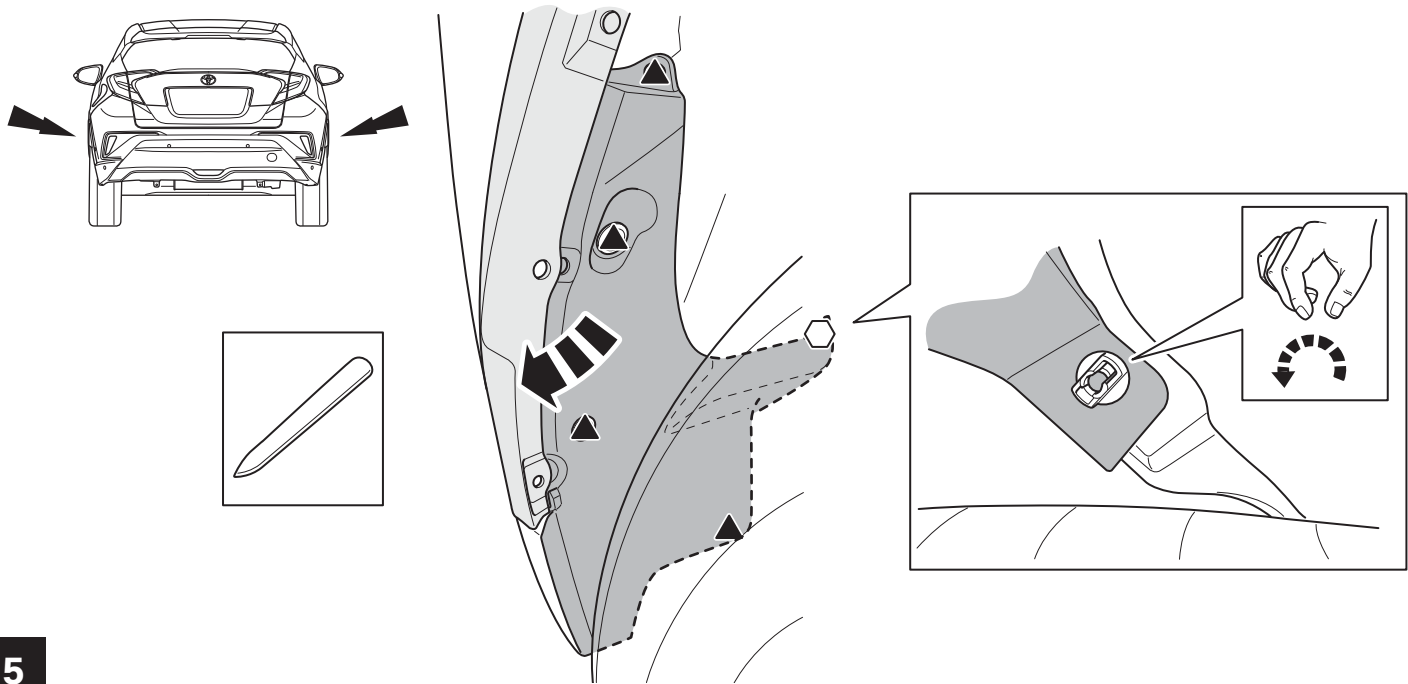



5


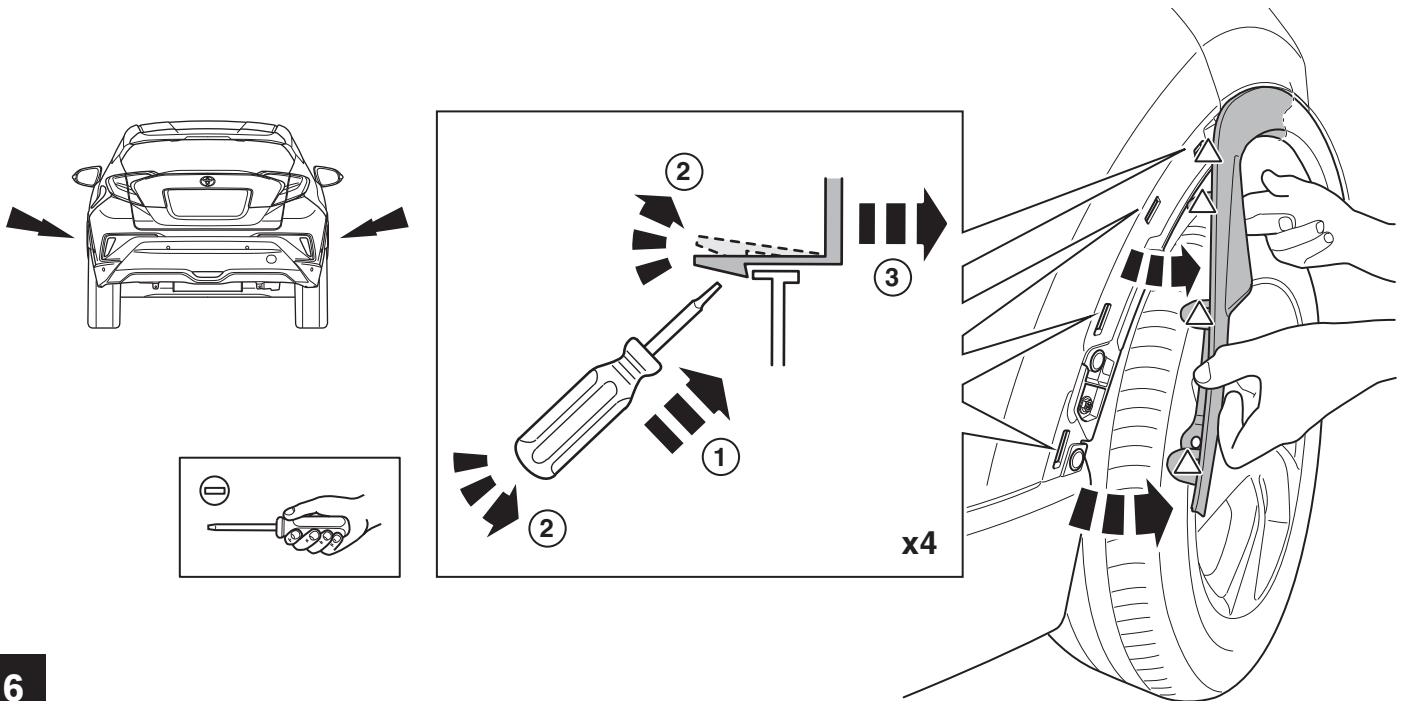




6

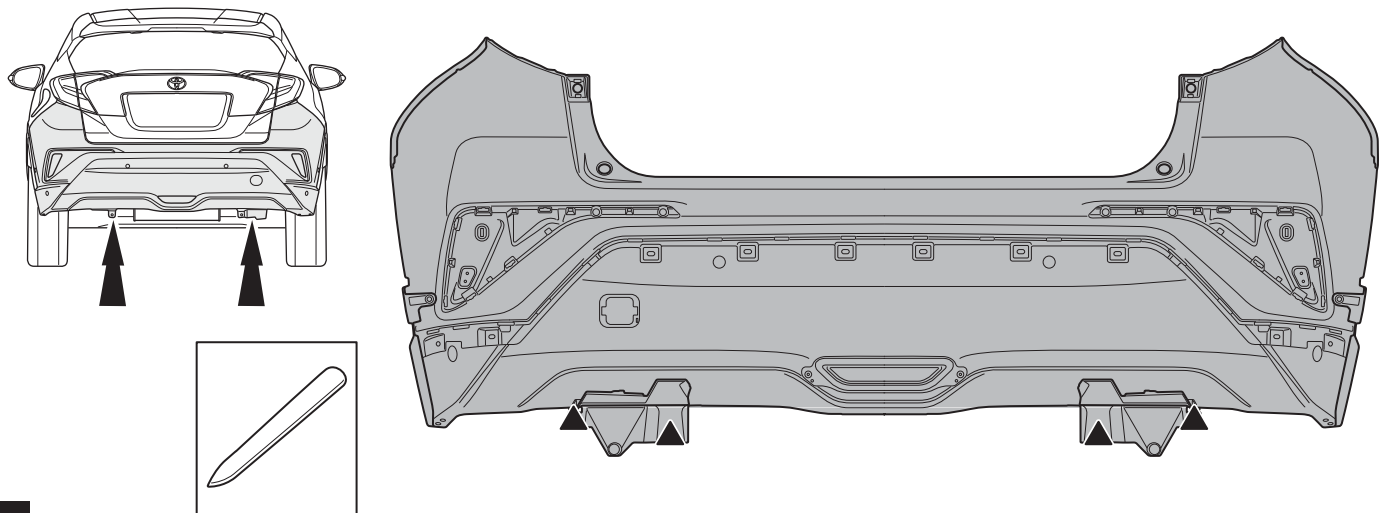



7

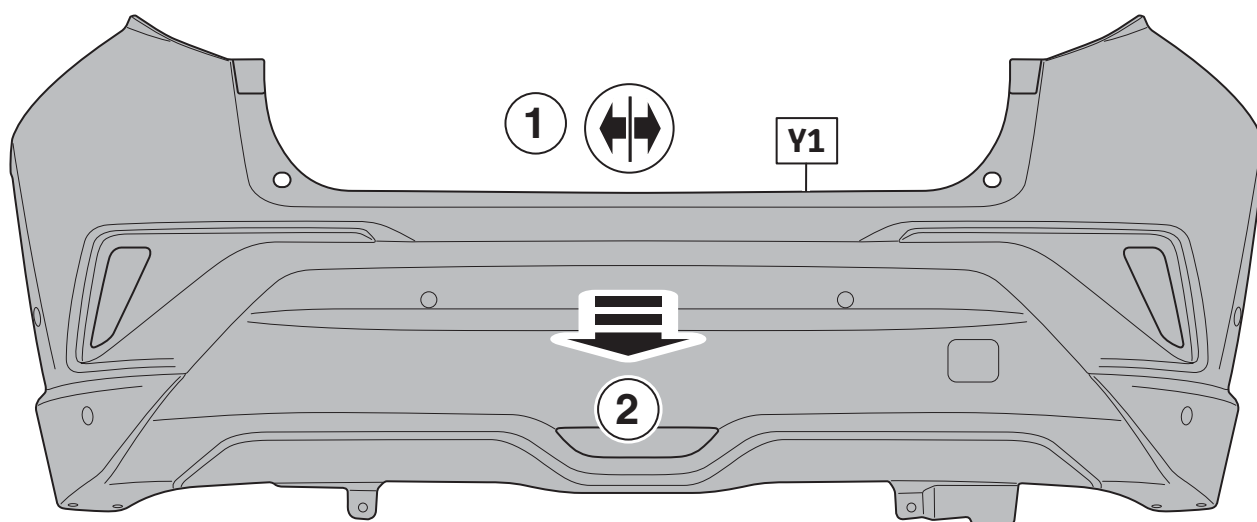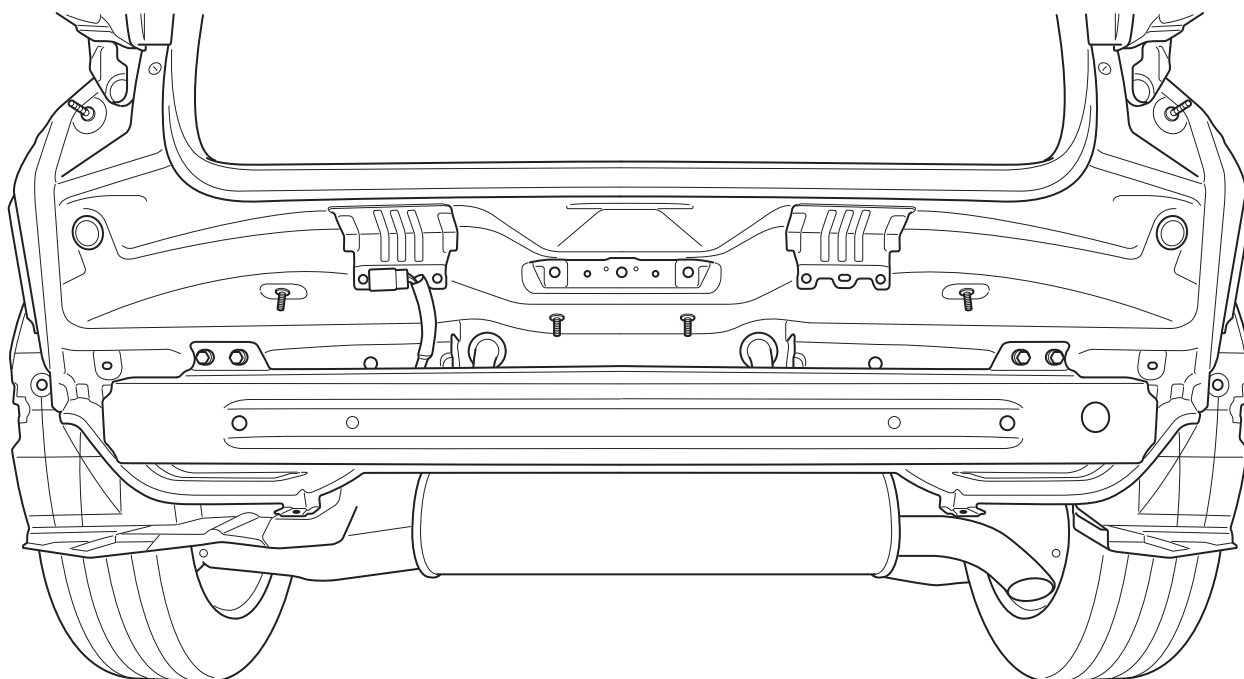

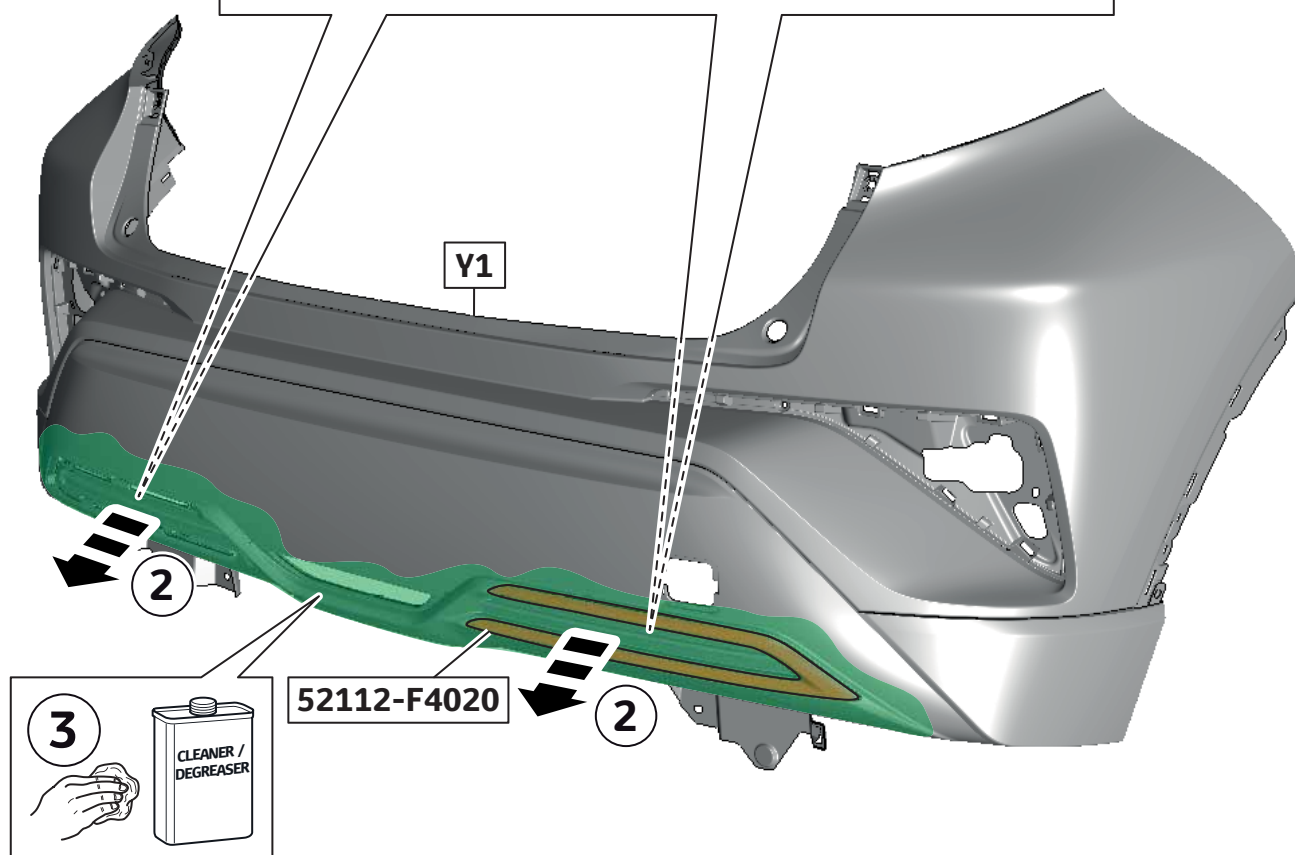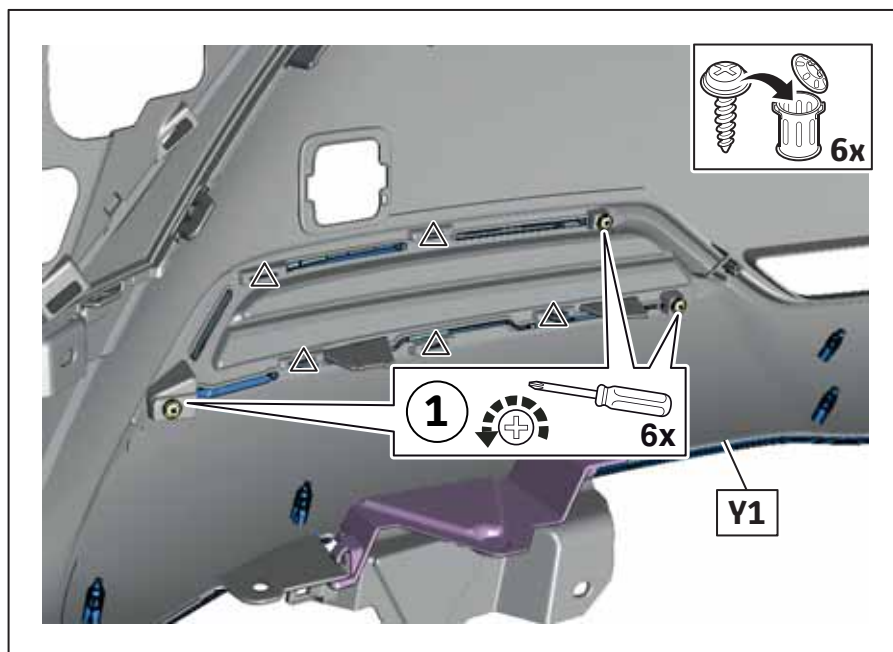


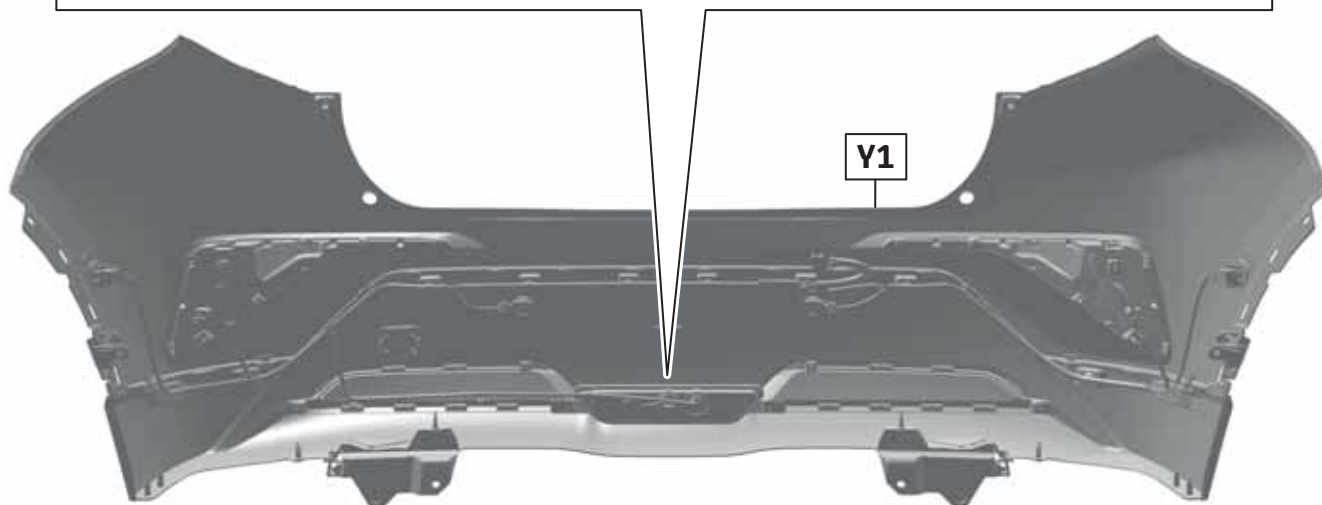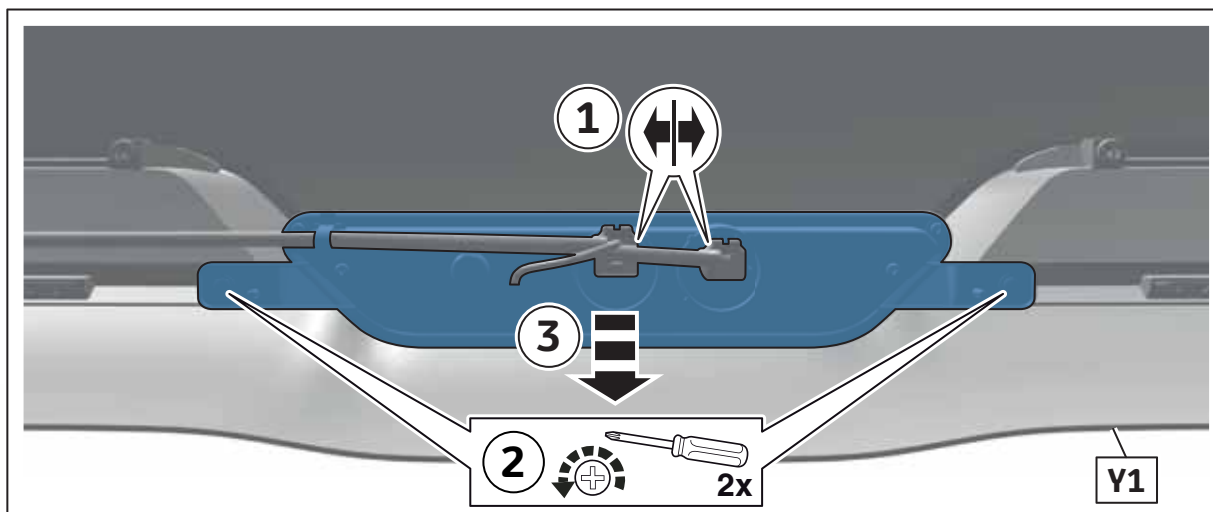

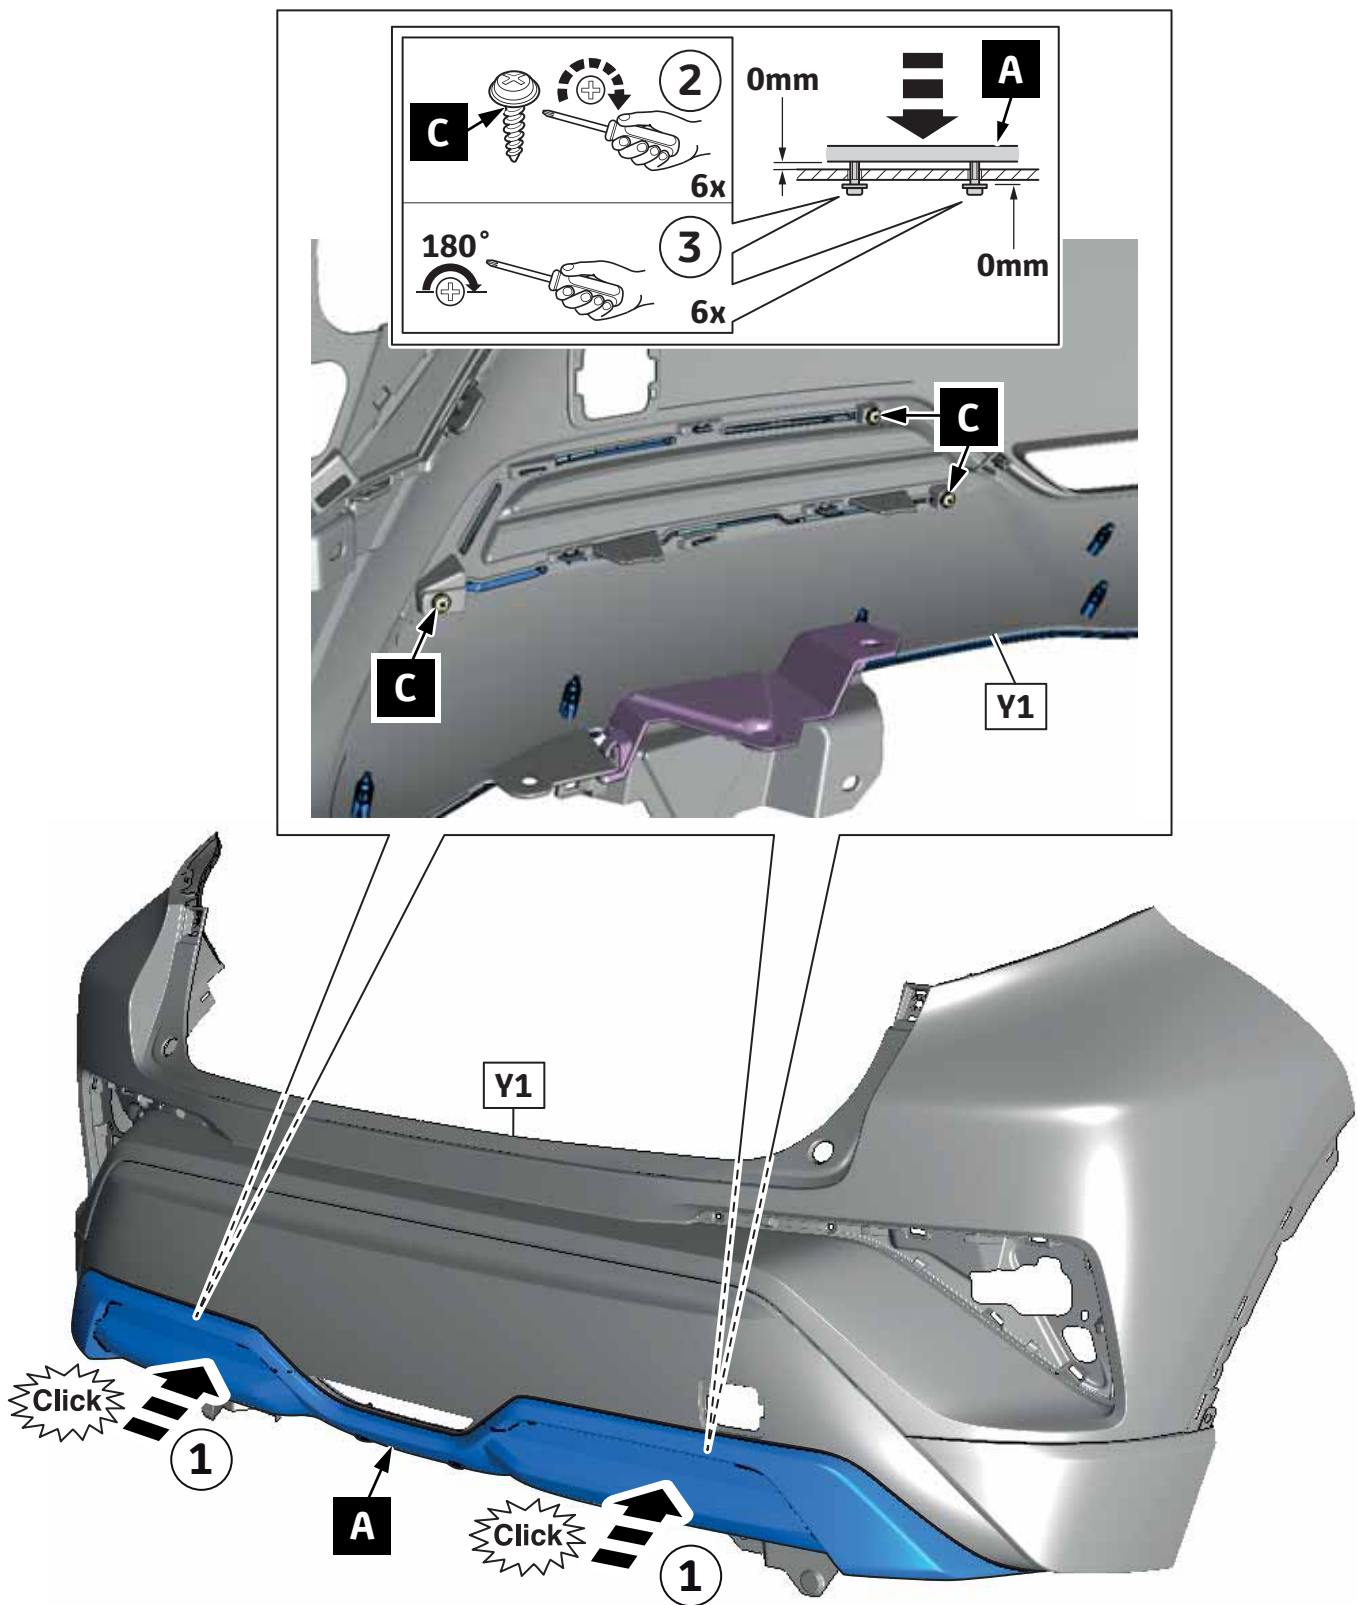

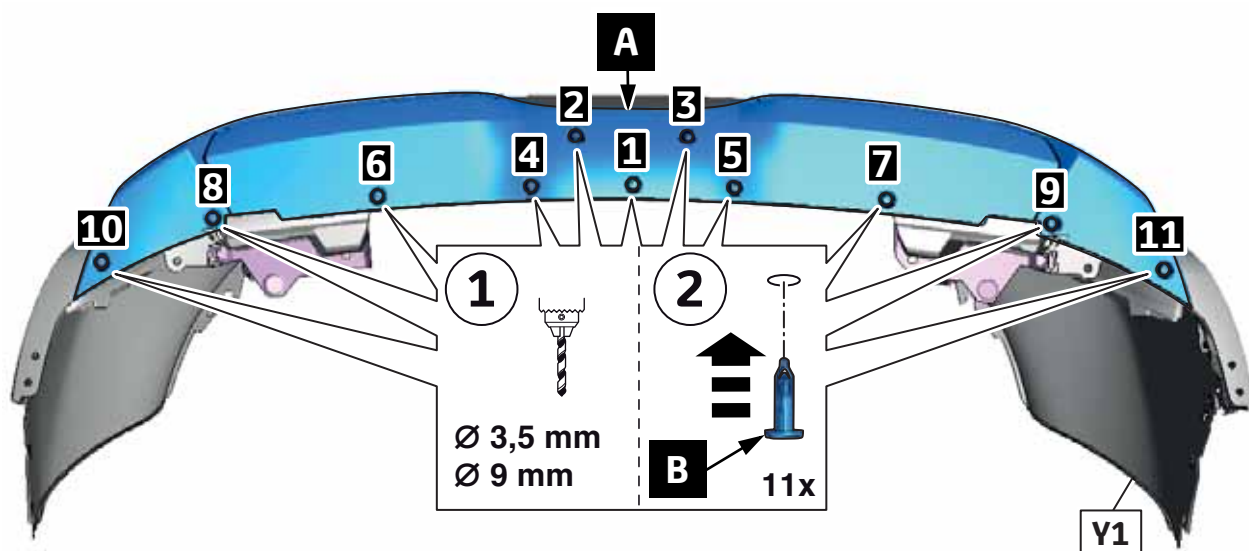


12

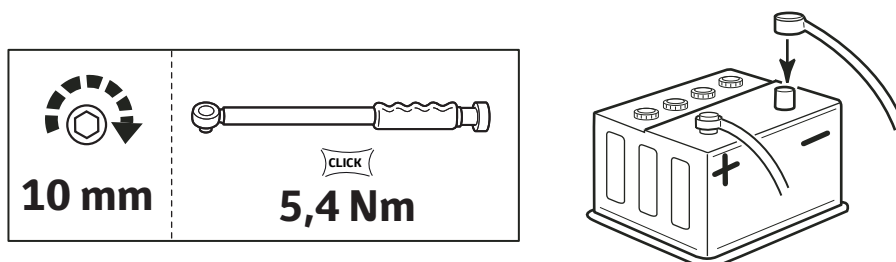

13

INFO

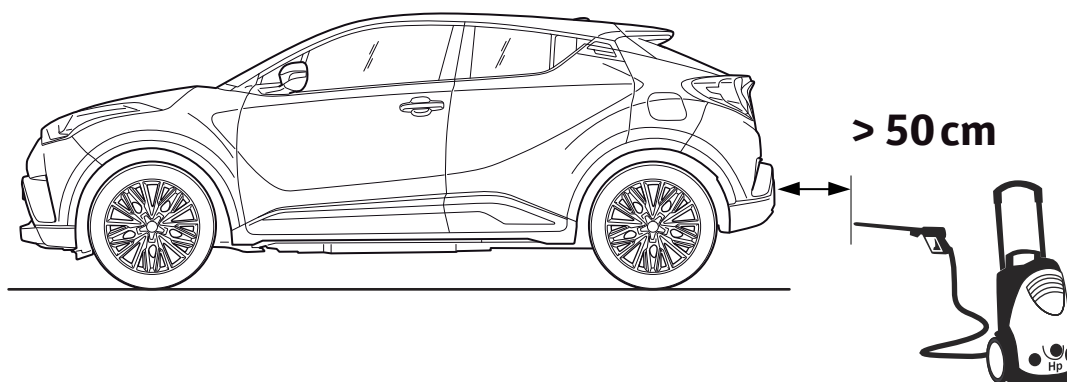

CHECK SHEET Page 1 of 2



TOYOTA

ALWAYS A
BETTER WAY


Model / Year Toyota C-HR
2019/10

Rear under guard

VIN n°


DURING INSTALLATION

1

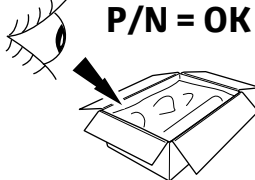

P/N = OK

2

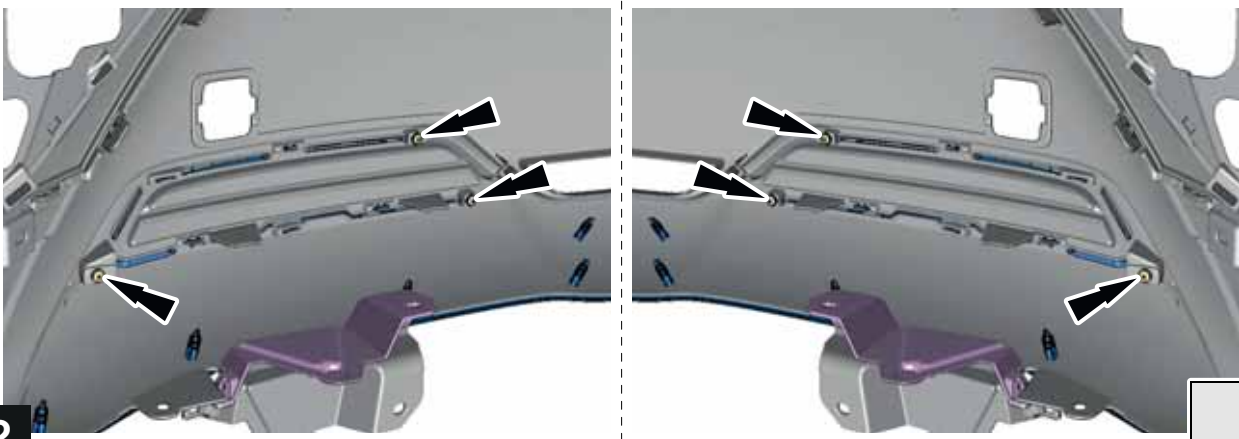

AFTER INSTALLATION


1




Click **Serial Number**

5,4 Nm

2

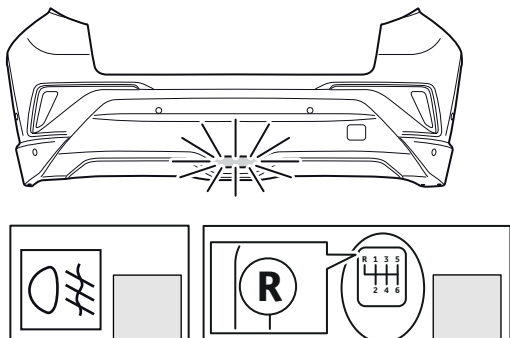

3

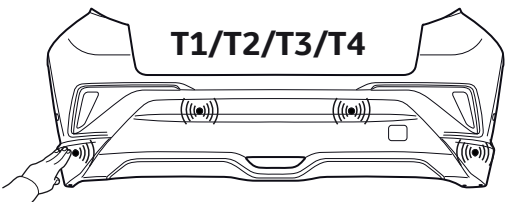



Beep


Installation Date:

. . / . . /

Technician Name & Signature:

Stamp:

AFTER INSTALLATION

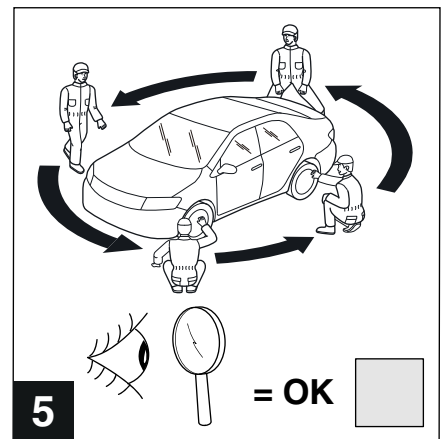

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: