



TOYOTA

ALWAYS A
BETTER WAY

Corolla

Door Edge Protection Film

Installation Instructions



Model year:	As from 2019/05
Vehicle code:	NRE210*-D***ZW ZWE211*-DHX*BW MZEH12*-DHX*BW
Part number:	PW174-02000

Manual reference number: AIM 006 061-0


Revision record


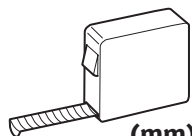




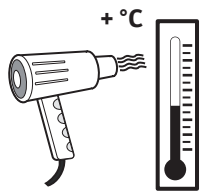
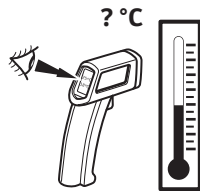
Rev. No.	Date	Page	Step	Remarks

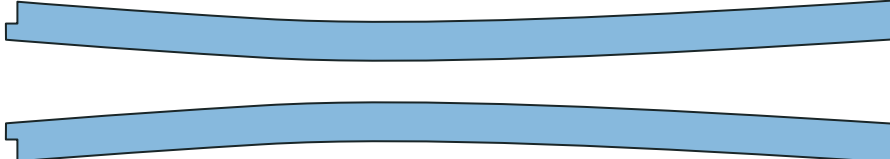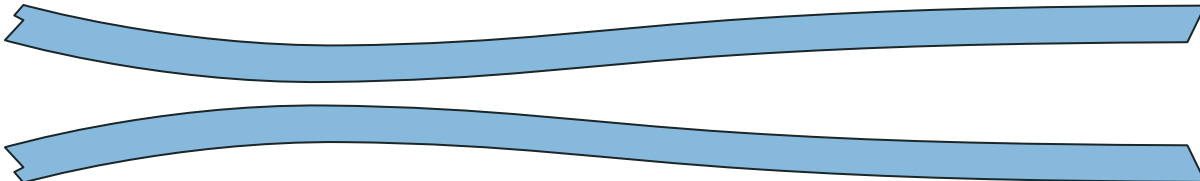PW174-02000

A		1x
B		1x

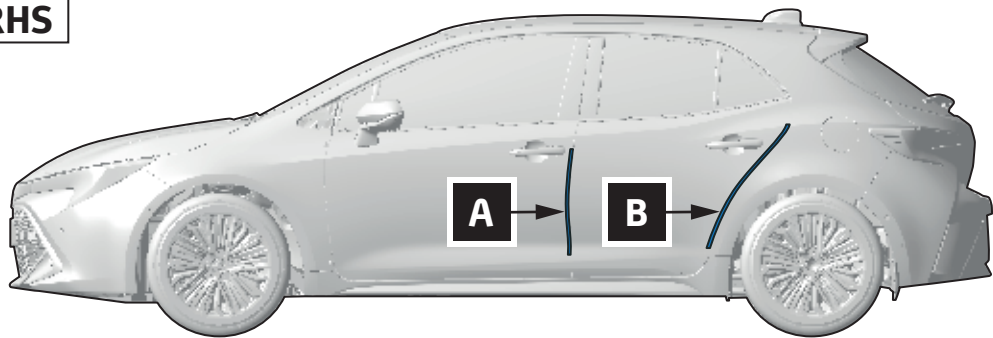LHS=RHS



 AIM 003-516-*	 (mm)	 3M Gold squeegee + Low friction sleeve NOT INCLUDED		
	 NEUTRAL SOAP	 Sprayer	 + °C	 ? °C

INFO










Material Safety Data Sheet




Technical Data Sheet

LHS=RHS

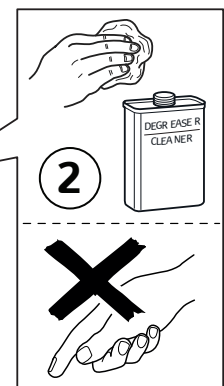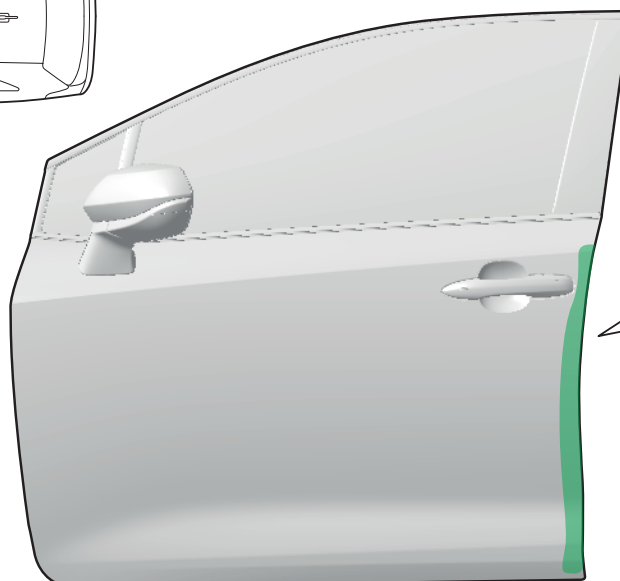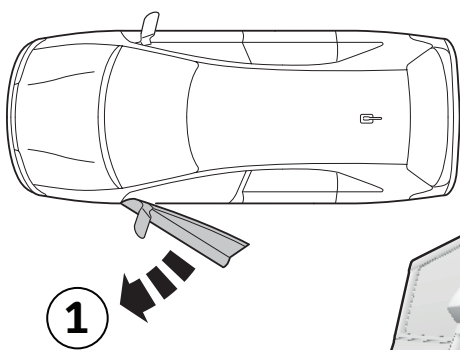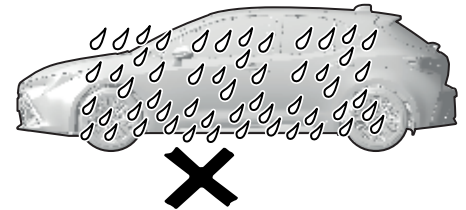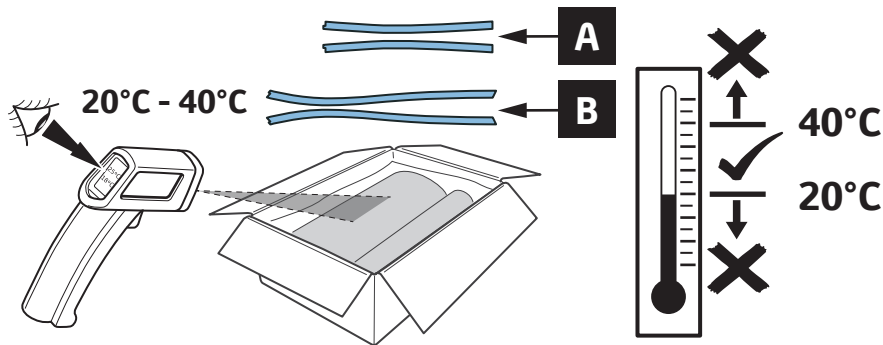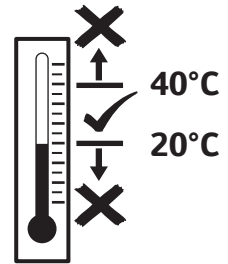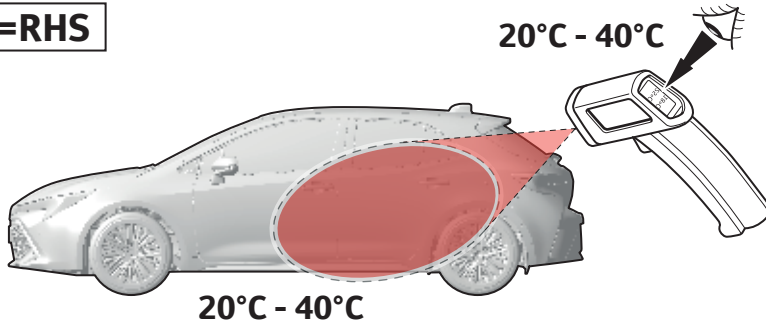

1

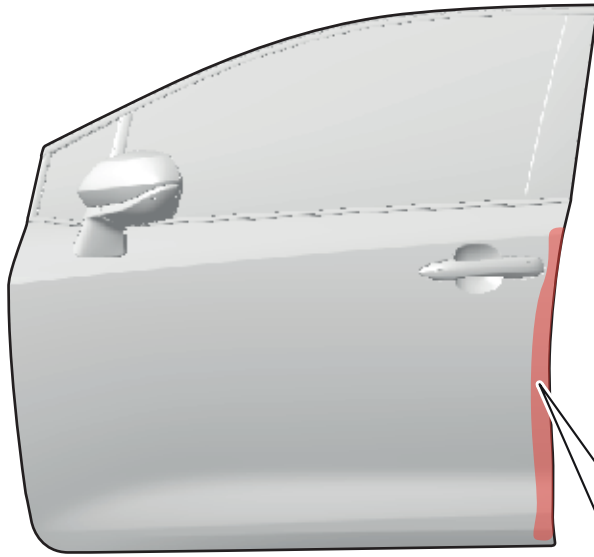




<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 3</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 3</p>	<p>INFO</p>


2




<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 4</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 4</p>	<p>INFO</p>

3

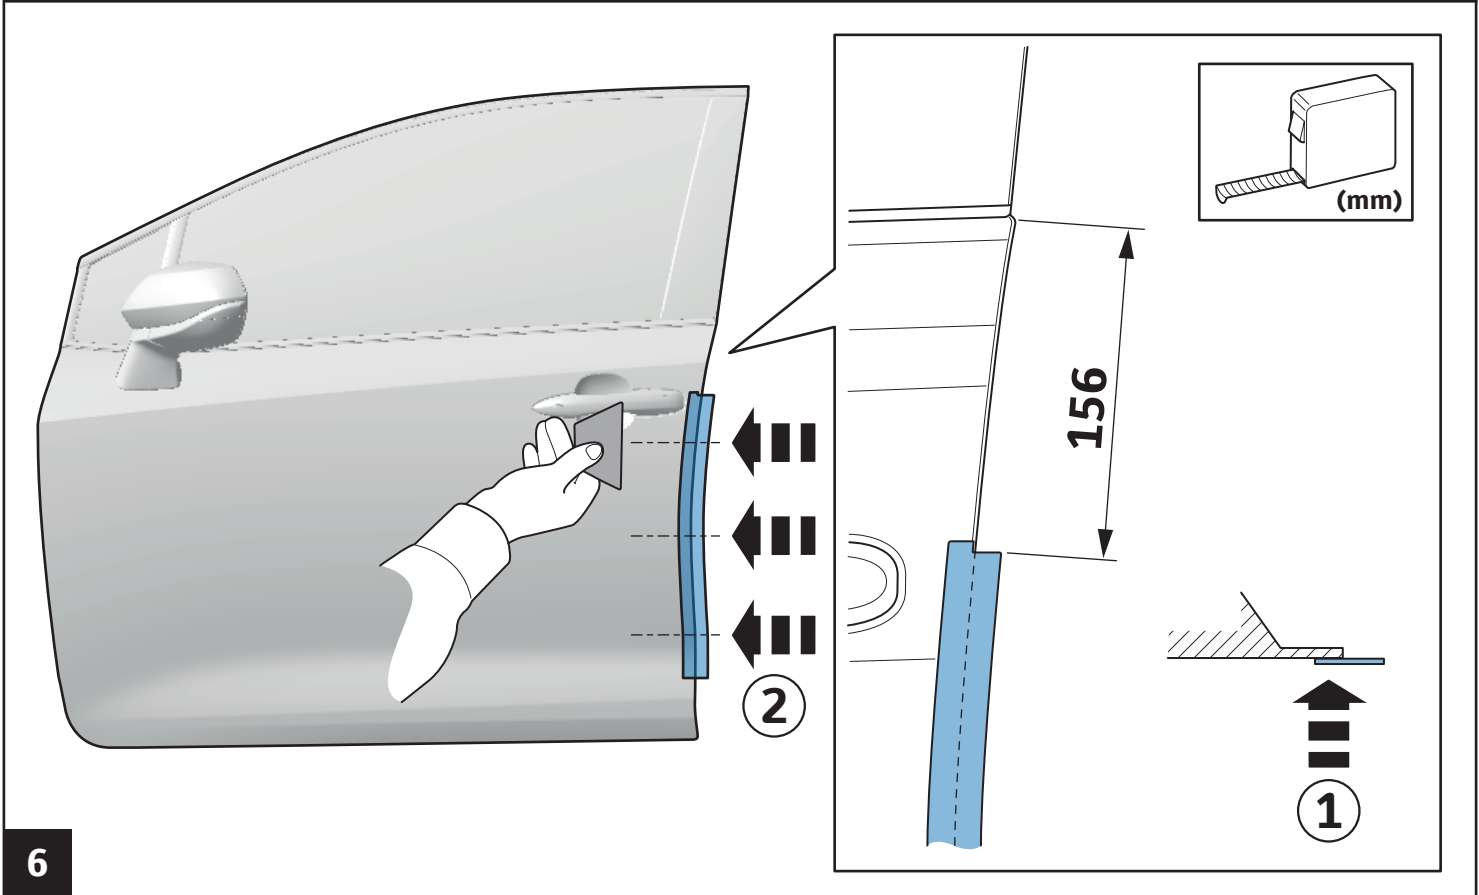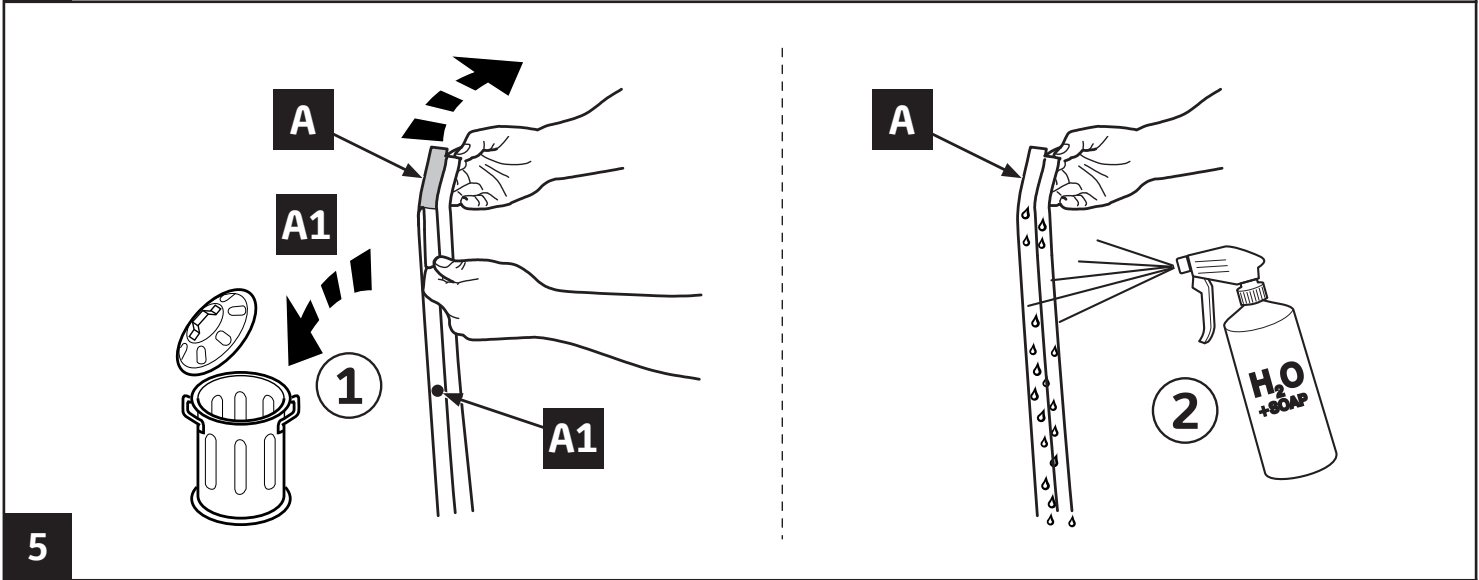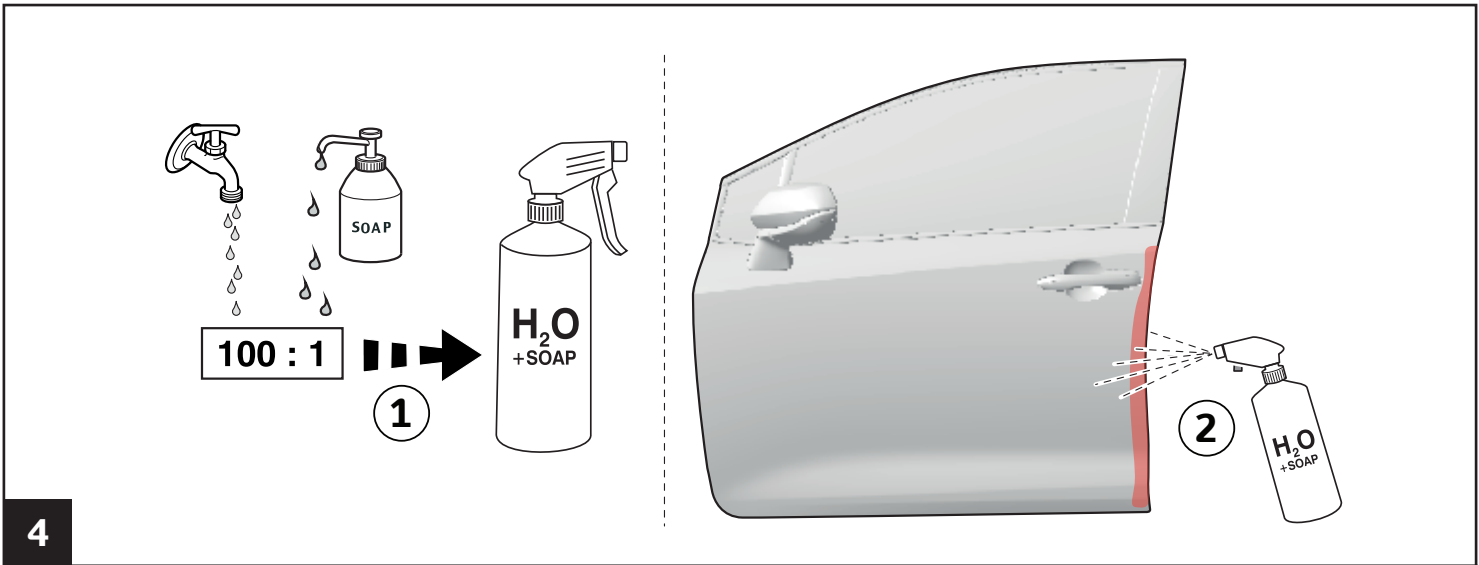


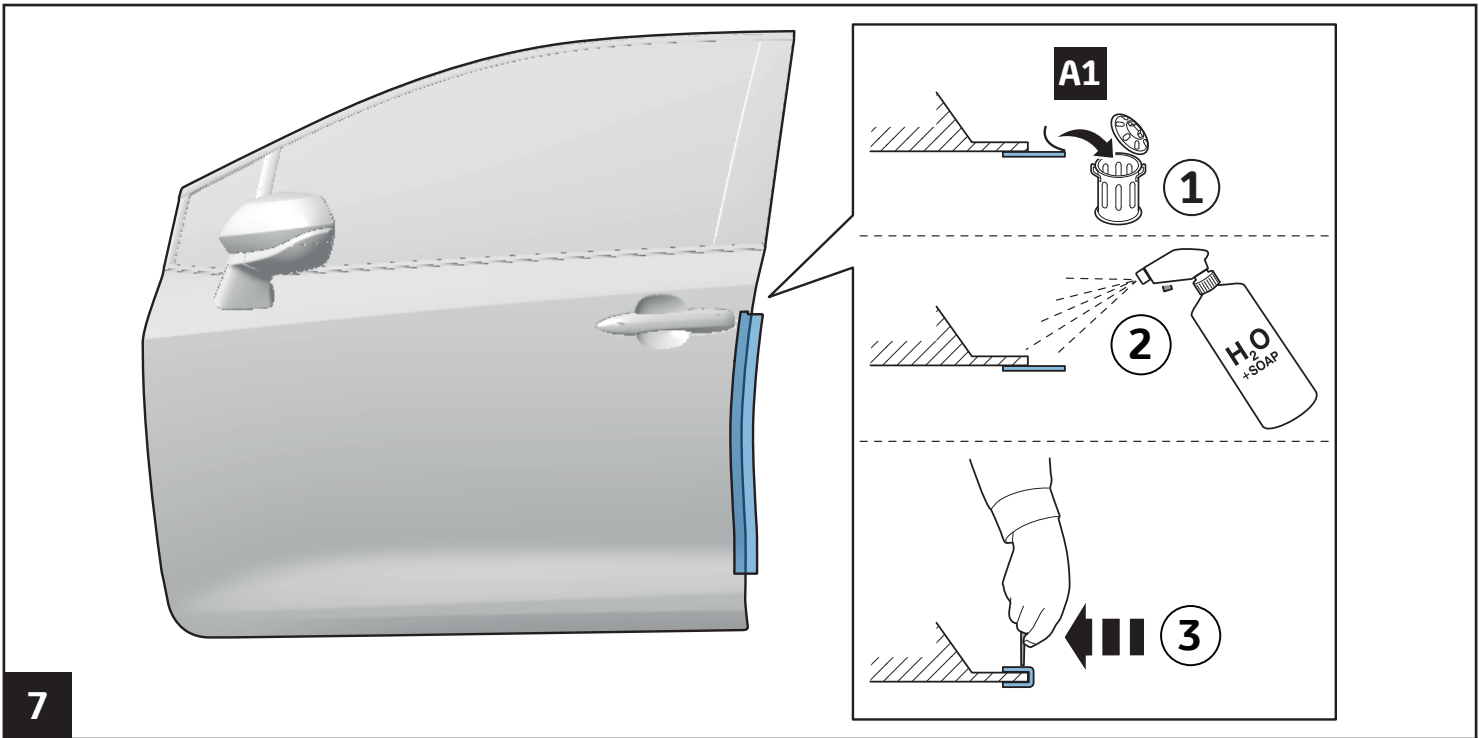


7

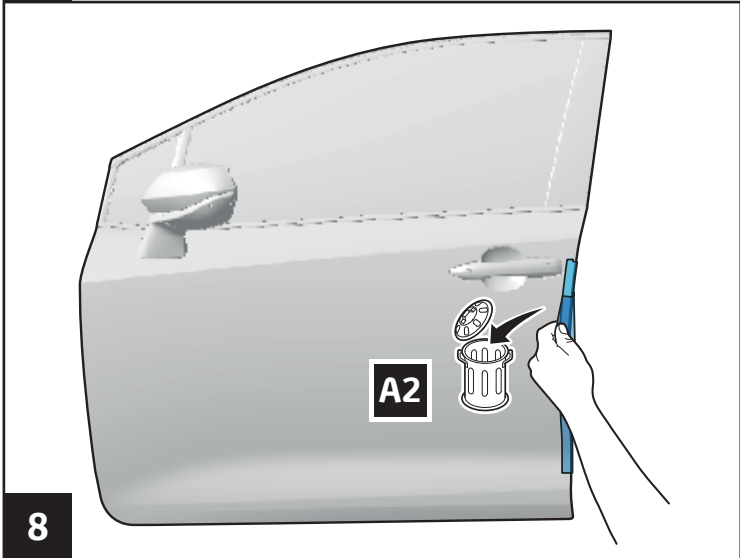


8

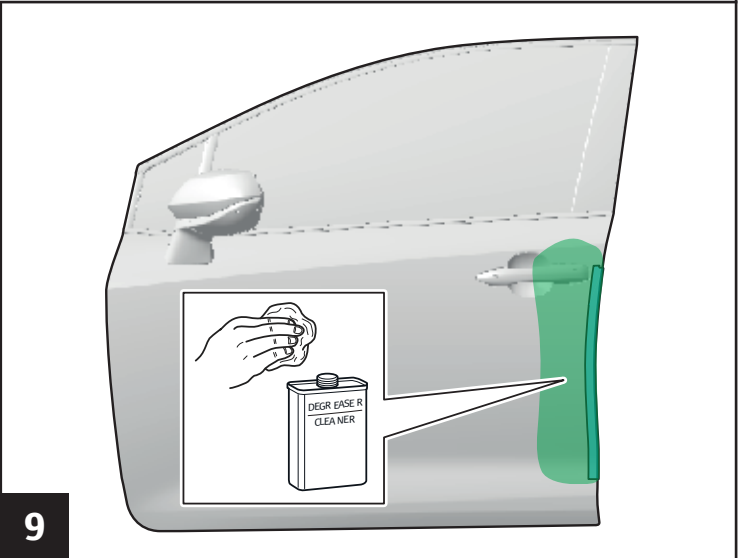

9

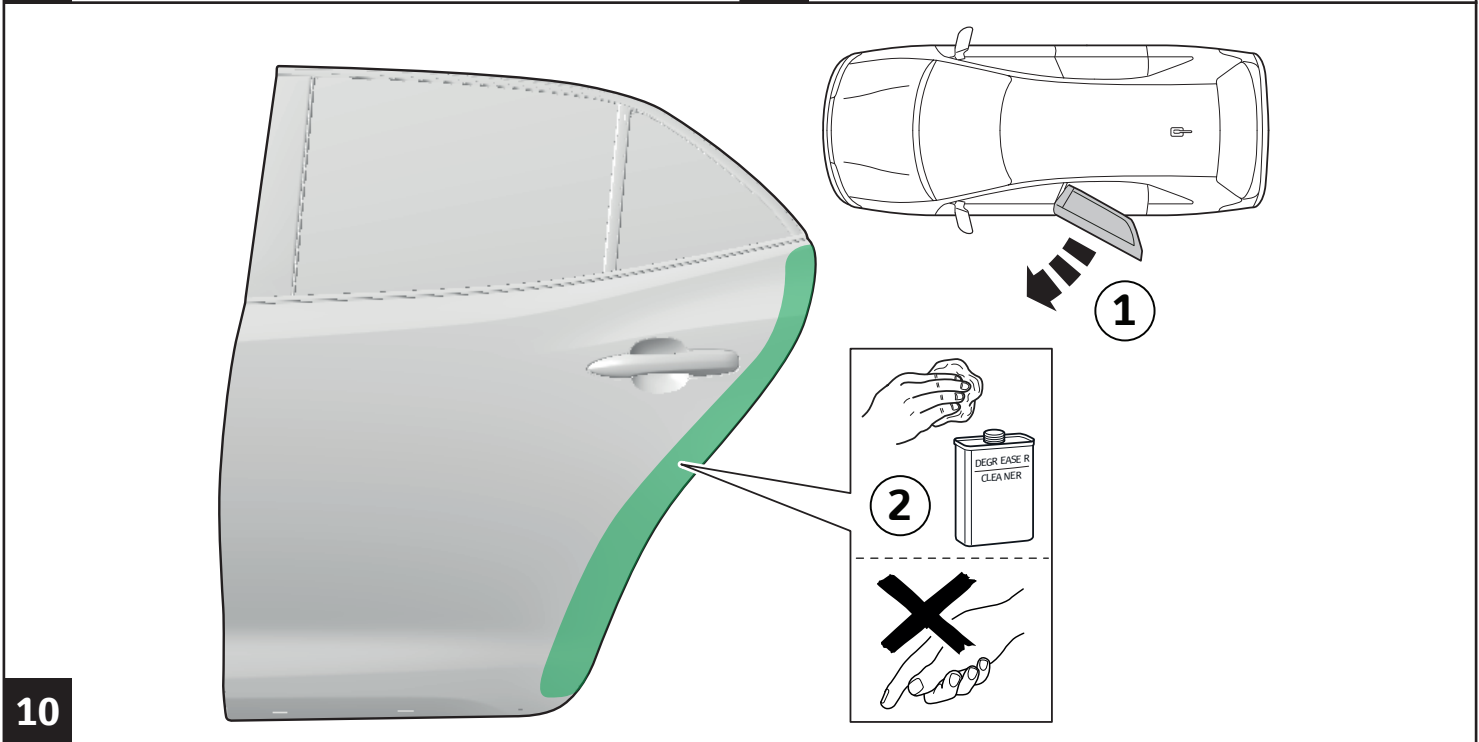


10

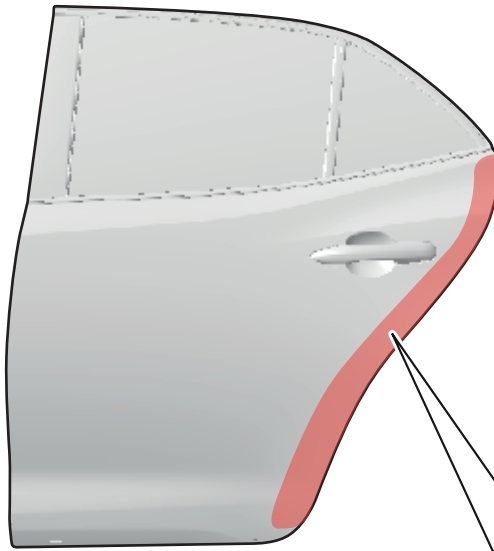


<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 12</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 12</p>	<p>INFO</p>

11




<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 13</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 13</p>	<p>INFO</p>


12

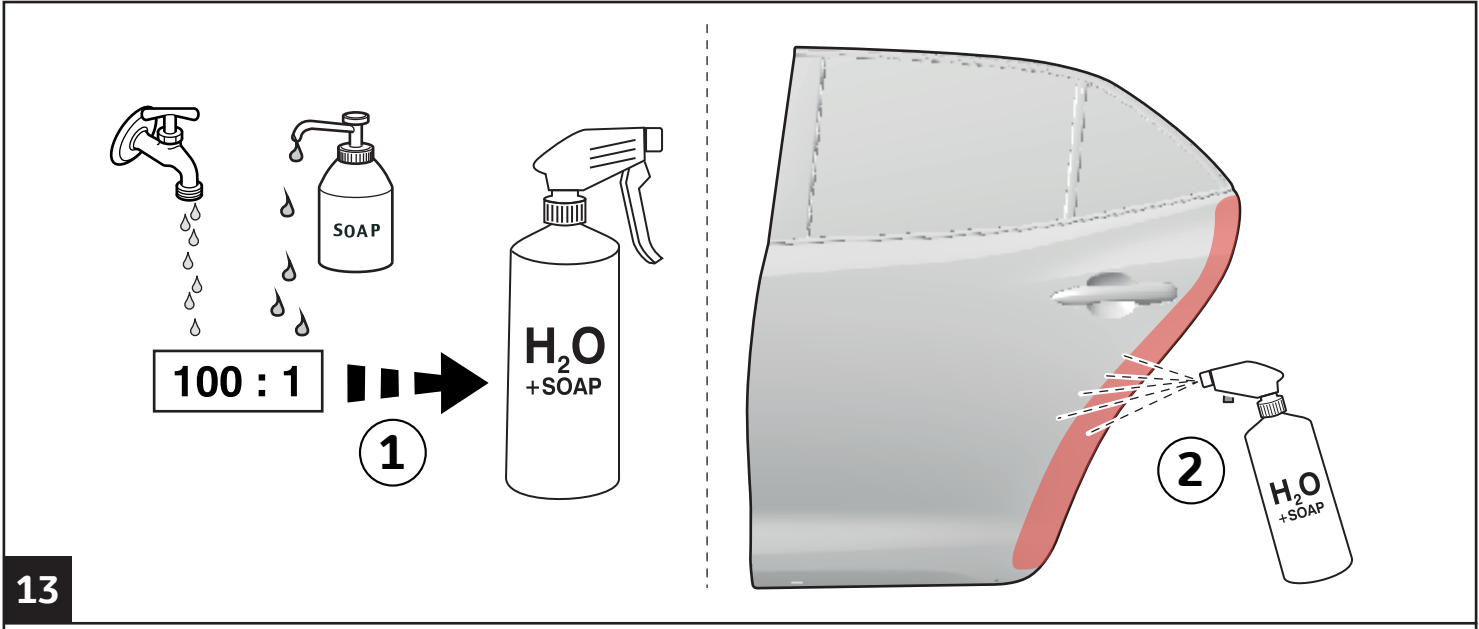



13

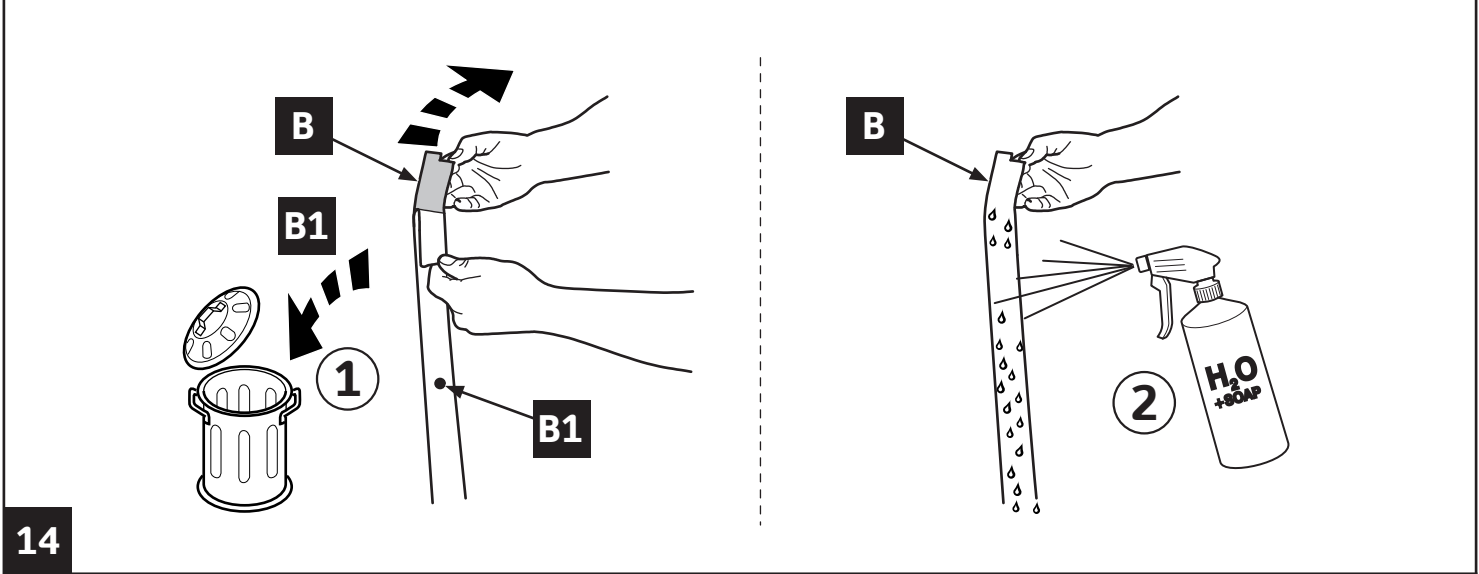


14

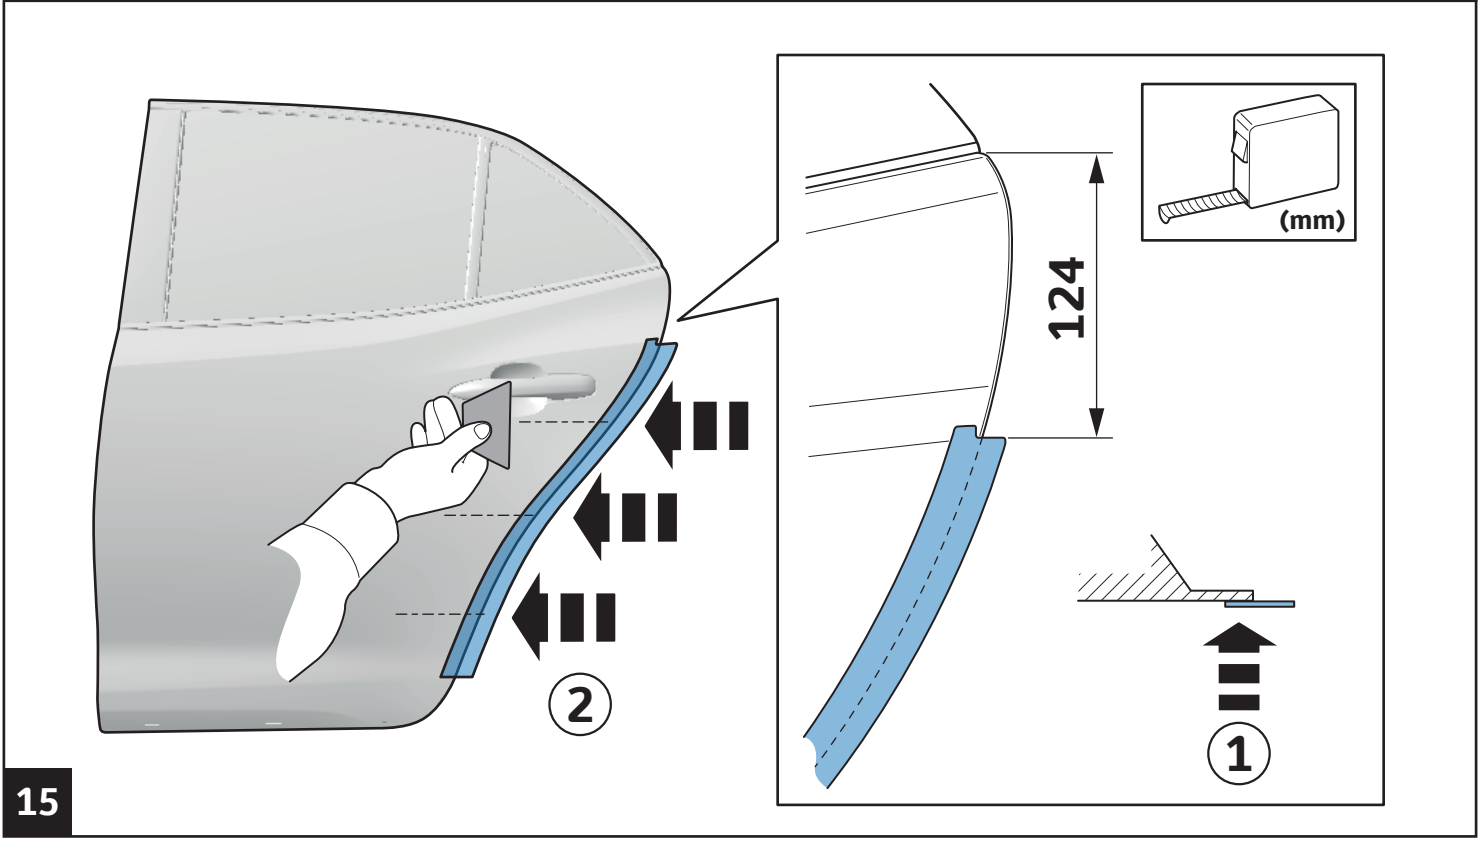

15

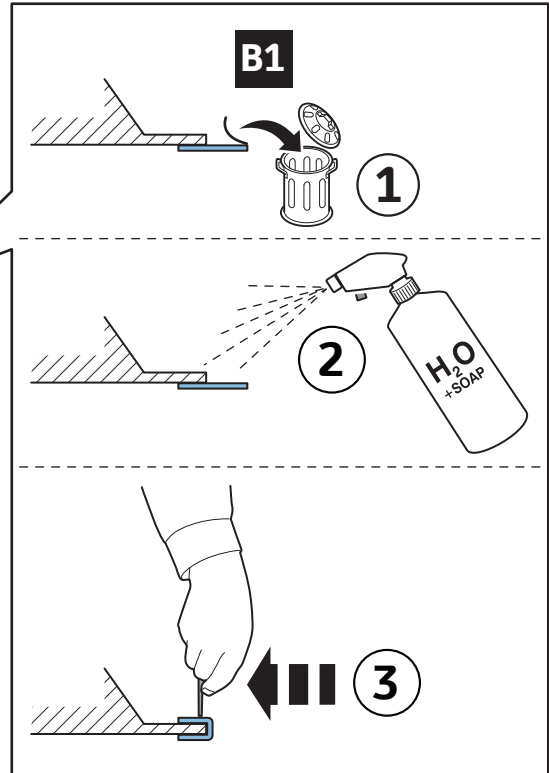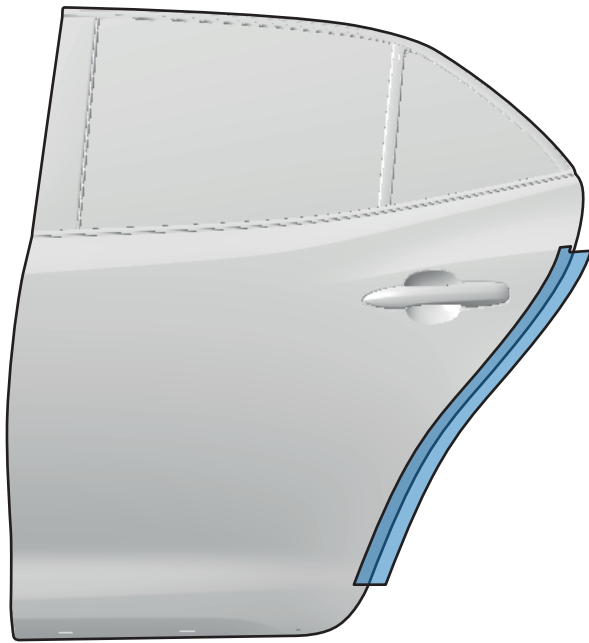

16






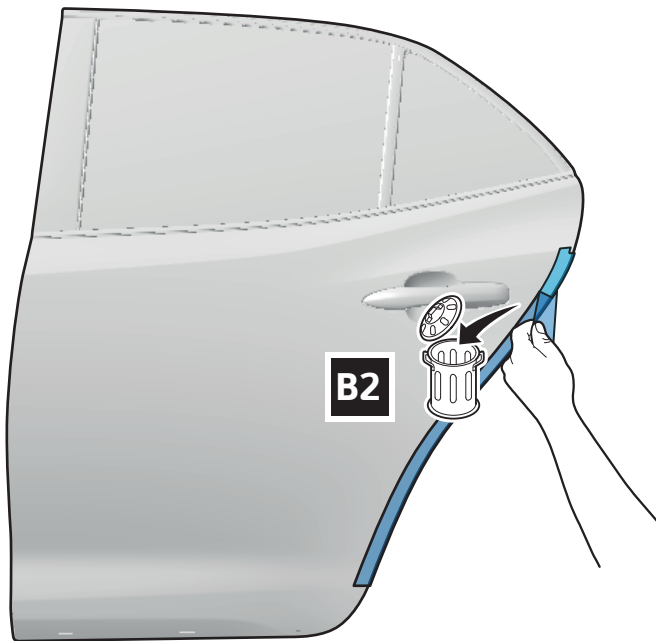


17



18

INFO

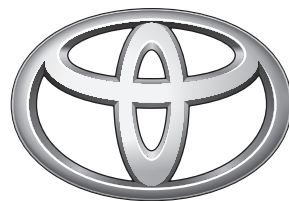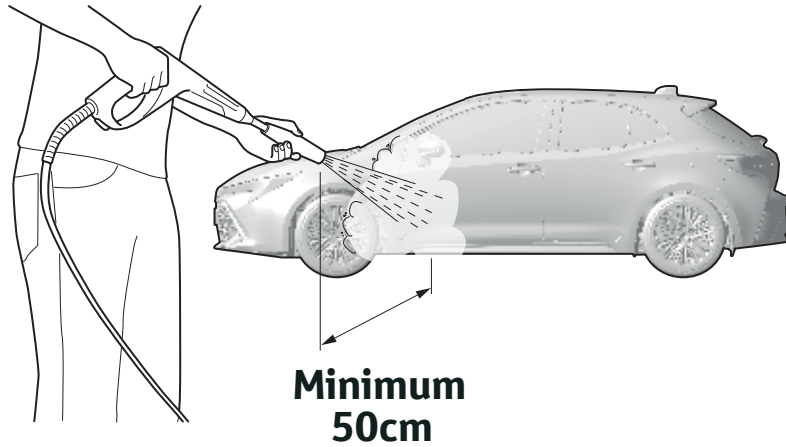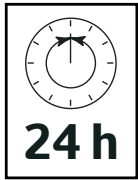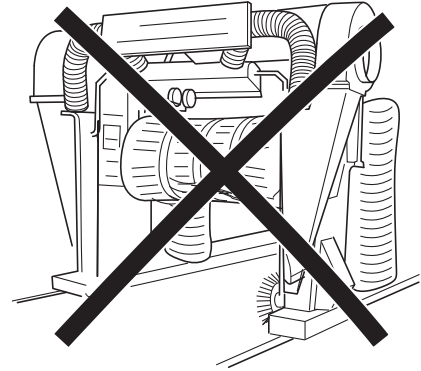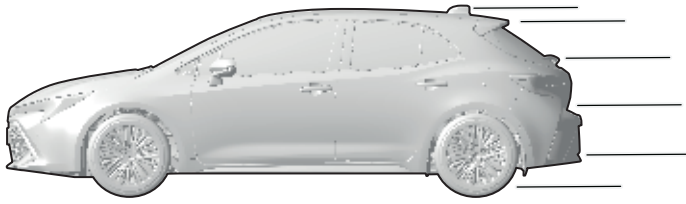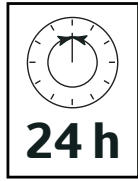

TOYOTA



TOYOTA

CHECK SHEET

Page 1 of 1

Corolla

Door Edge

Model/Year

As from 2019/05

Protection Film

VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

P/N = OK

1

2

LHS RHS

LHS RHS

AFTER INSTALLATION

= OK

1

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp:

