



TOYOTA

ALWAYS A
BETTER WAY

Yaris

Side mouldings

Installation Instructions

Model year: As from 2020/05

Vehicle code: **P*11*-*H***W

Part number: PW170-0D100


Manual reference number: AIM 004 440-0

Revision record


Rev. No.	Date	Page	Step	Remarks










PW170-0D100


PW170-0D101

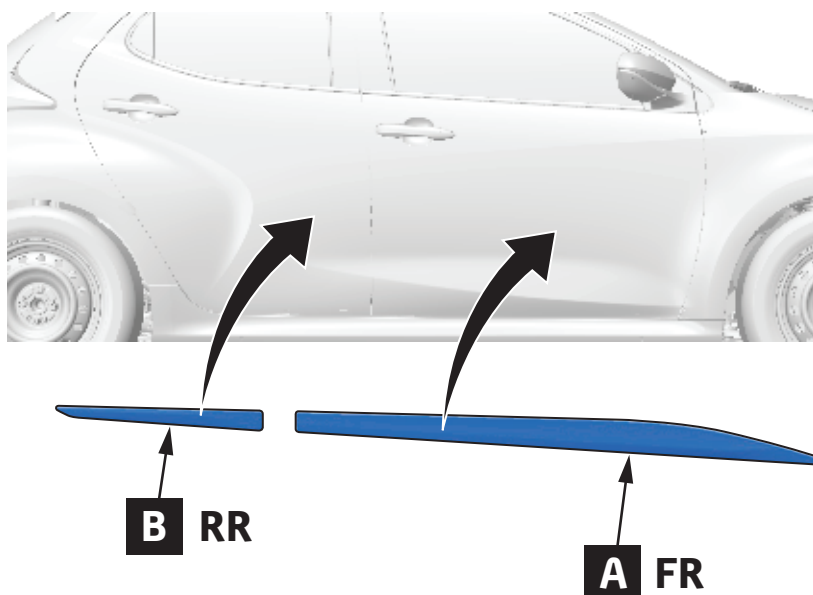


PW170-0D102

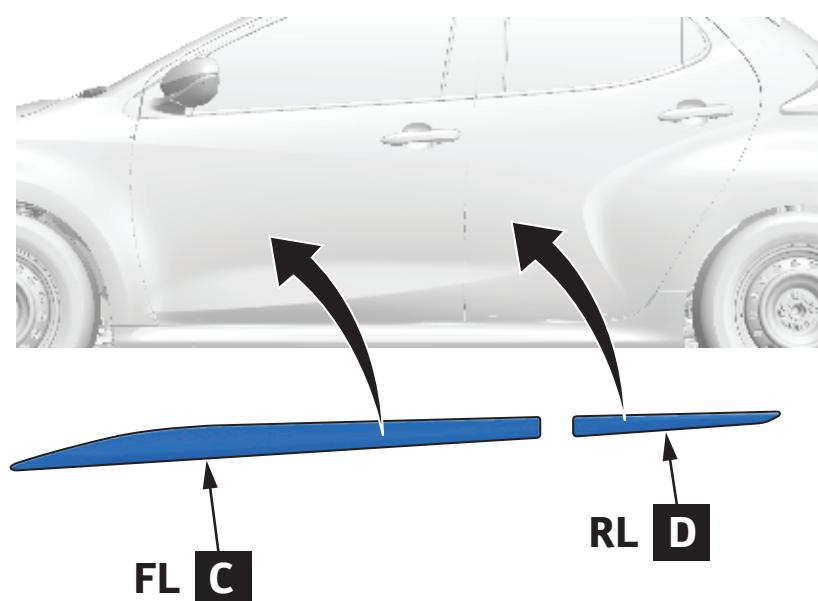

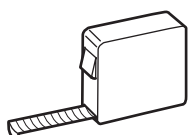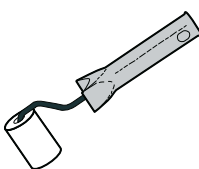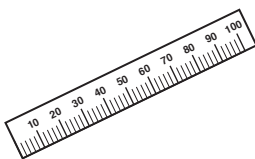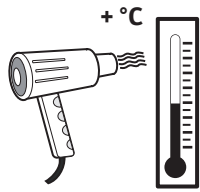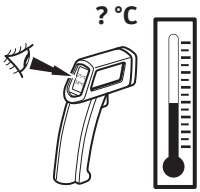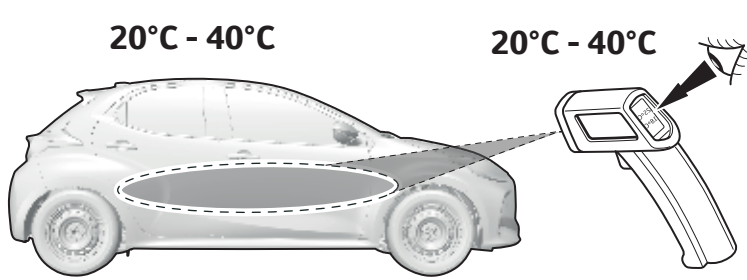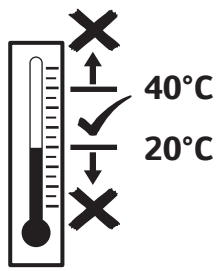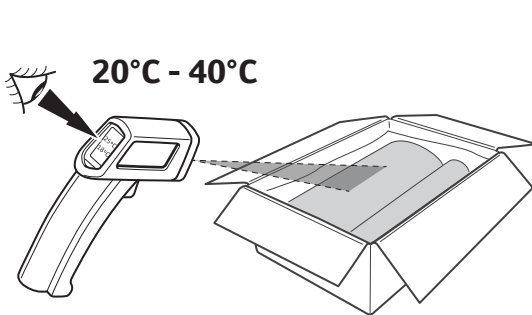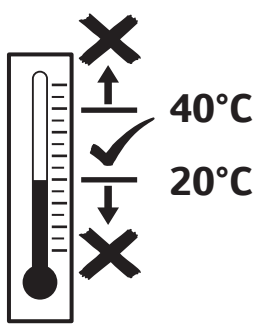
  AIM 003-516-*			
			
INFO			
 Material Safety Data Sheet		 Technical Data Sheet	
			
 			

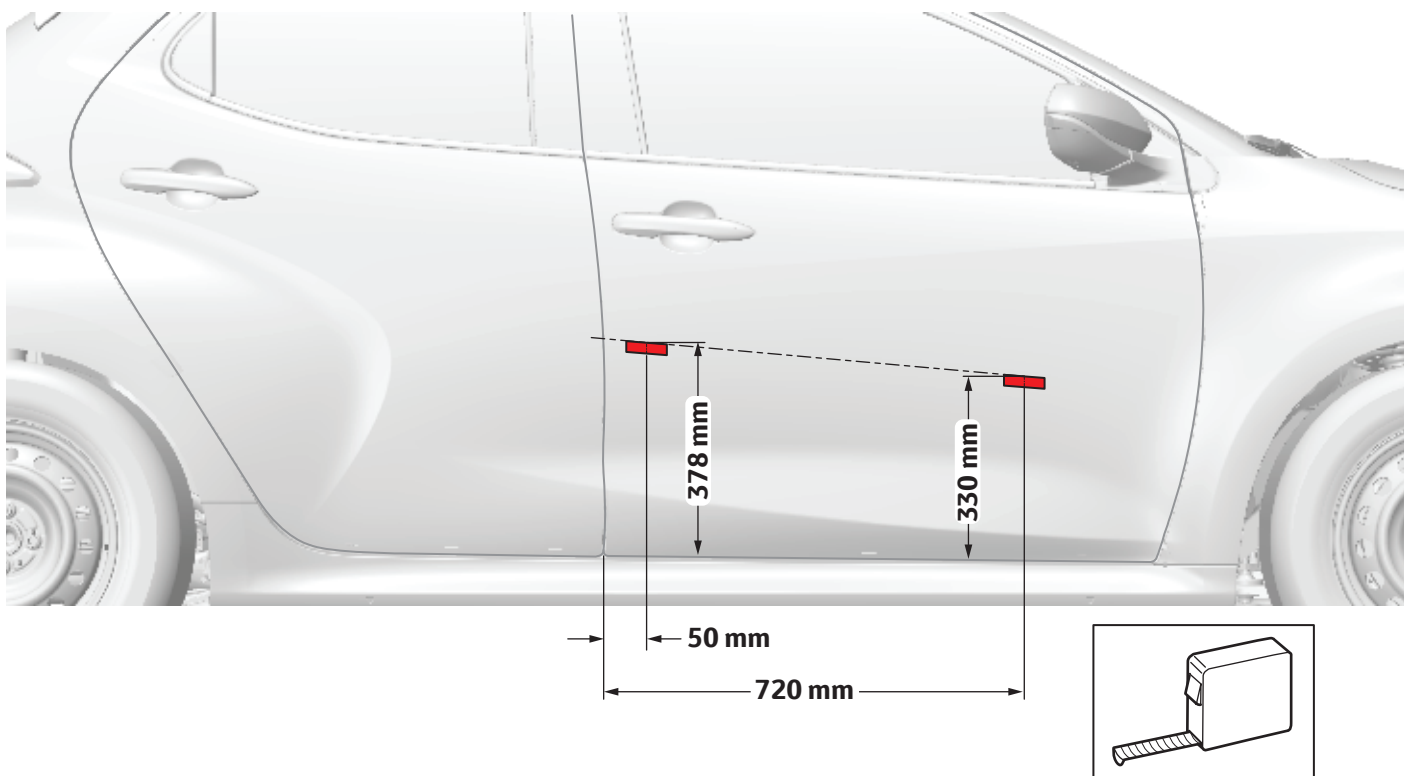

1

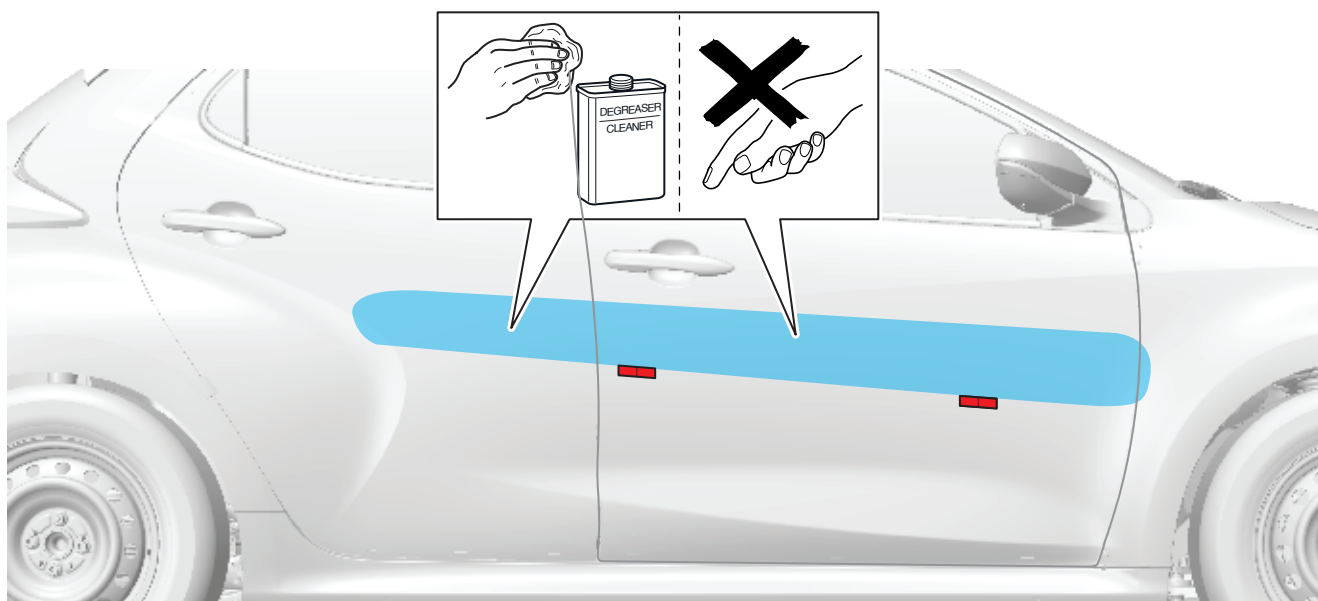


2

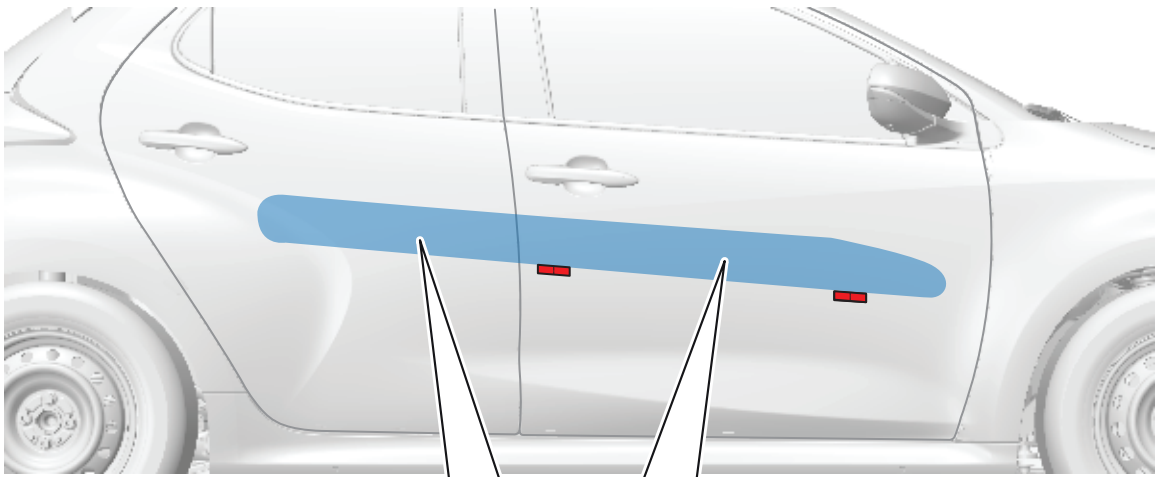



①	< 20°C ➔ ② 20°C - 40°C ➔ 4	②
③	20°C - 40°C ➔ 4	INFO ⌚ 3 ➔ 12 ✓ ✗


3

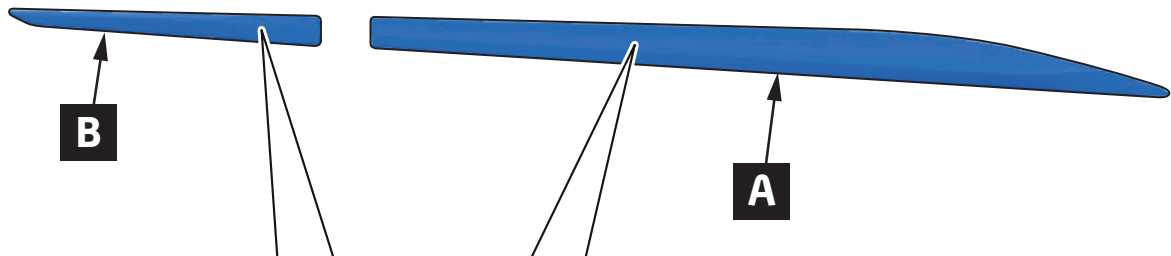


①	< 20°C ➔ ② 20°C - 40°C ➔ 5	②
③	20°C - 40°C ➔ 5	INFO ⌚ 4 ➔ 12 ✓ ✗

4

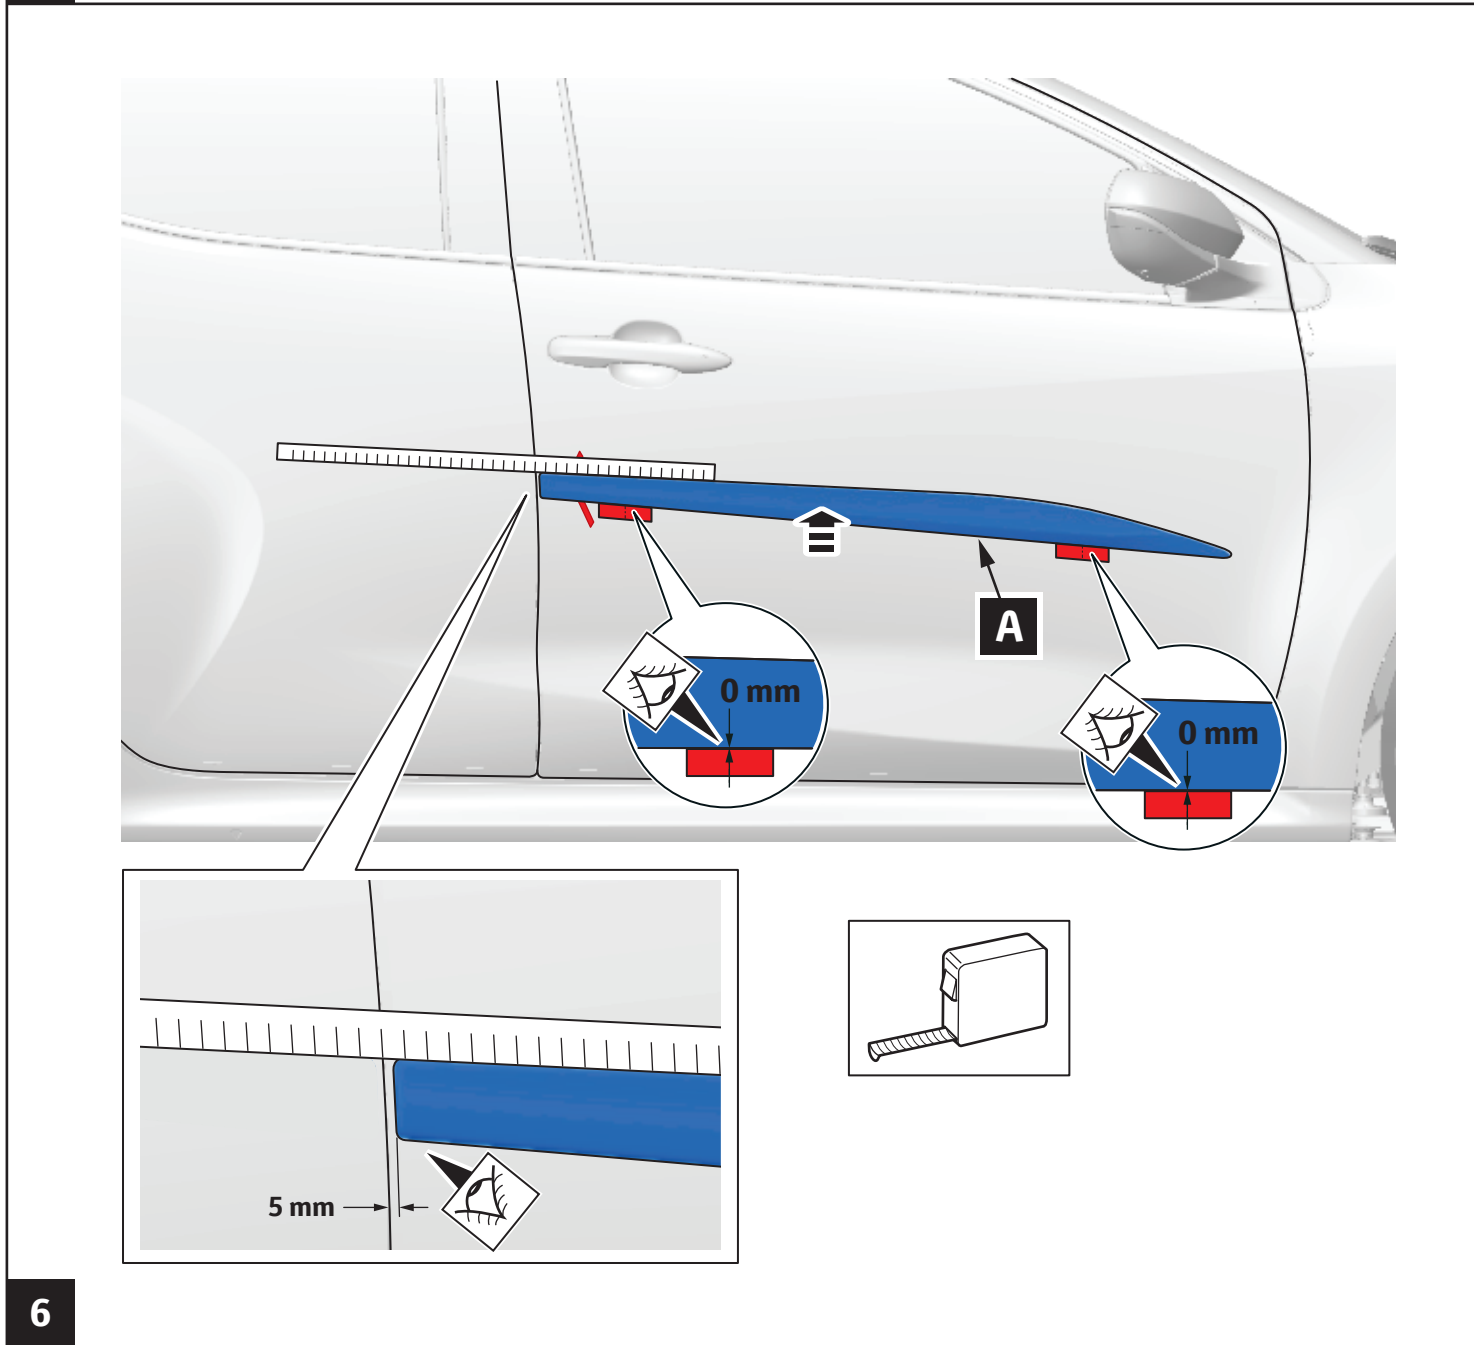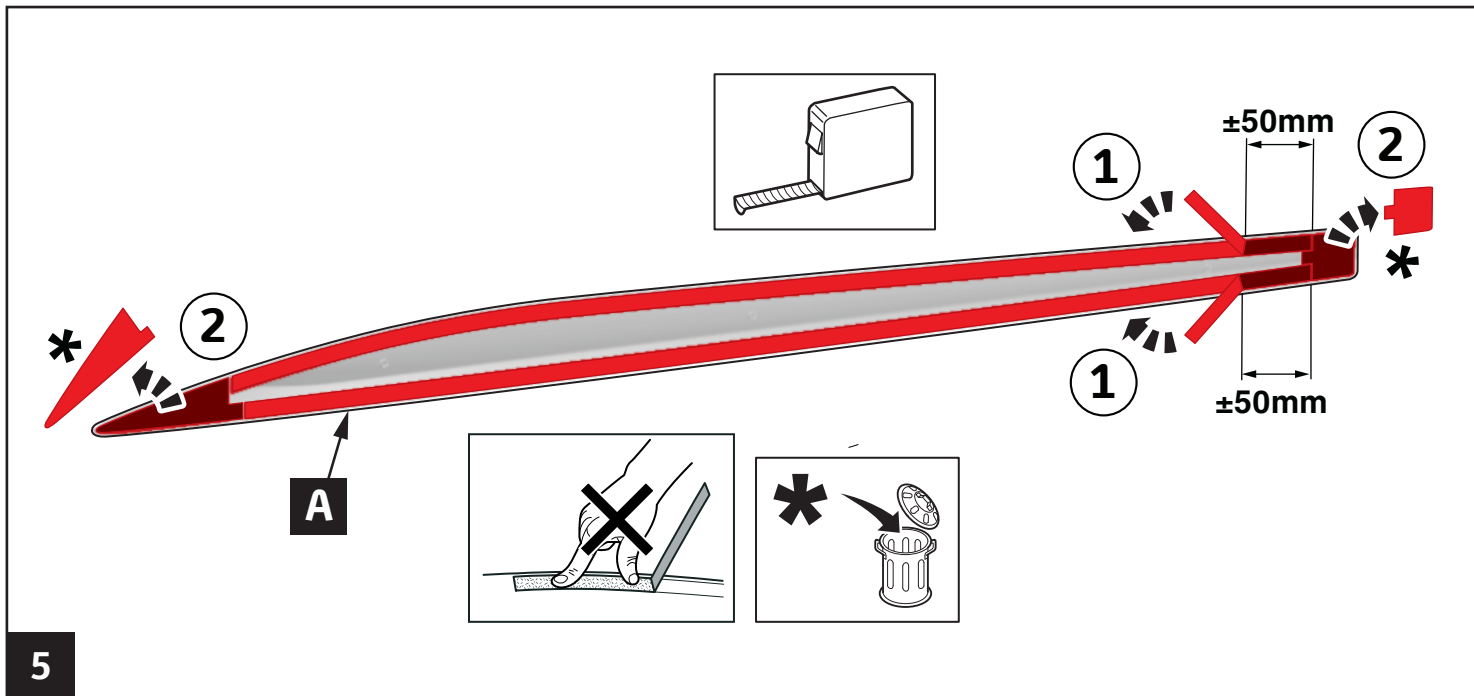


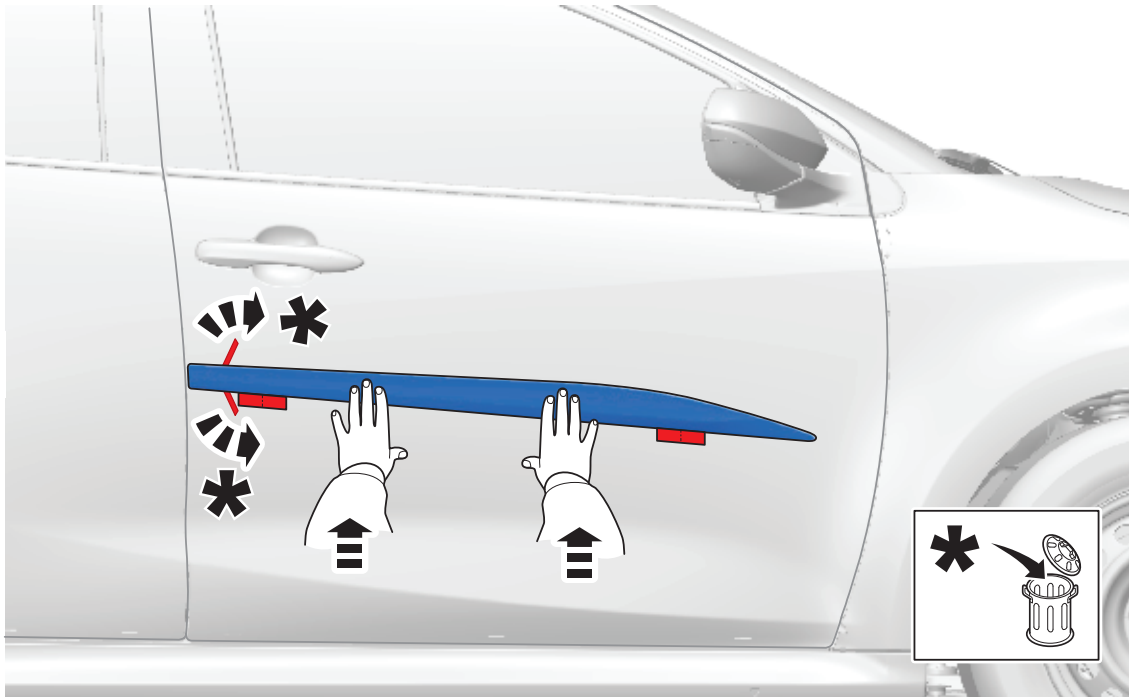


7

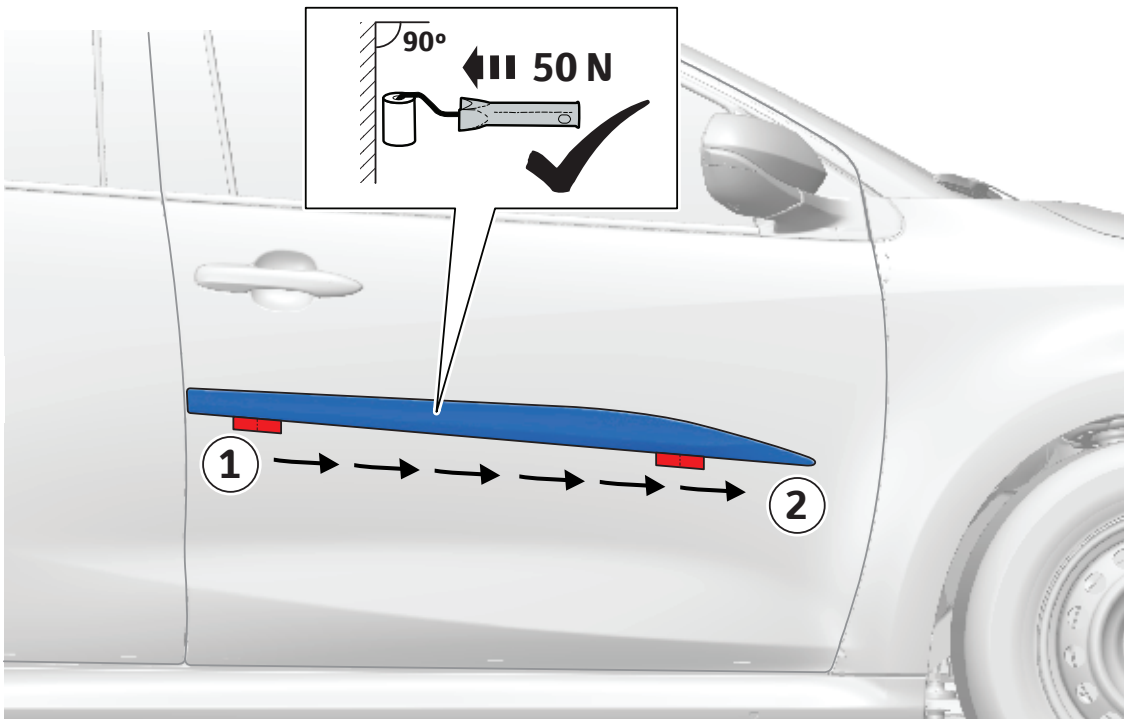


8

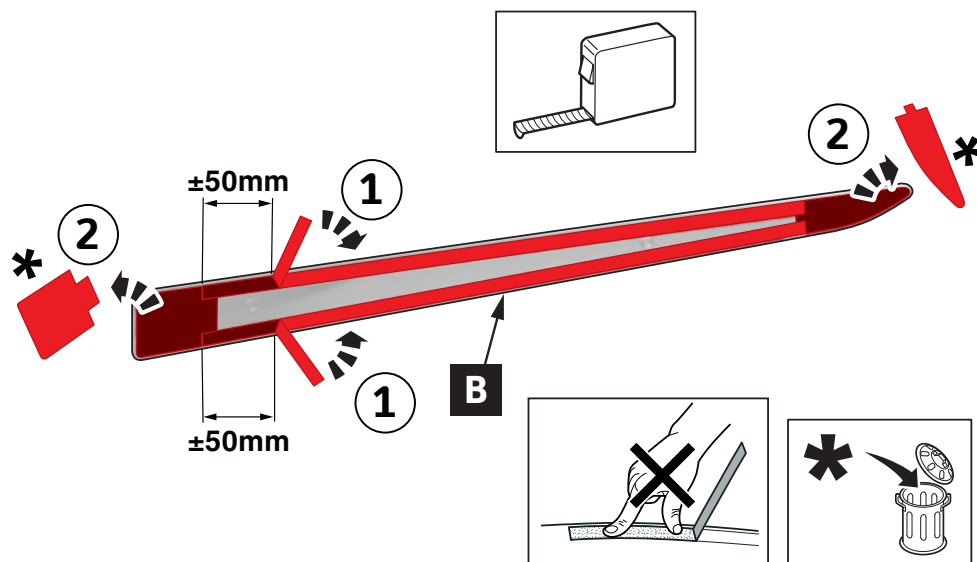


9

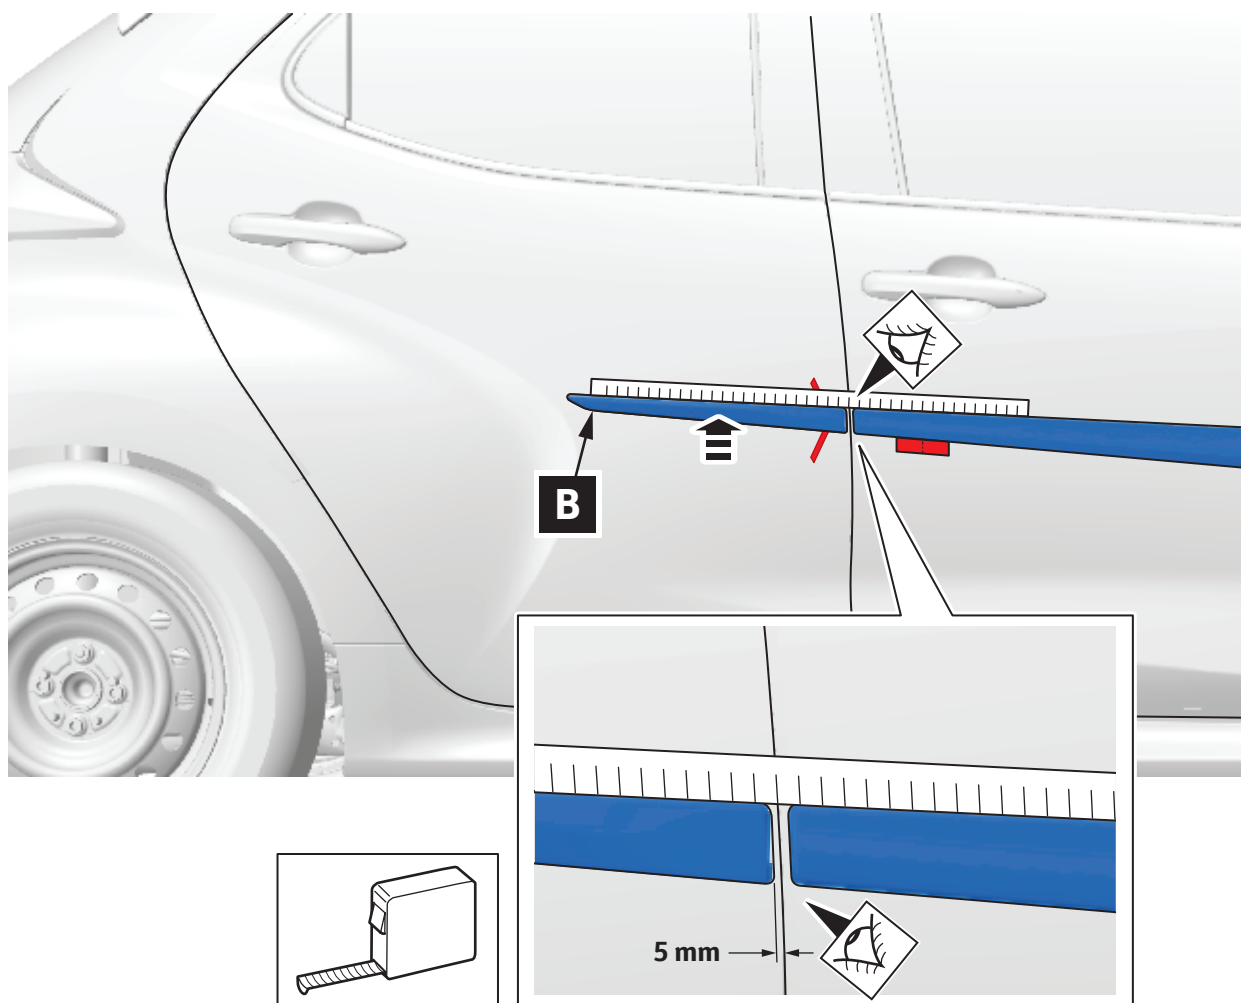


10

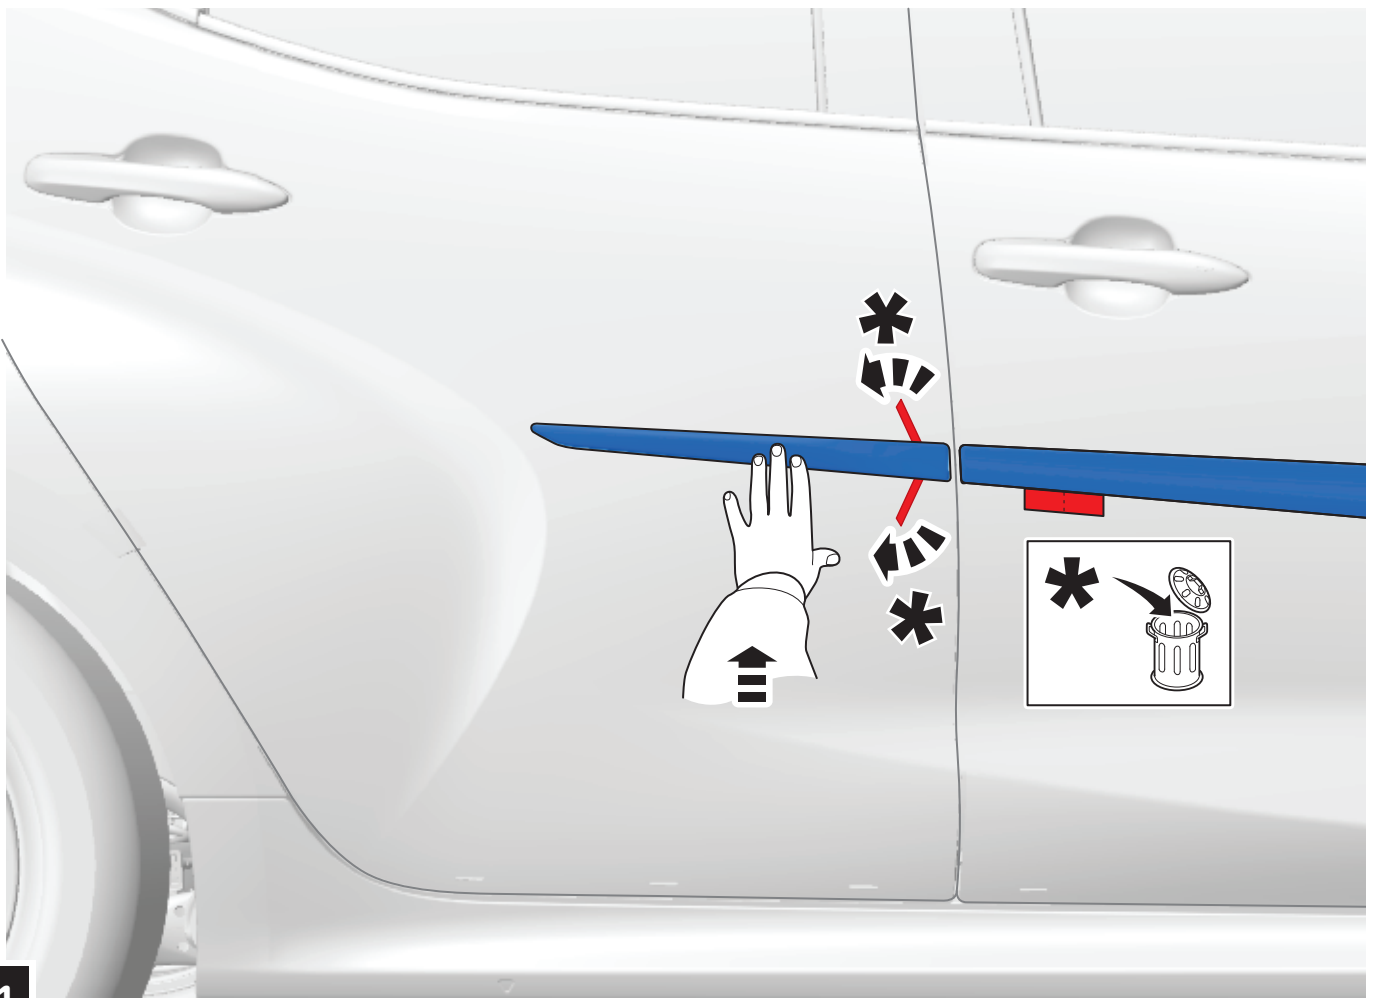


11

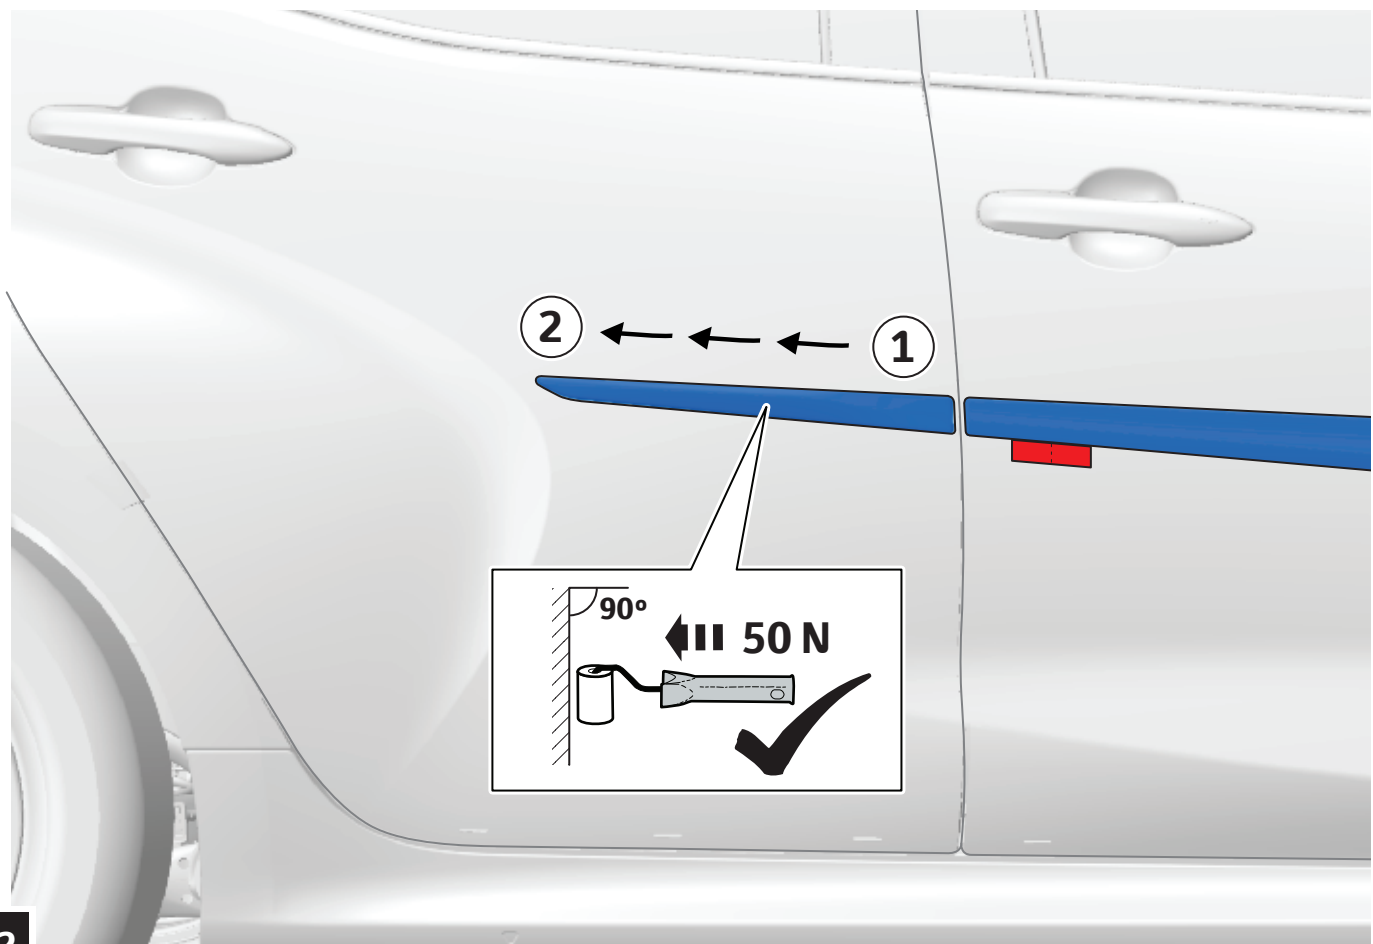

12


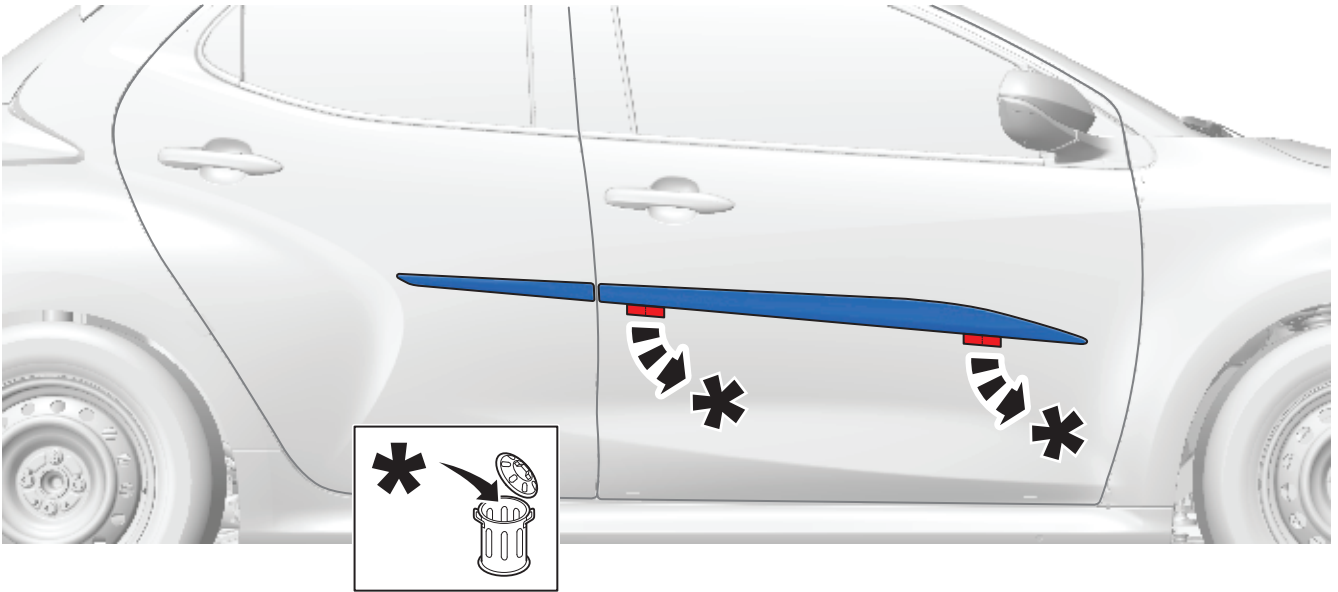


13





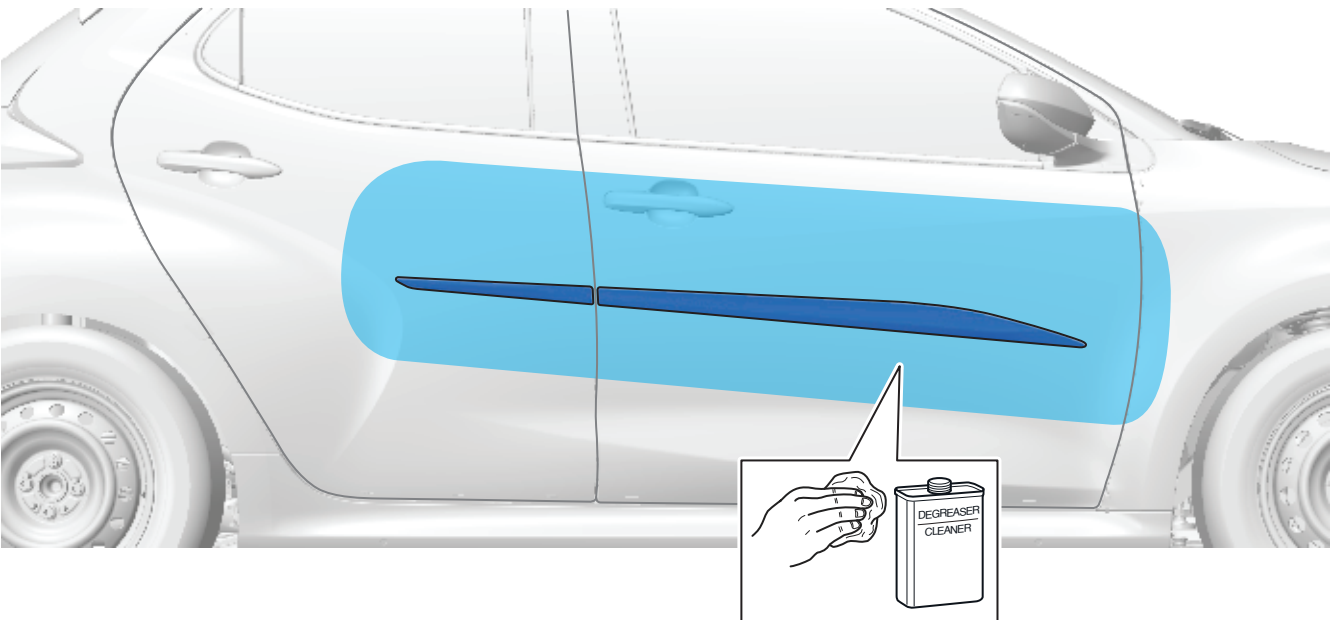


14

RHS = LHS

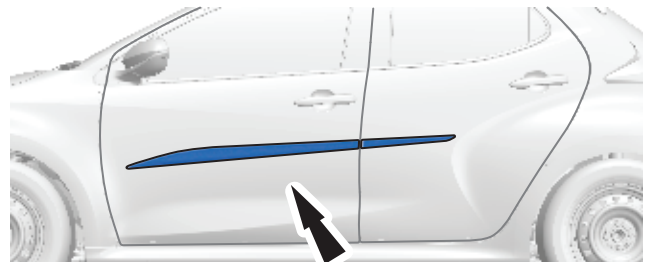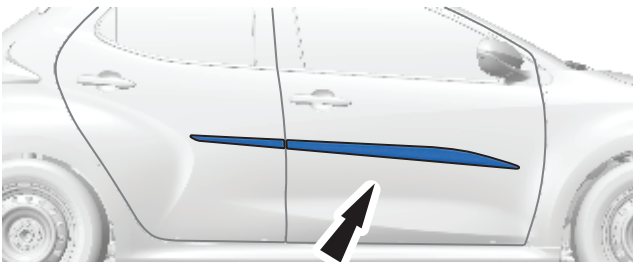

INFO

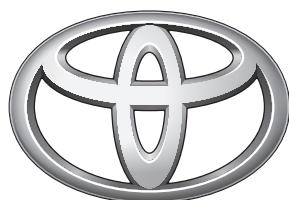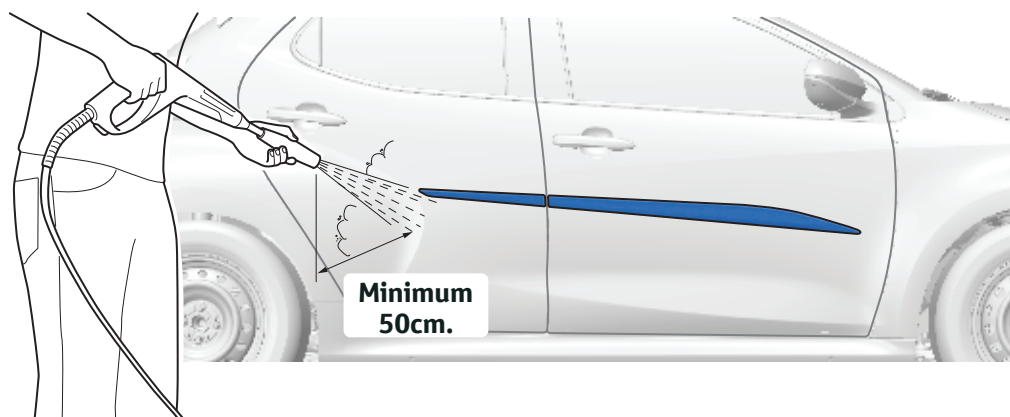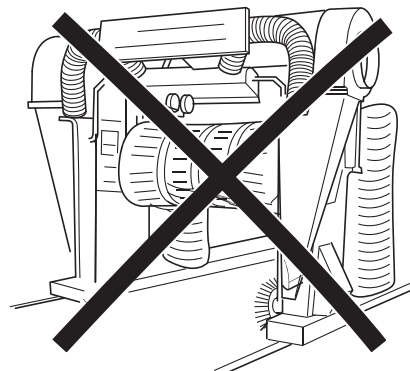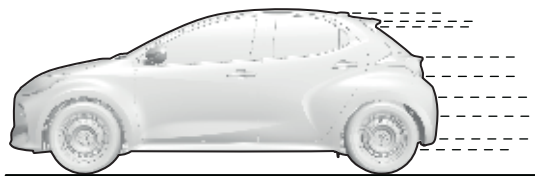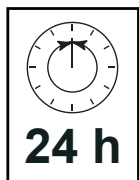

TOYOTA



TOYOTA

ALWAYS A
BETTER WAY

CHECK SHEET

Page 1 of 2

Yaris


Model/Year

As from 2020/05

Side mouldings



VIN n°

DURING INSTALLATION

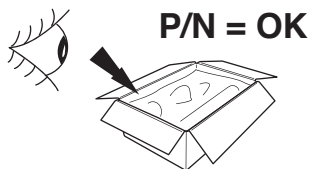


1

AFTER INSTALLATION

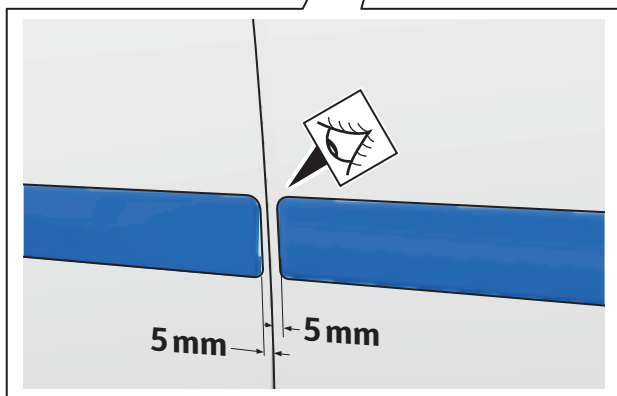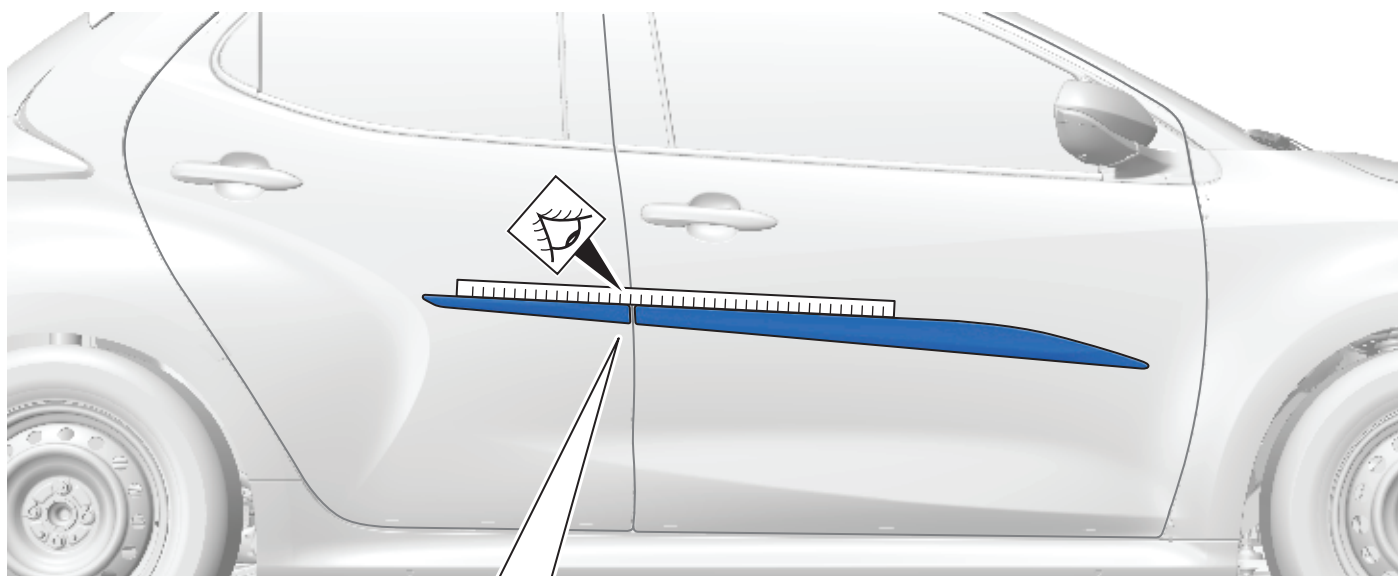

1




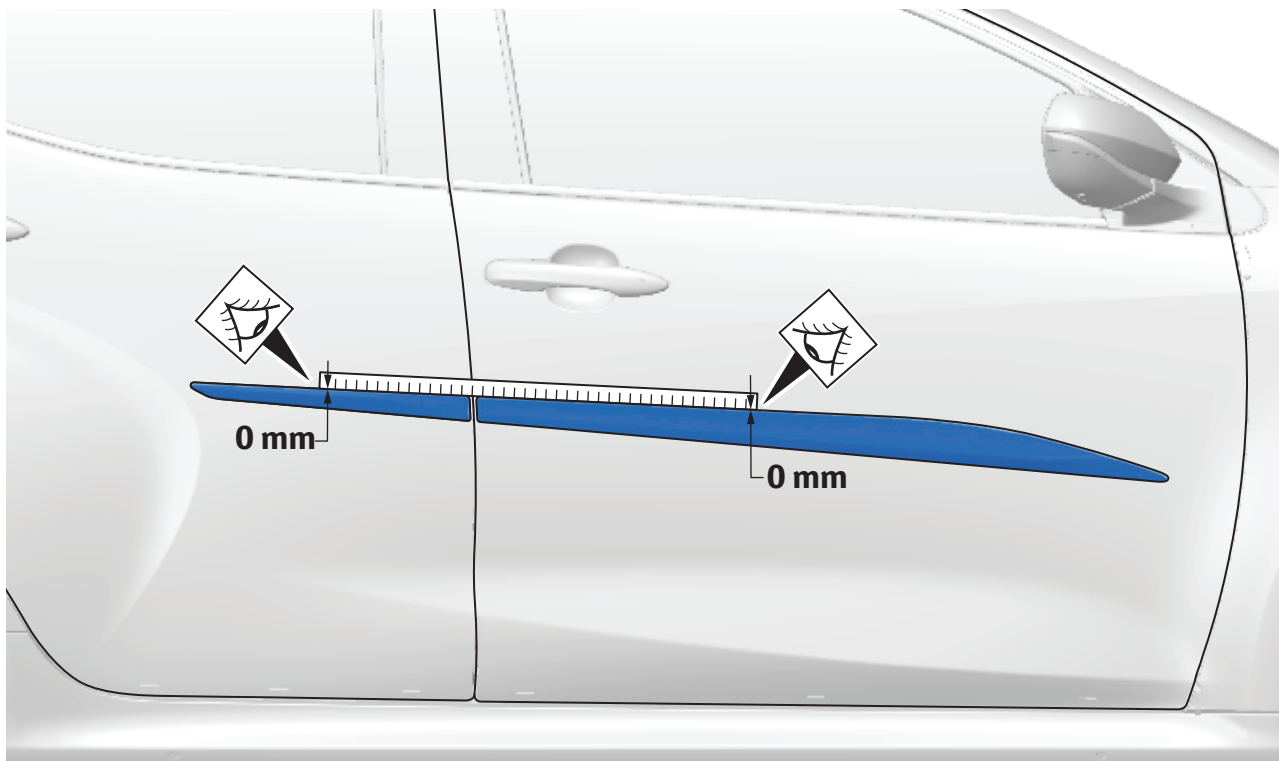


2



3

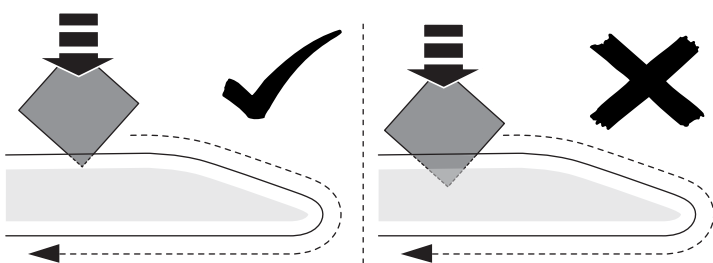

4

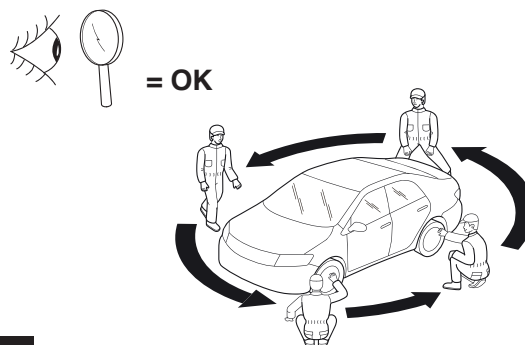

Installation Date:

. . . / . . . /

Technician Name & Signature:

Stamp: