



TOYOTA

ALWAYS A
BETTER WAY

Prius & Prius Plug-in (PHV)

Side mouldings

Installation Instructions

Model year:	Prius Prius Plug-in	As from 2015/12 As from 2016/09
Vehicle code:	ZVW5**-AHXEBW	
Part number:	PW170-47000	


Manual reference number: AIM 003 585-3

Revision record



Rev. No.	Date	Page	Step	Remarks
3	21.10.2020	1, 11	CS	Model year update
3	21.10.2020	3, 5-7	1, 5, 6, 9, 10	Tape added
3	21.10.2020	9	Information	No jet wash for 24h added

PW170-47000

PW170-47002 (LH)

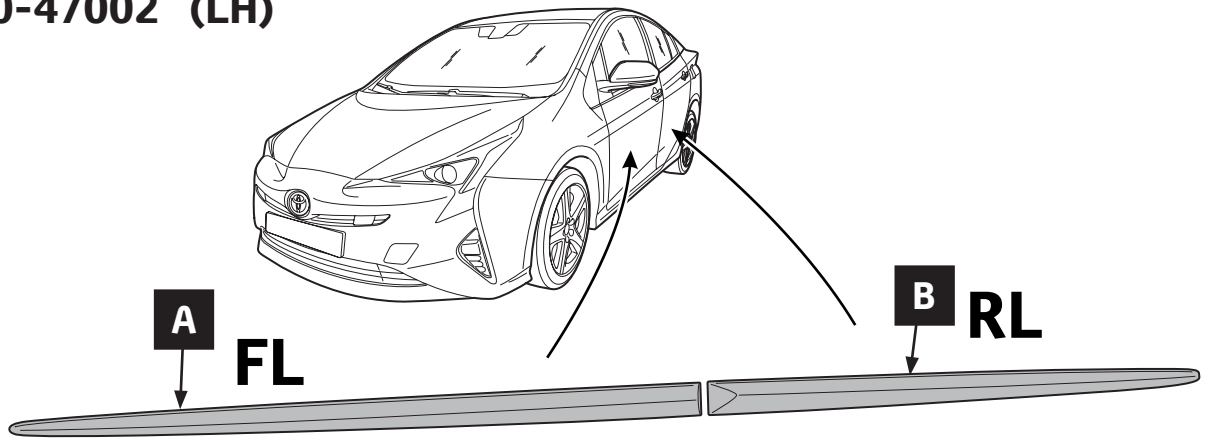

PW170-47001 (RH)

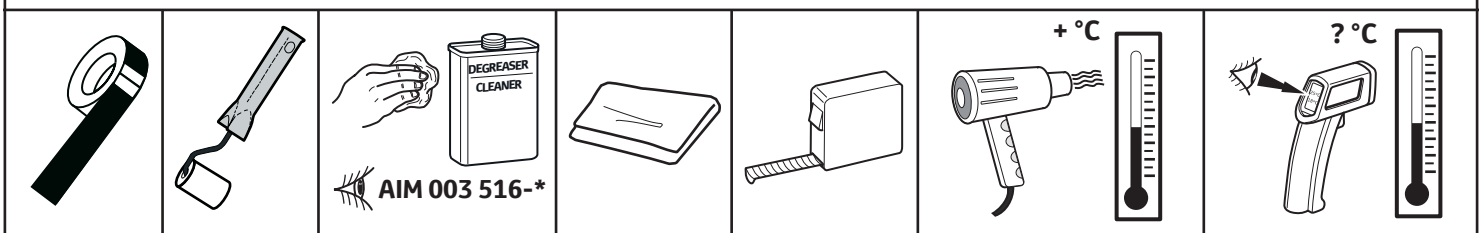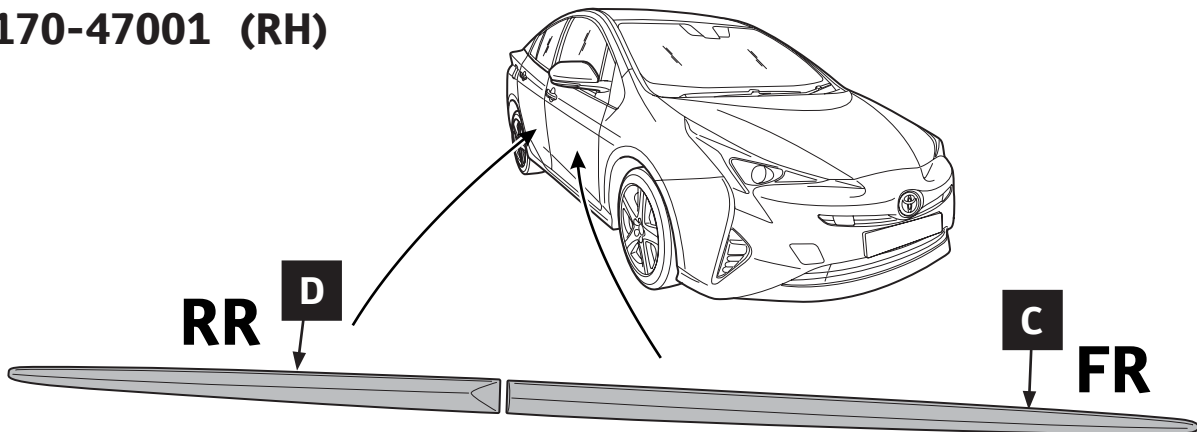





INFORMATION




Material Safety Data Sheet




Technical Data Sheet

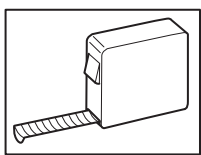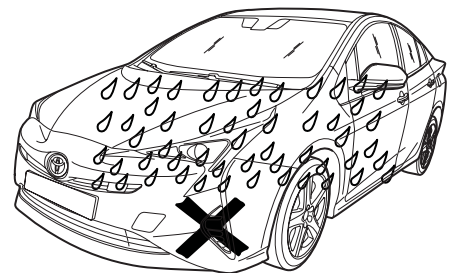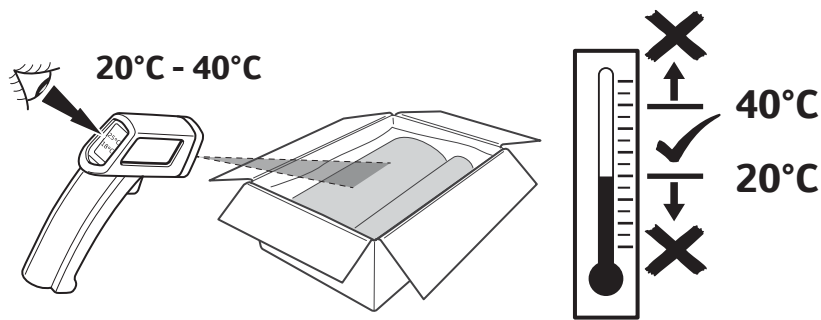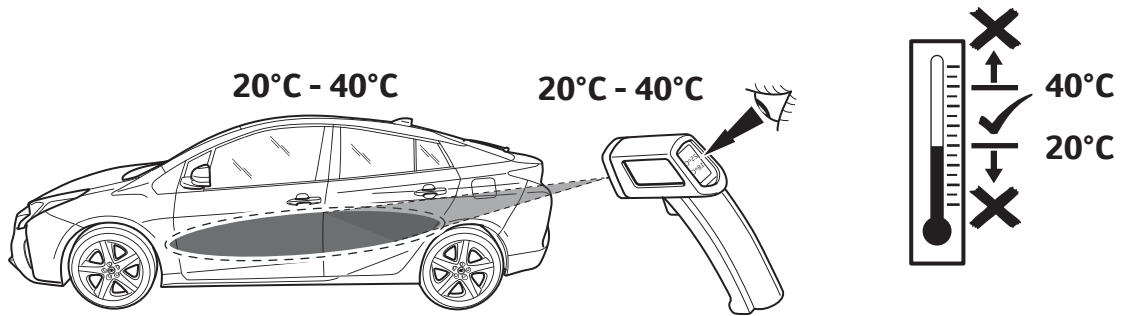


3

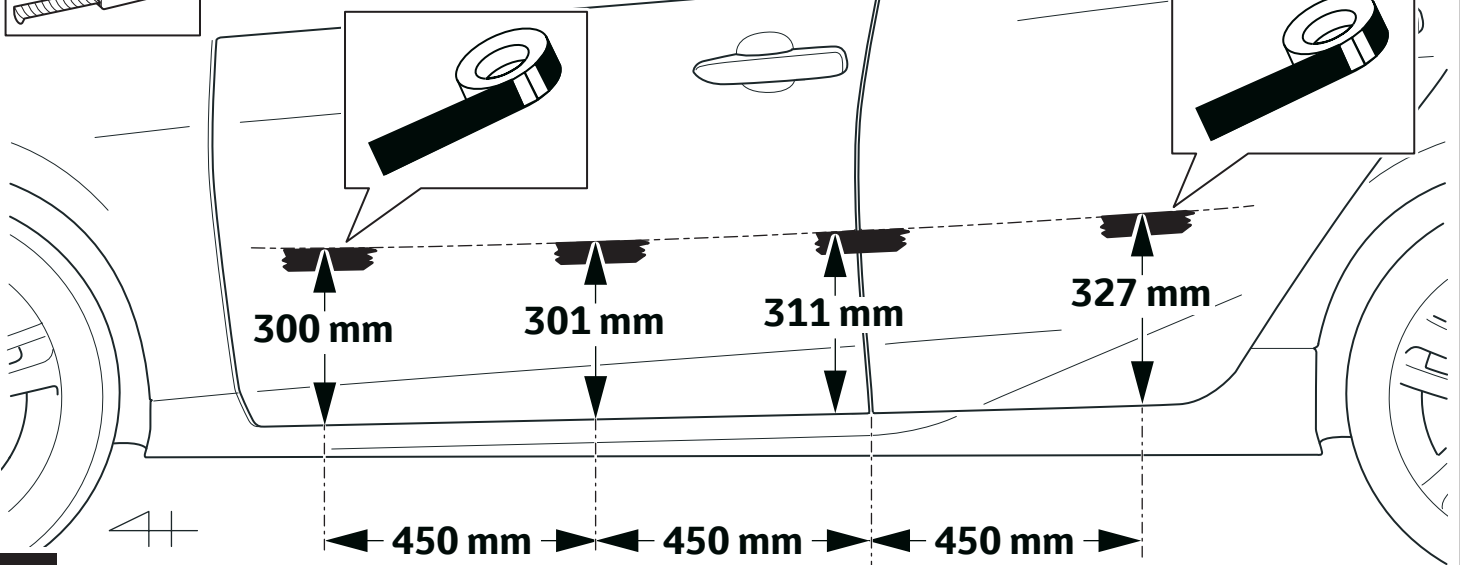

1

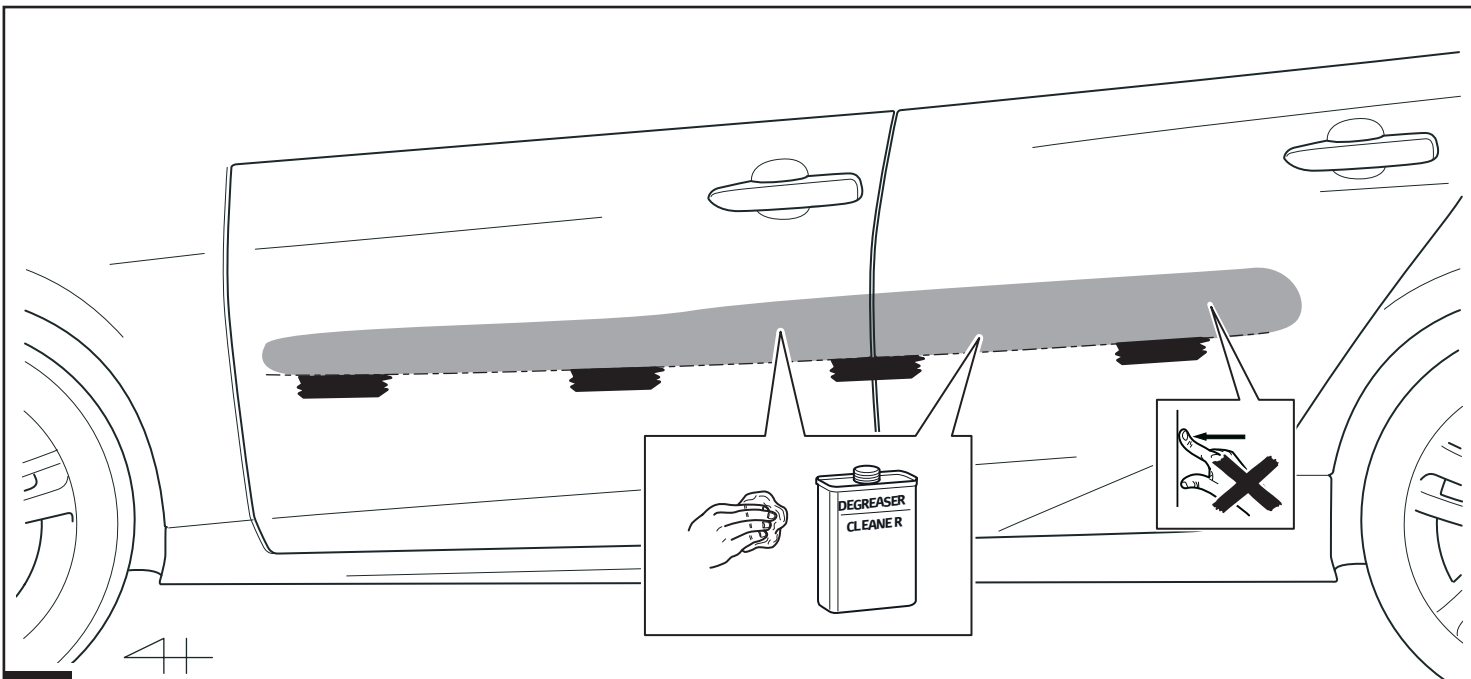


2

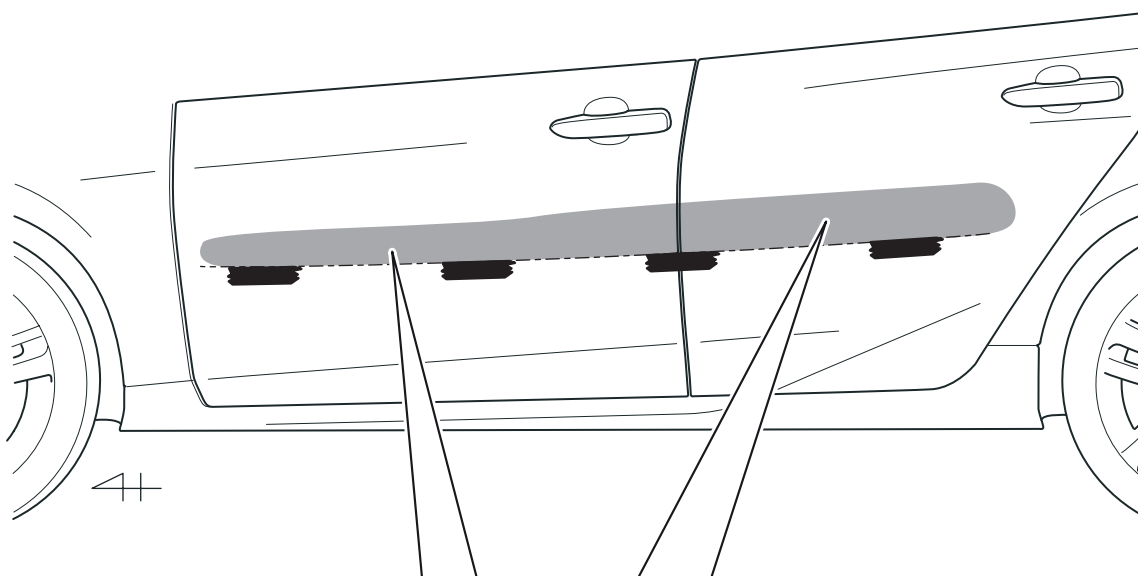

<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 4</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 4</p>	<p>INFO</p> <p>3 → 12</p>


3

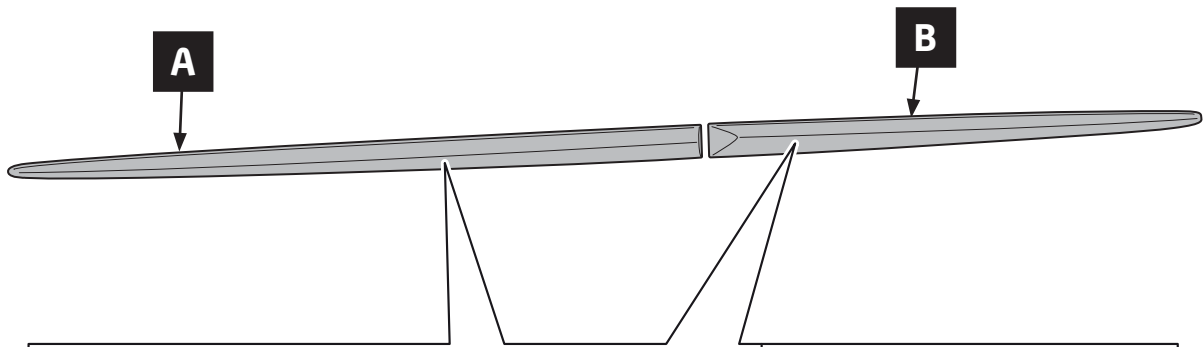




<p>1</p> <p>? °C</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 5</p>	<p>2</p> <p>+ °C</p>
<p>3</p> <p>? °C</p>	<p>20°C - 40°C → 5</p>	<p>INFO</p> <p>4 → 12</p>


4

3

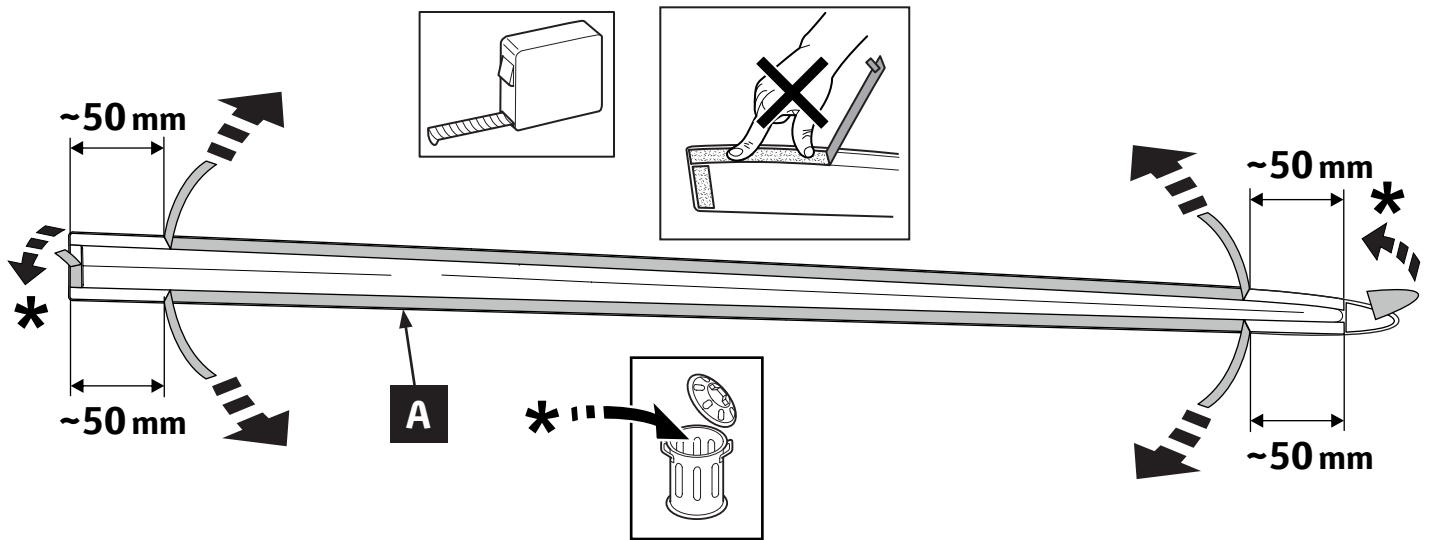


5

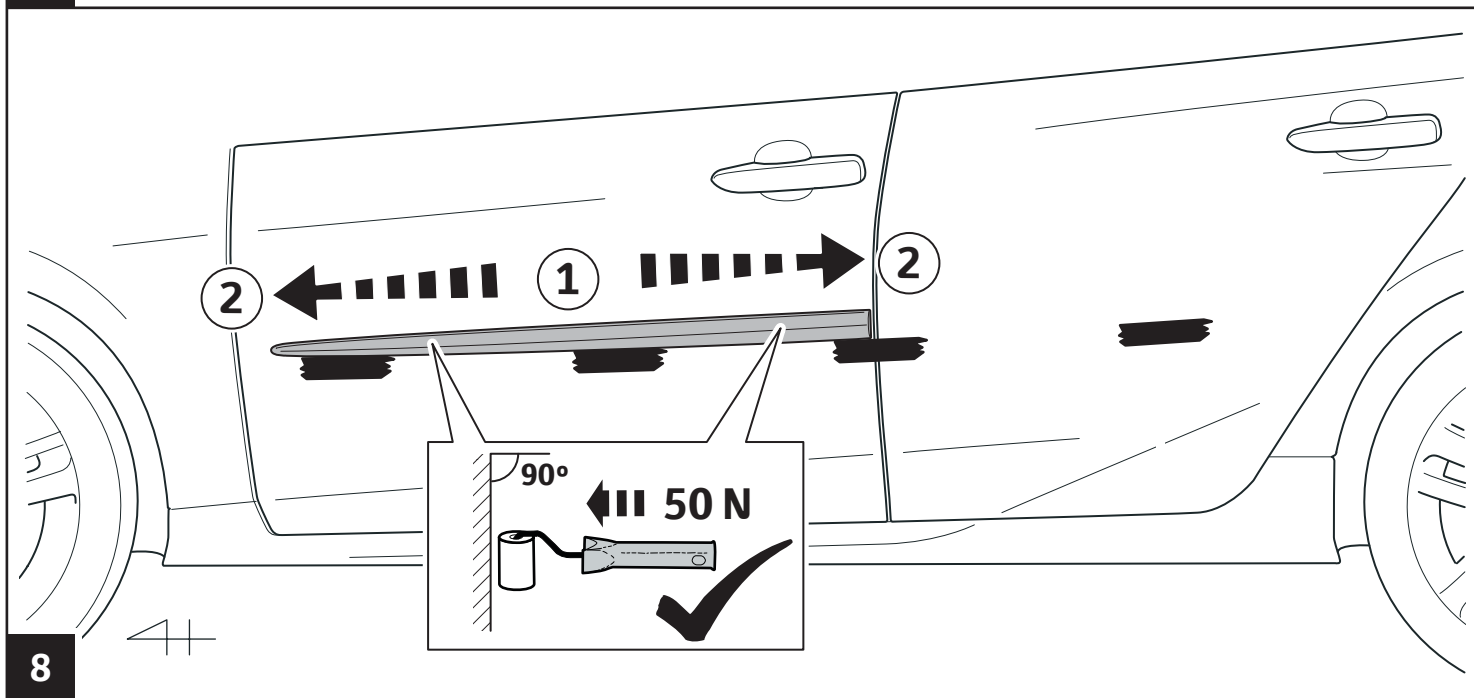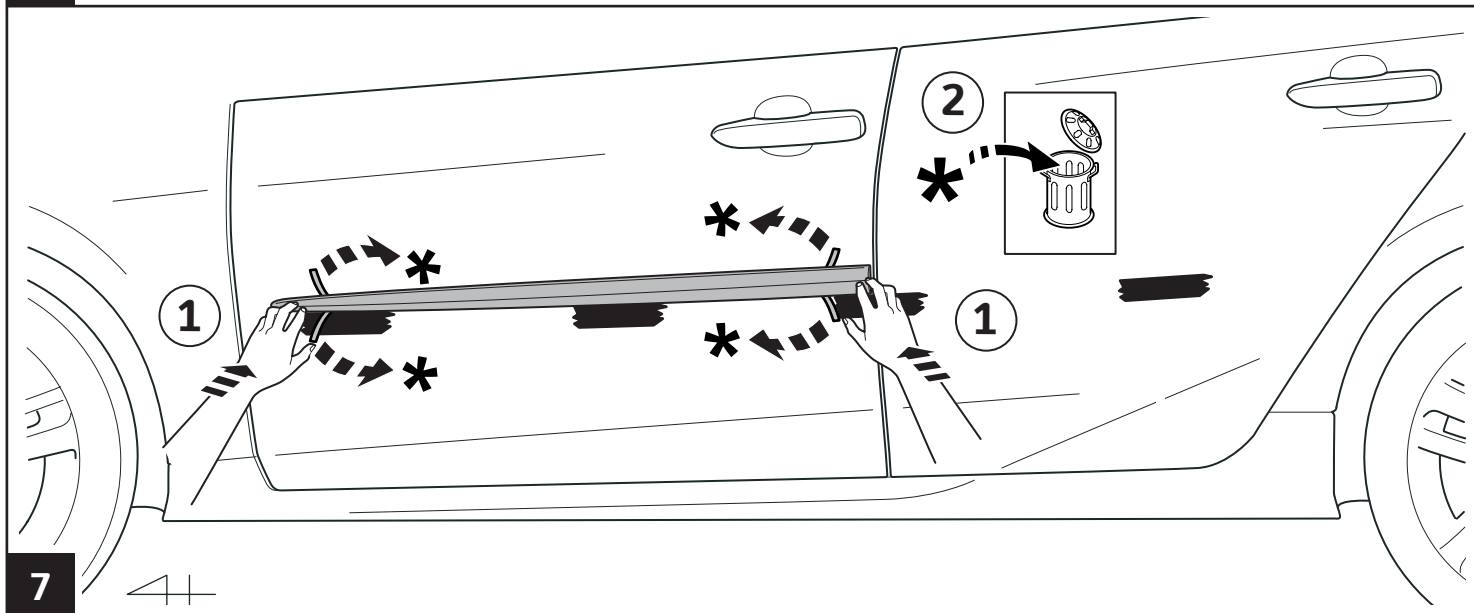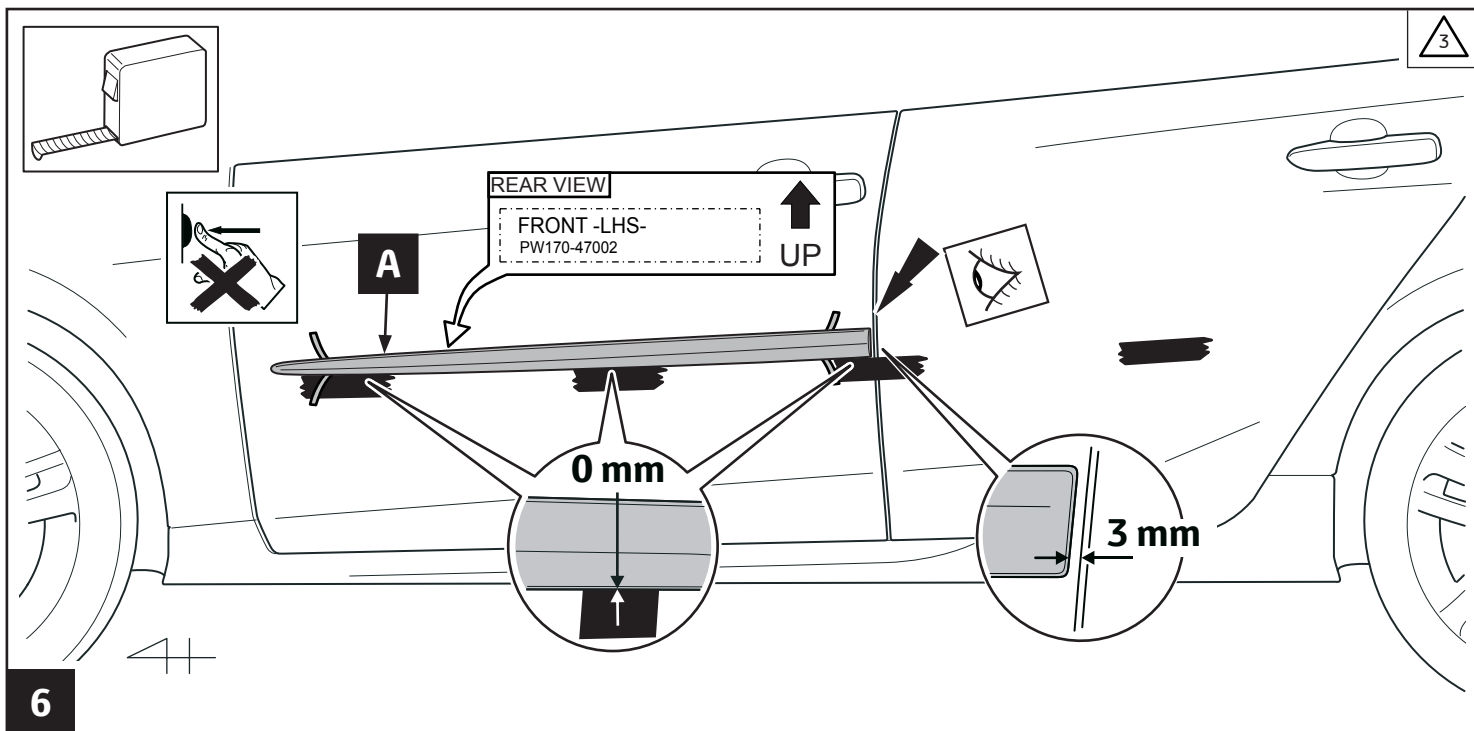


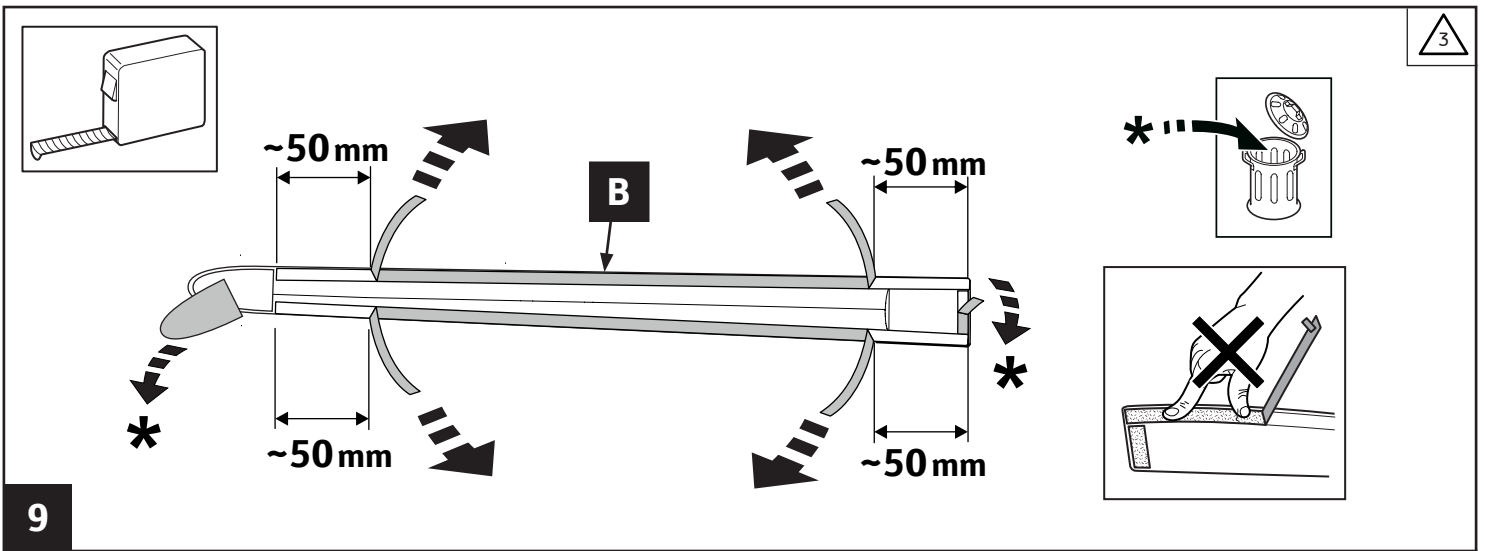




9

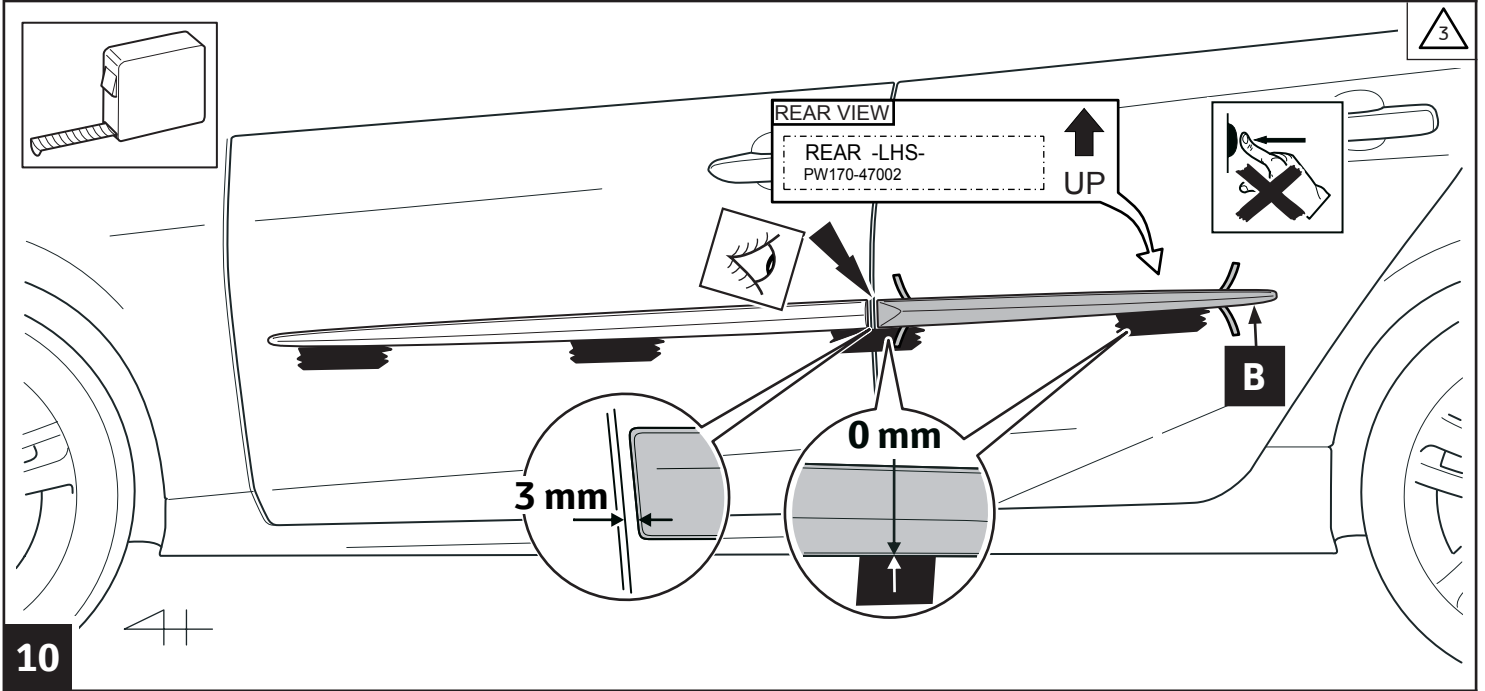


10

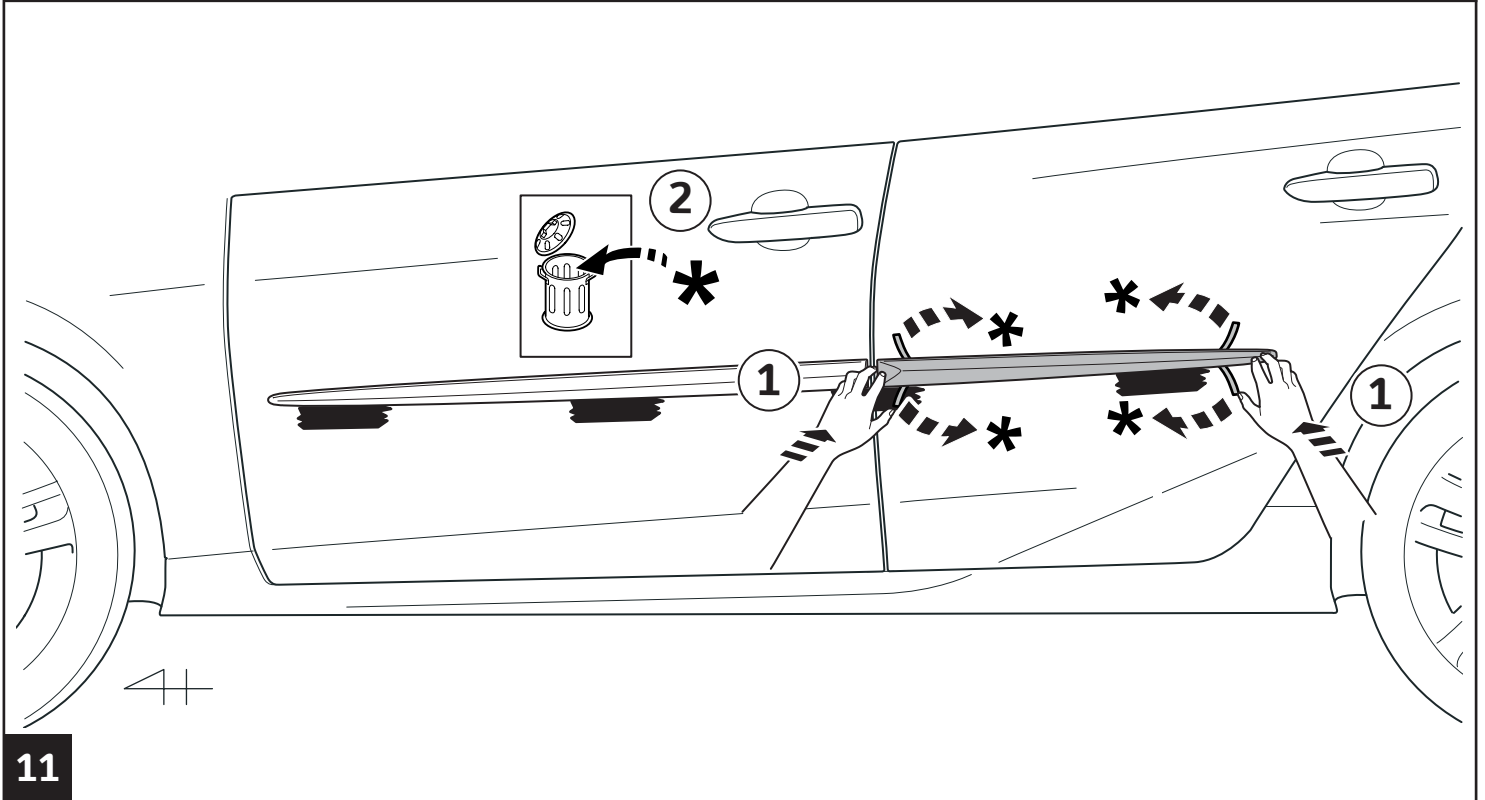




11

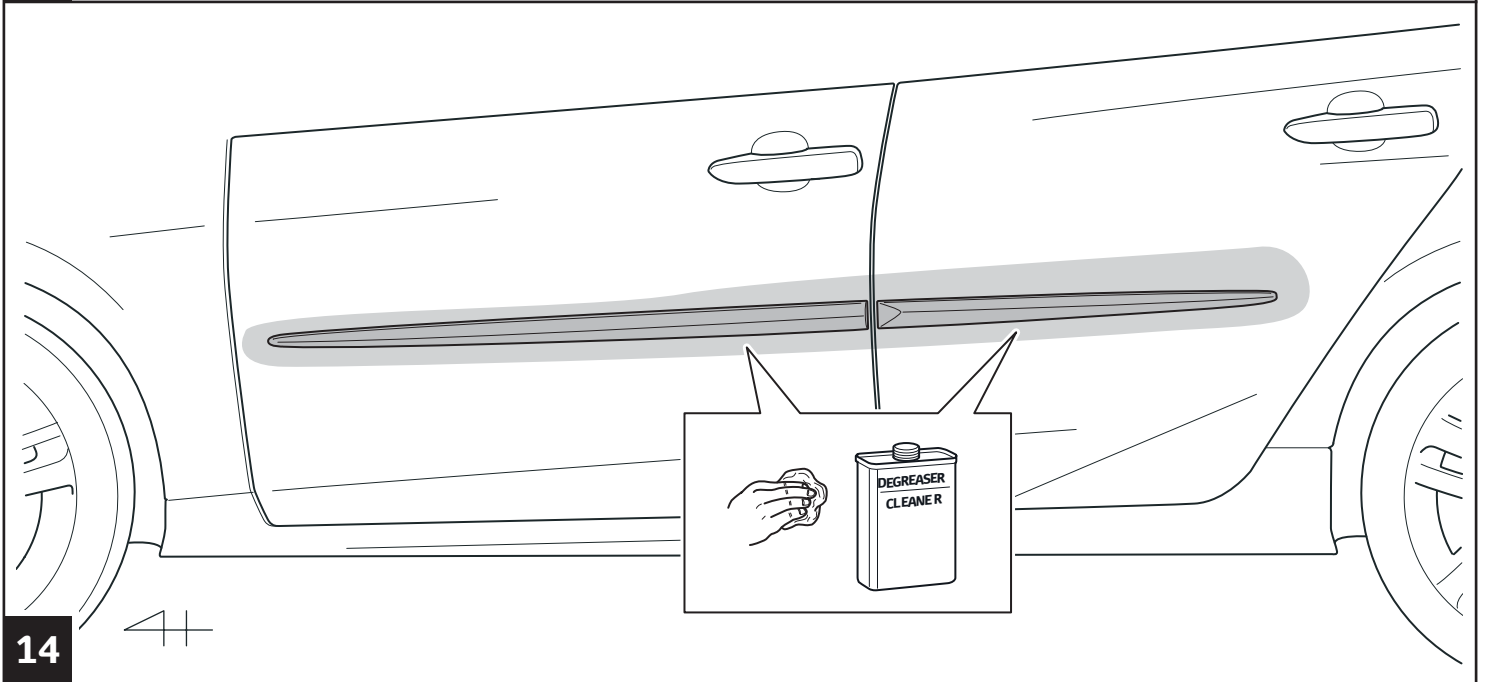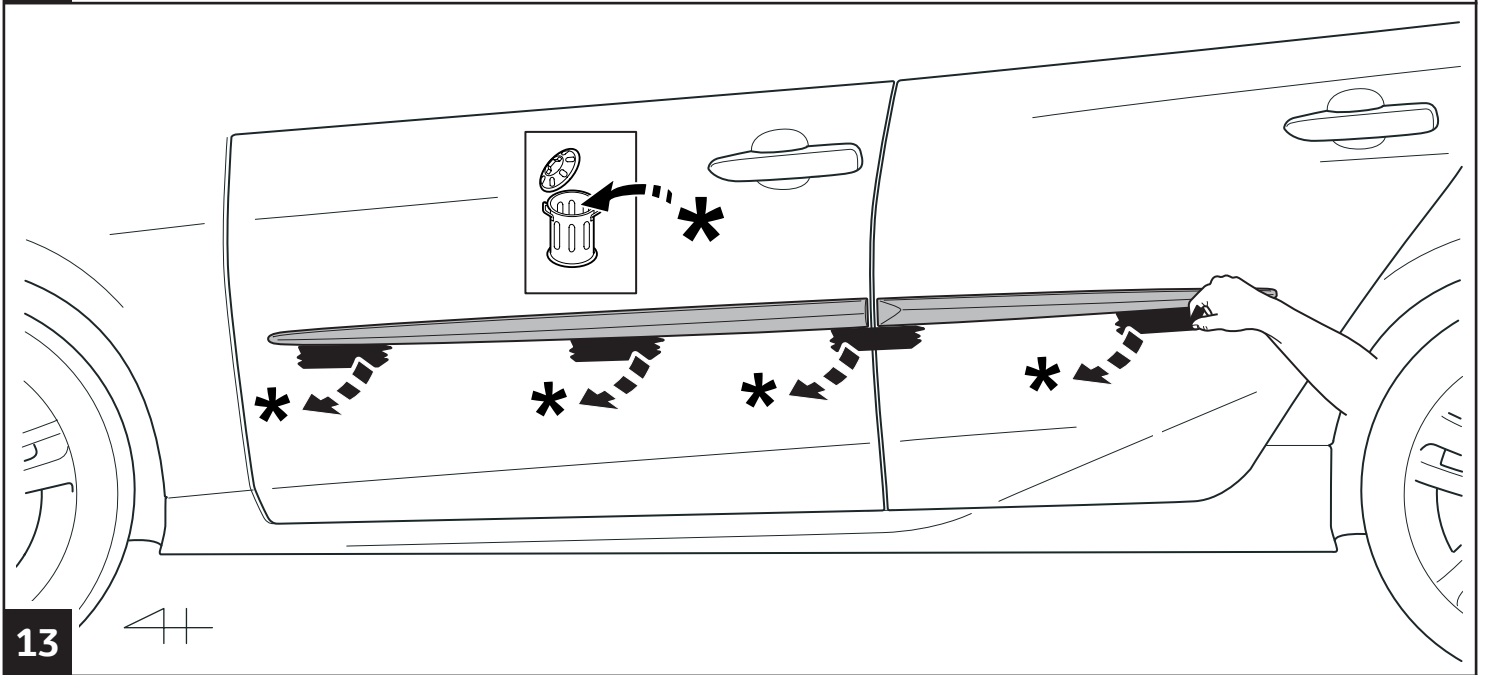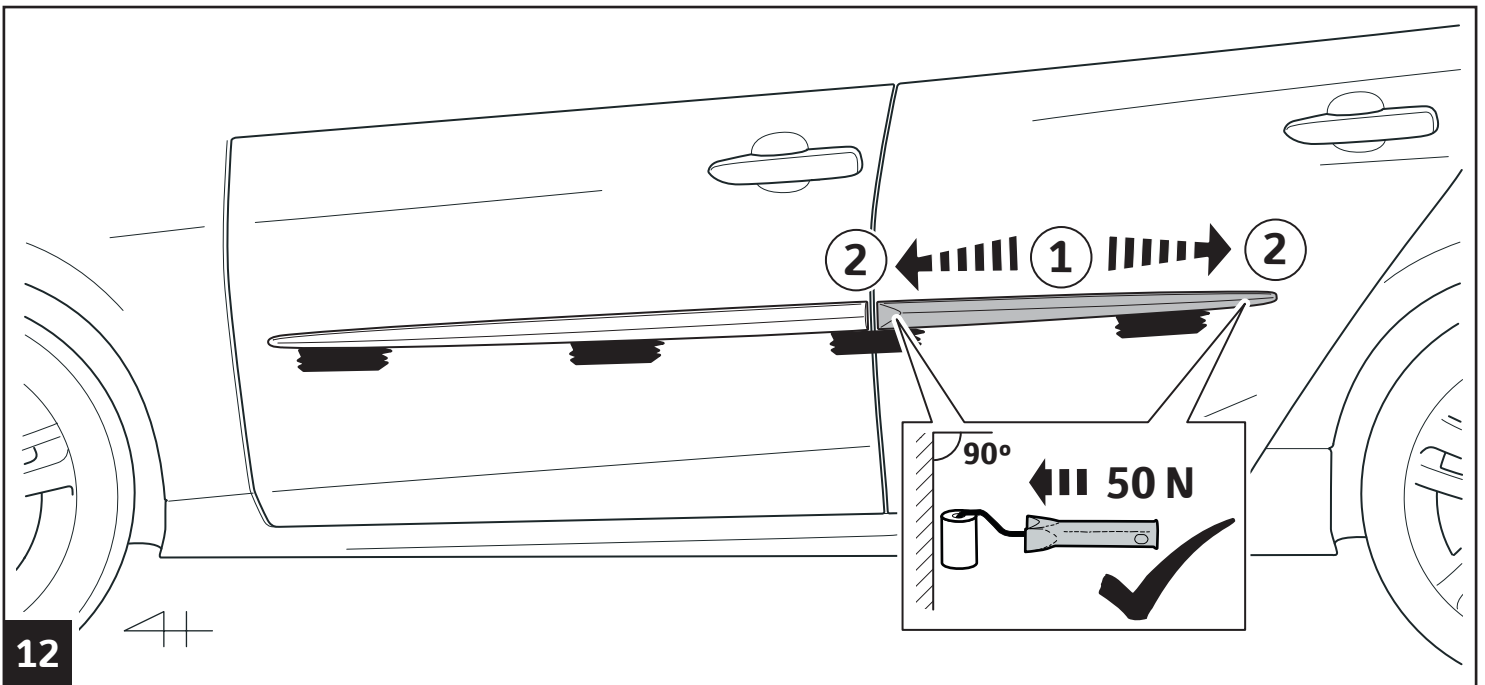


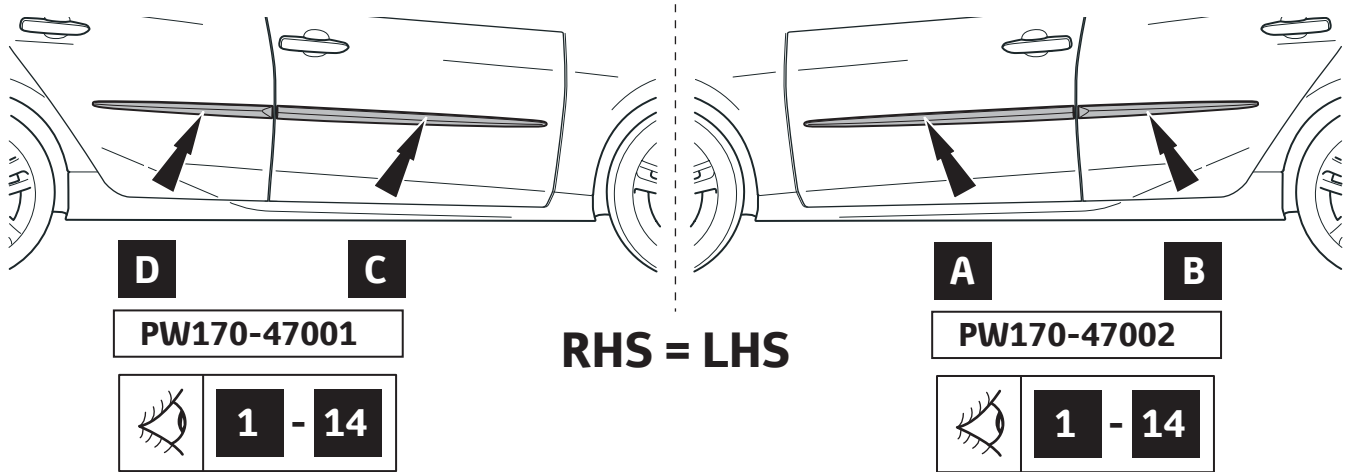

15

INFORMATION

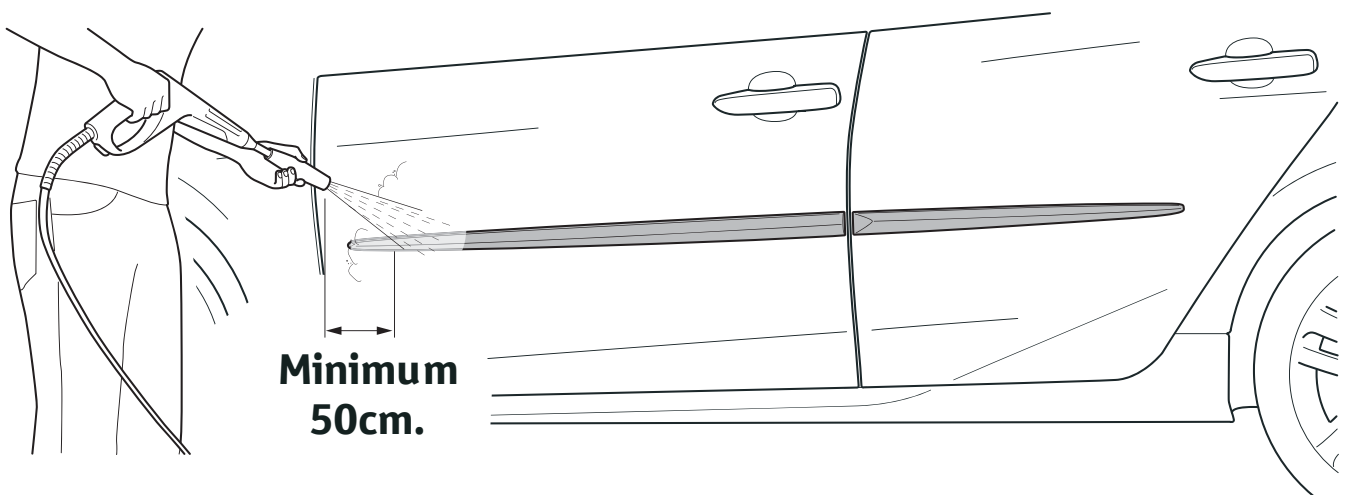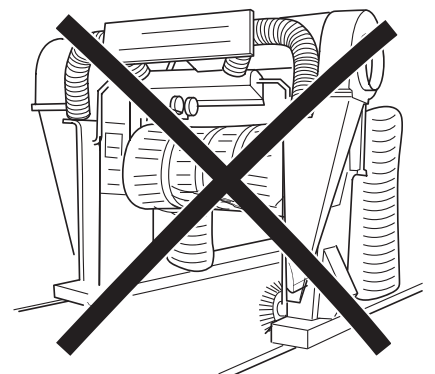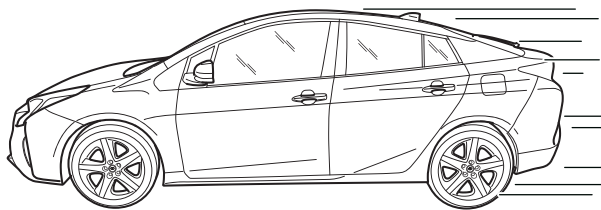

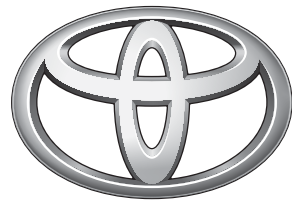

TOYOTA



TOYOTA

ALWAYS A
BETTER WAY


Model / Year

Prius As from 2015/12
Prius Plug-in (PHV) As from 2016/09





Side
mouldings

VIN n°

DURING INSTALLATION

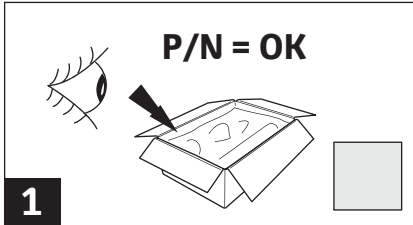

AFTER INSTALLATION

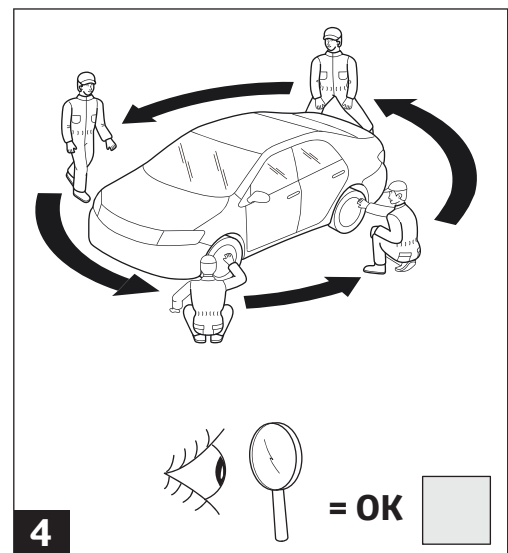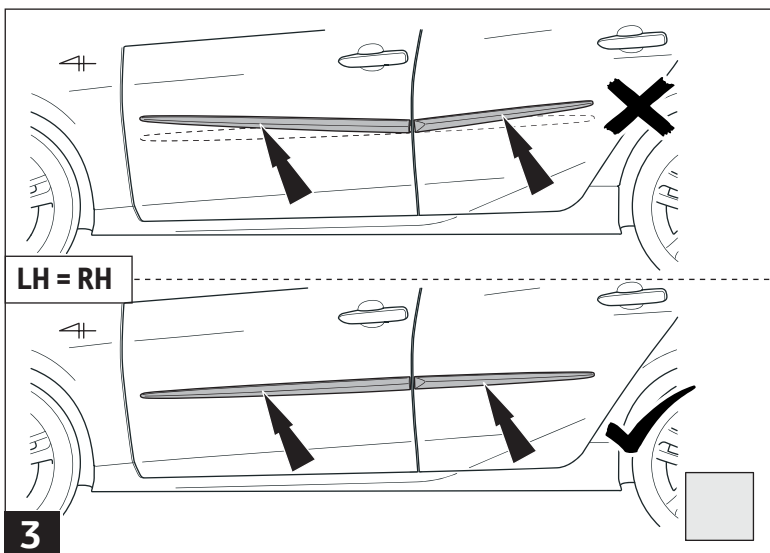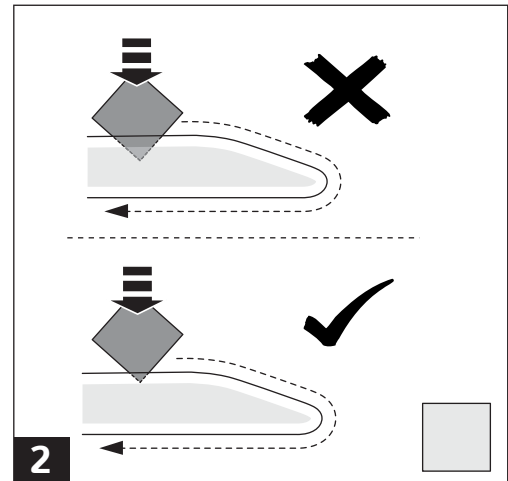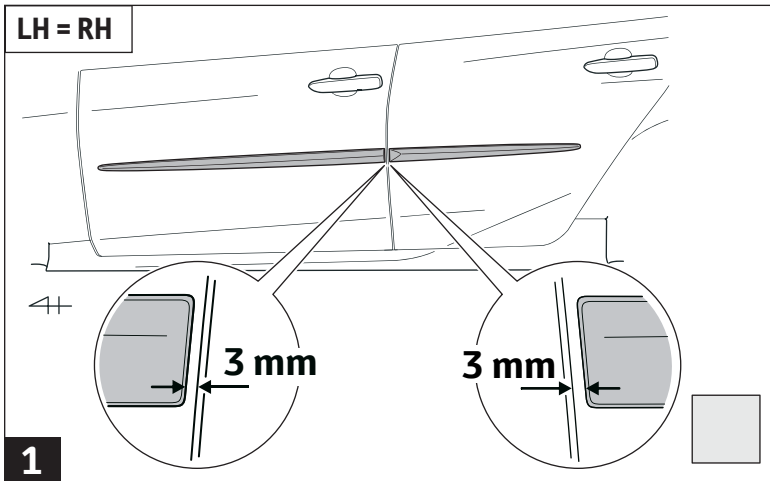

Installation Date:
... / ... / ...

Technician Name & Signature:

Stamp: