



TOYOTA

ALWAYS A
BETTER WAY

Prius

Side Mouldings

Installation Instructions


Model year: 2015/12
Vehicle code: ZVW50*-AHXEBW
Part number: PW170-47000

Manual reference number: AIM 003 585-0



Revision record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PW170-47002

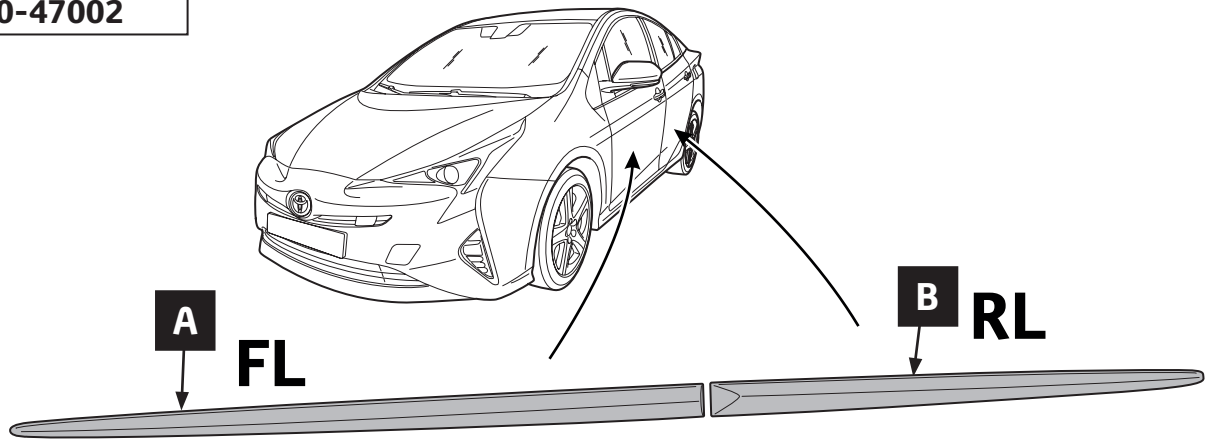




PW170-47001


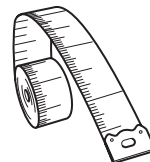
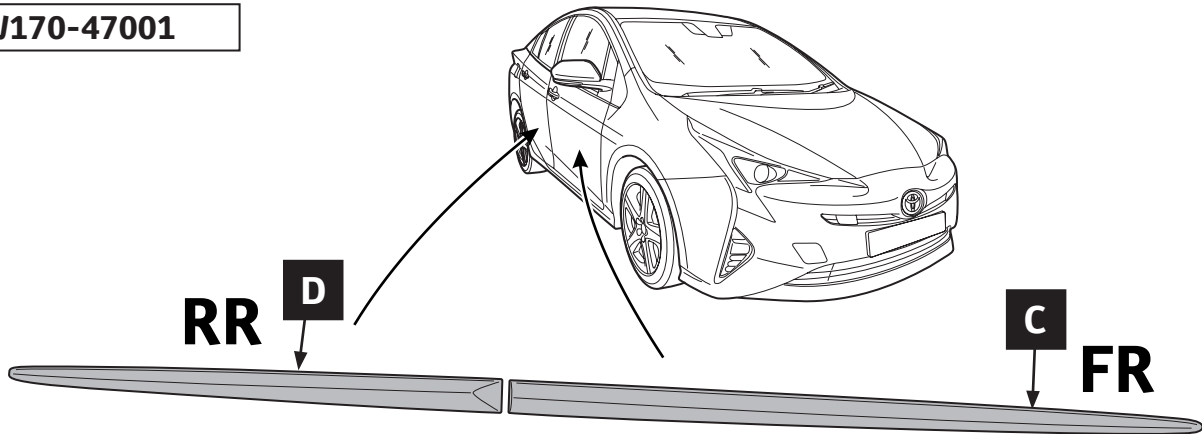





adhesion promoter
3M 06396




2x


PZ415-0000-00

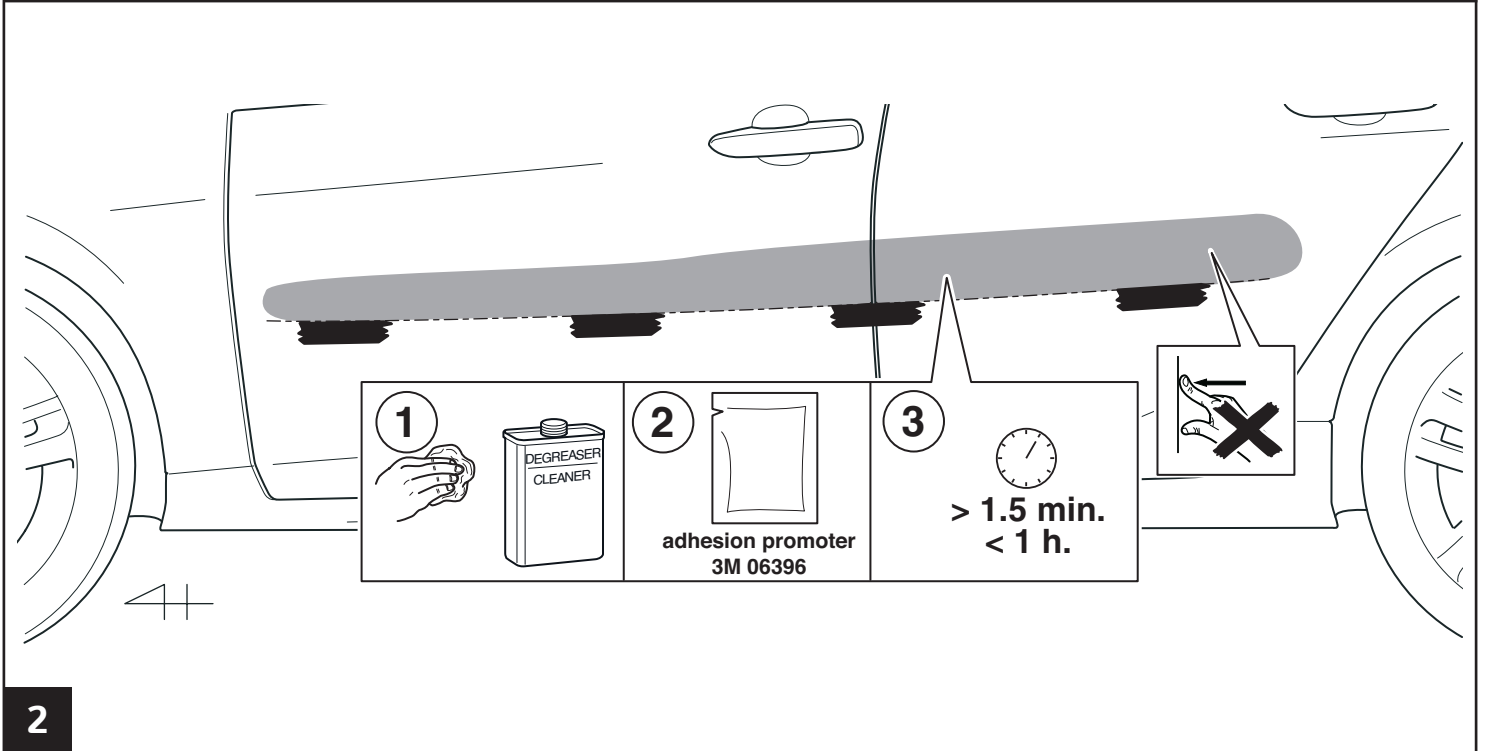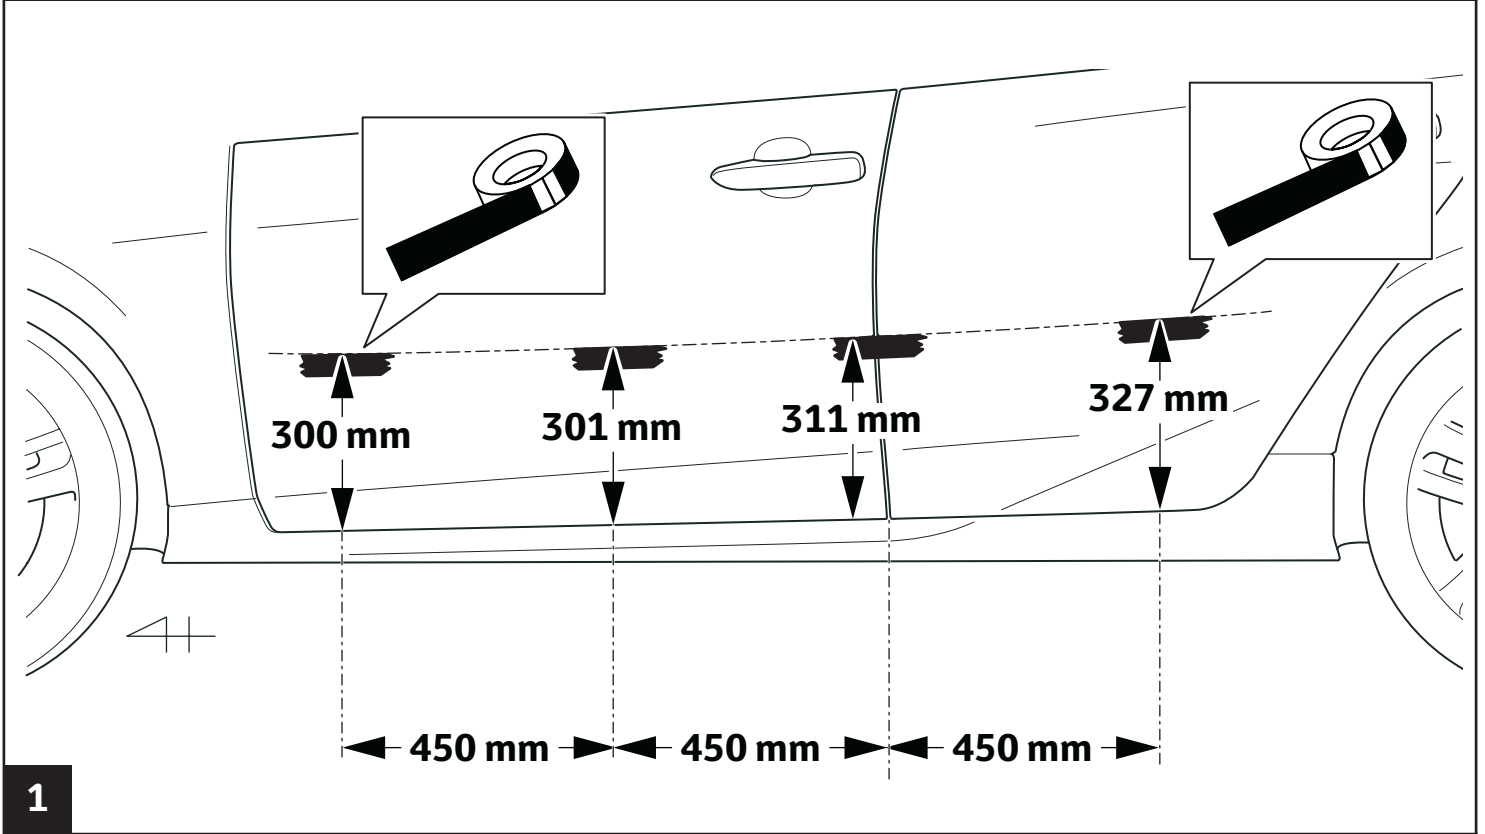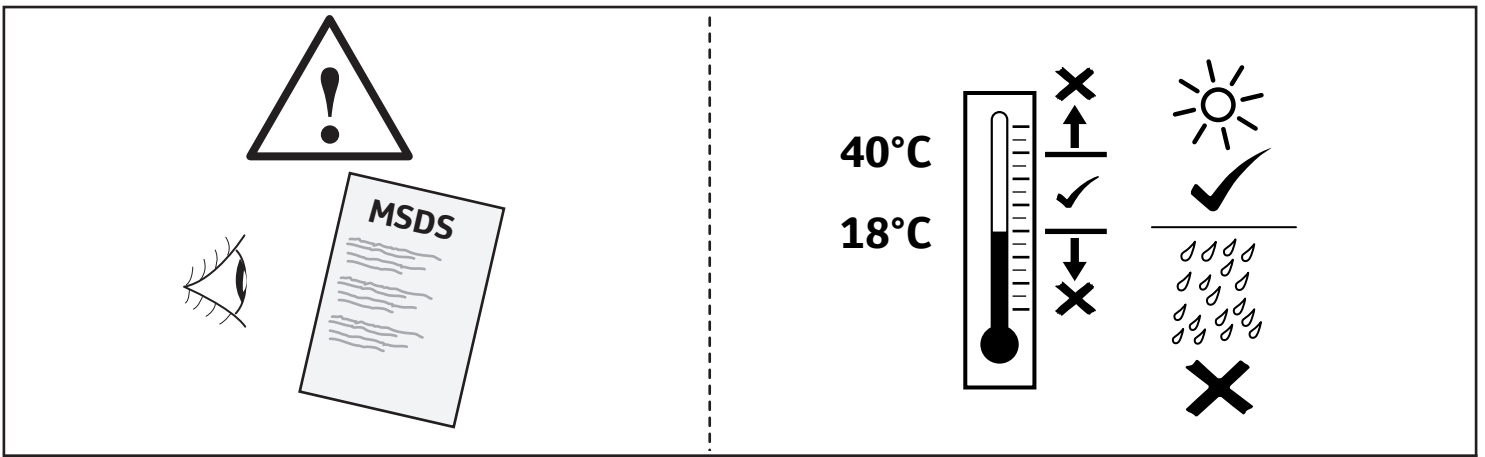

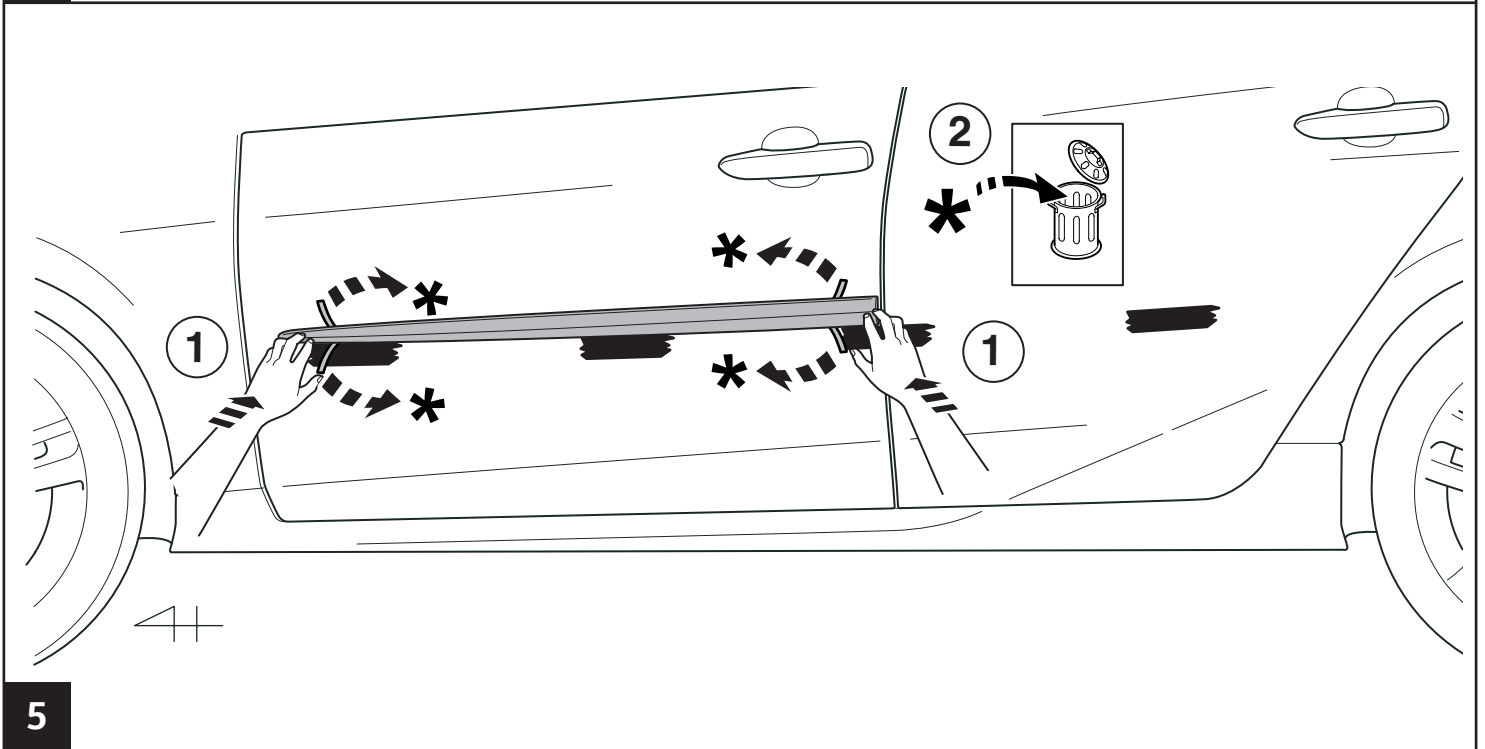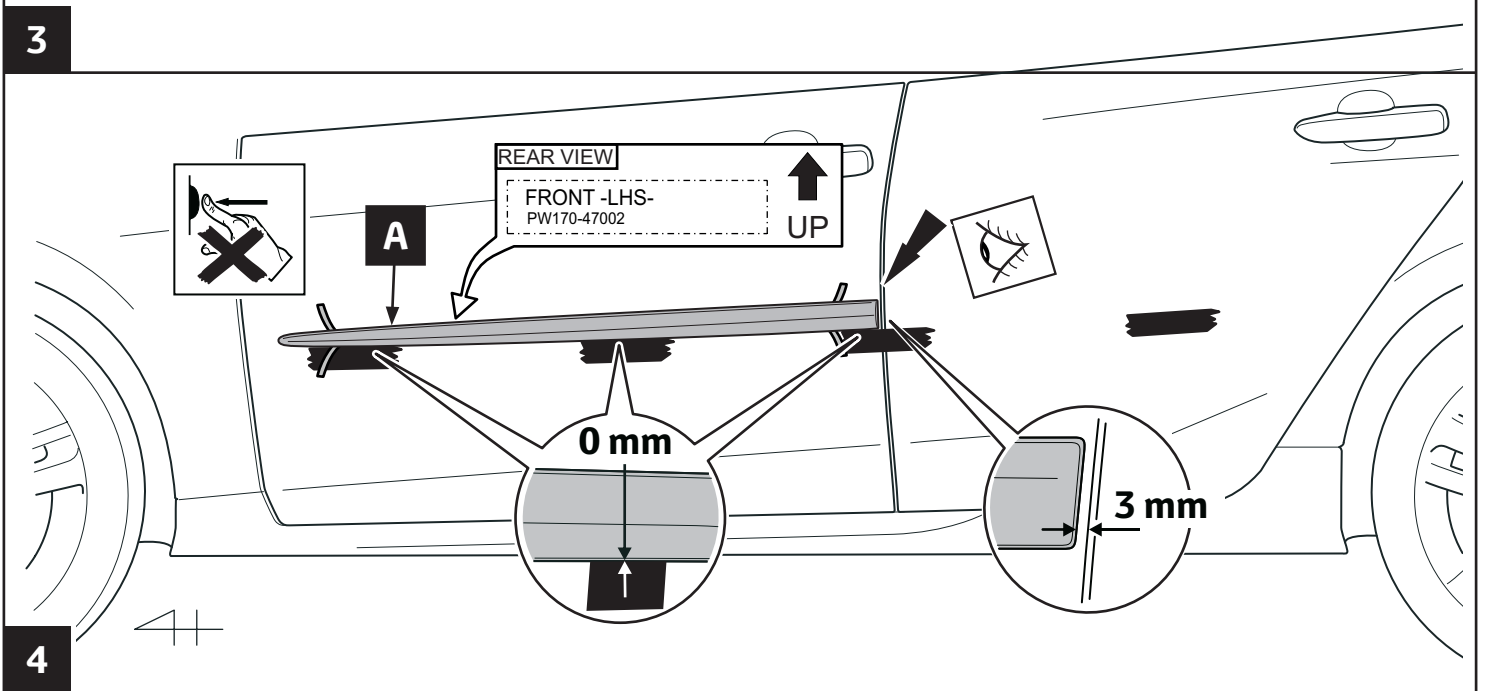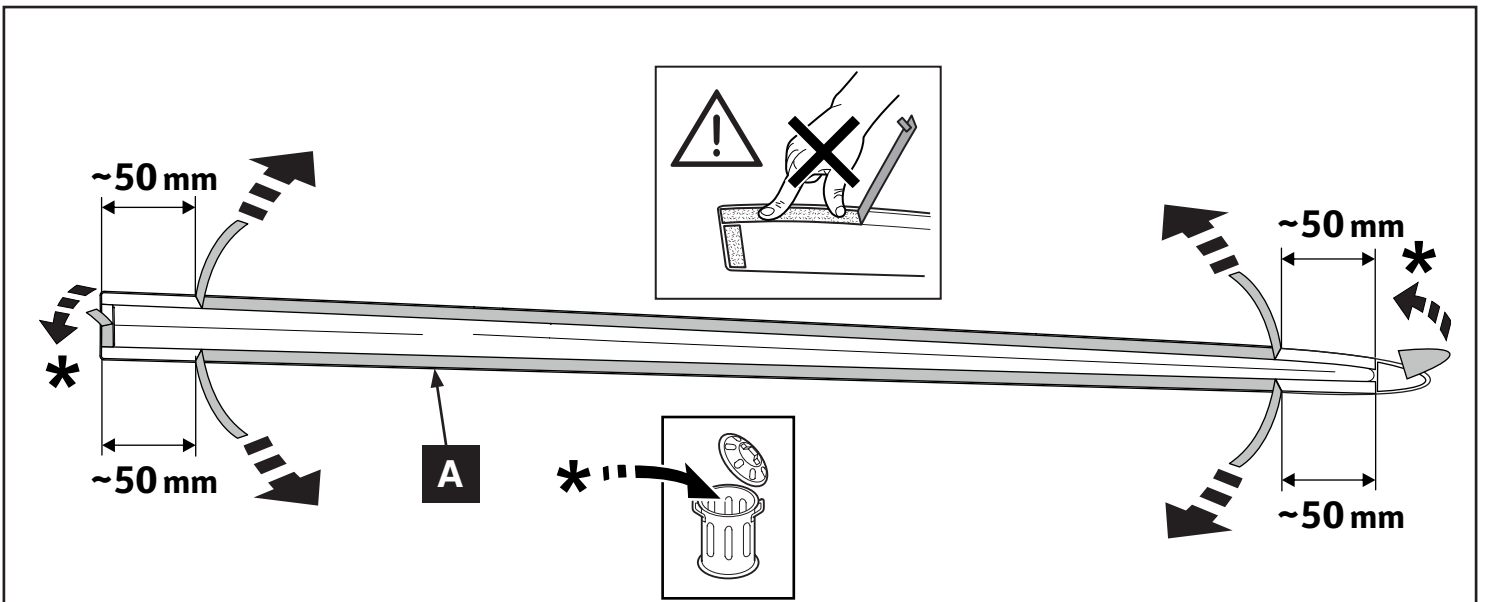

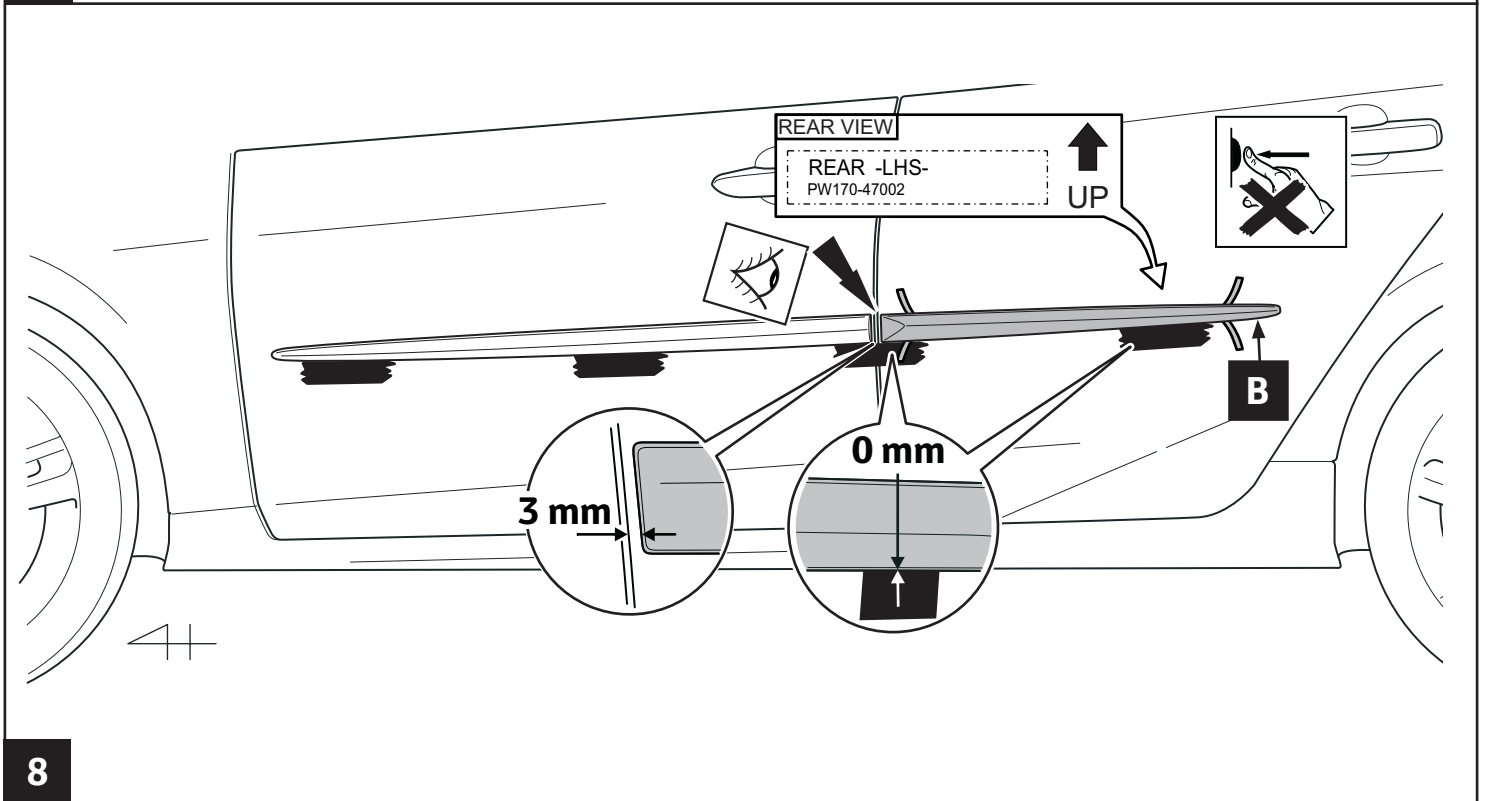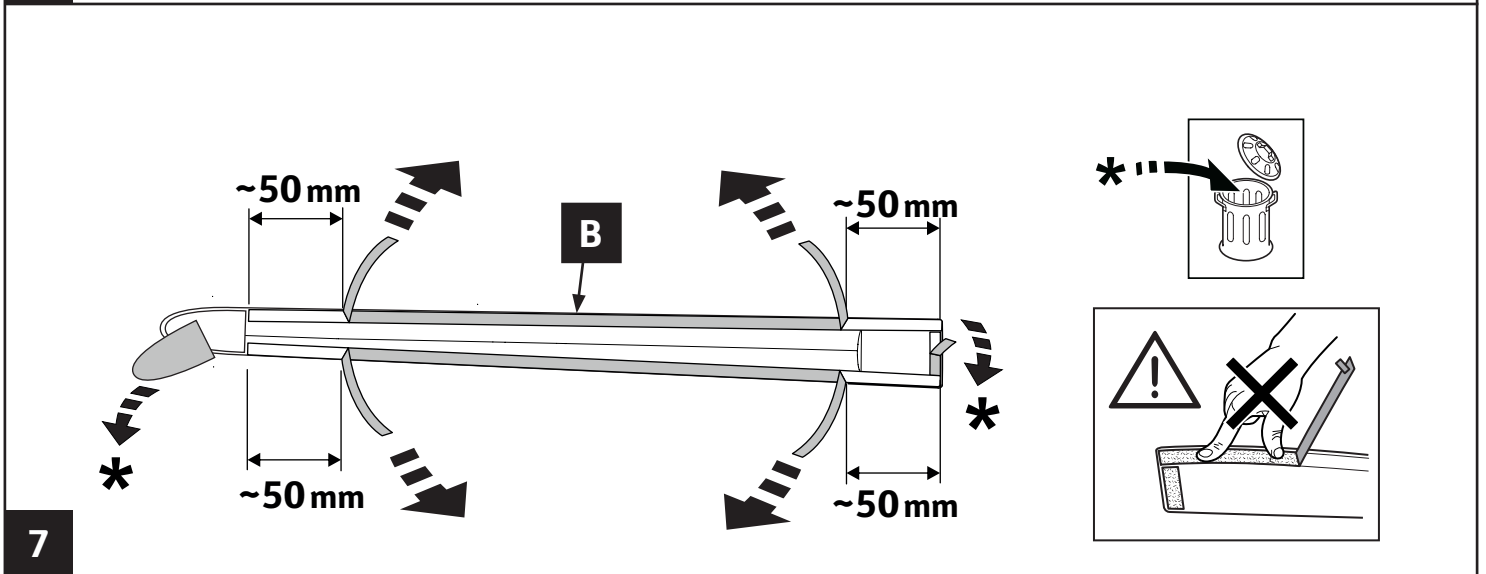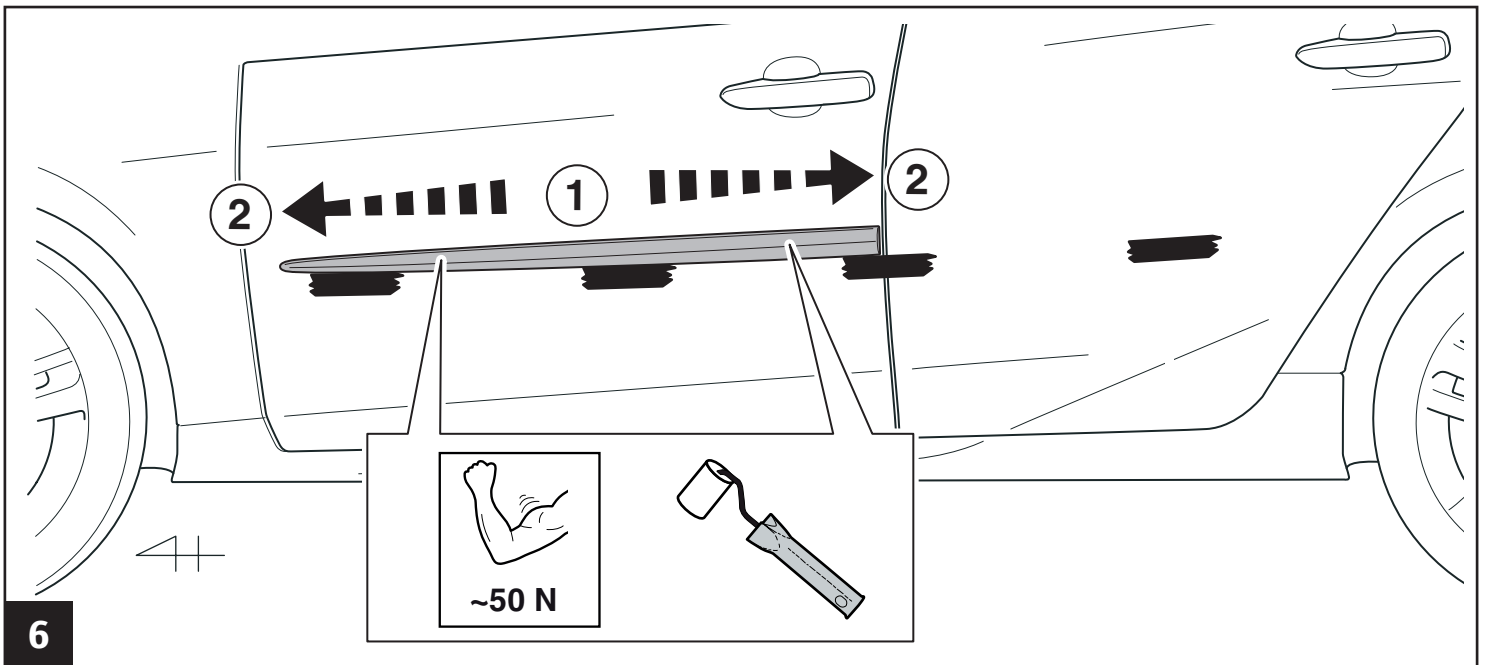

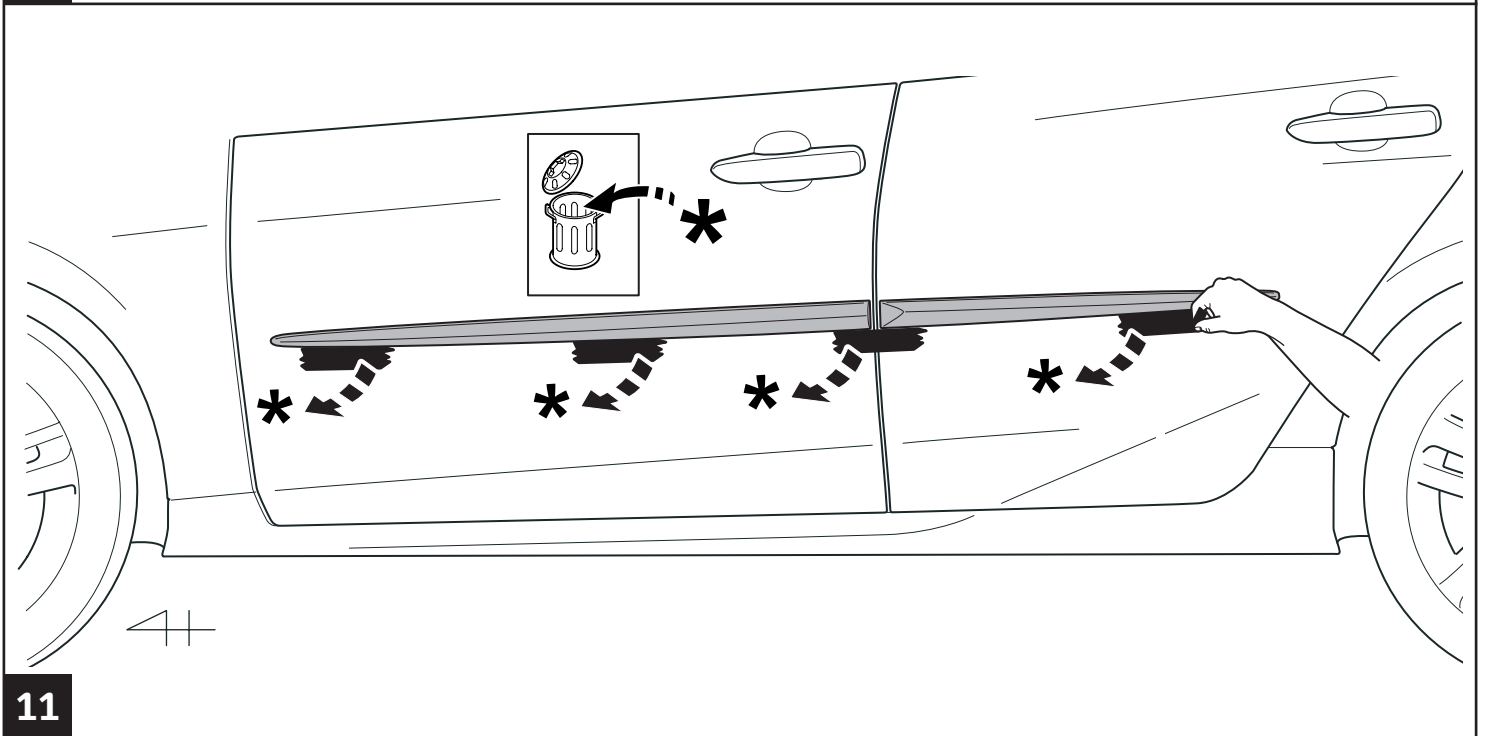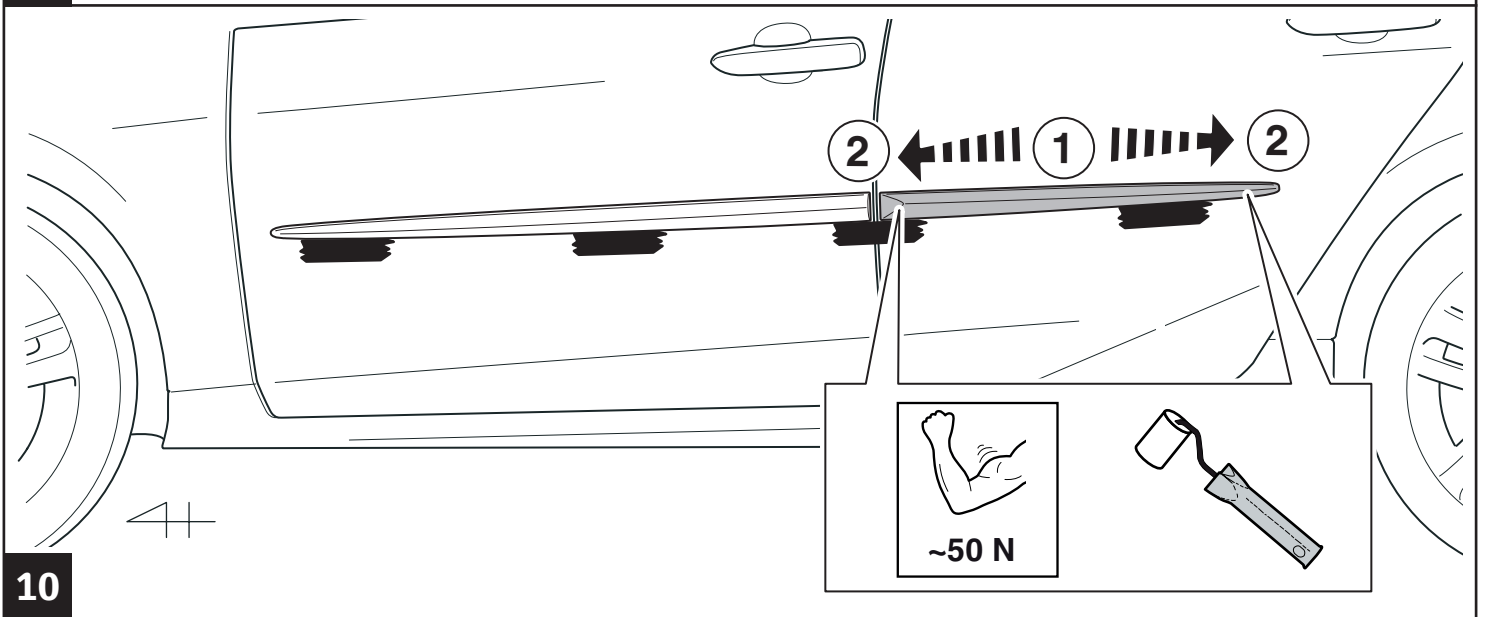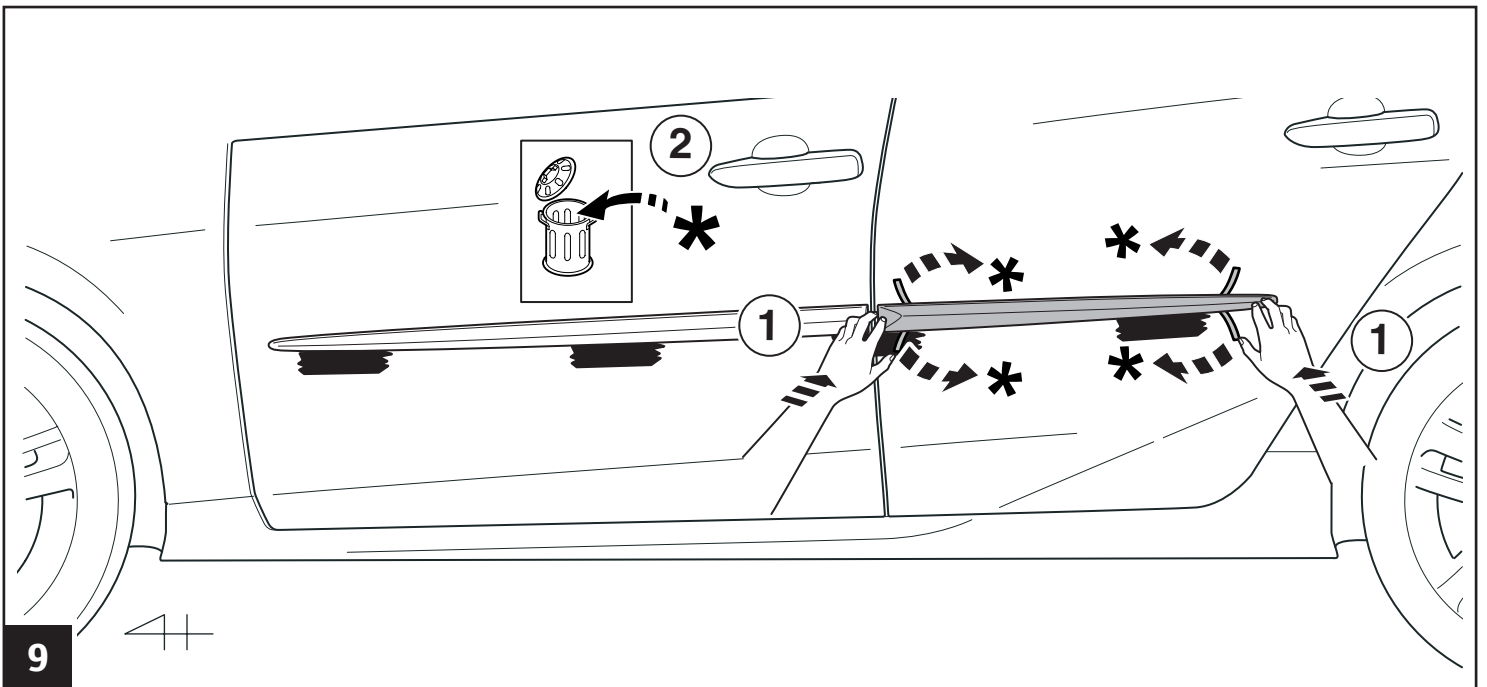

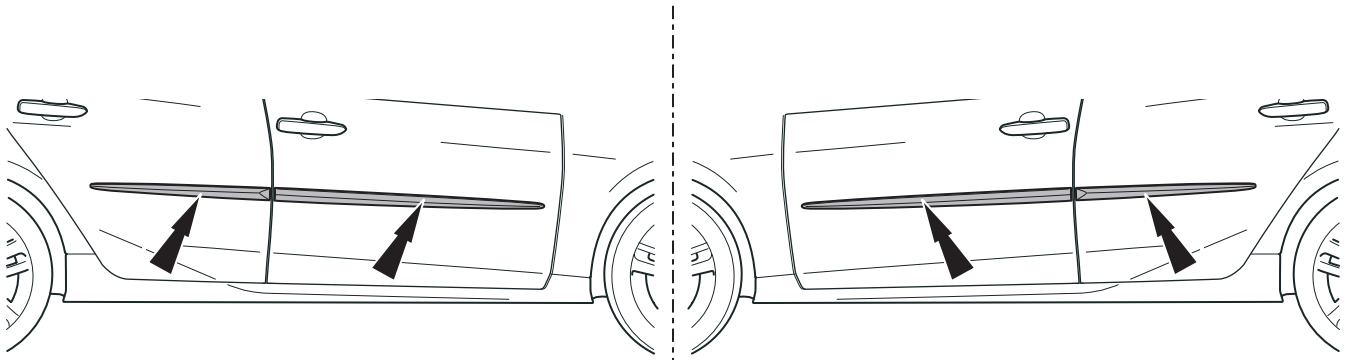

D
C
PW170-47001



RHS = LHS

A
B
PW170-47002


12





5 min.

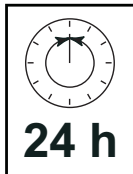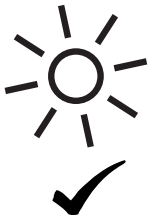

24 h

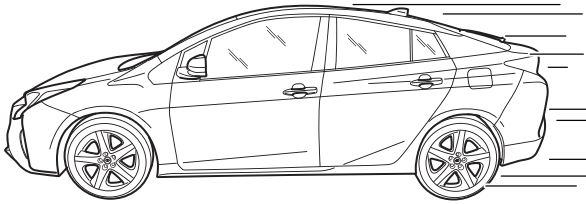

24 h

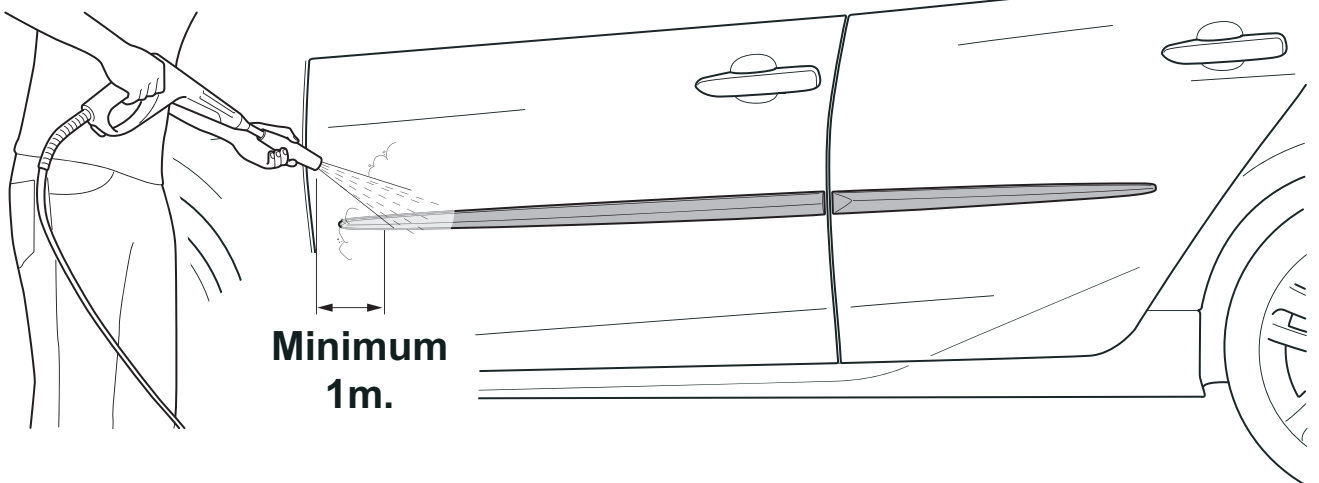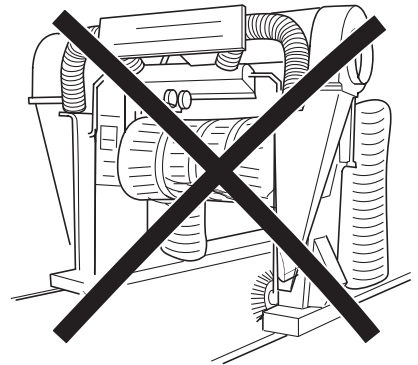

CHECK SHEET









TOYOTA

Model / Year **Prius 2015/12** Side Mouldings

VIN n°

ALWAYS A BETTER WAY

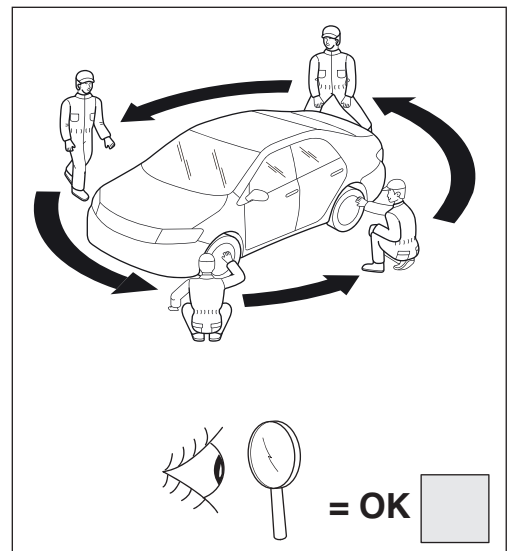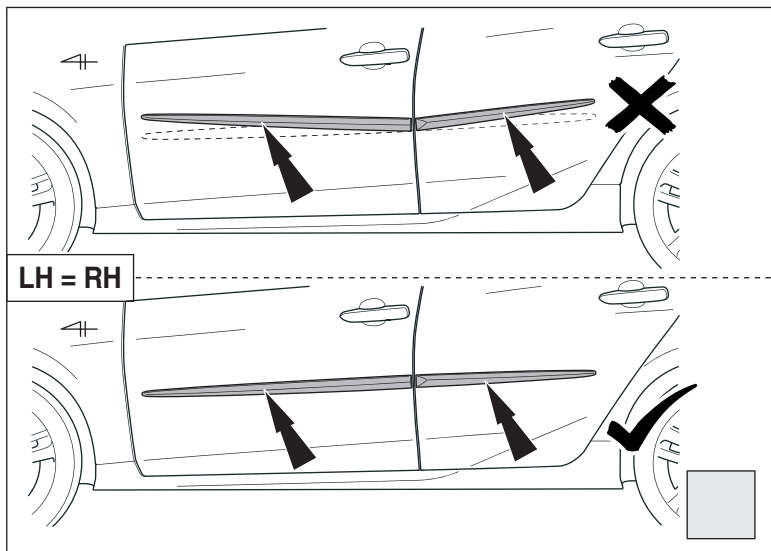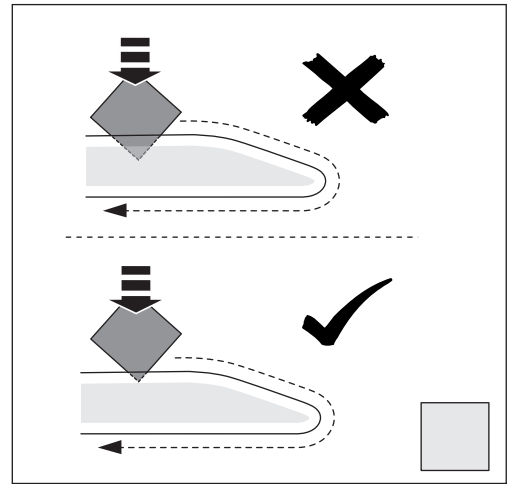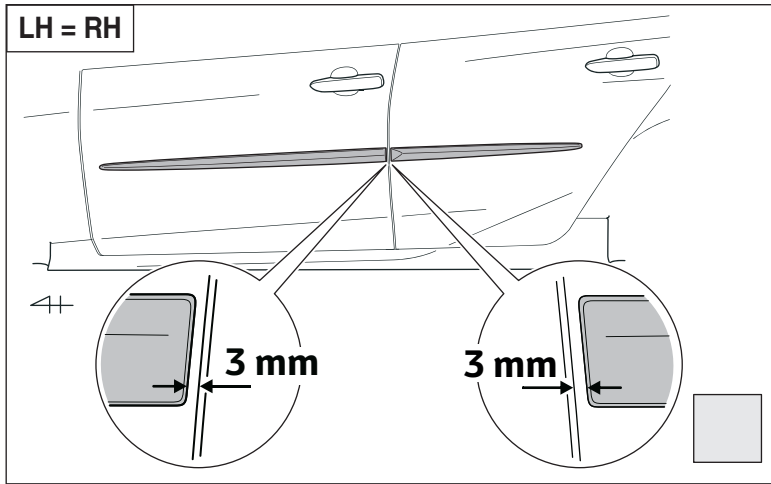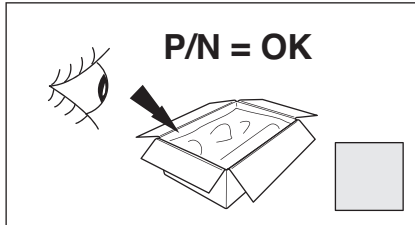

Installation Date:

. . . / . . . /

Technician Name & Signature:

Stamp: