



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Side skirt

Installation instructions

Model year: As from 2016/10

Vehicle code: **X*0*-AH***W
X*0*-AH*X
*****-H***W

Part number: PW150-10000 - Silver
PW150-10015-CE - Piano black

Manual reference number: AIM 003 848-5

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	27.04.17	2, 3, 5-13, 19	3-9, 11-22, 25	X		
1	27.04.17	7, 9	9, 16			X
1	27.04.17	8	10		X	
2	23.10.18	5, 9, 10, 19	4, 15, 17	X		
2	23.10.18	20			X	
Rev. No.	Date	Page	Step	Remarks		
<u>3</u>	21.05.19	13	23	Step updated		
<u>4</u>	29.05.19	1, 19	C/S	Model year & Vehicle code added		
<u>5</u>	18.01.20	1, 3		Part number added		
<u>5</u>	18.01.20	3		Torque wrench added		
<u>5</u>	18.01.20	3, 5, 11, 13	3, 17, 22	PH2 info added		
<u>5</u>	18.01.20	4		MSDS & TDS info added		
<u>5</u>	18.01.20	10, 11, 13	15, 17, 21	Check sheet reference added		
<u>5</u>	18.01.20	10	C/S	During and After Installation info added		

PW150-10002 - RHS - Silver



A

1x


PW150-10004 - LHS - Silver



B


1x

PW150-10003 - Fitting kit




C

8x



D

6x



Ø 30

E

6x



F


8x



Ø 18

G

10x




H

8x



J

2x



K



8x




10mm




Ph2

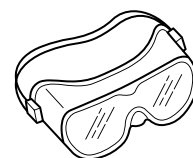

2.5Nm




Ø3 mm
Ø9 mm

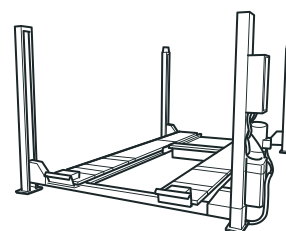








Material Safety Data Sheet

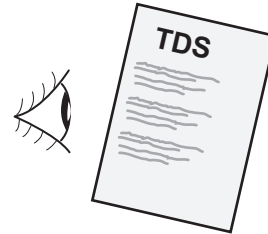


Technical Data Sheet

INFO

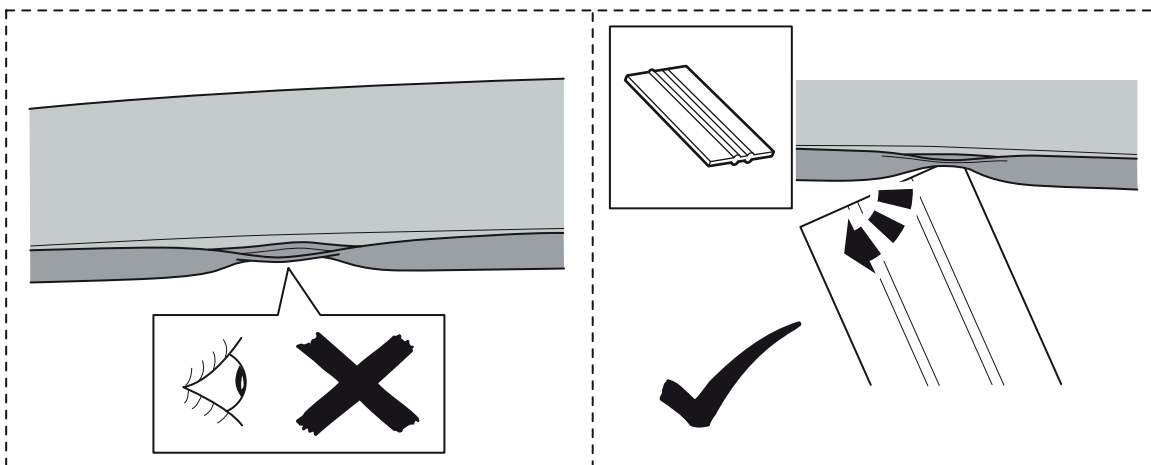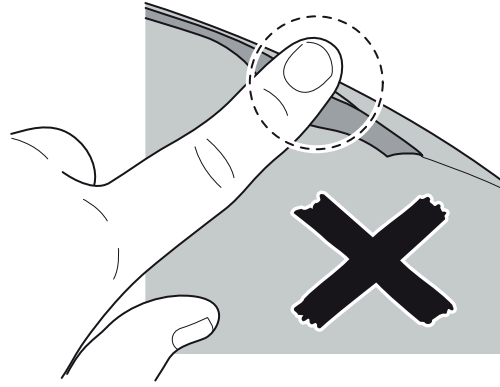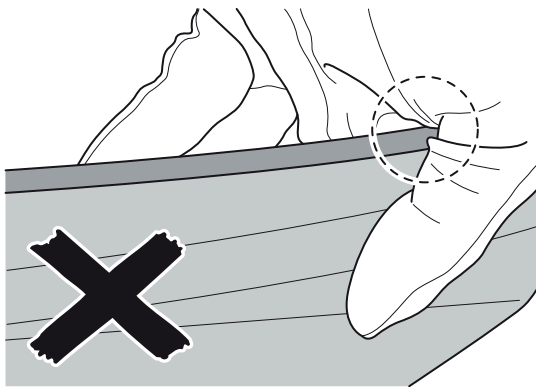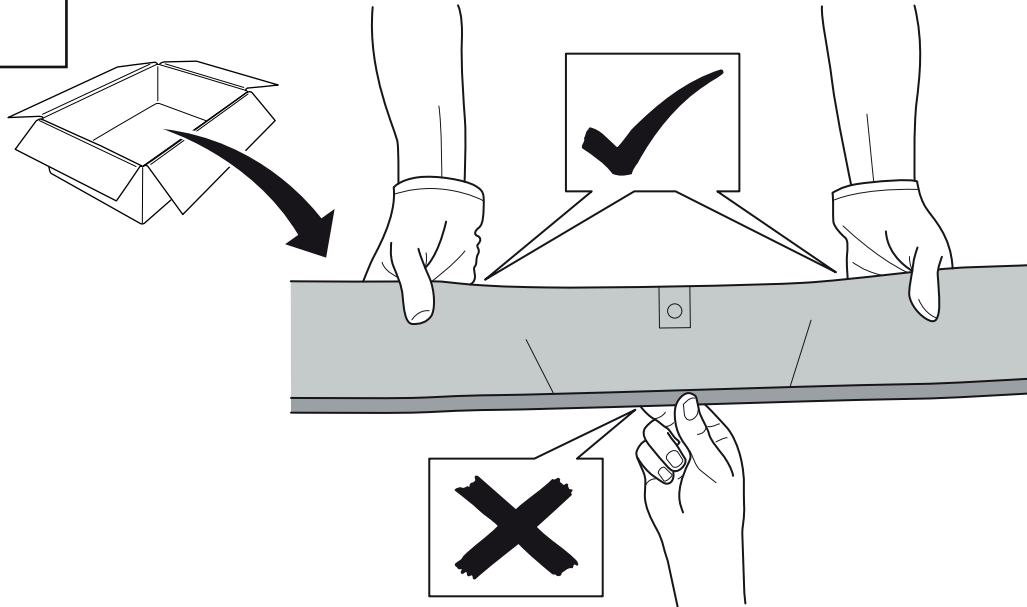


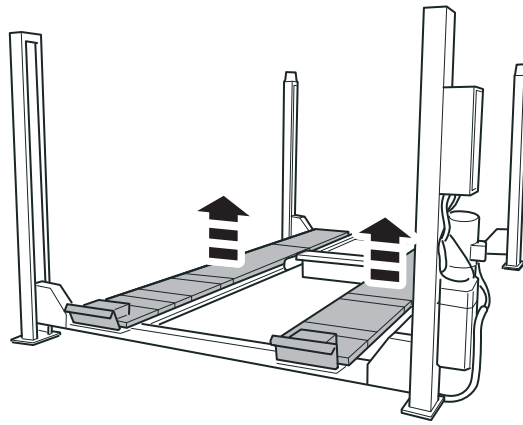


1

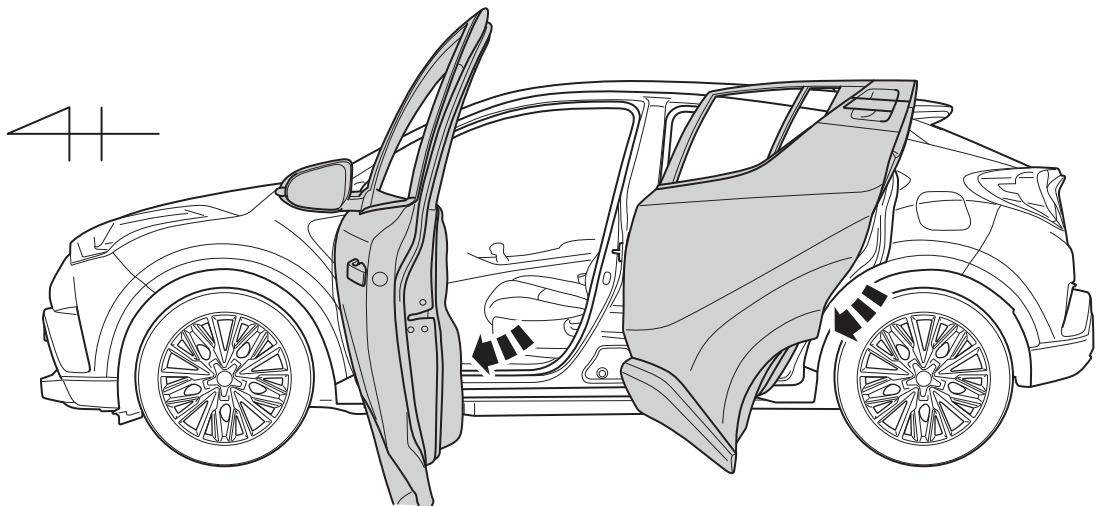






2

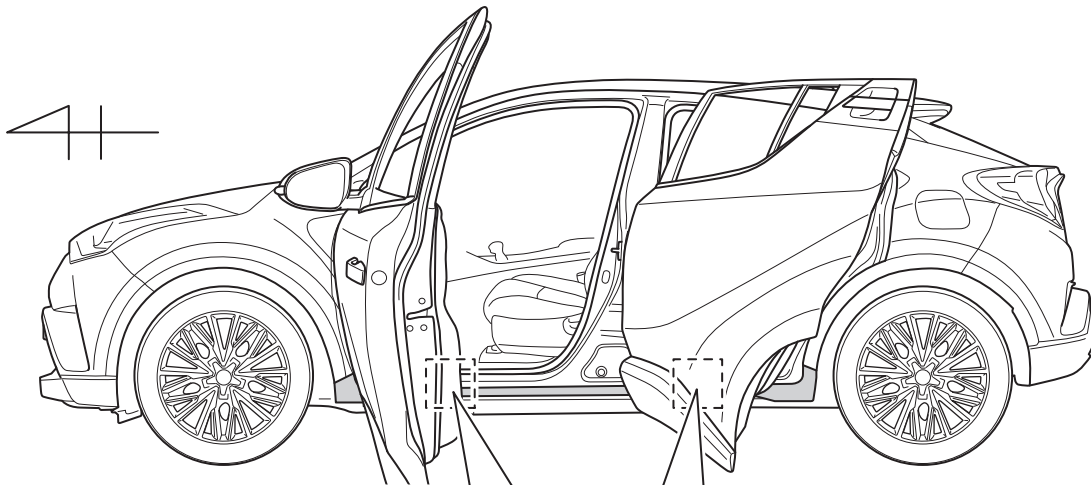



5

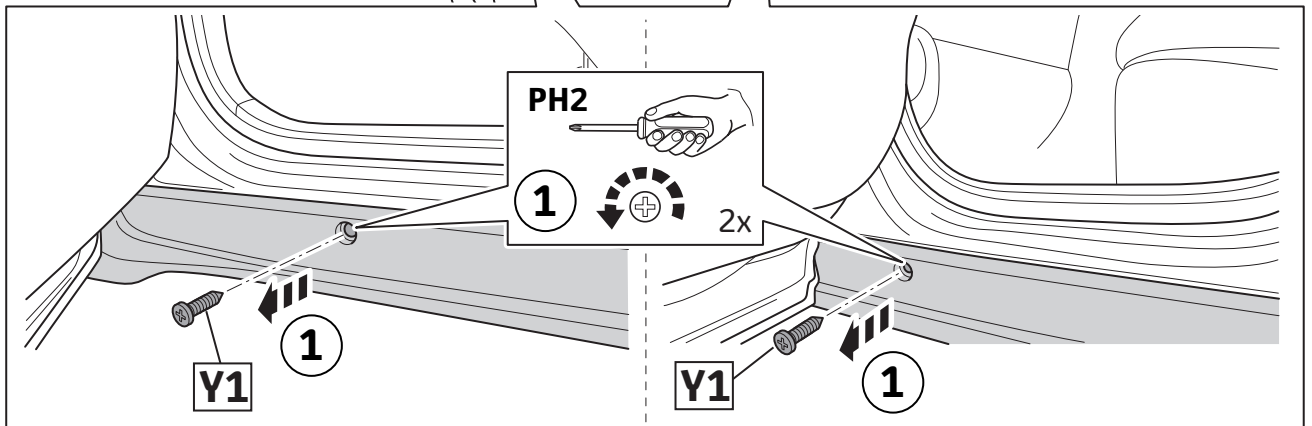




3

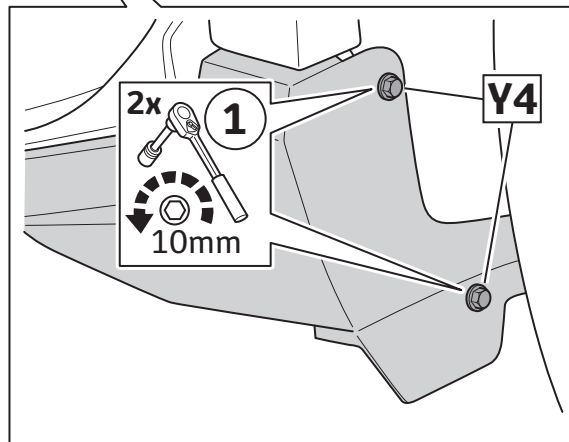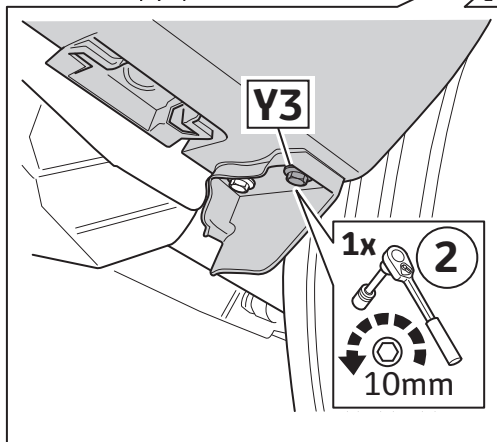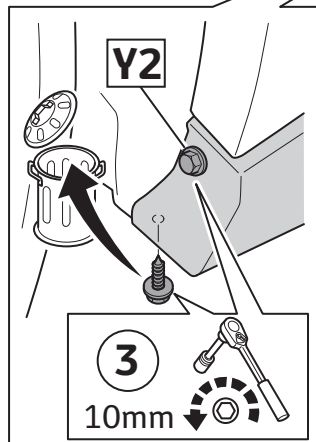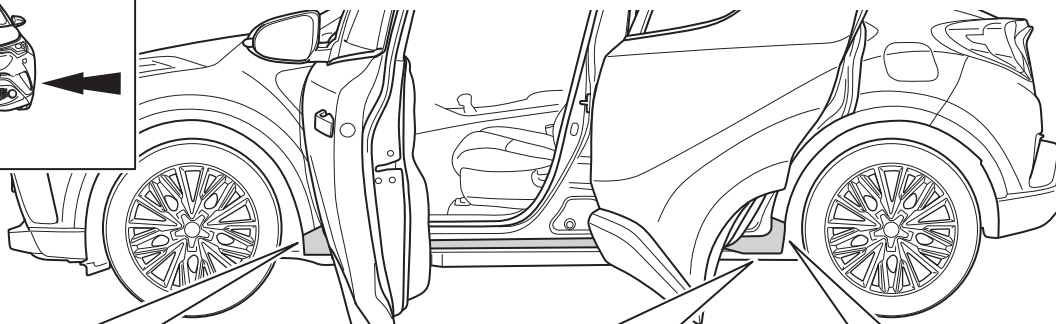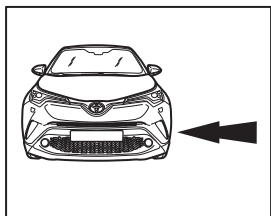




4

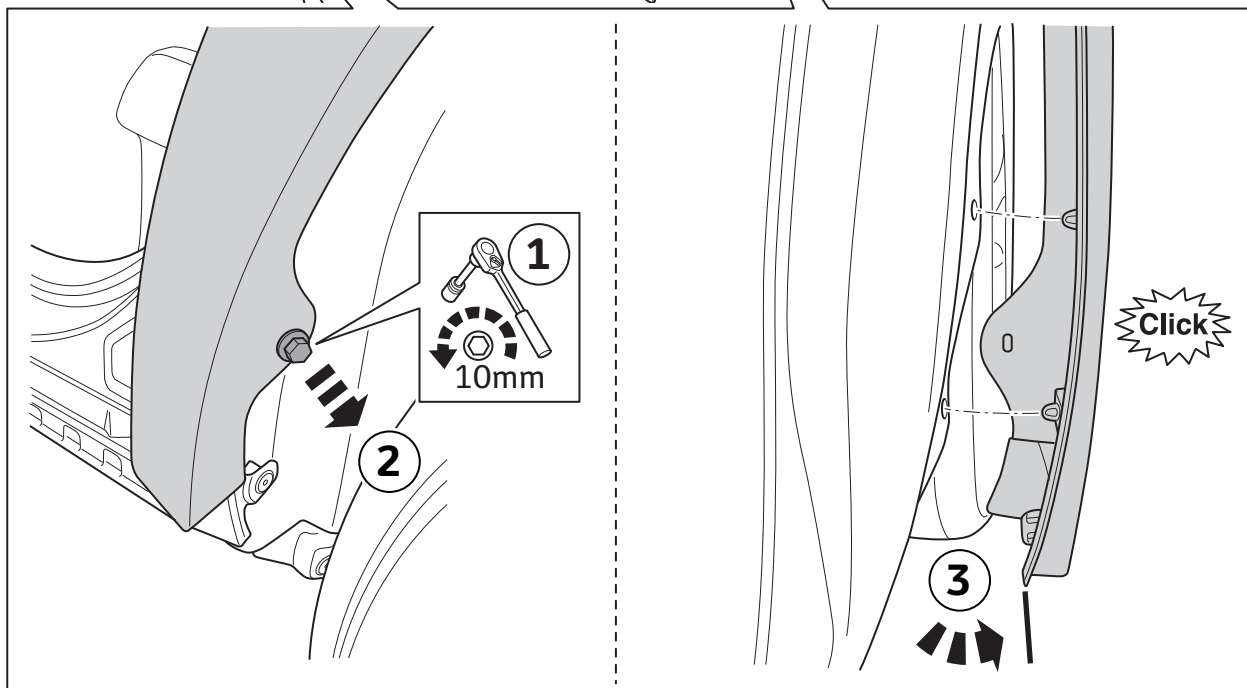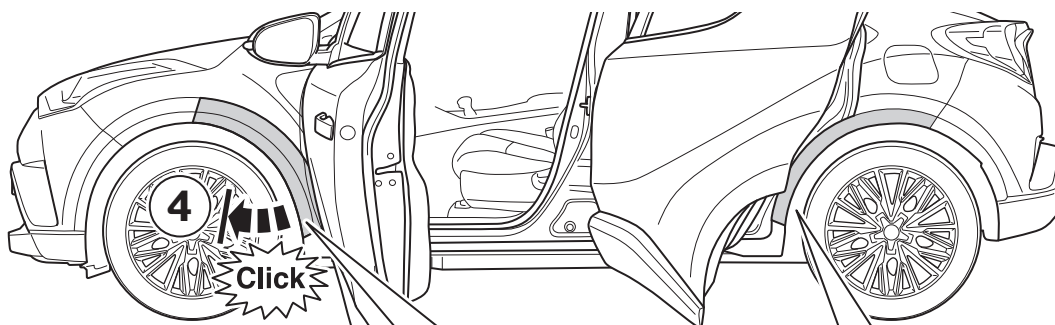

5

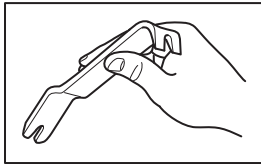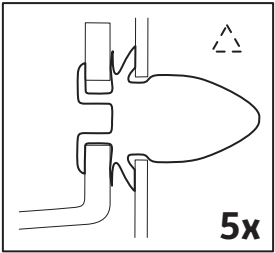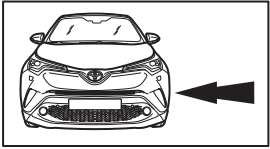


1

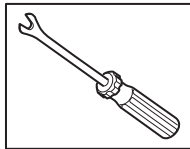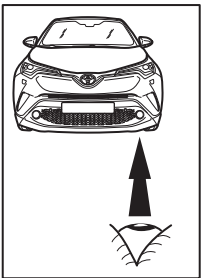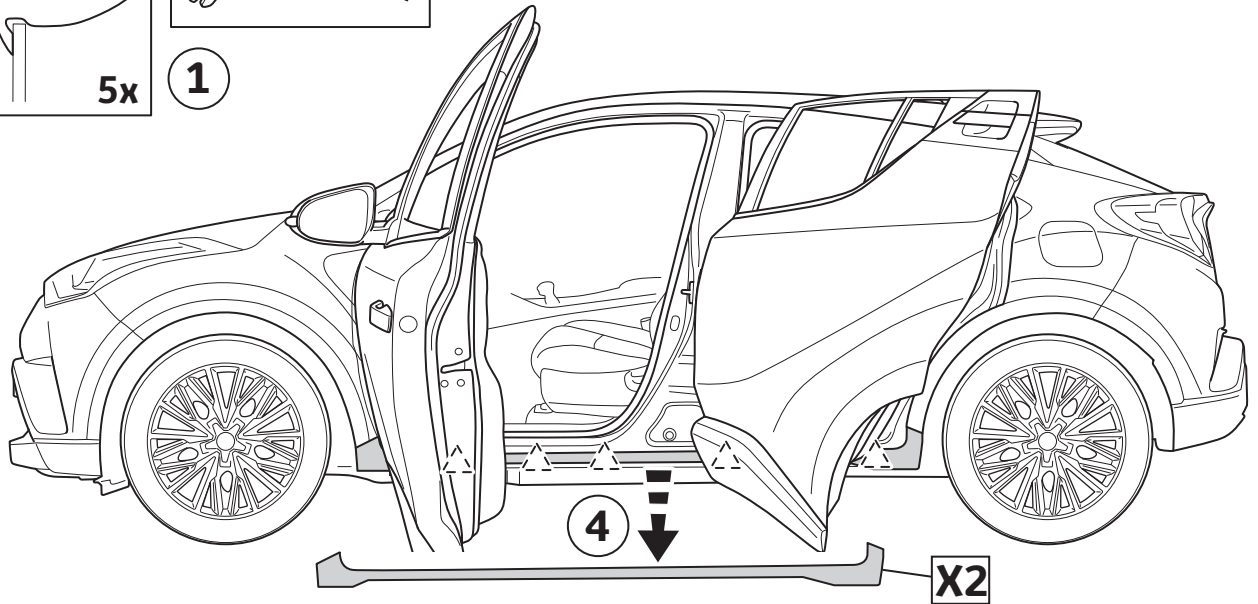

2

X1

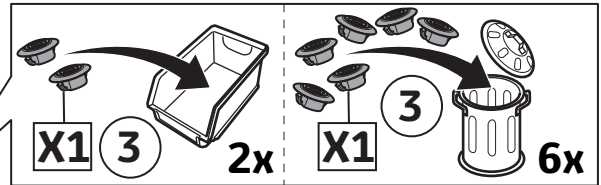

X1


3

2x

X1

3

6x

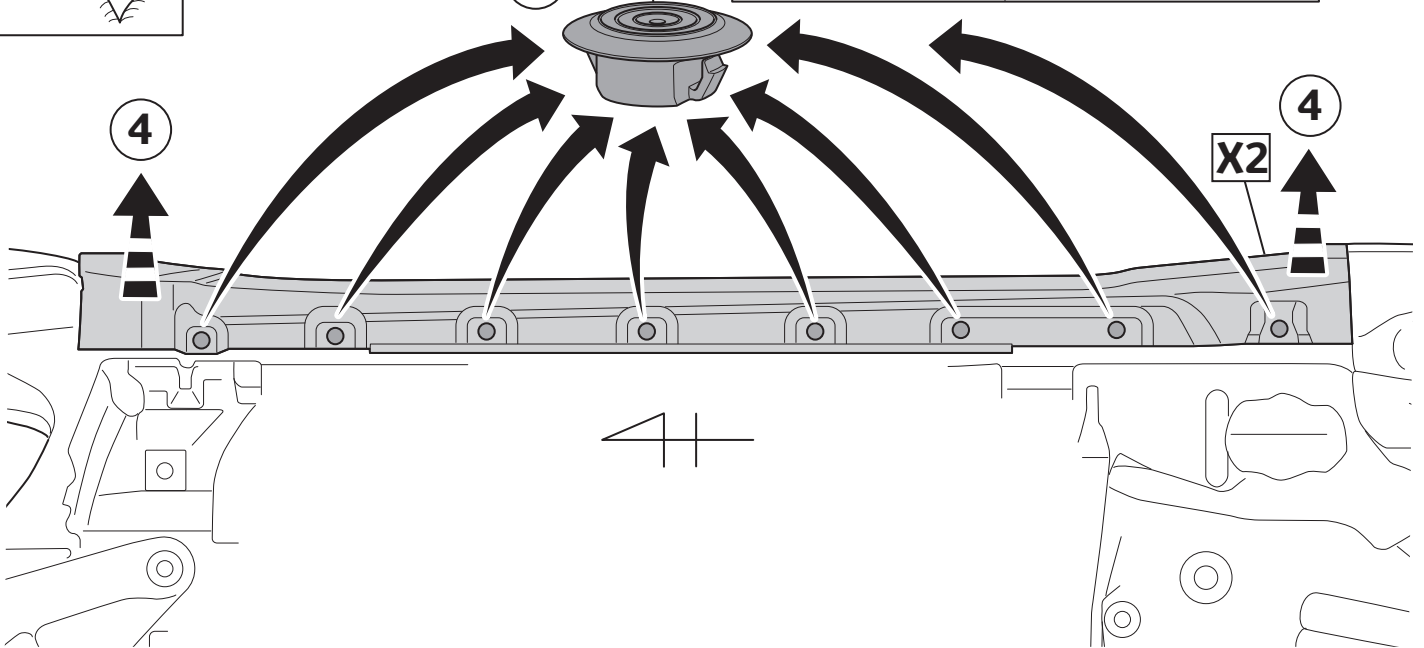




4




4


X2

4


6

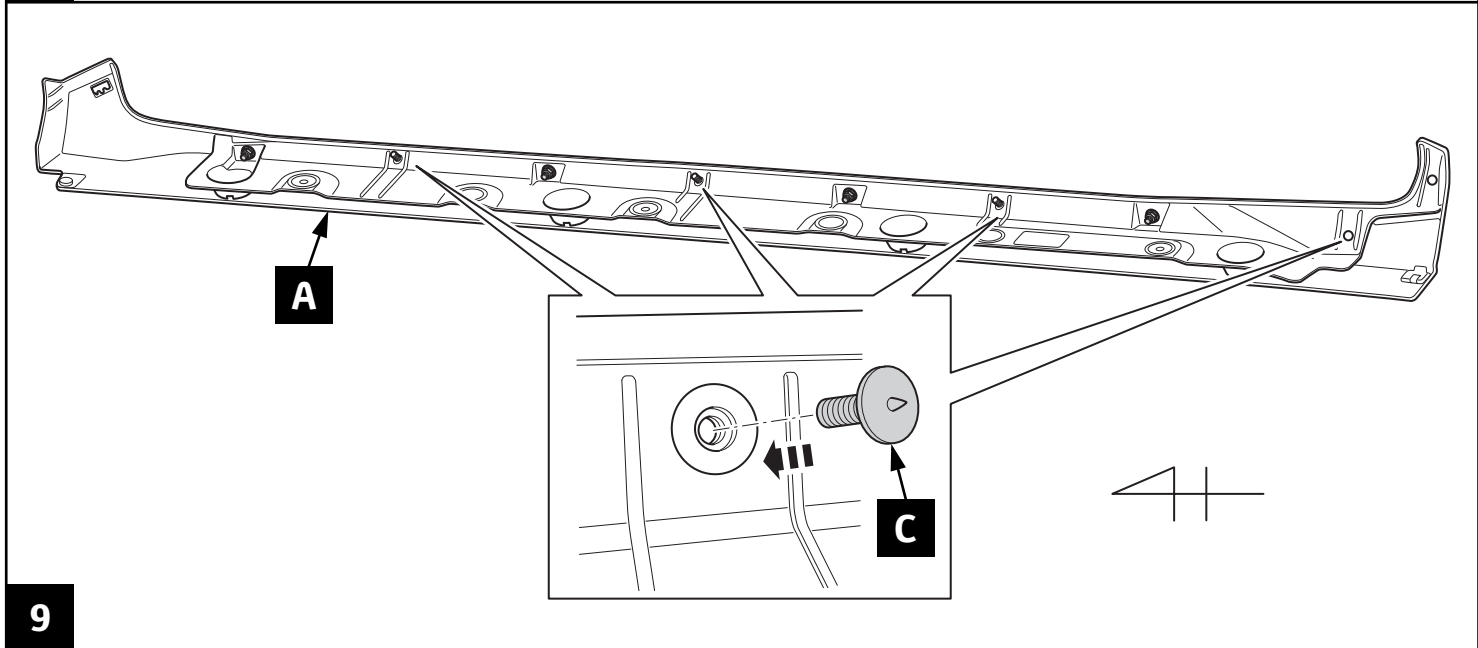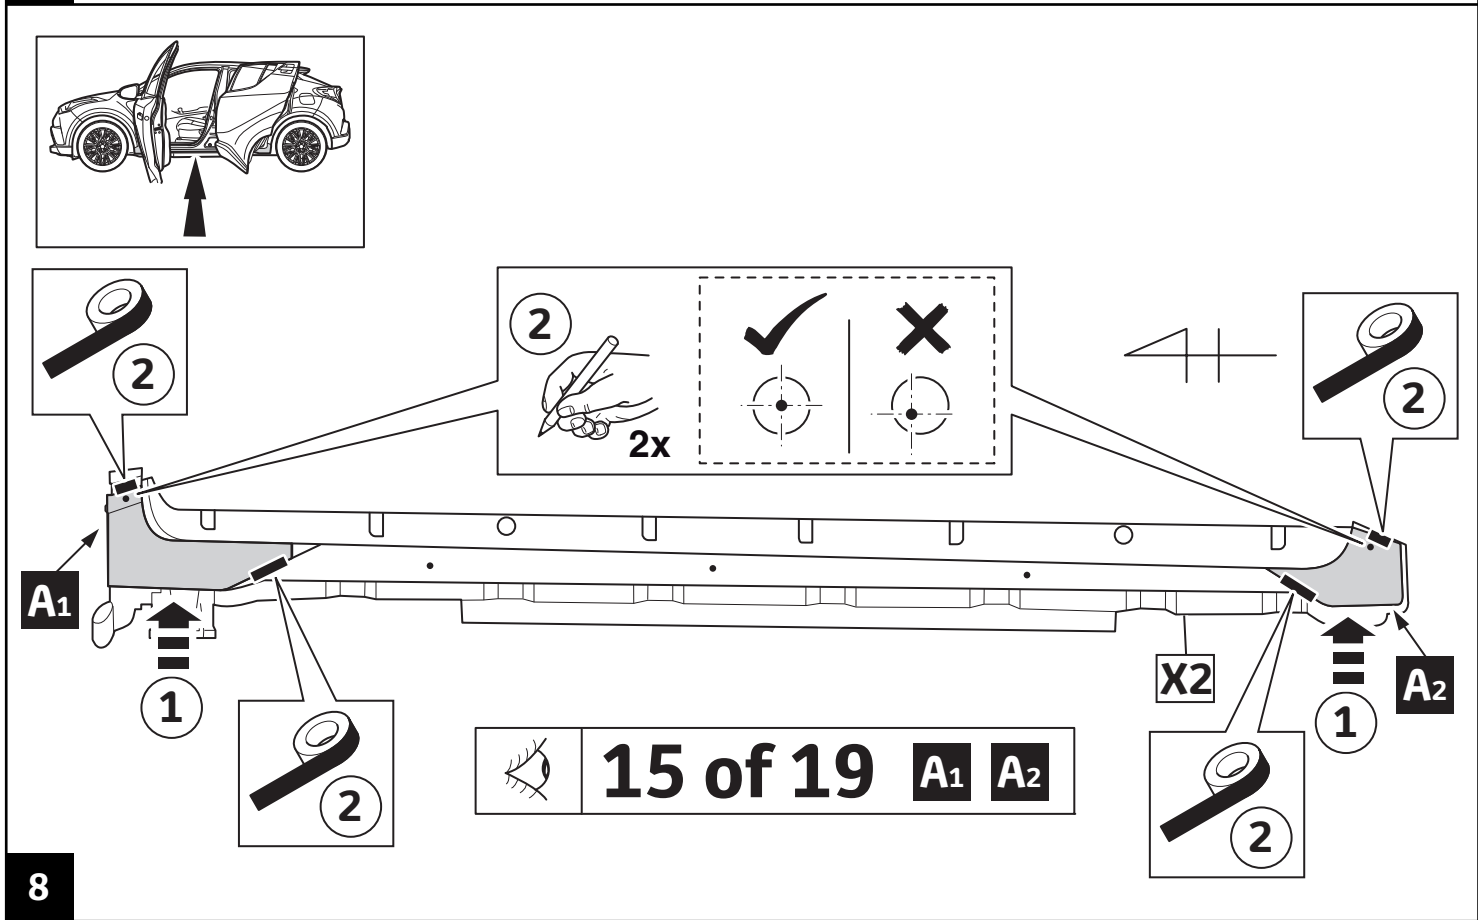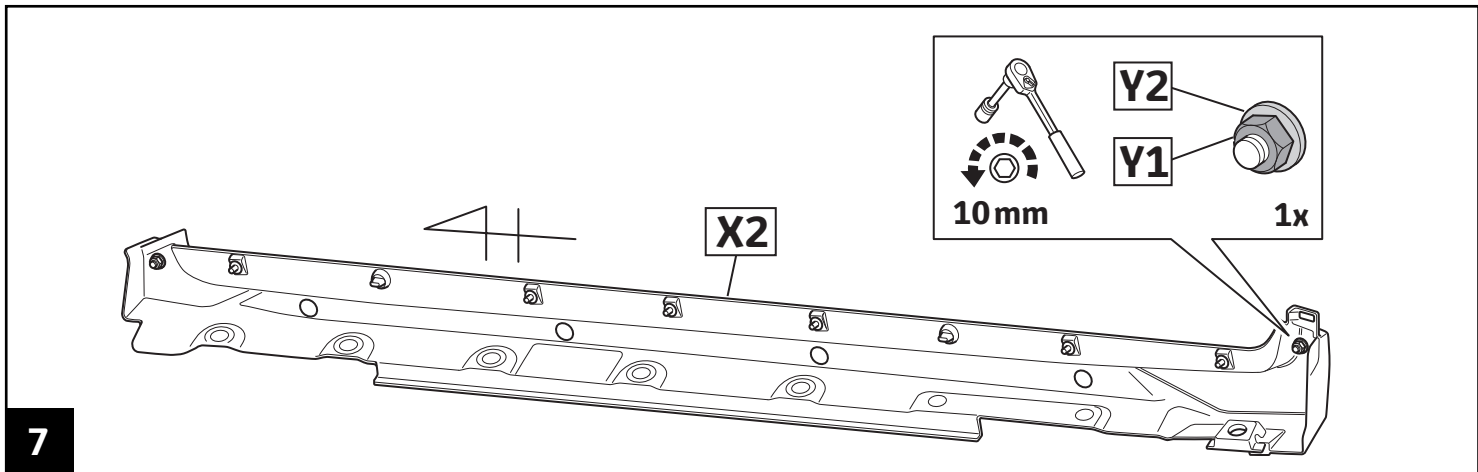

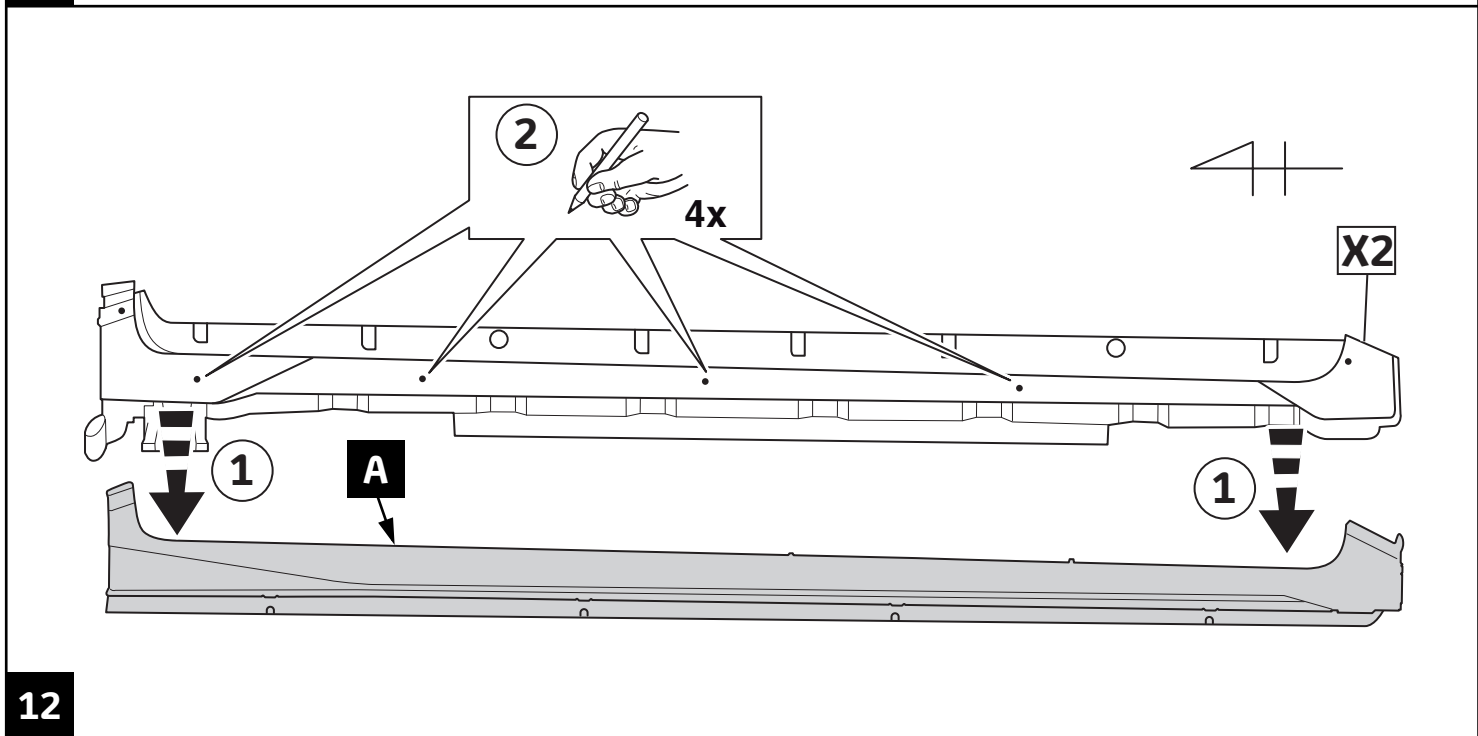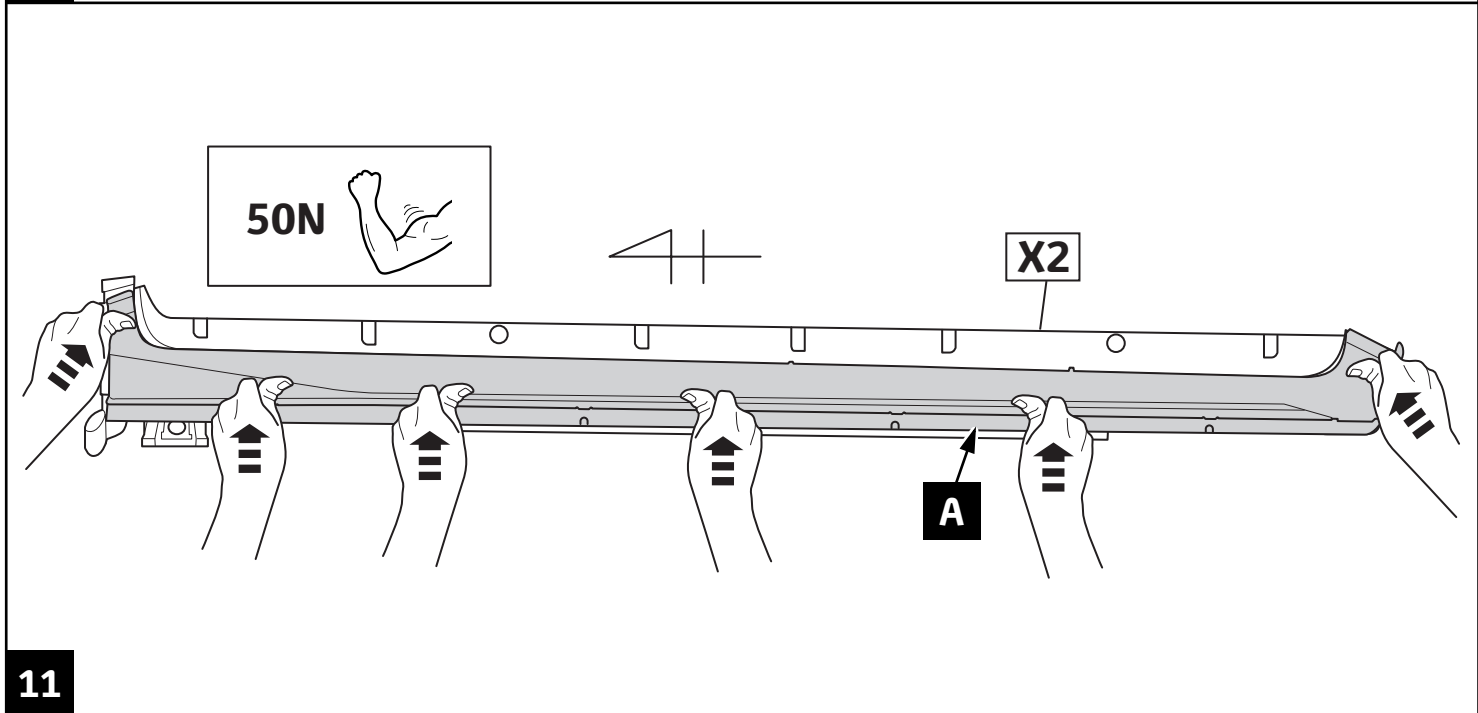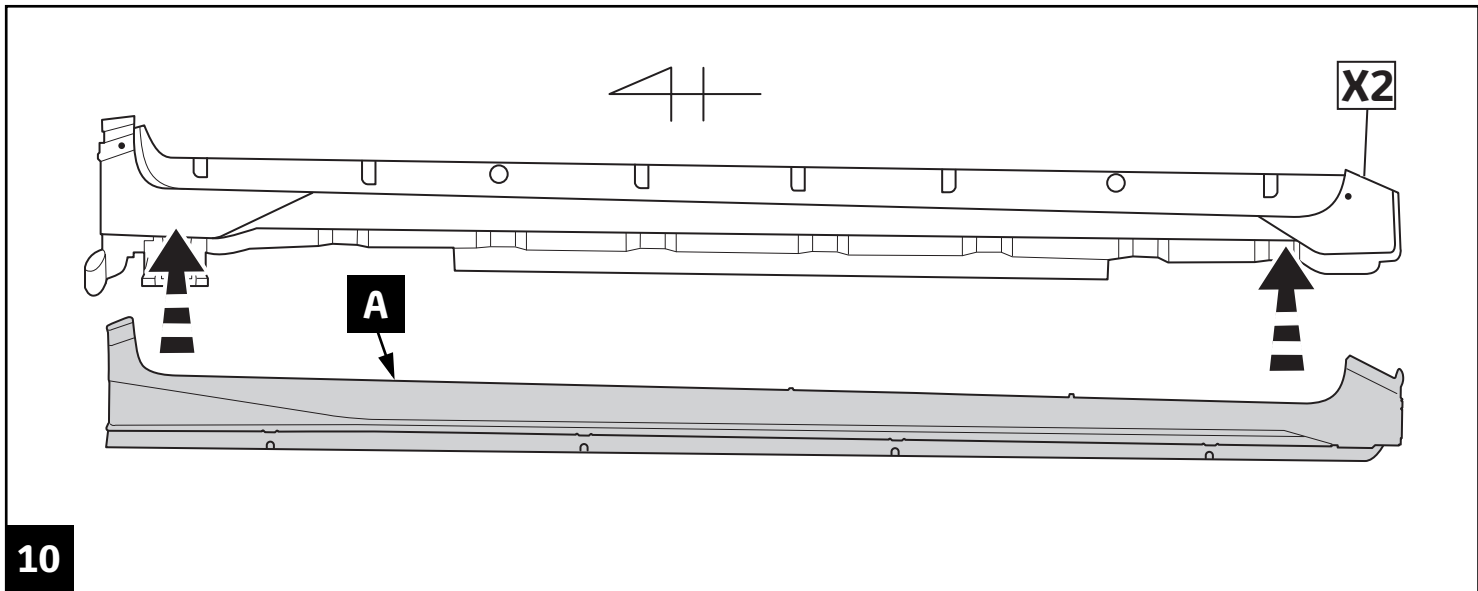


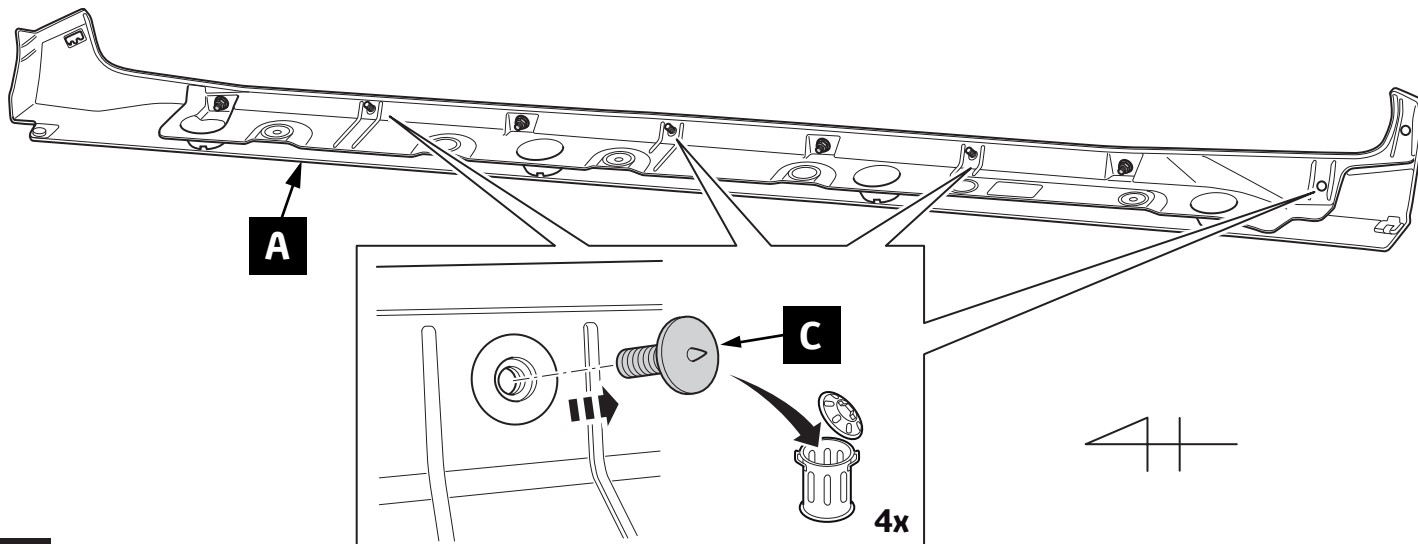


13

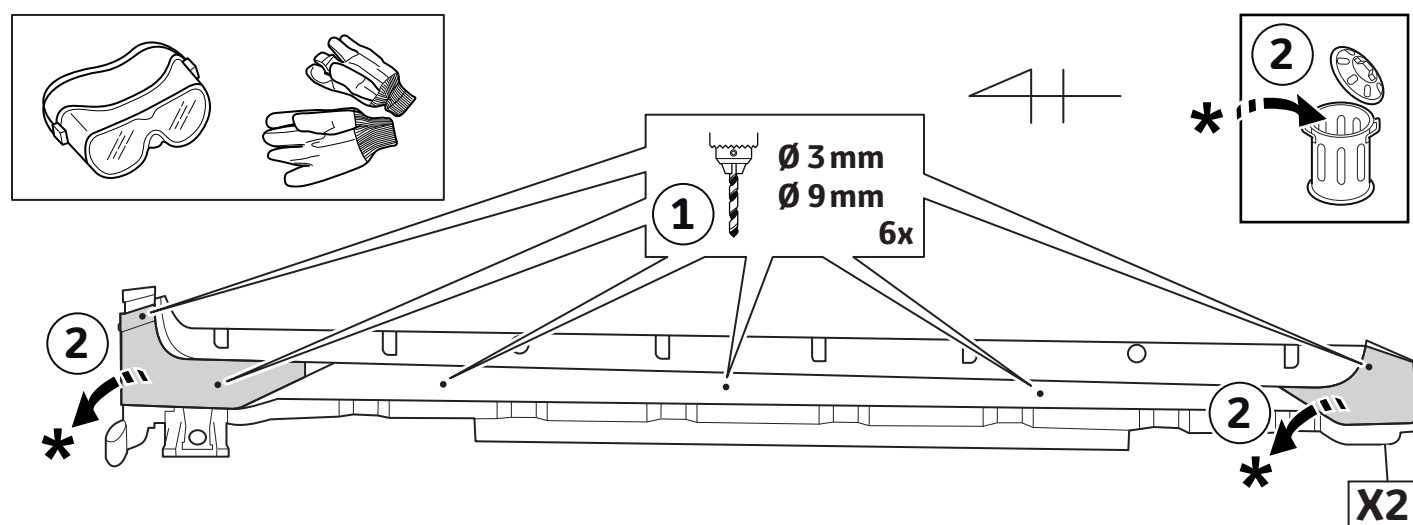

14

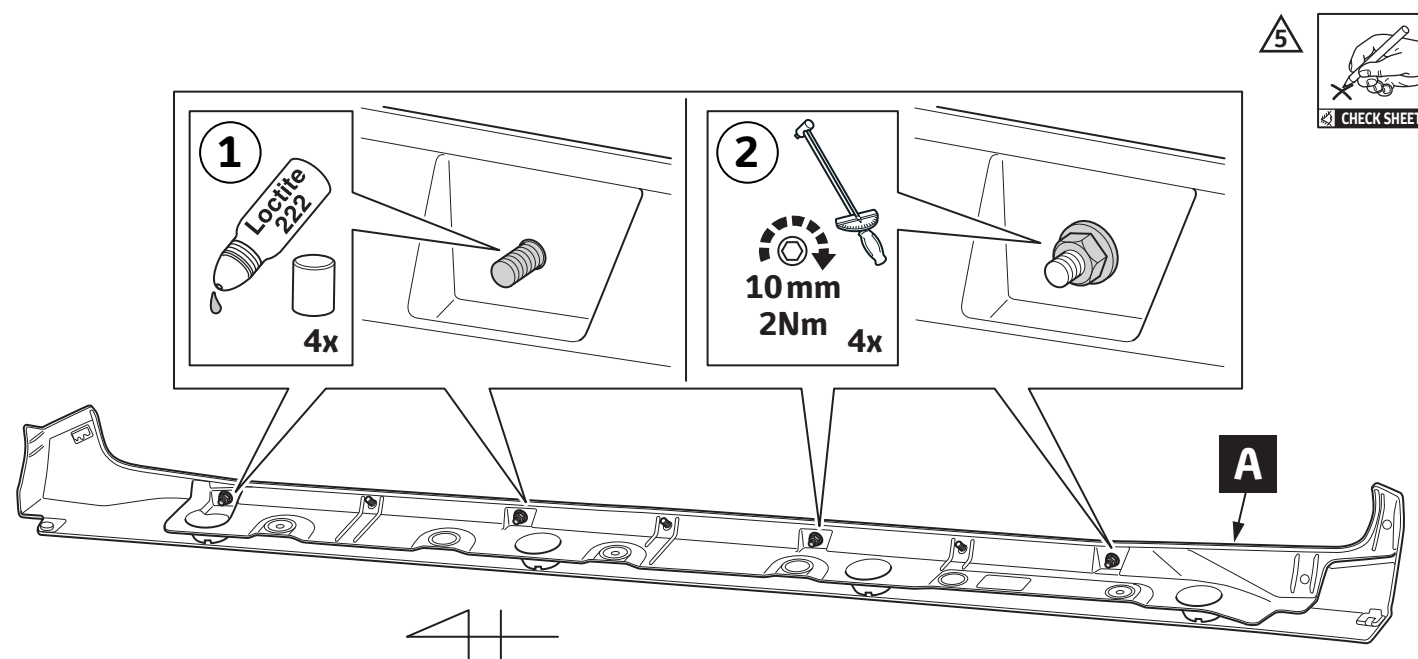


15



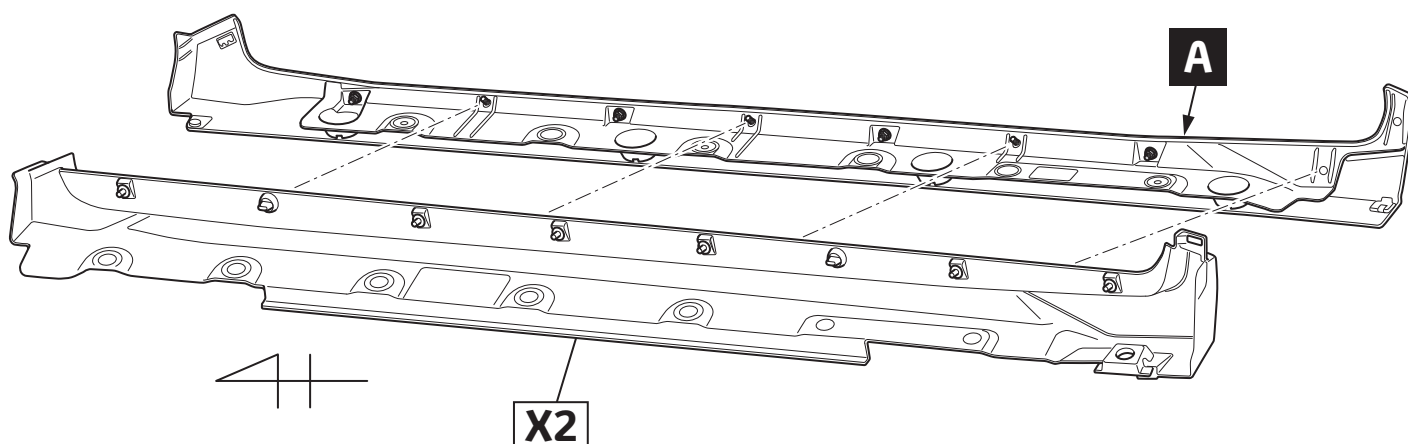



16

5

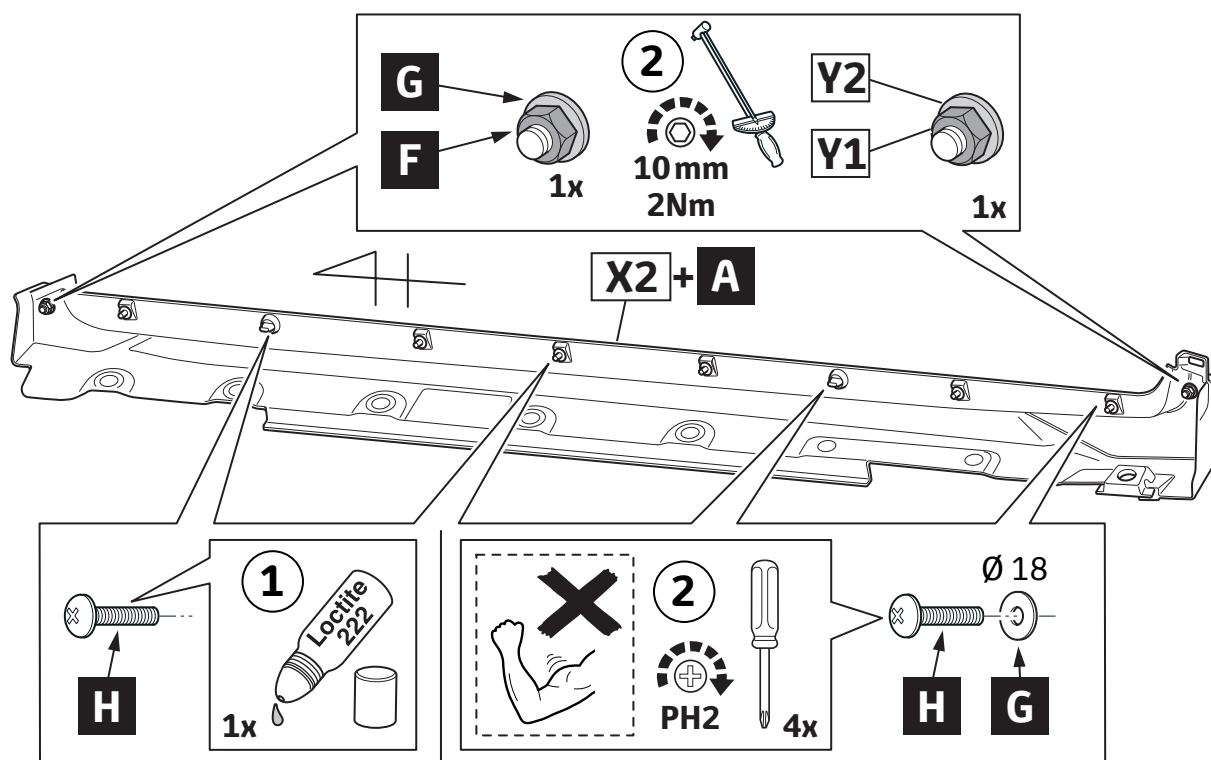


17

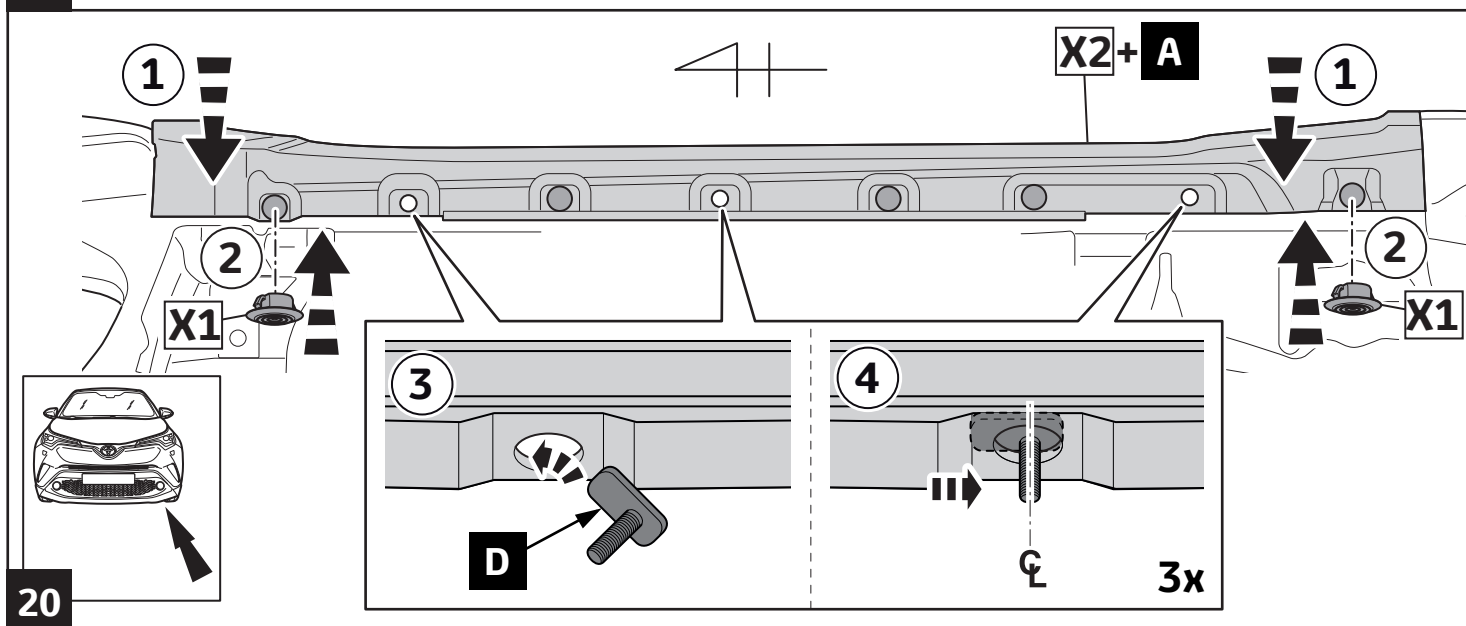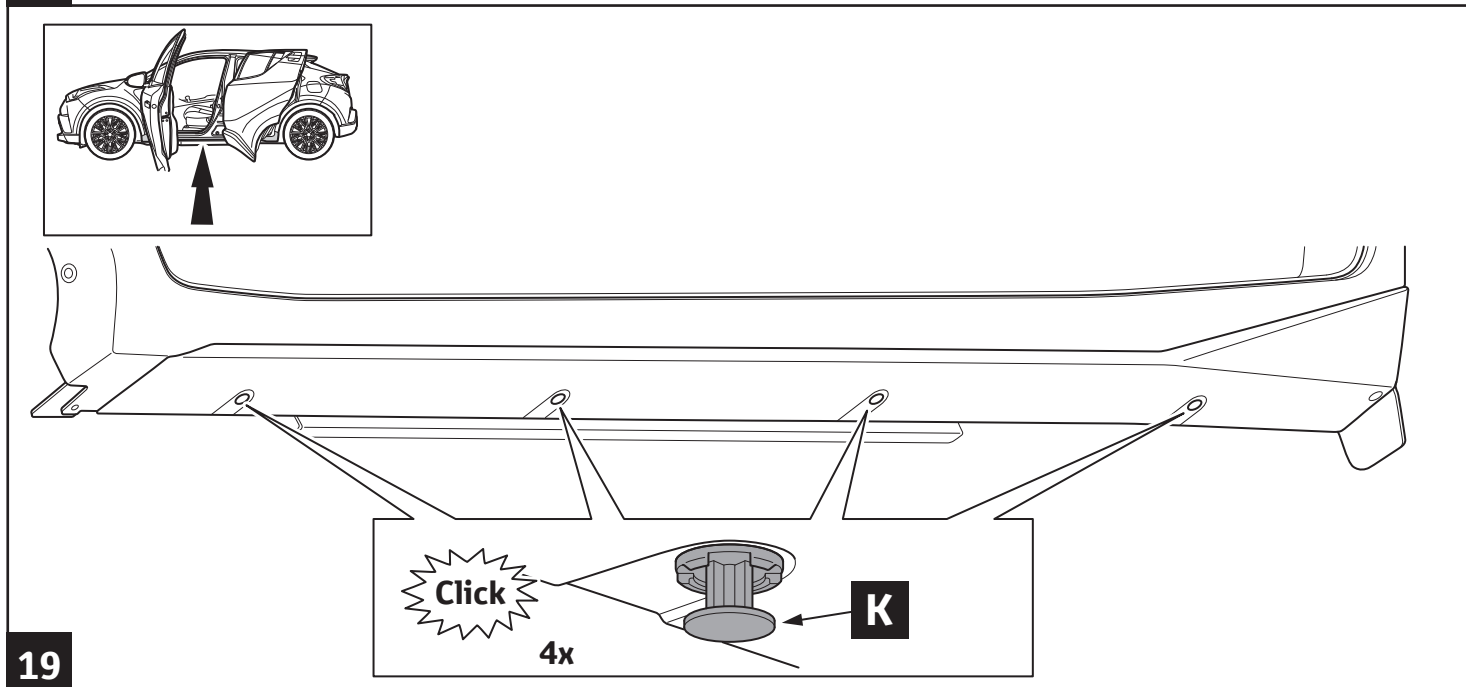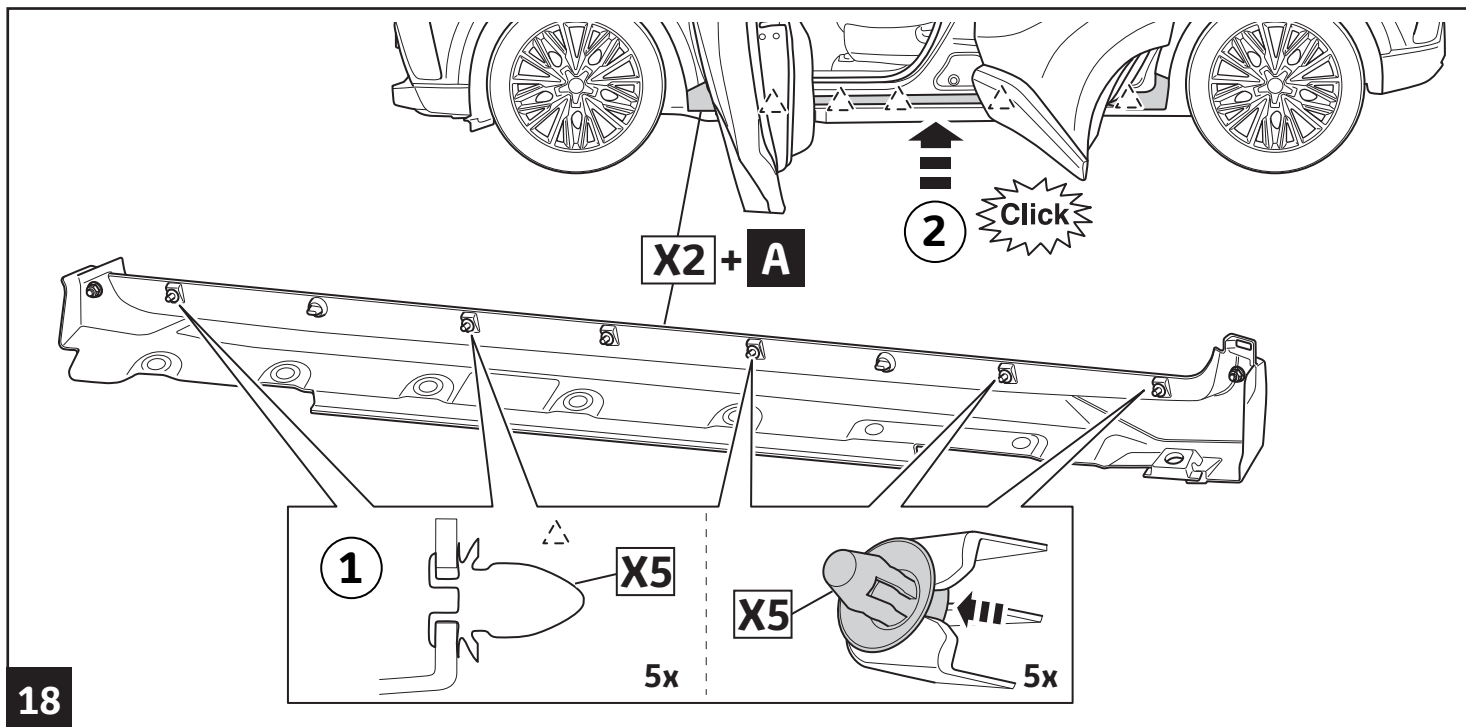


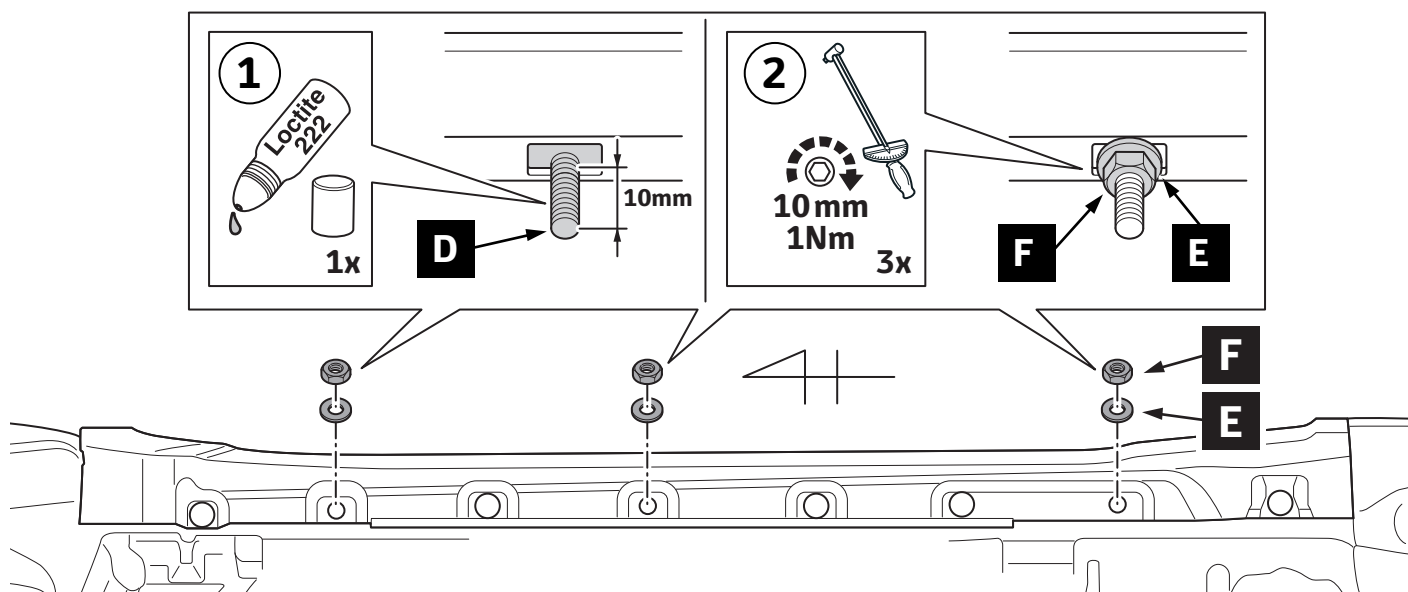



21

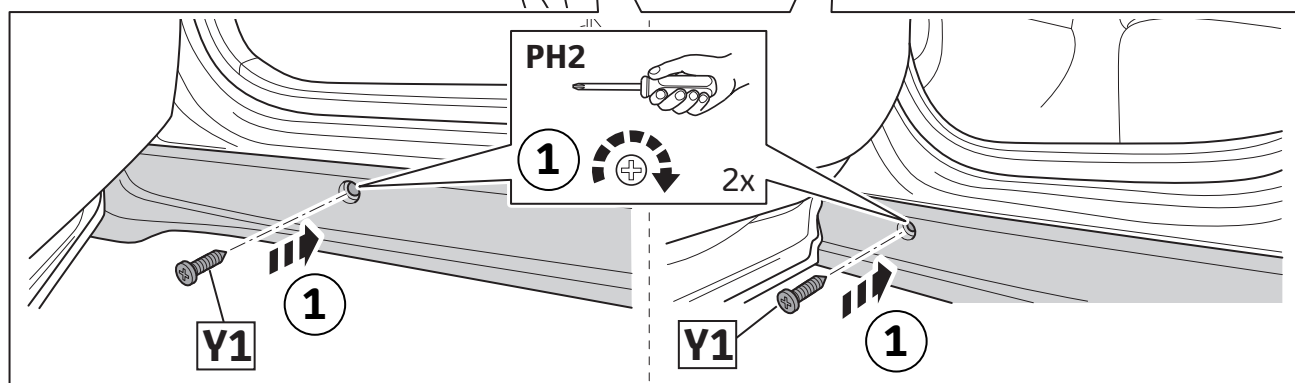

22

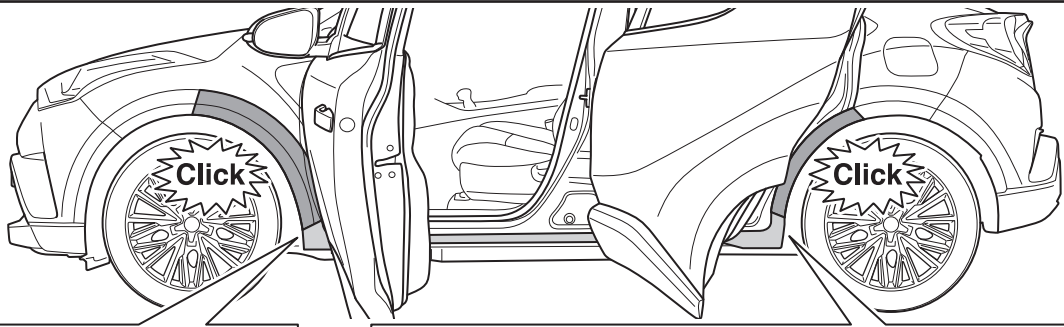

23

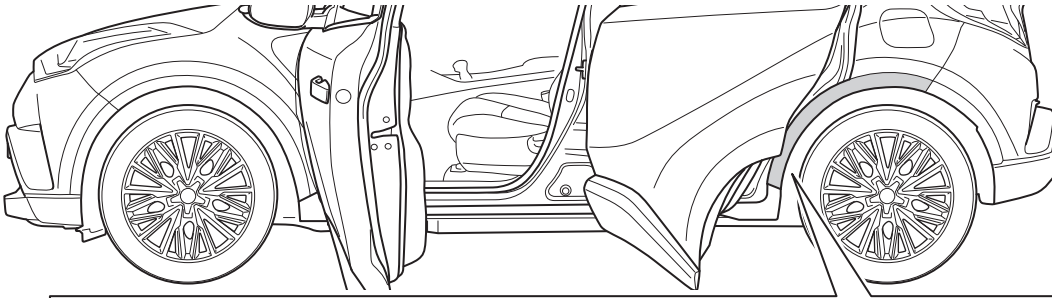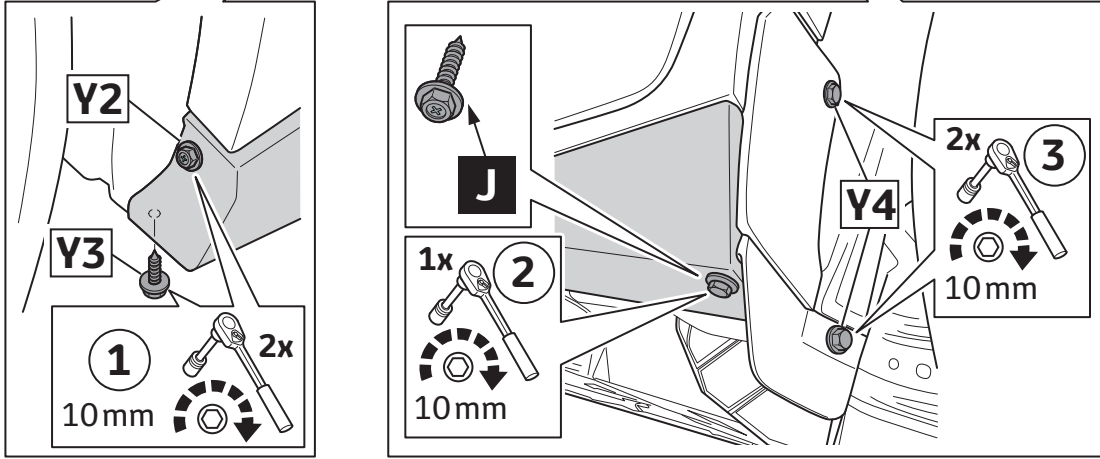

24

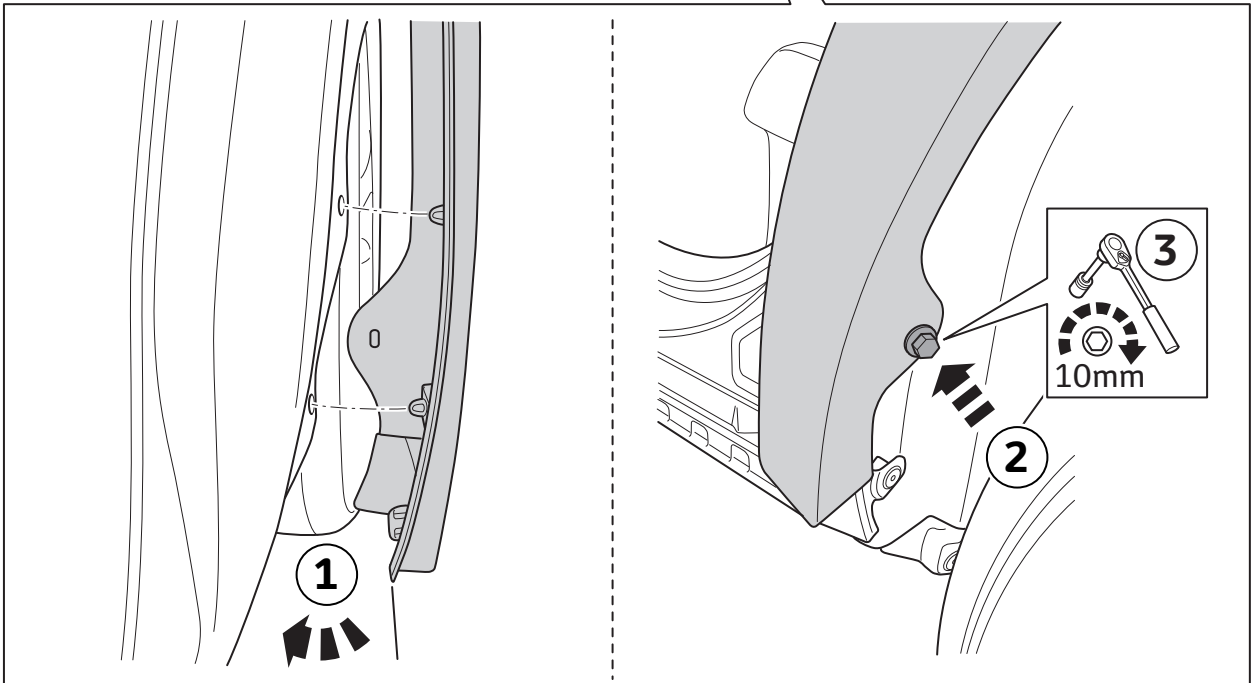


Fig.1 - Fig.24

RHS = LHS

A

Fig.1 - Fig.24

B

25




Toyota C-HR
X*0*-AH*W
PW150-10002





Print 100%
Check with Rulers
before use.

CHECK

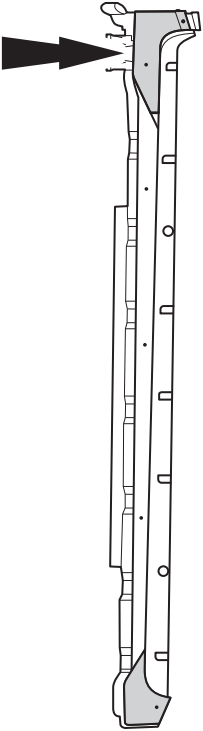


A2



Toyota C-HR
X*0*-AH*W
PW150-10002




A1

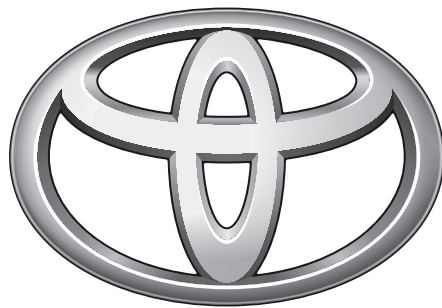


TOYOTA



Toyota C-HR
X*0*-AH*W
PW150-10004

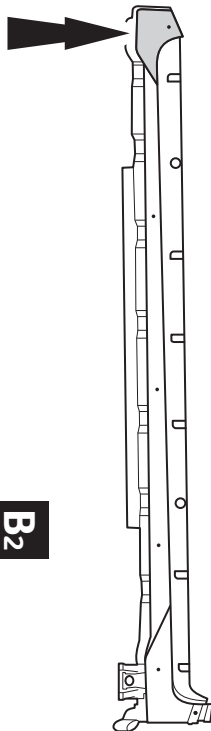


B₂

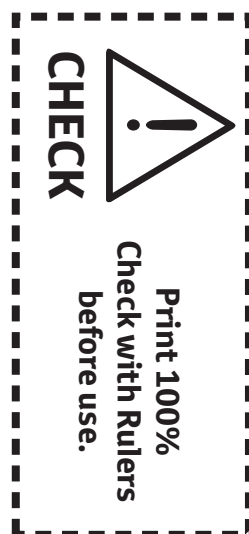


Toyota C-HR
X*0*-AH*W
PW150-10004



B₁

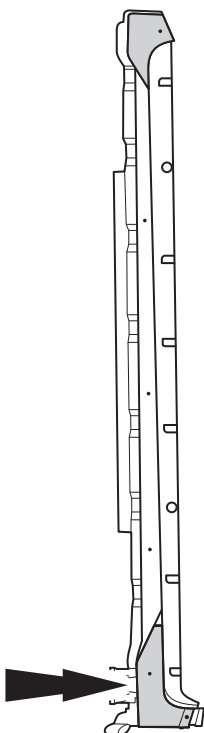

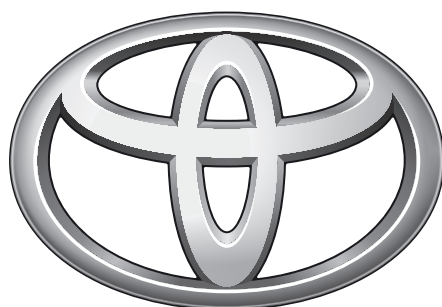

TOYOTA



TOYOTA


Model / Year Toyota C-HR
As from 2016/10

Side skirt


VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

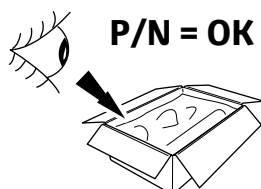


1

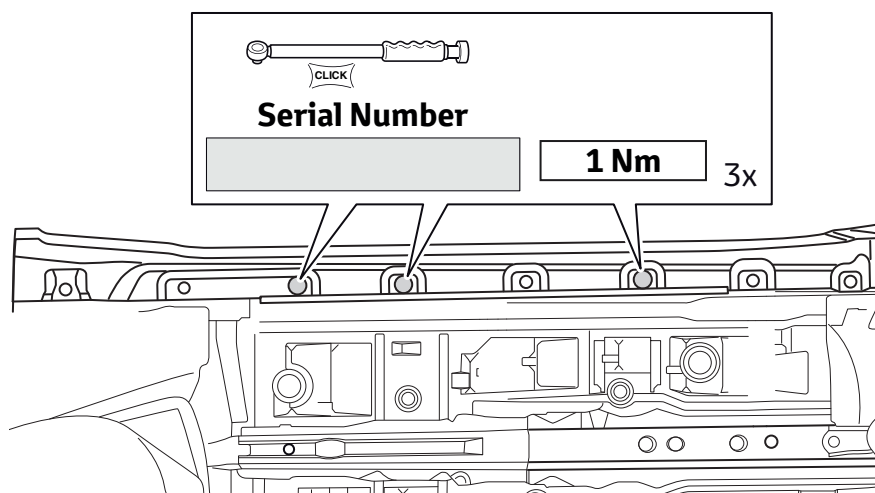

2

LHS RHS
☐ ☐

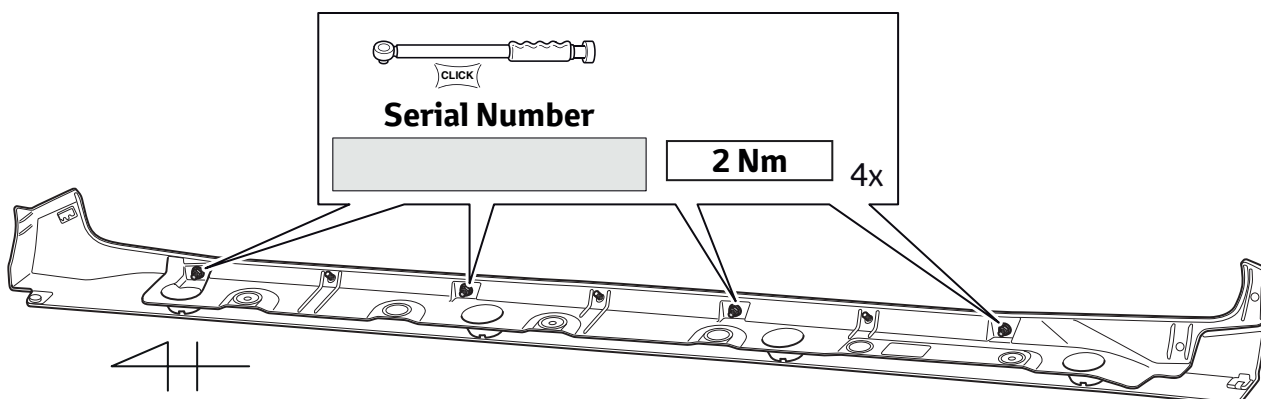


3

LHS RHS
☐ ☐

CHECK SHEET Page 2 of 2


4


CLICK

Serial Number

2 Nm

2x

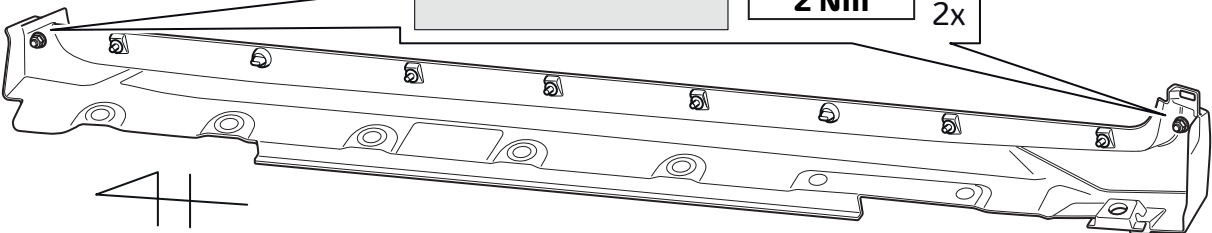

4

LHS

RHS

AFTER INSTALLATION

1

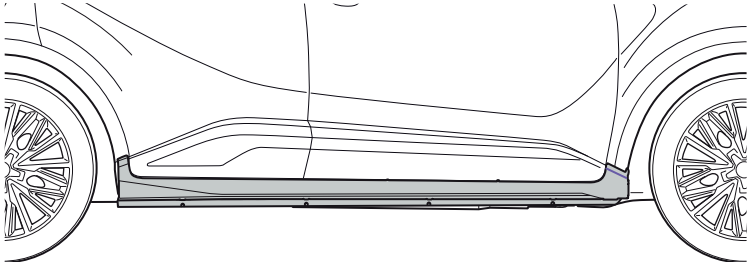




LHS

RHS

2

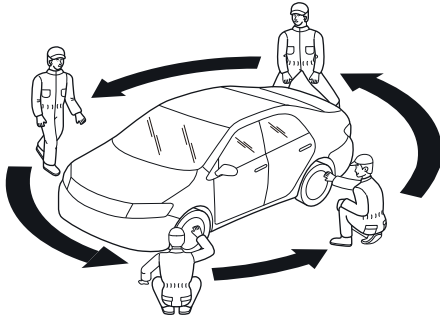

 = OK

Installation Date:

..

/

..

/

....

Technician Name & Signature:

Stamp:

Manual reference number: AIM 003 848-5 20 of 20

