



GT86 (LHD)

TAS400


Installation instructions

ALWAYS A
BETTER WAY


Model year:	2016/08	
Vehicle code:	ZN6-ALE*	
Part number:	PW600-18001	TAS400 without DAB
	PW600-18002	TAS400 with DAB
	PW600-18003	Fitting kit
	PW650-18001	DAB antenna
	PZ445-00333-02	Microphone


Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

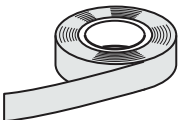




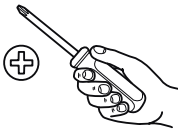

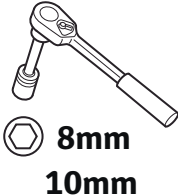


















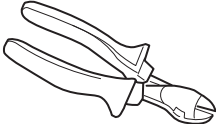
















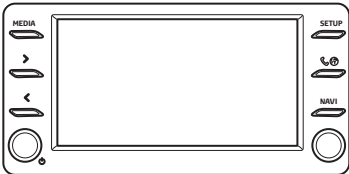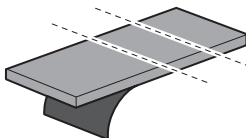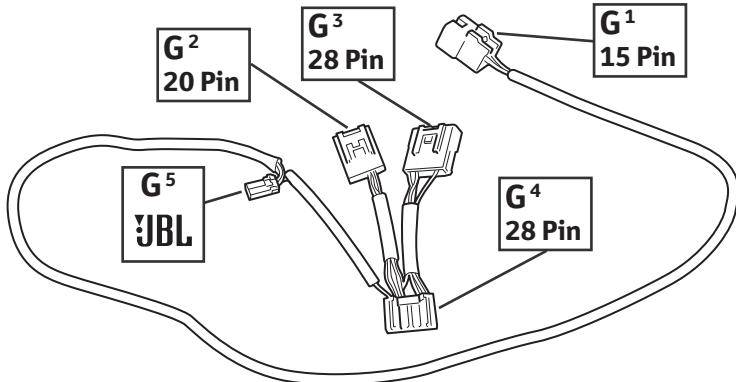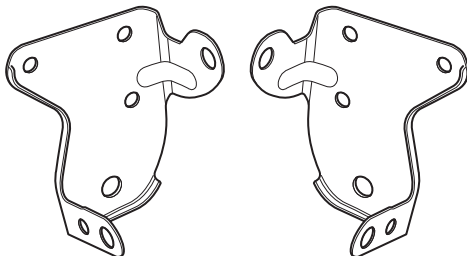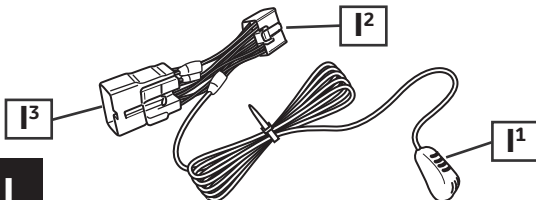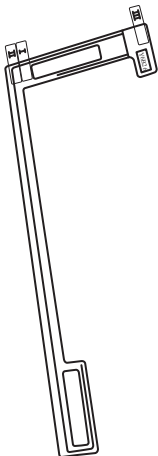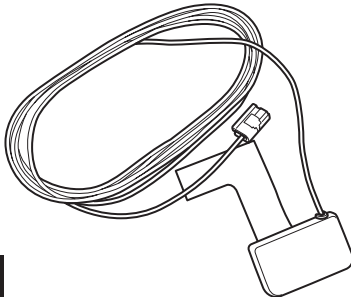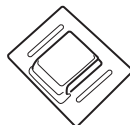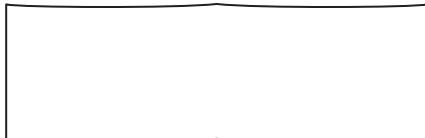


PW600-18001 (without DAB) PW600-18002 (with DAB)		PW600-18003	
A  1x	B FOAM PAD  1x	C  14x	
D  1x	E  6x	F  1x	
G  1x			
H  1x		I PZ445-00333-02  1x	
PW650-18001			
J  1x	K  1x	M  2x	N  1x
	L  15x	P  1x	

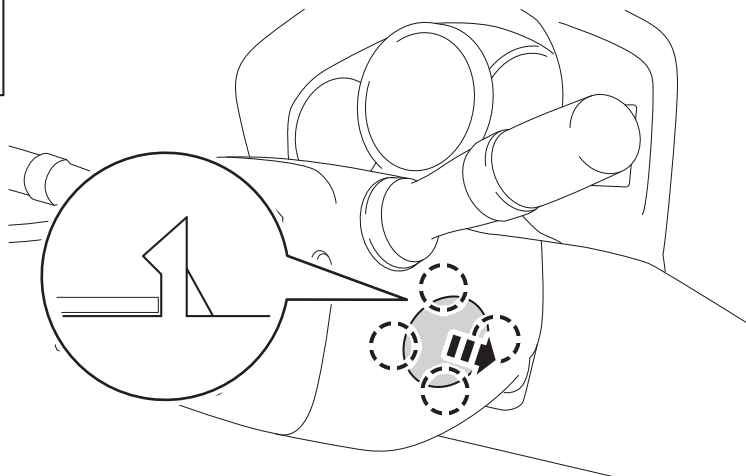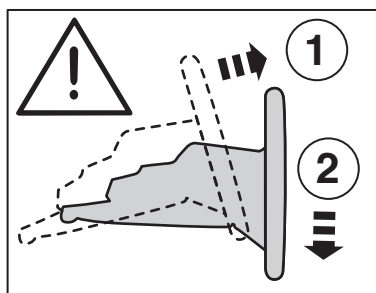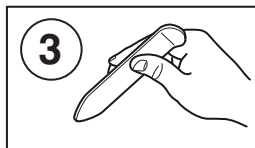


1

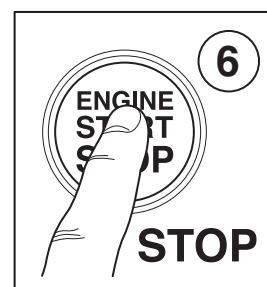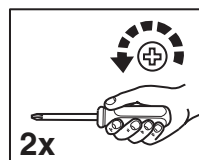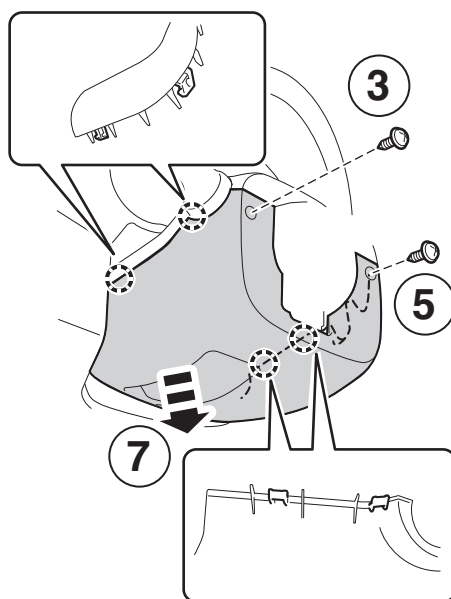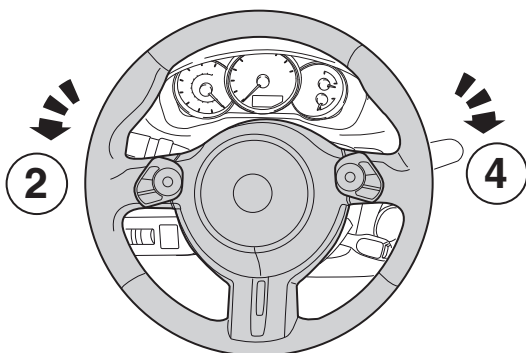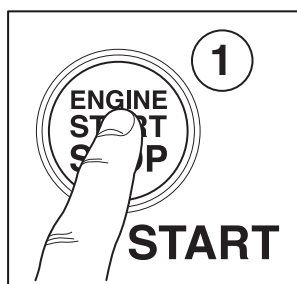


2

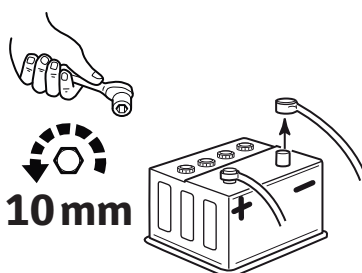


3


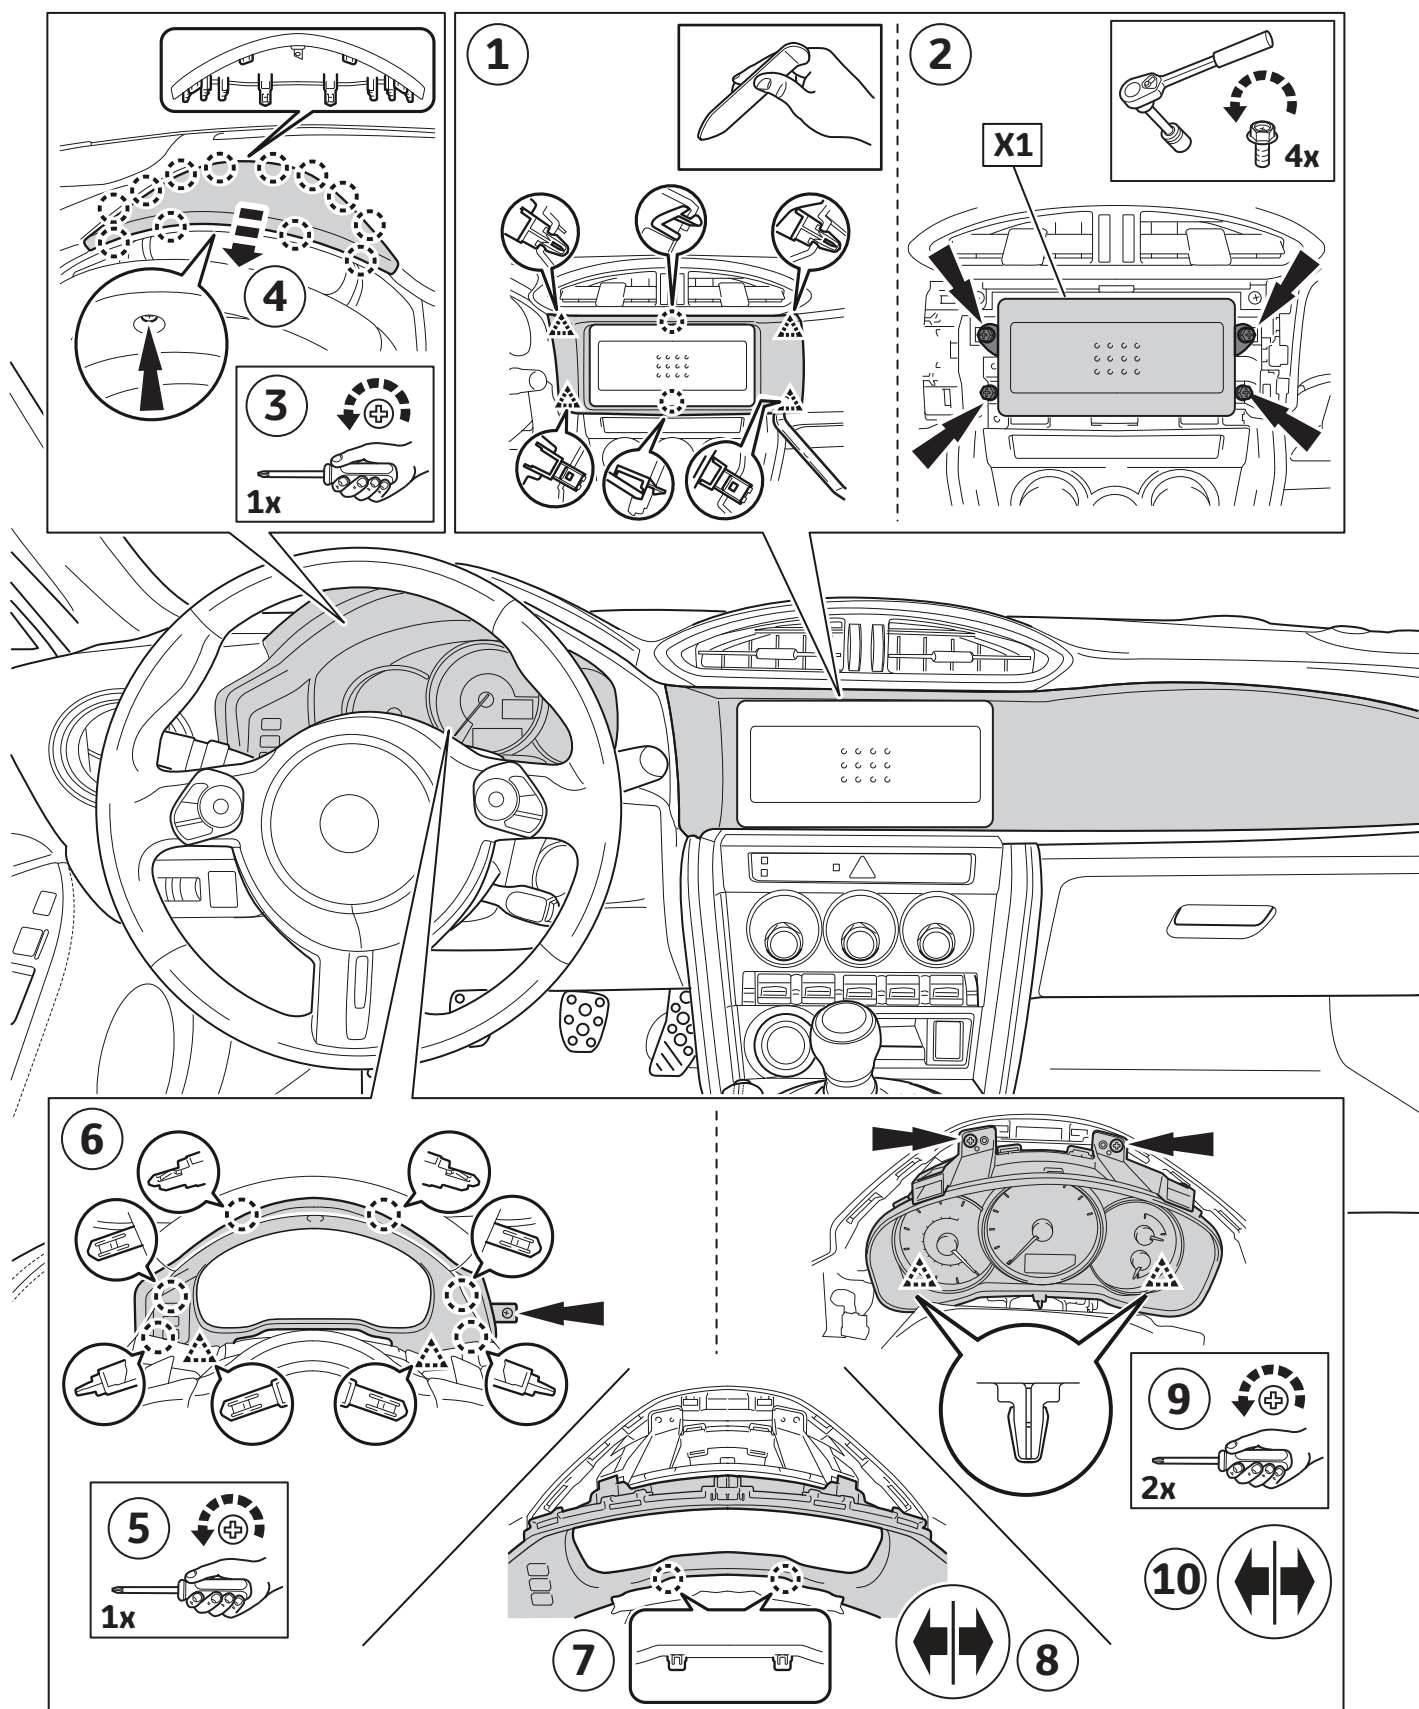







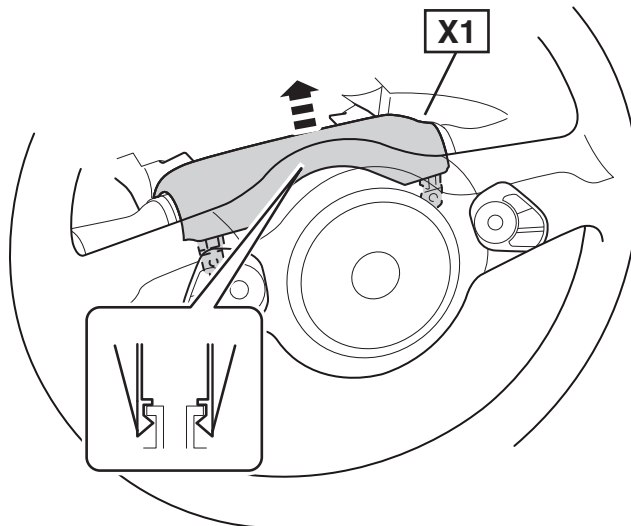







5



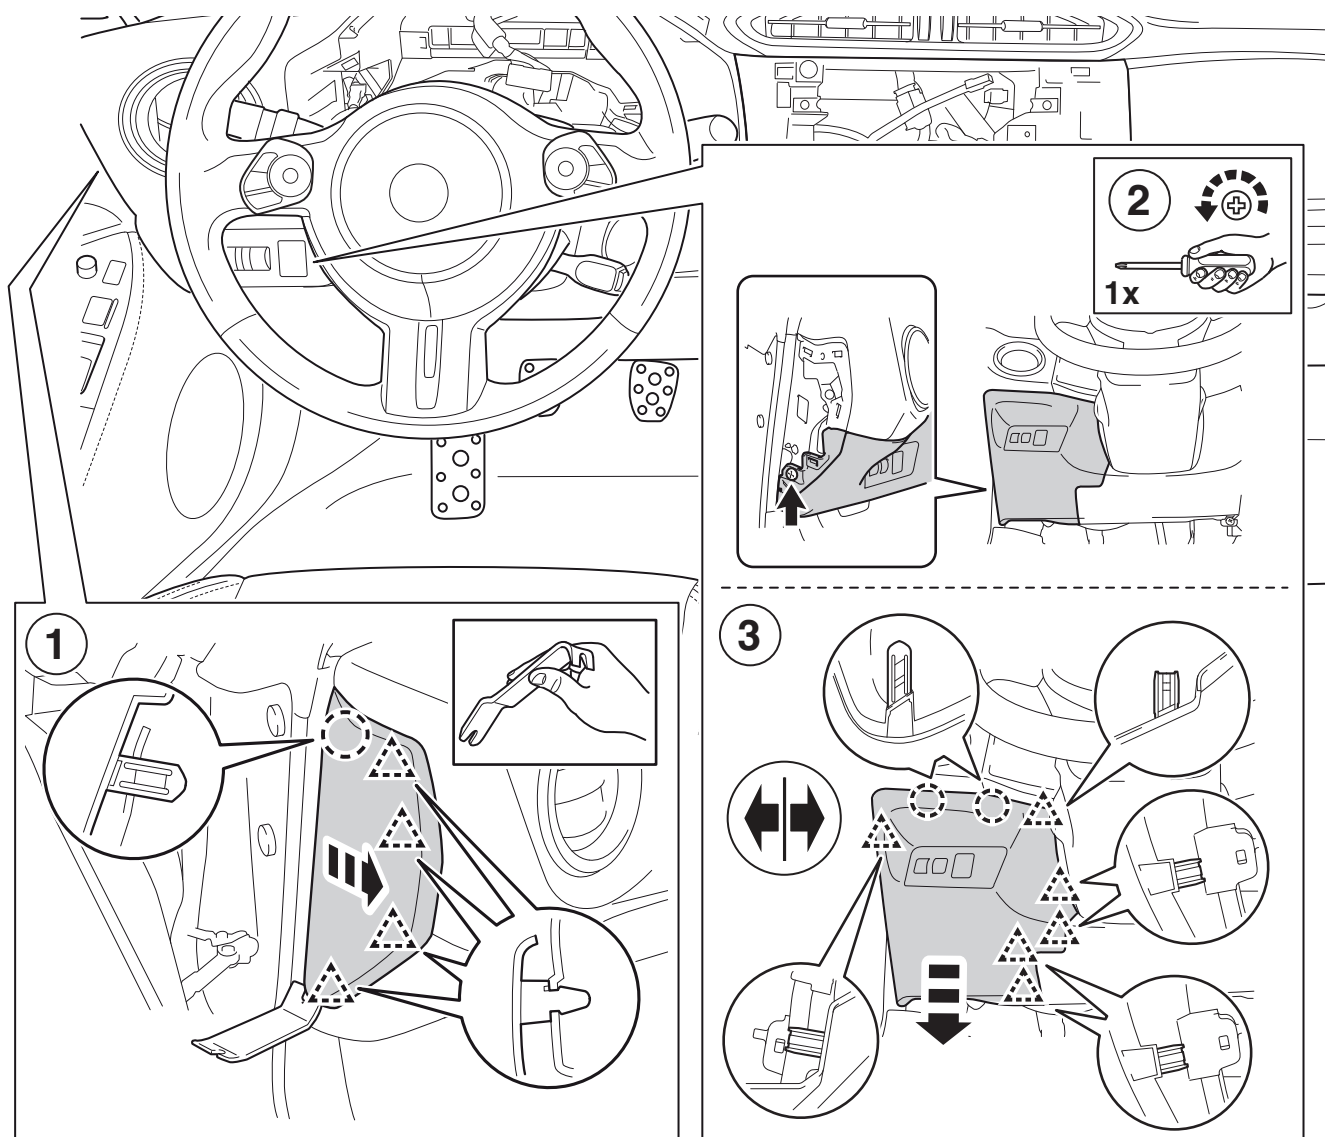




6



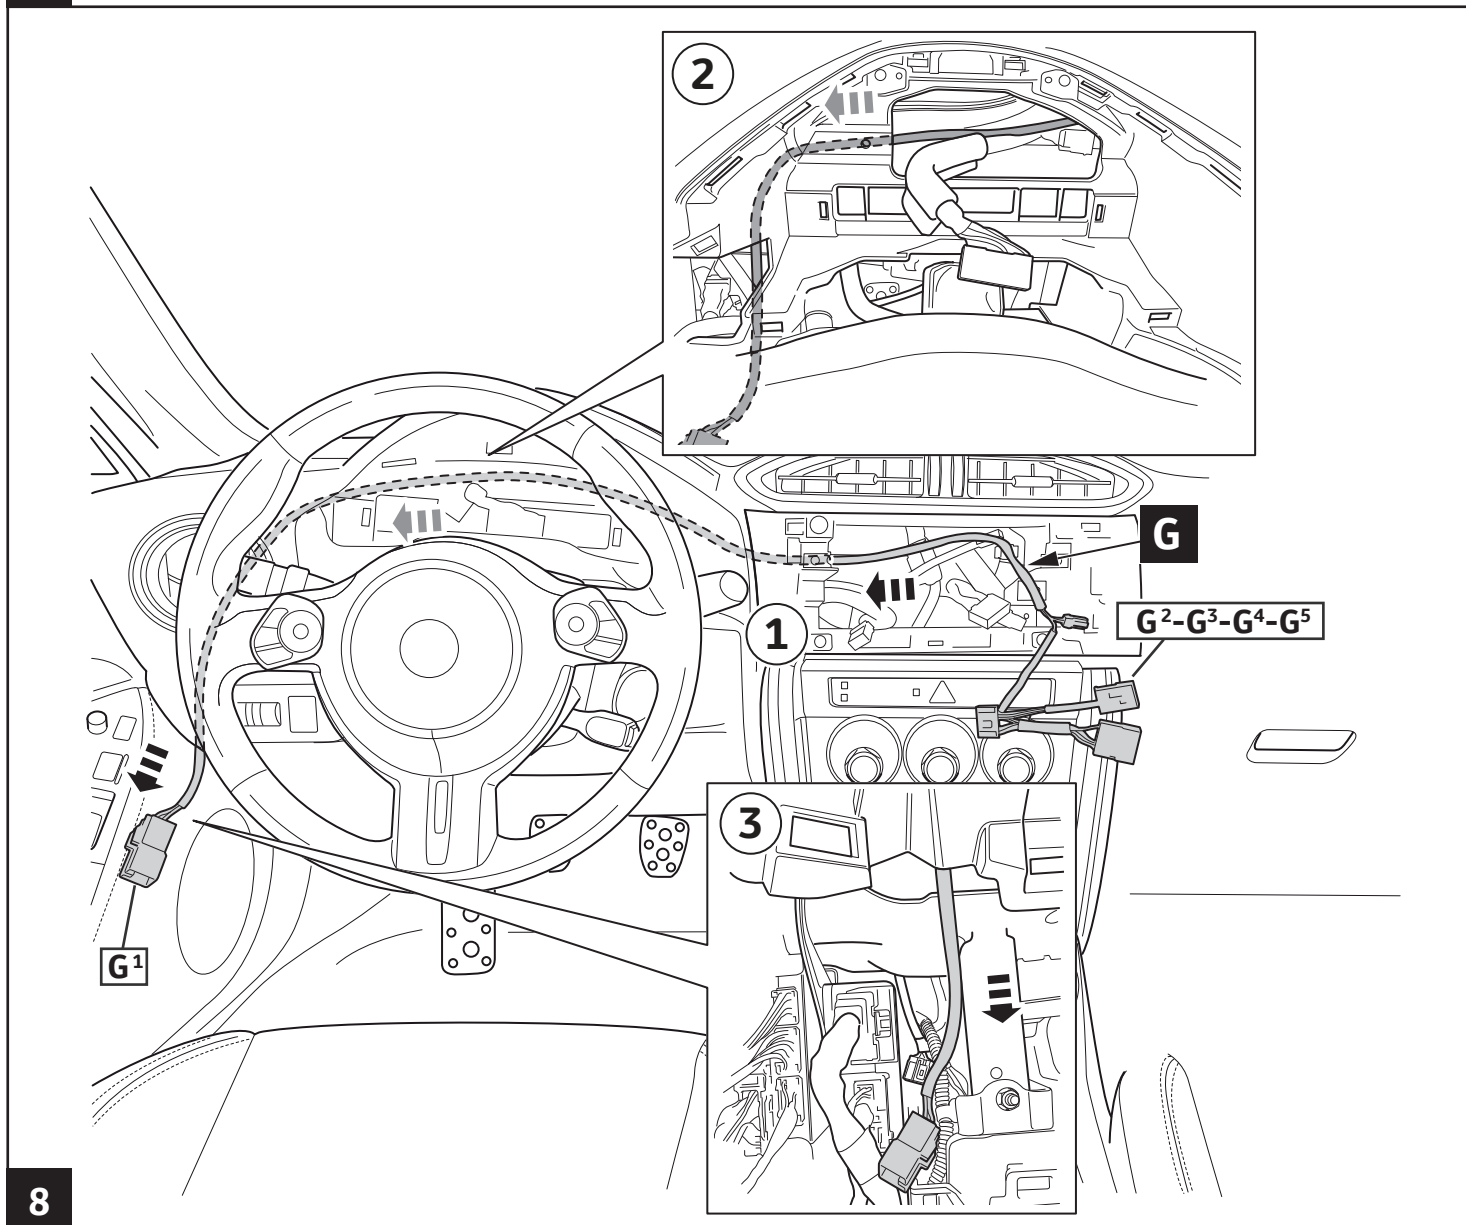
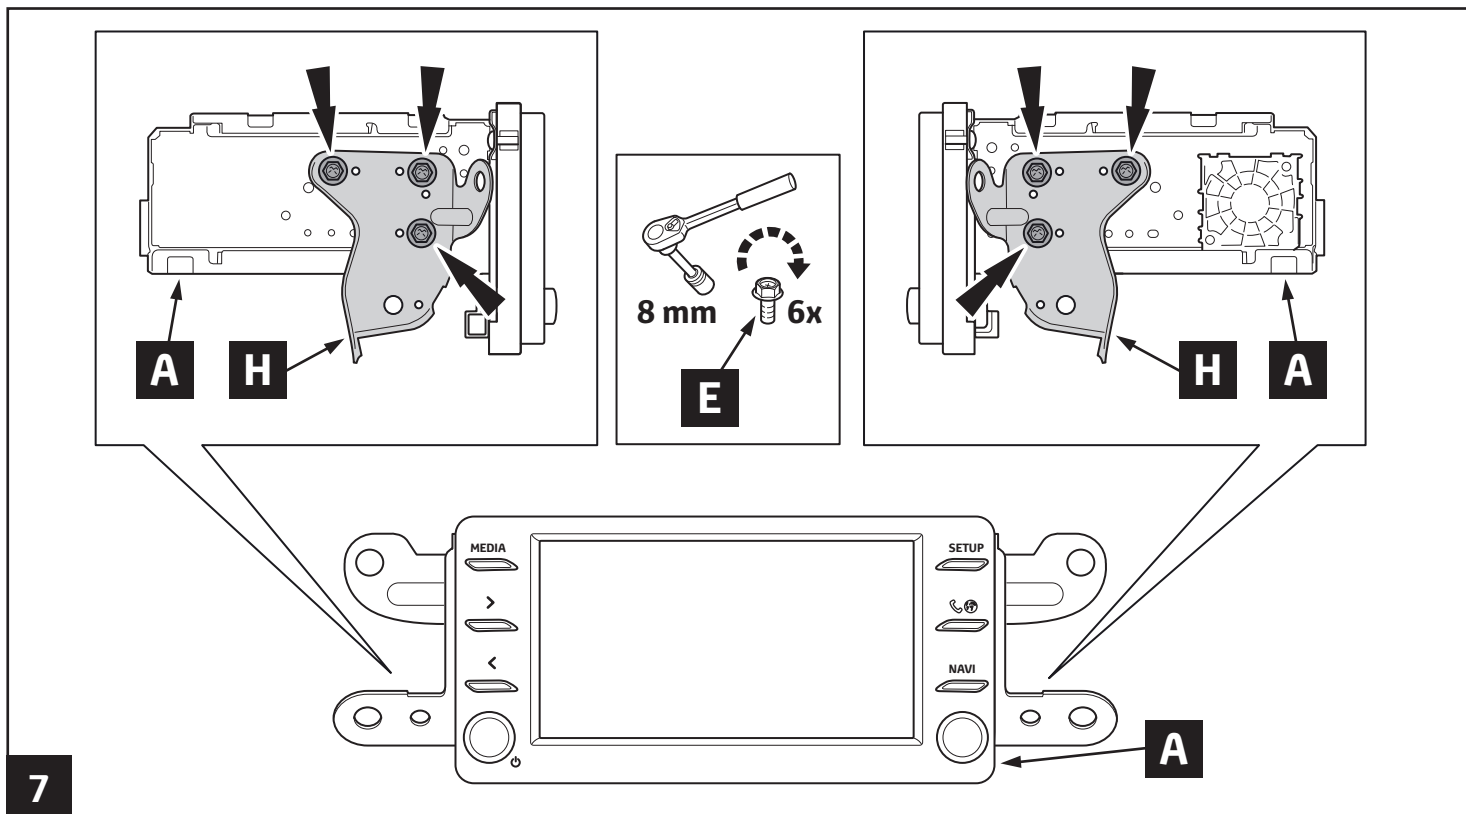


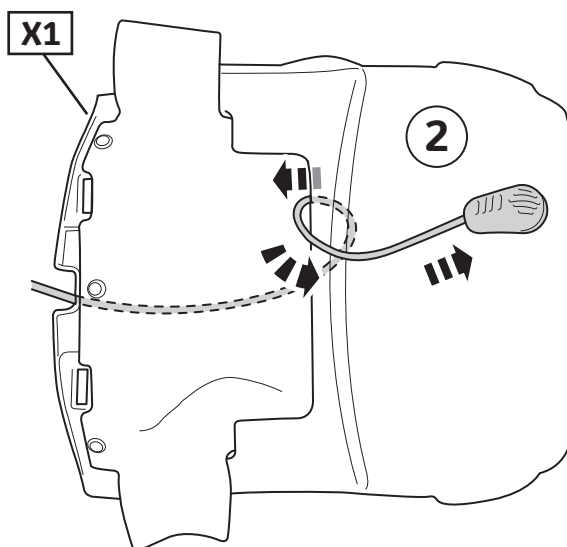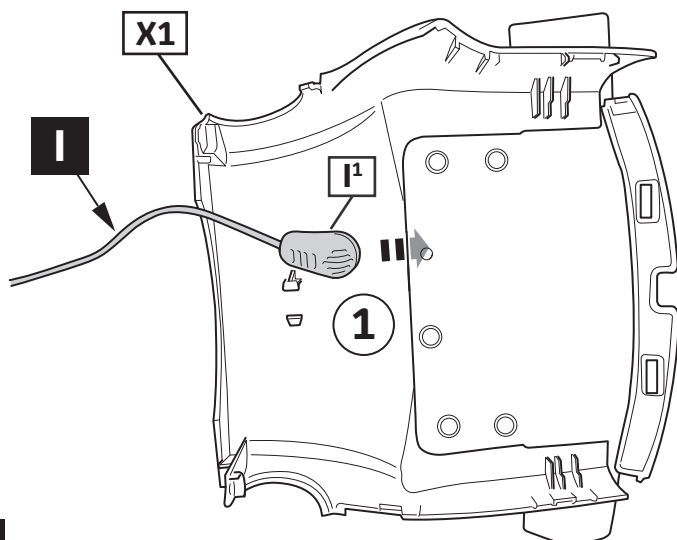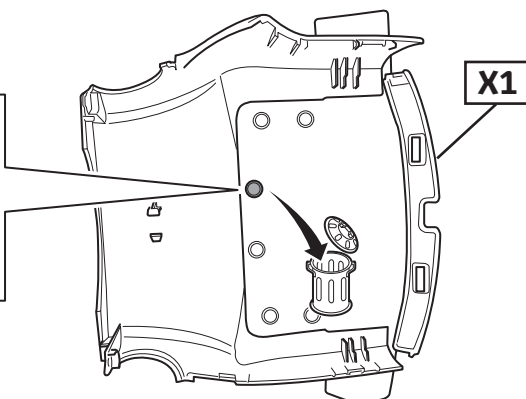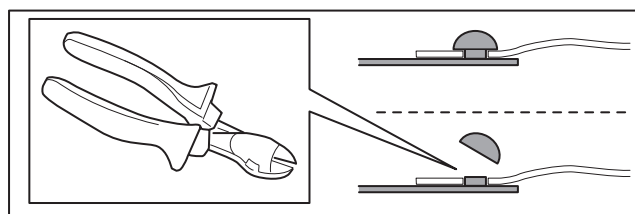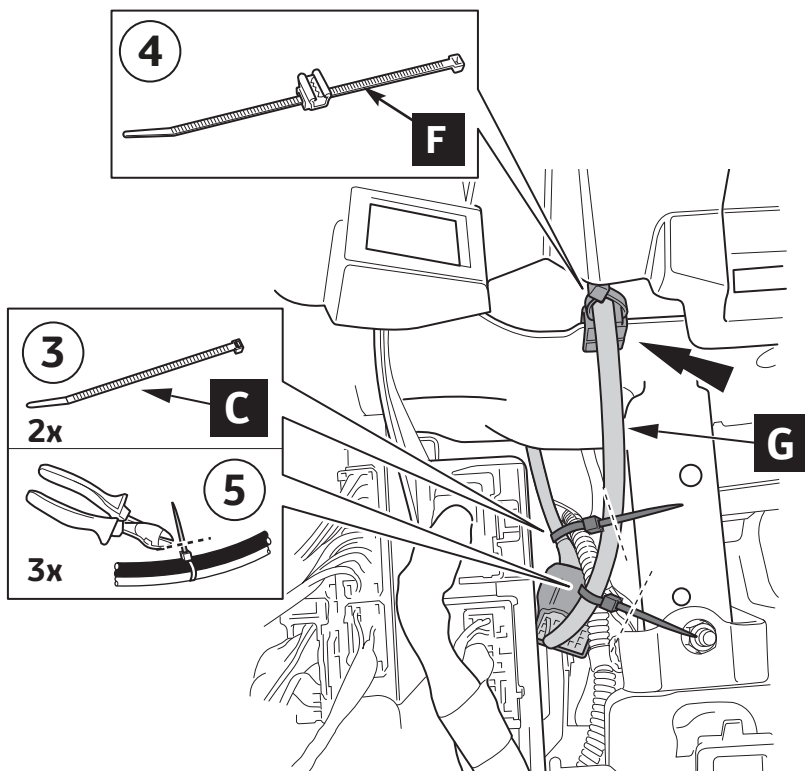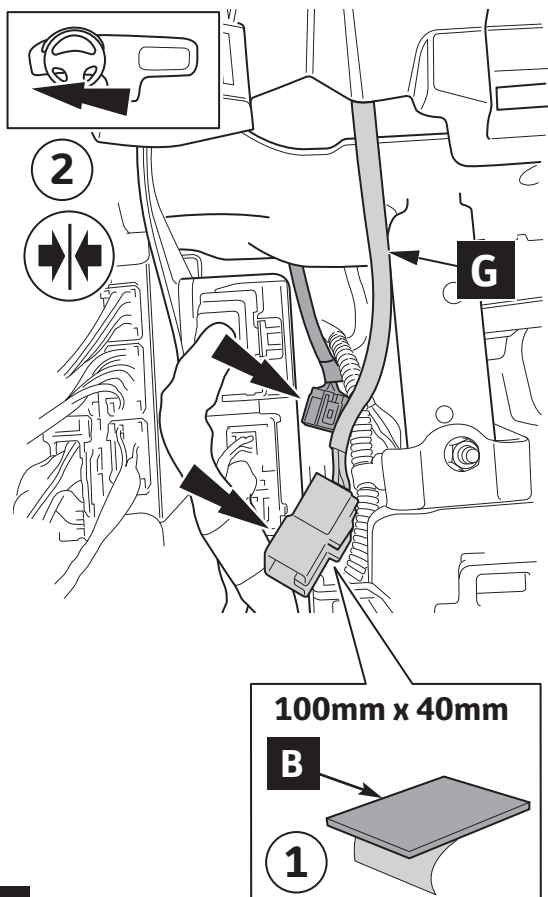

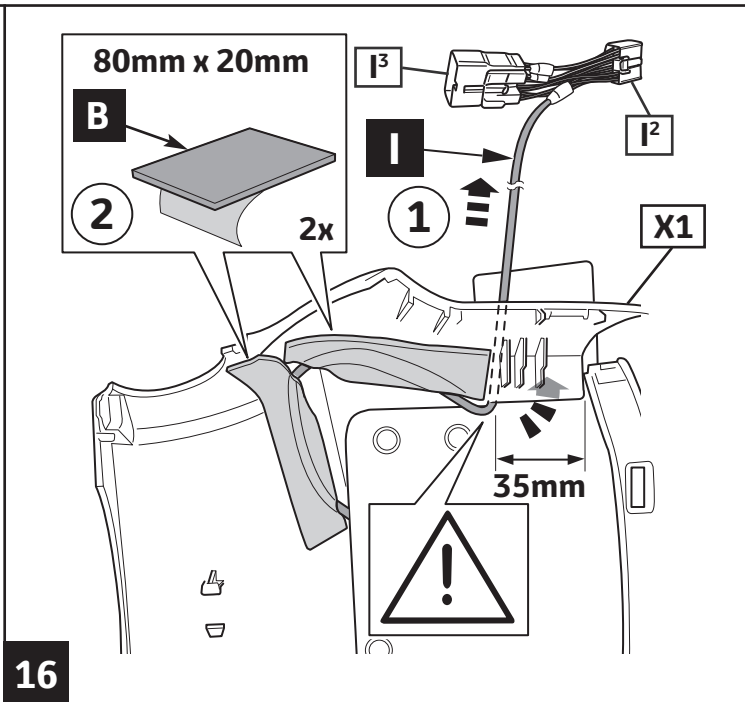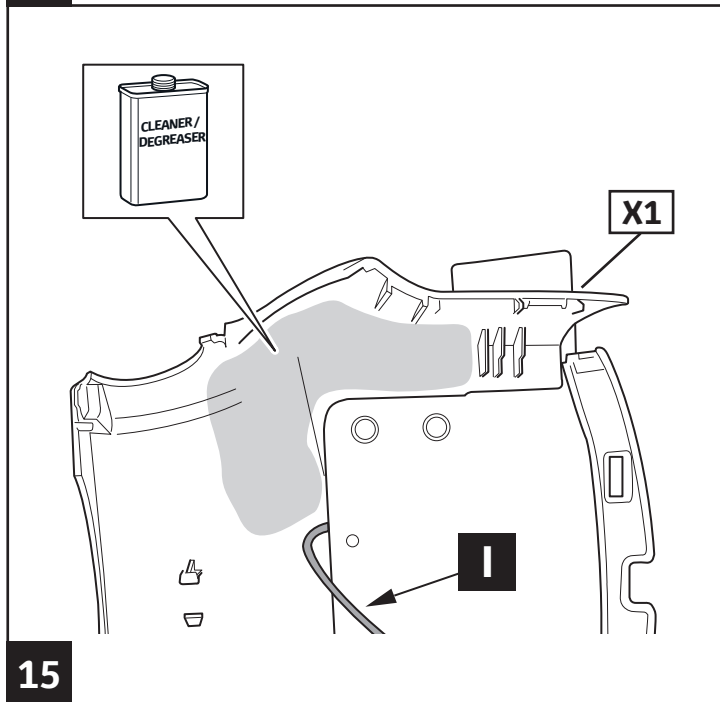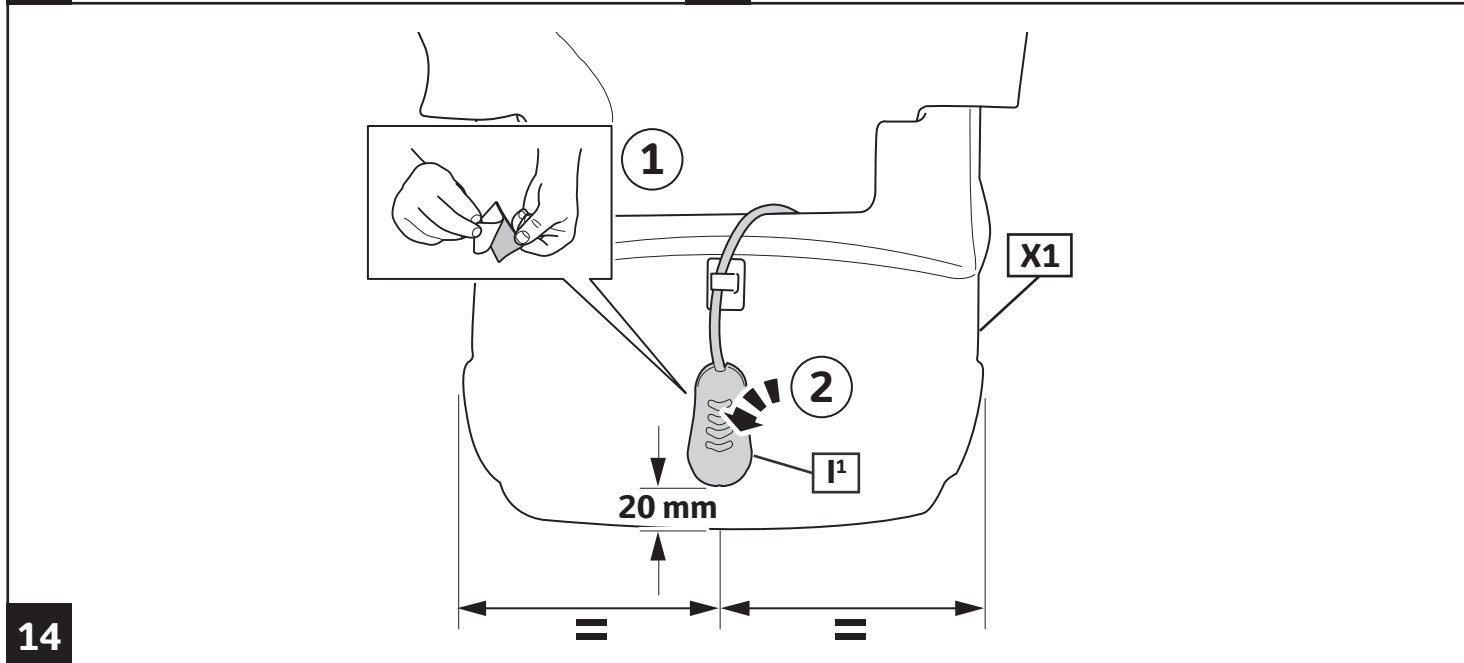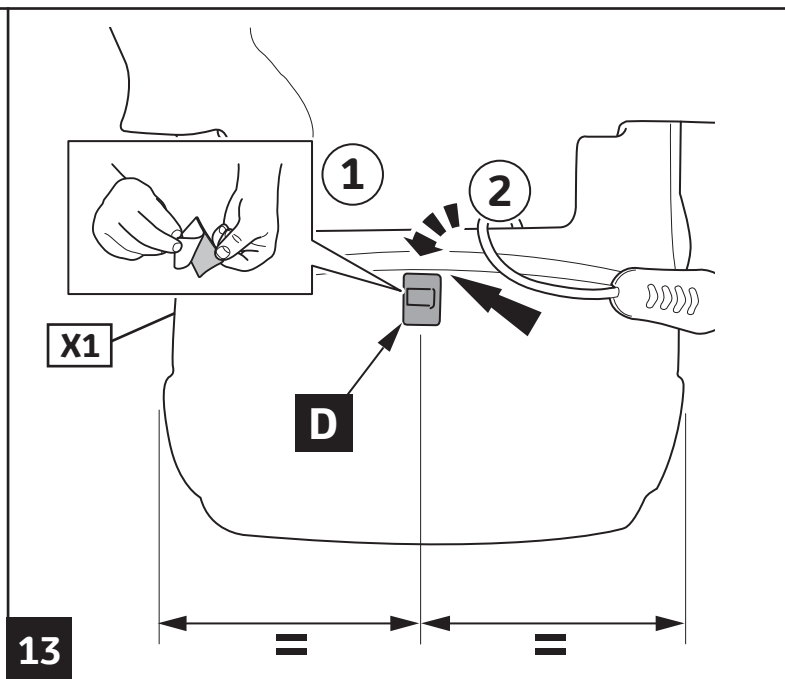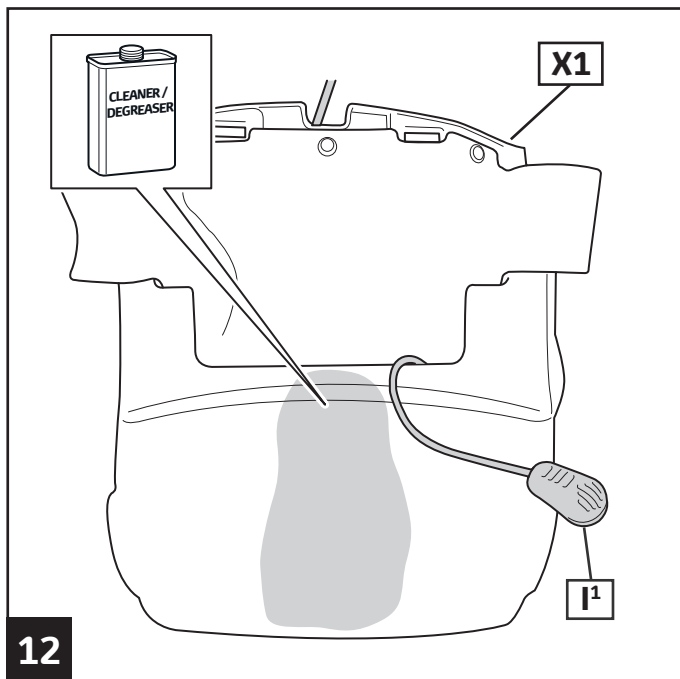

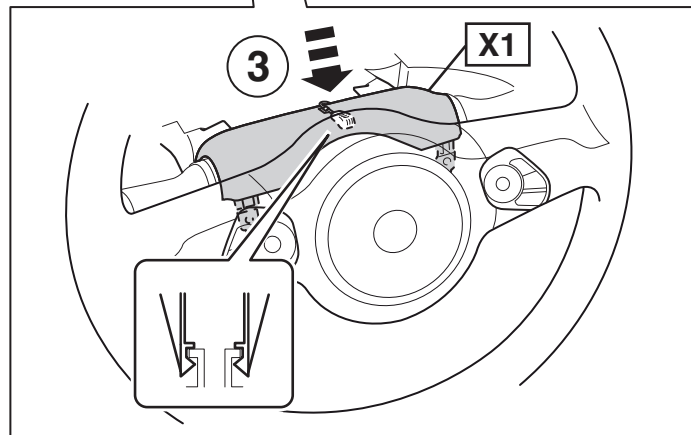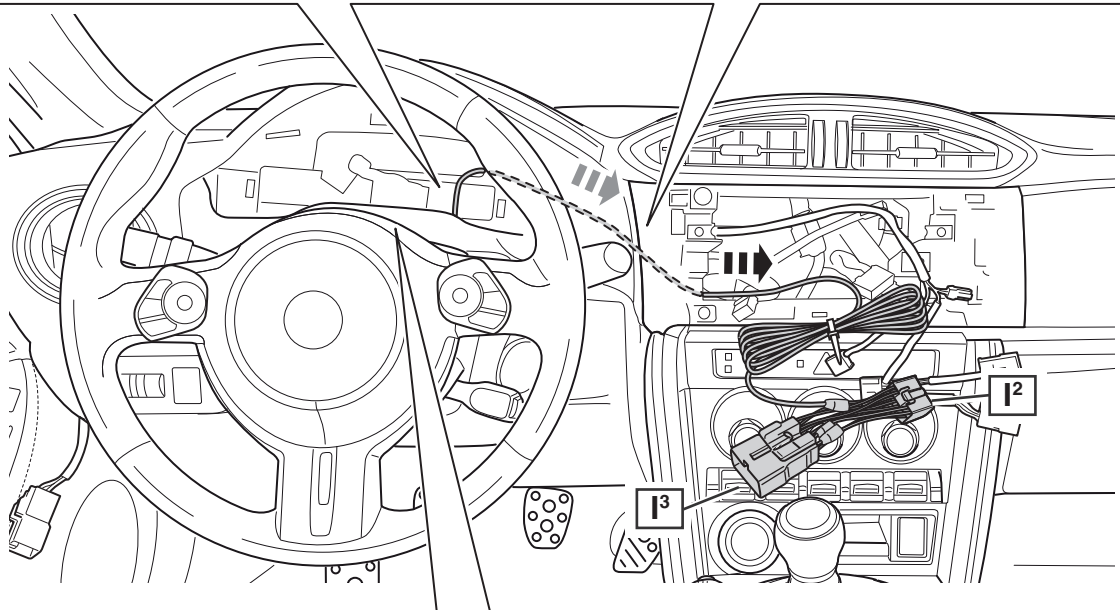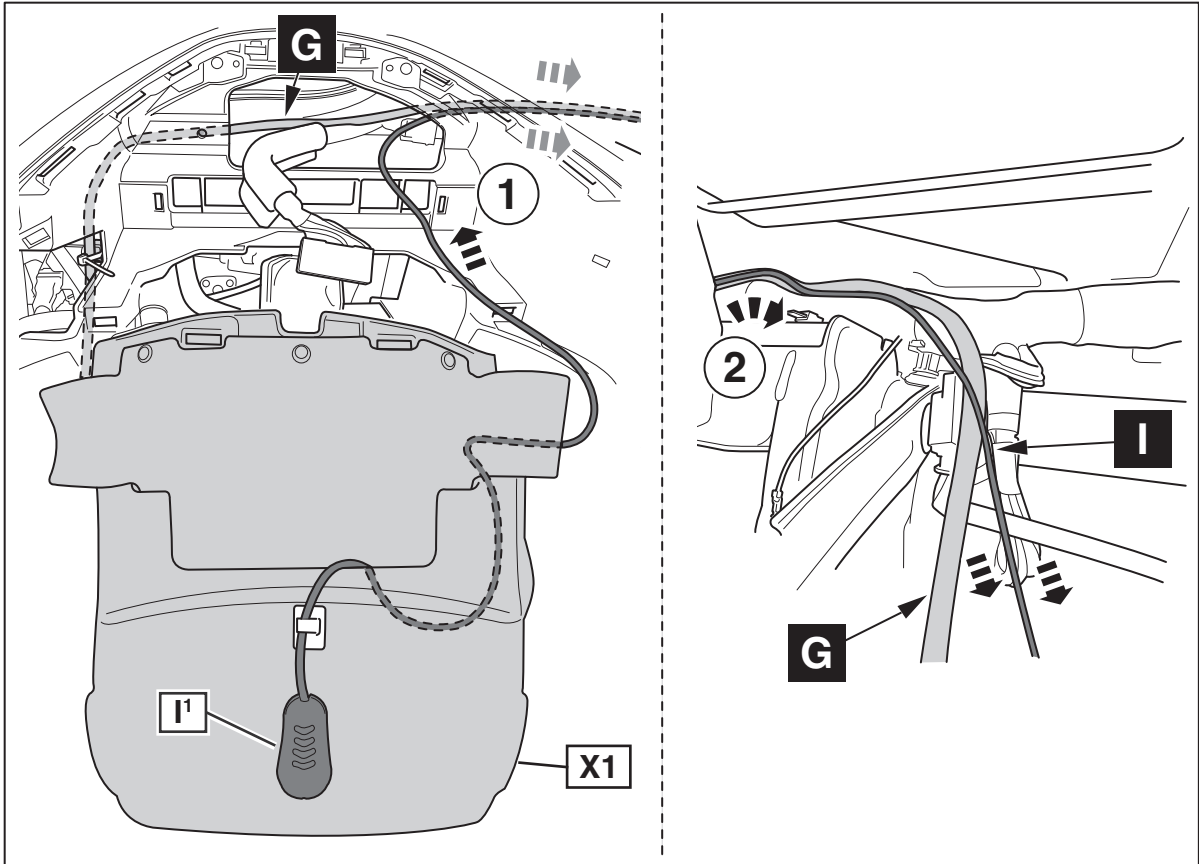


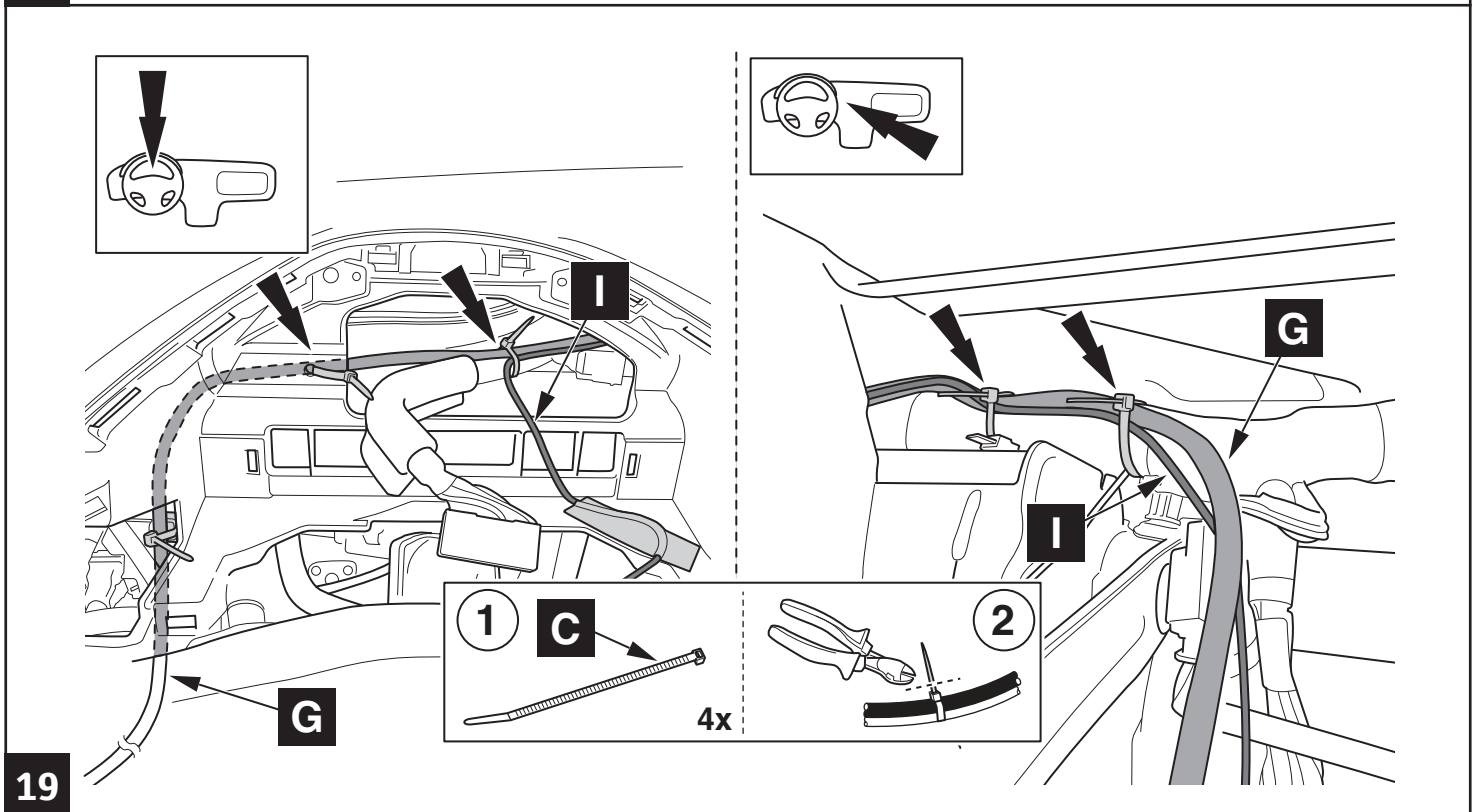
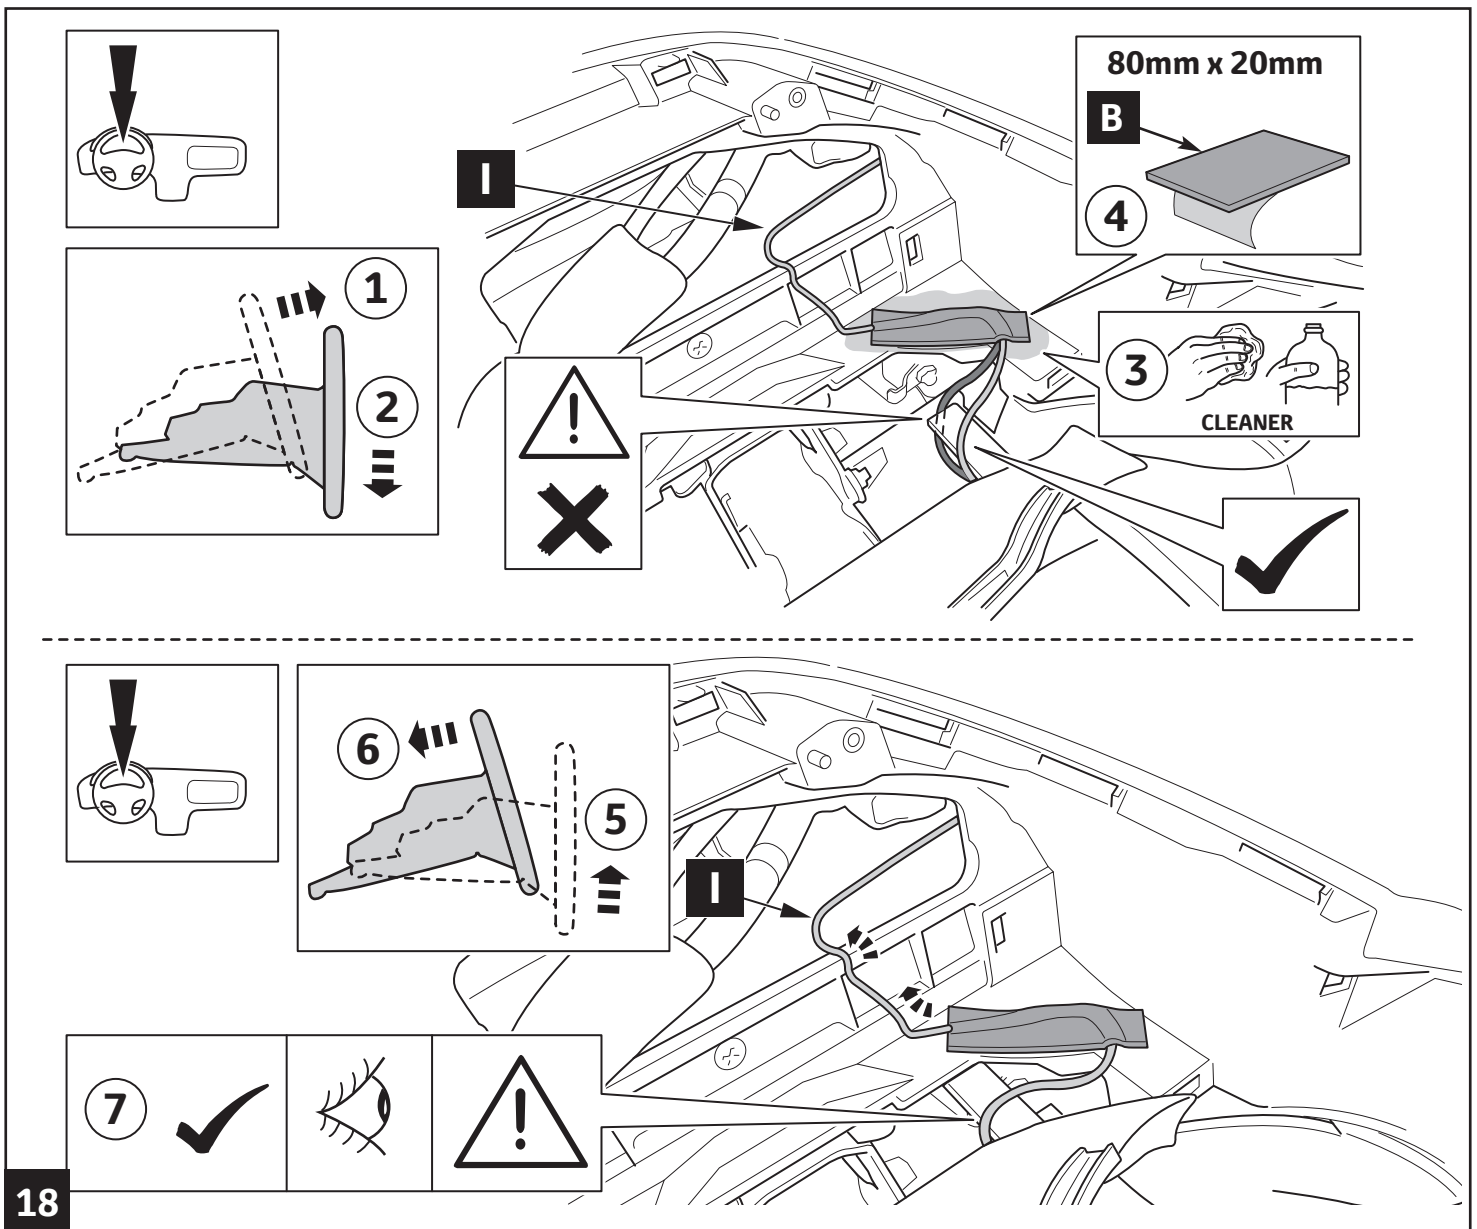


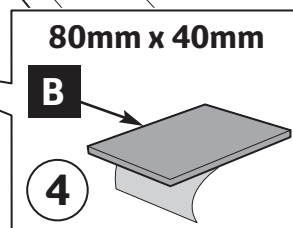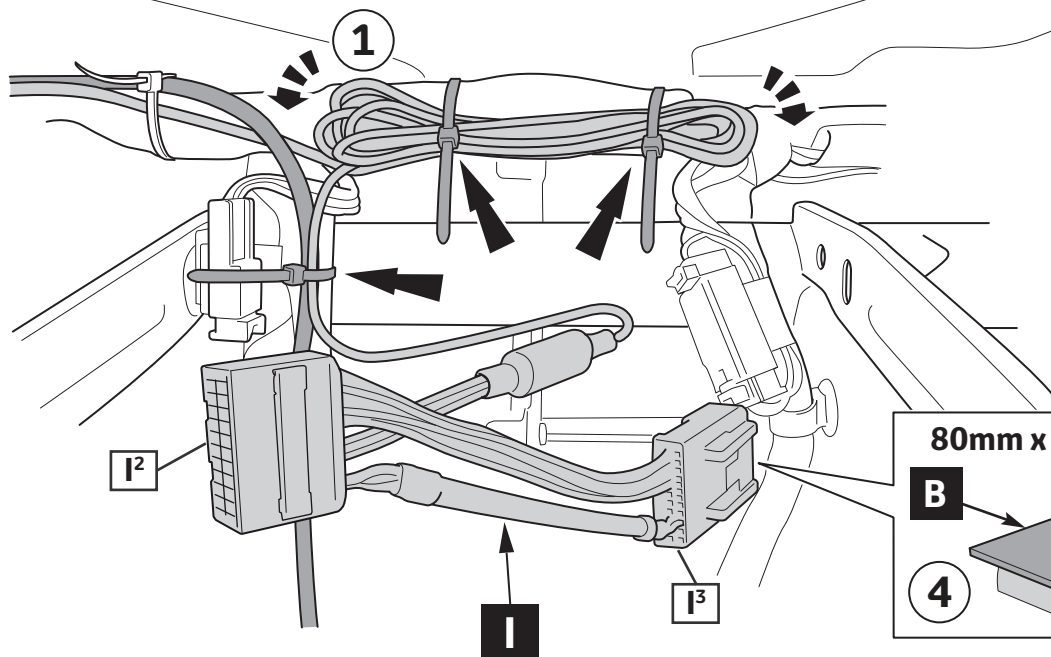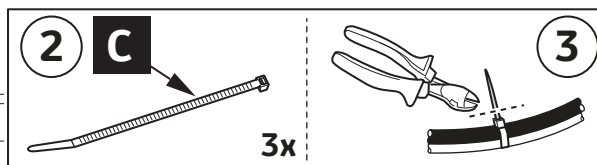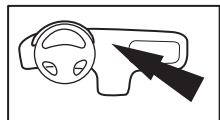



20



With DAB 21 - 31

Without DAB → 32

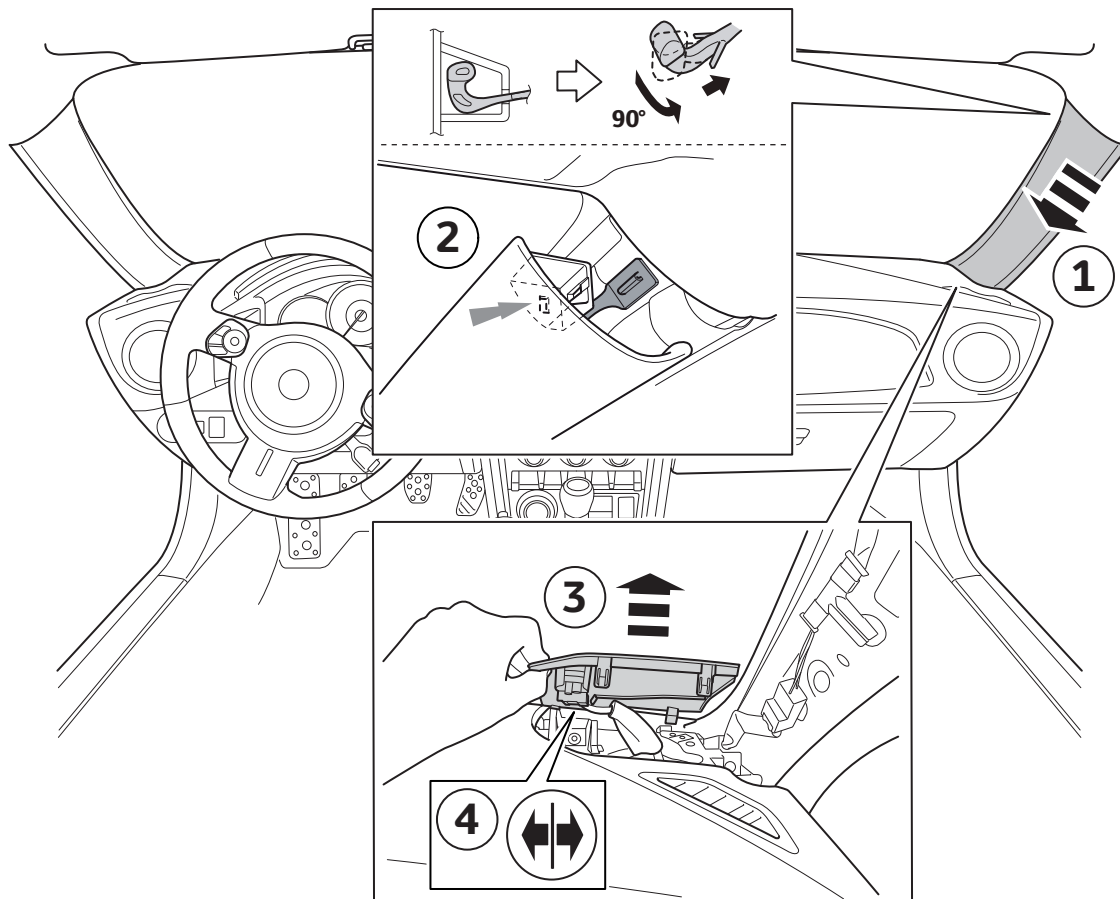
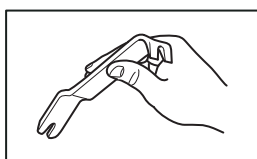
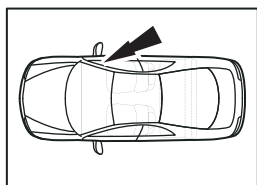


21


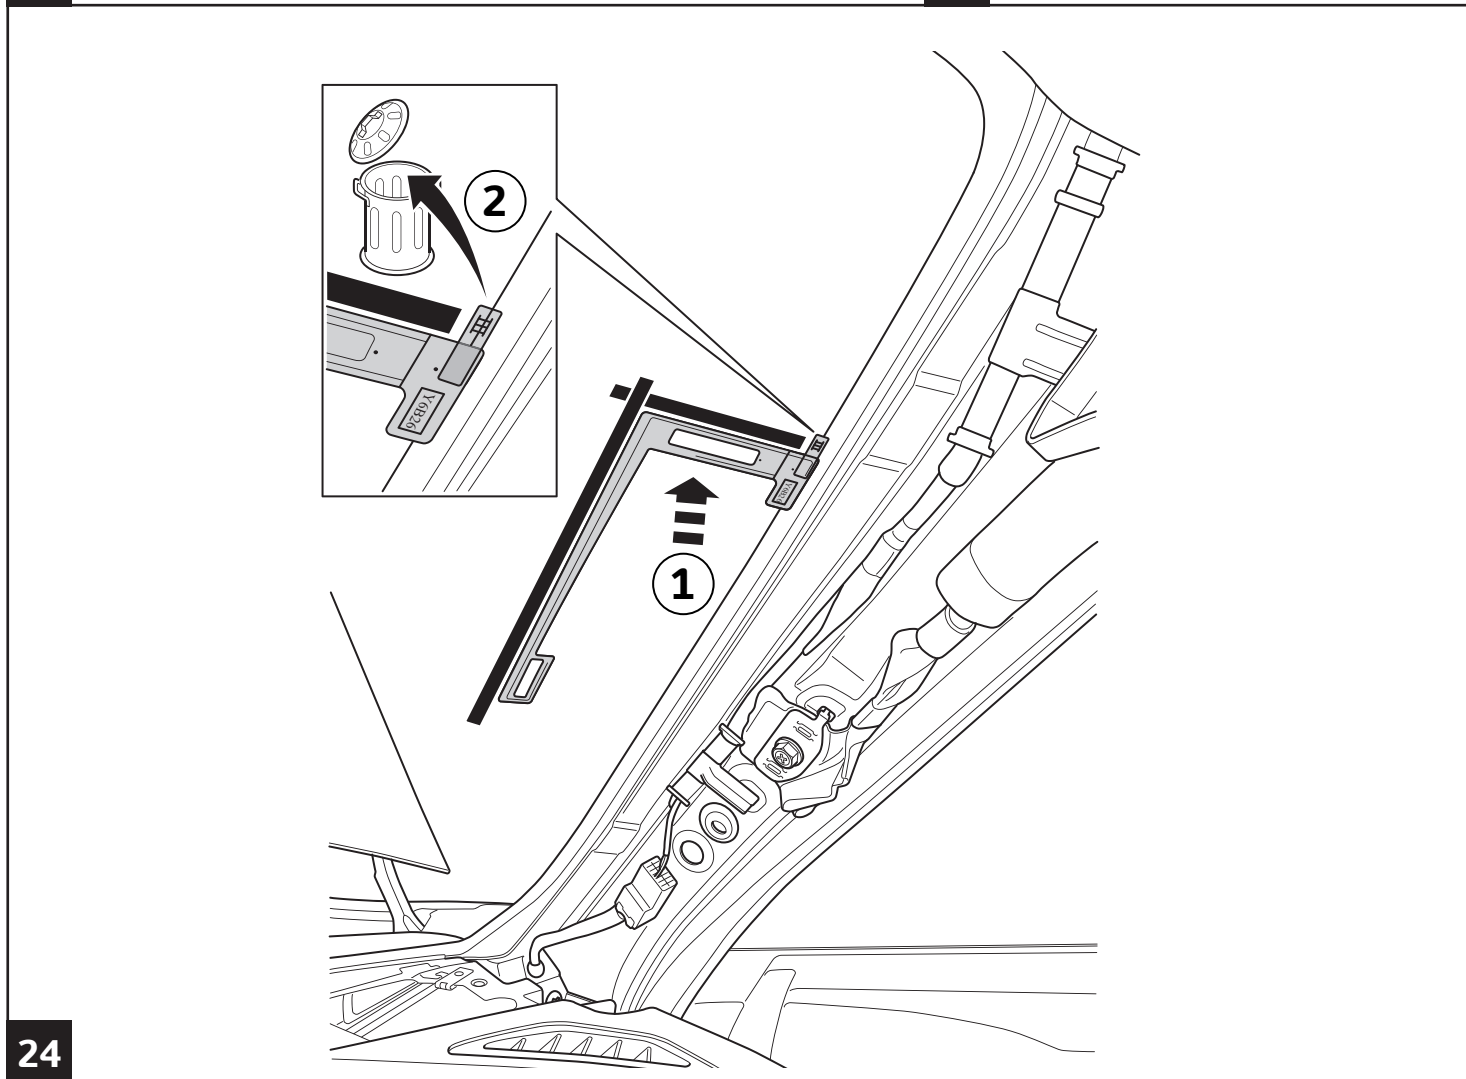
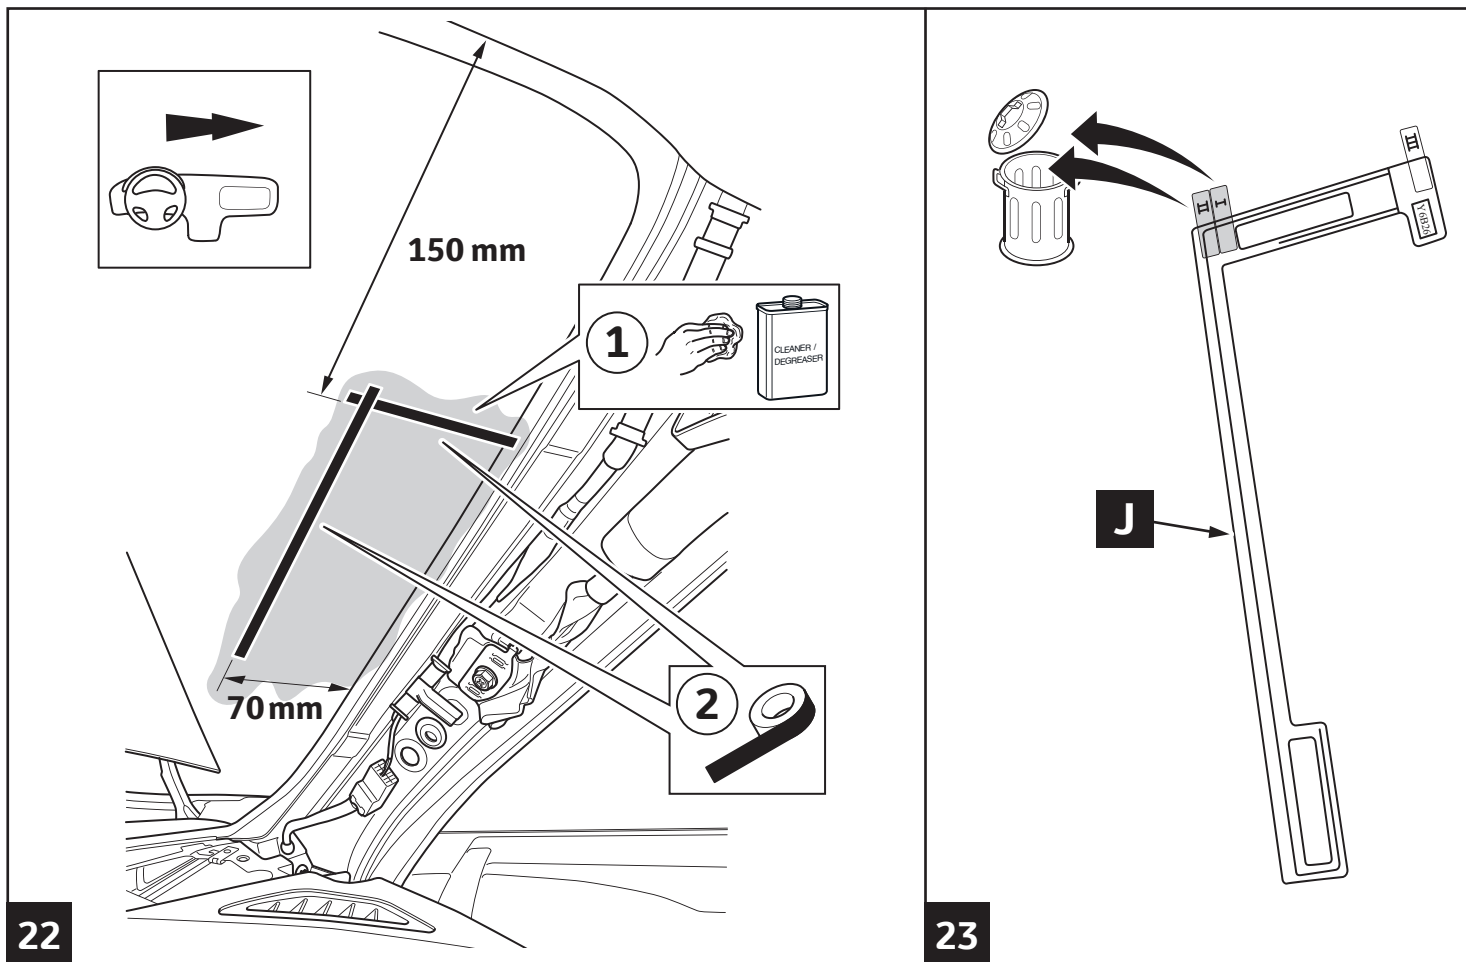


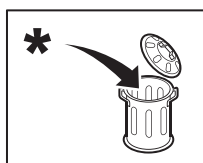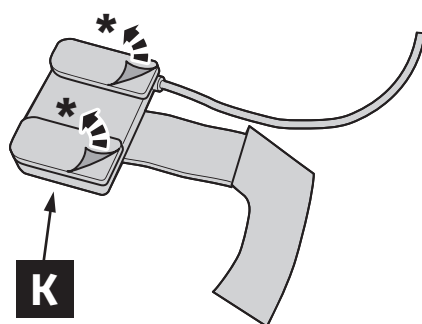



25

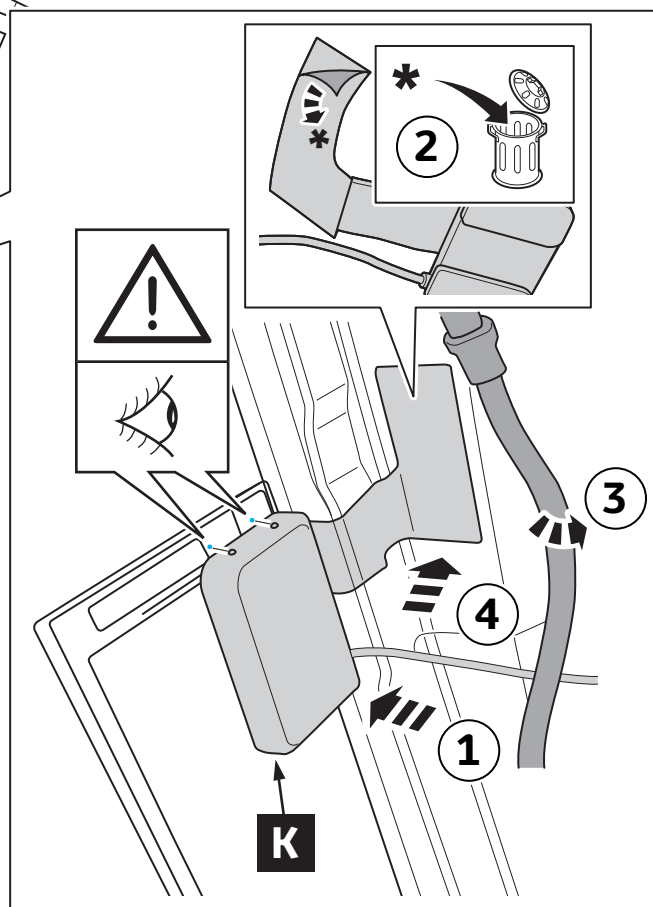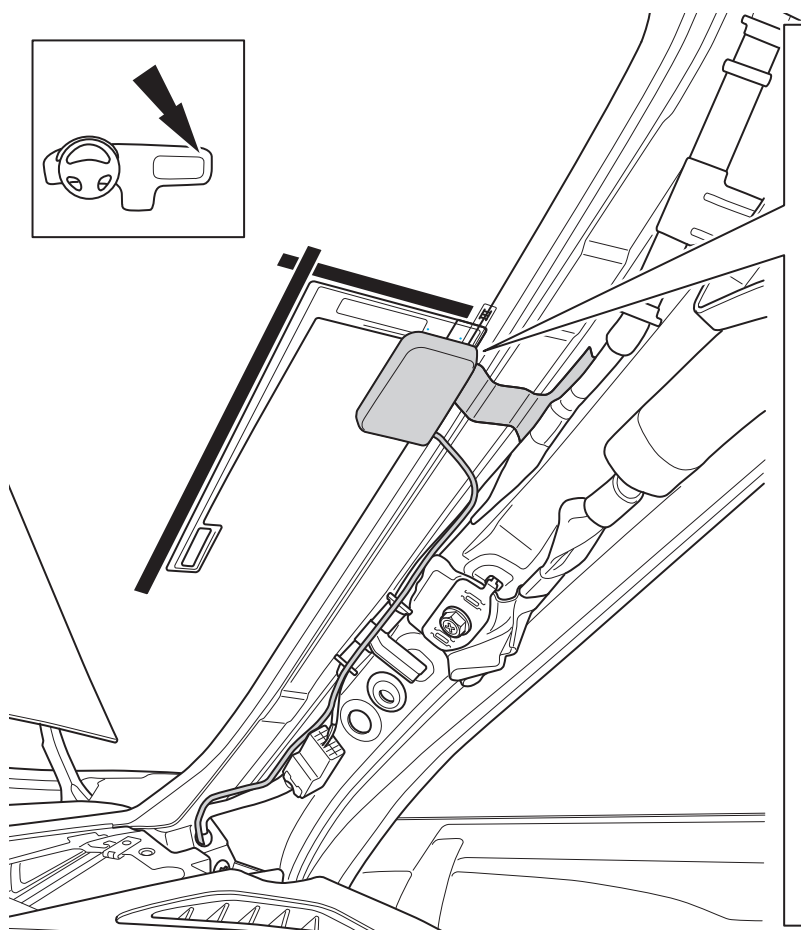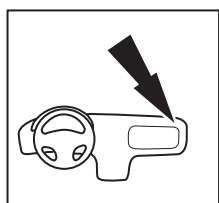



26

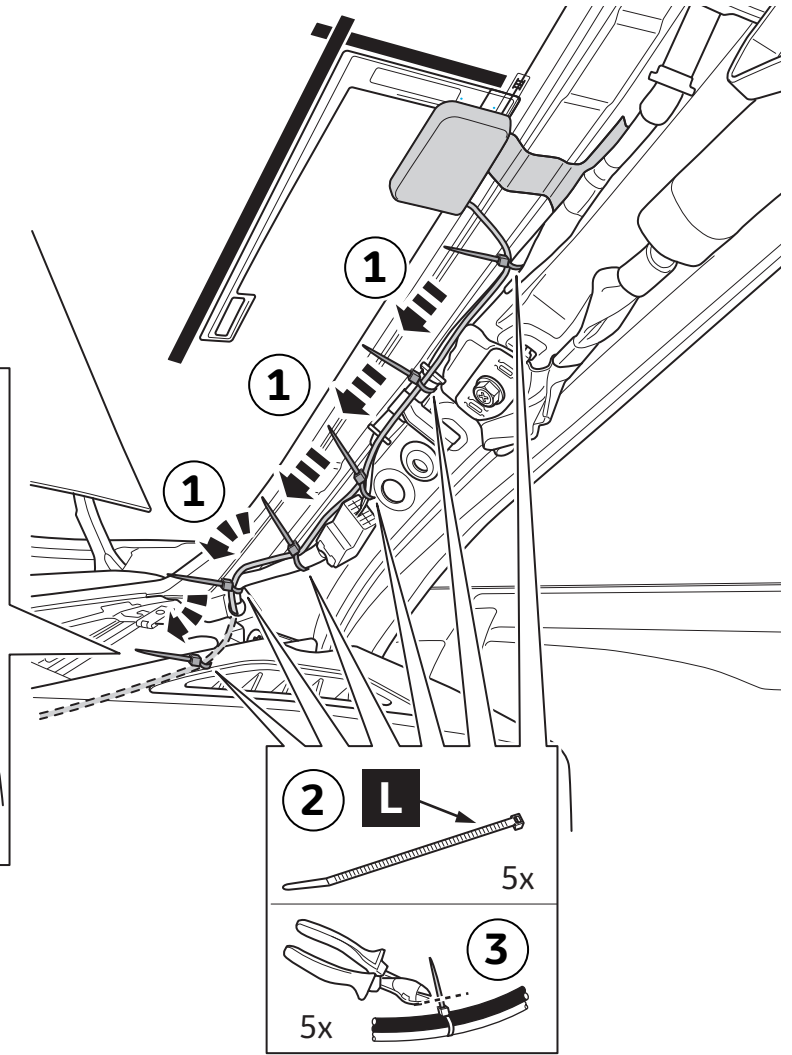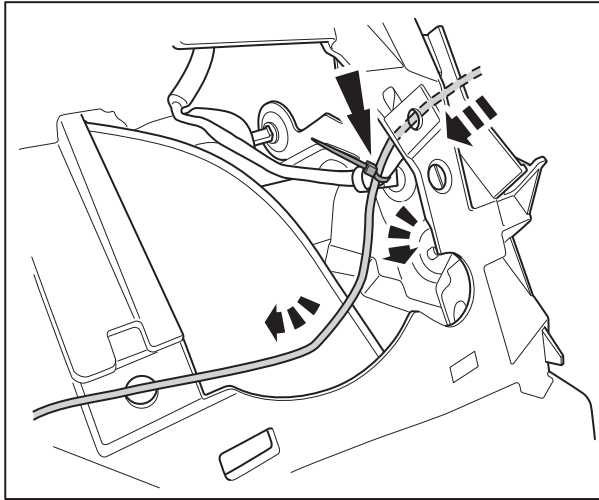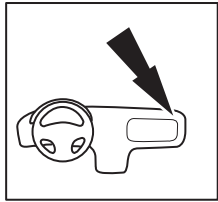



27

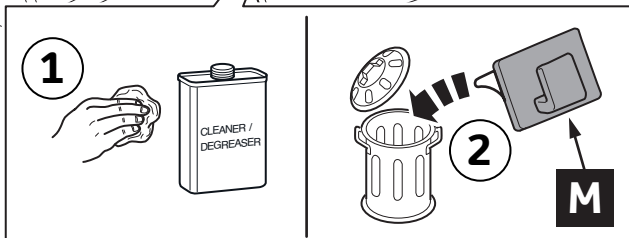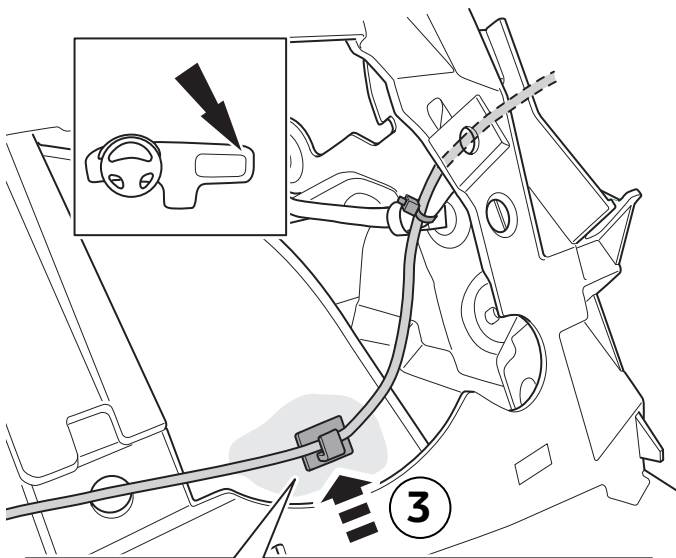




28

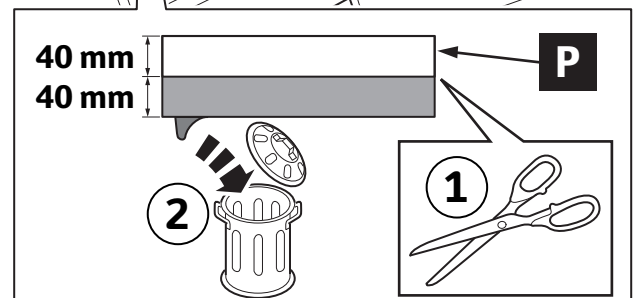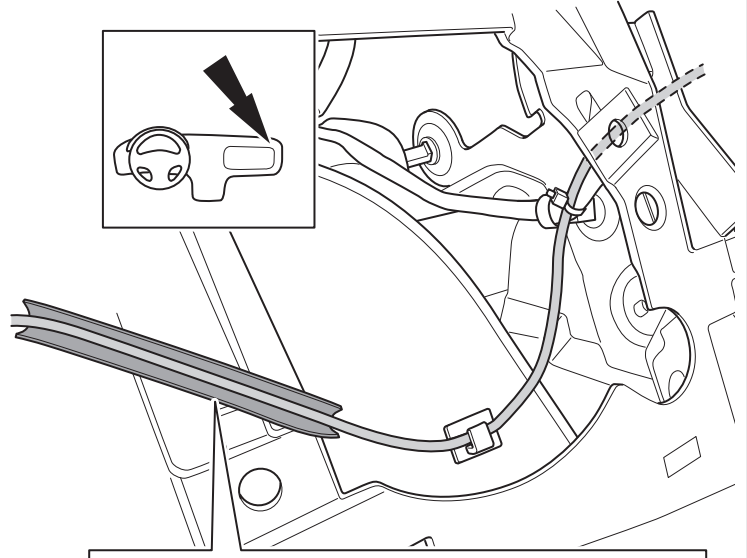


29

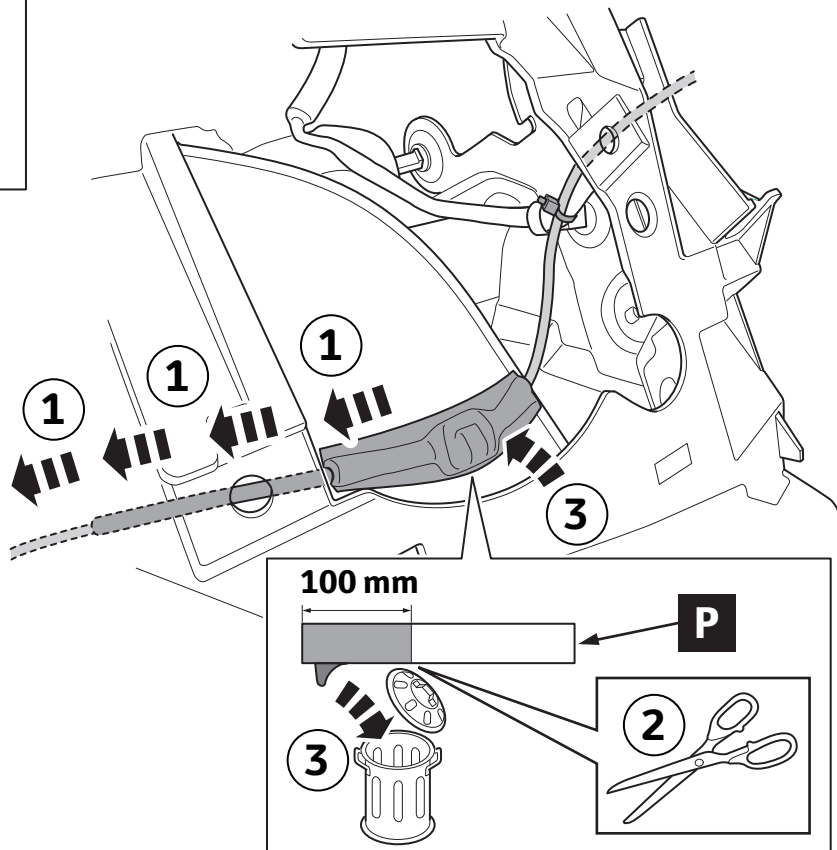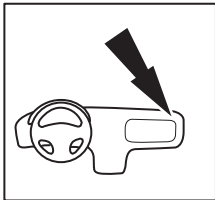


30

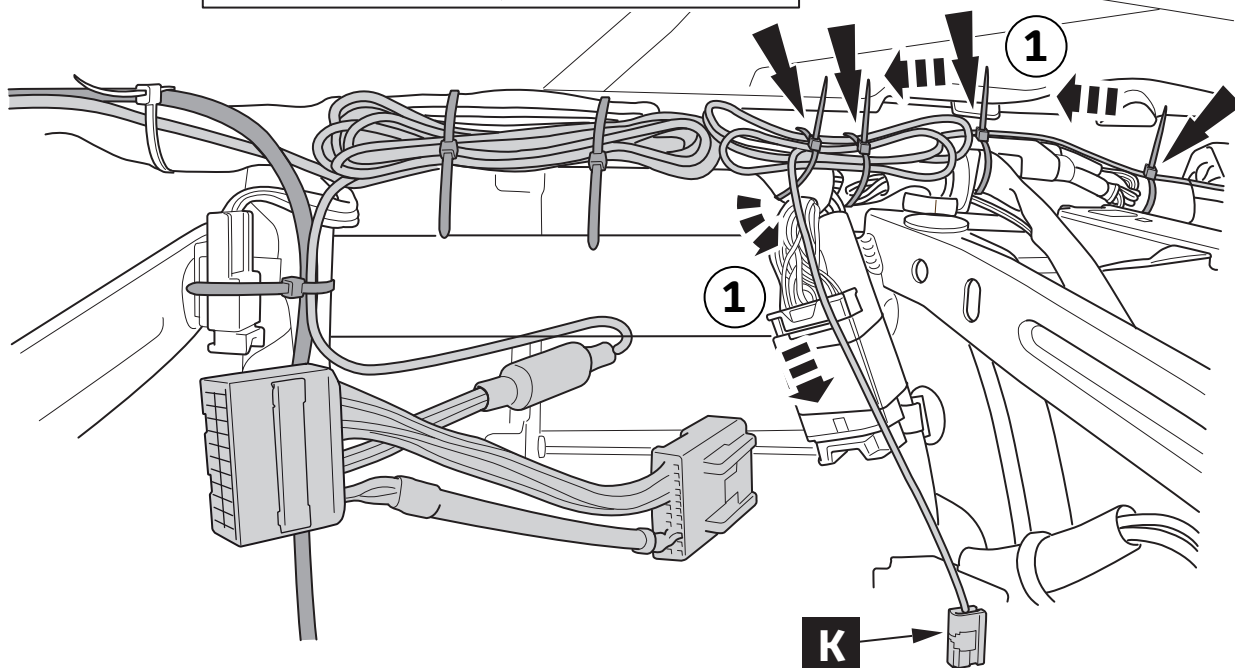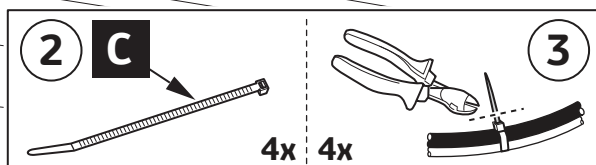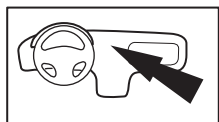


31

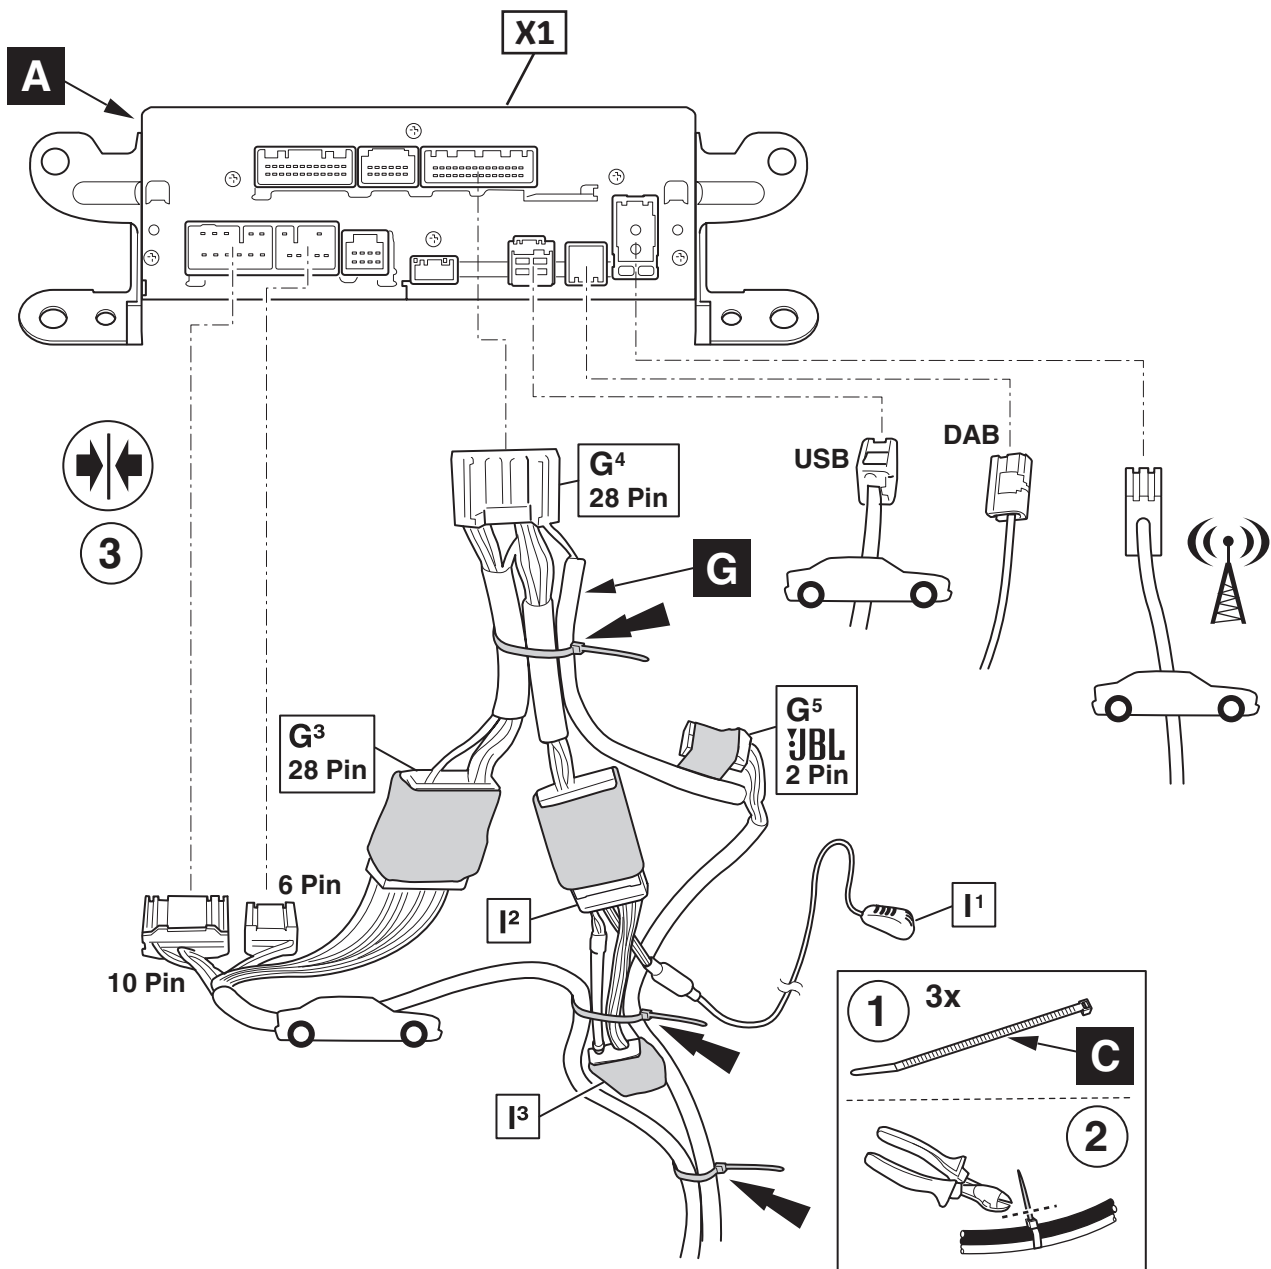

WITH DAB

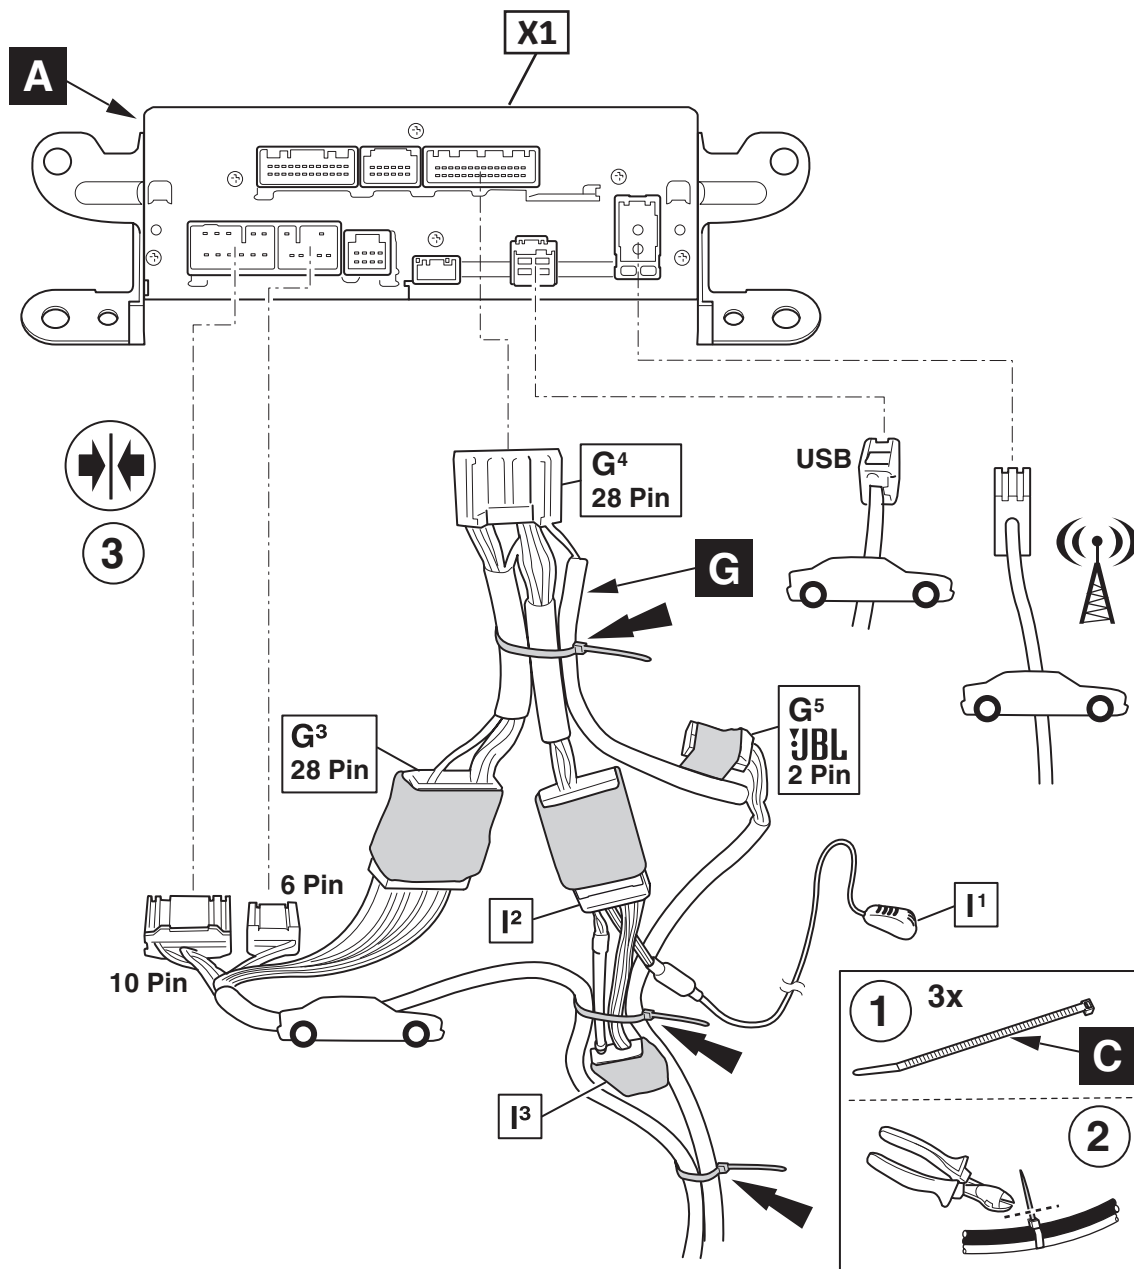

33

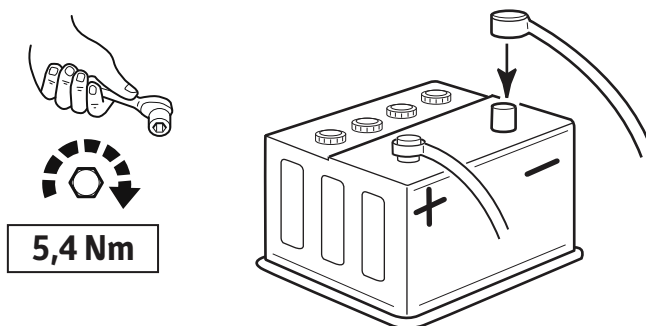

34

CHECK SHEET


















TOYOTA

Model / Year GT86 LHD
2016/08

TAS400

VIN n°

ALWAYS A
BETTER WAY

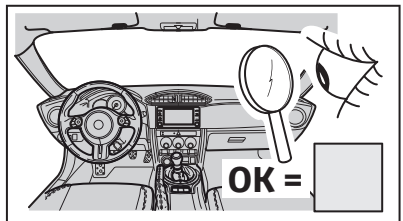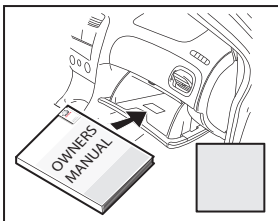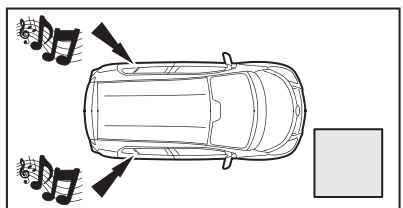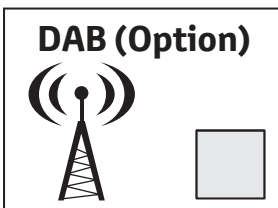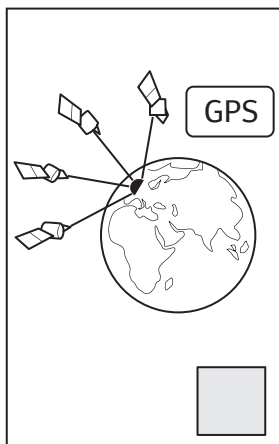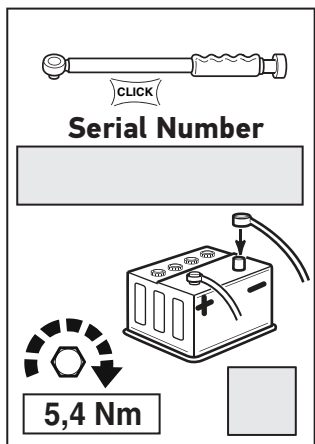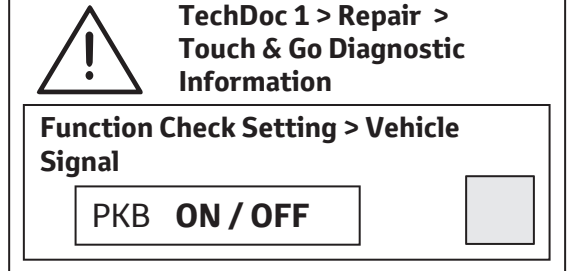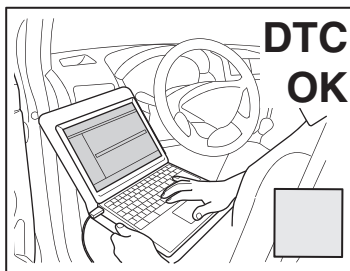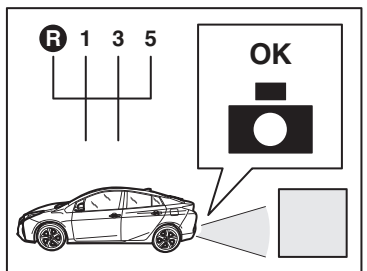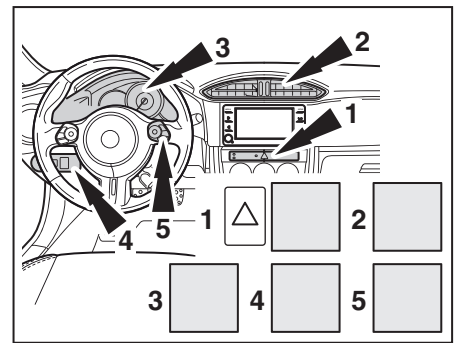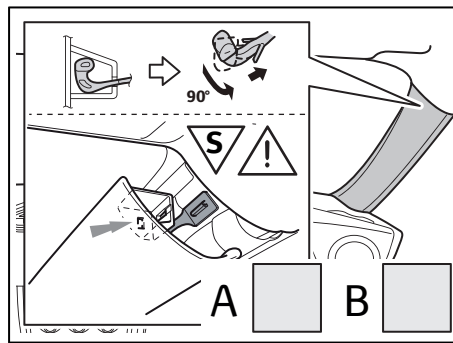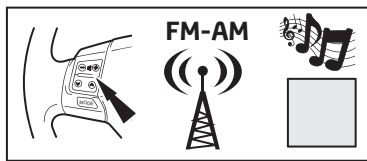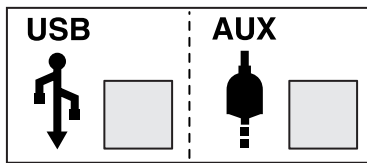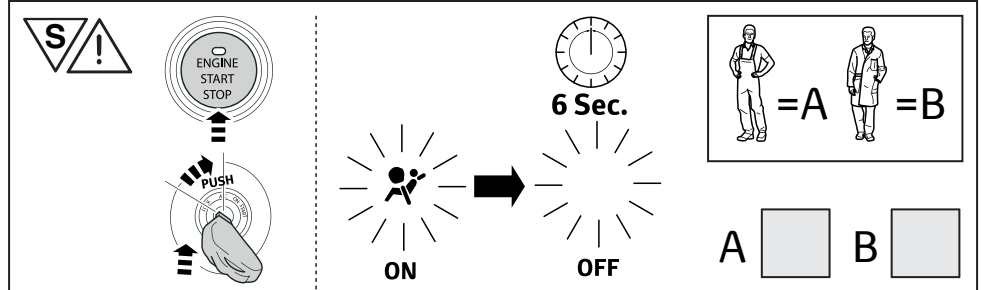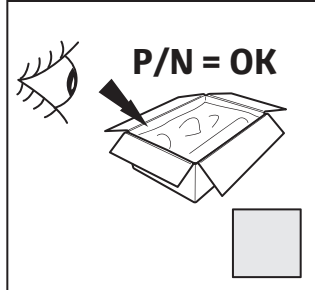

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: