



Prius +

Front & rear set mudflaps

Installation instructions









ALWAYS A
BETTER WAY

Model year:	2014/11
Vehicle code:	ZVW40*-AWXEBW
Part number:	PU060-47115-**

Manual reference number: AIM 003 377 - 2

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	02.10.18	1, 2, 8		X		
1	02.10.18	3 - 7	1 - 14	X		
Rev. No.	Date	Page	Step	Remarks		
	21.01.19	3	-	Quantity of F changed		
	21.01.19	3	-	Clip H added		
	21.01.19	3	-	Marking tool added		
	21.01.19	5	3	Clip F changed to H		
	21.01.19	6	8	Clip removal added		
	21.01.19	8	13	Marking added & drilling changed		

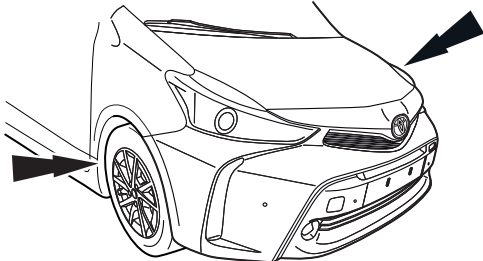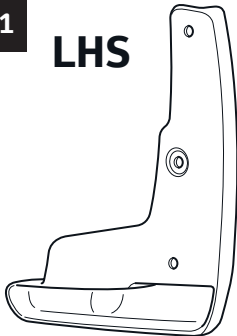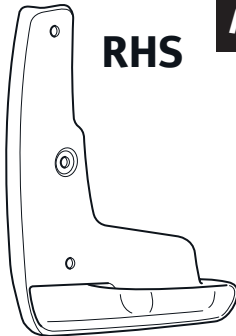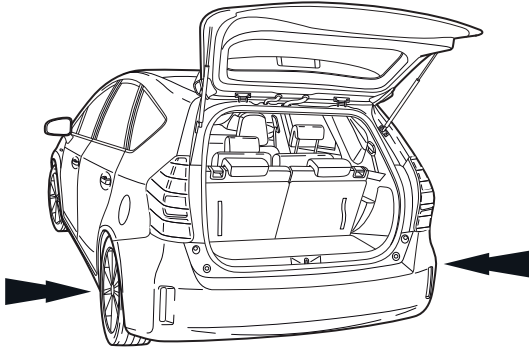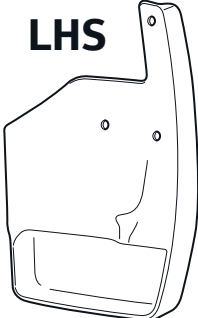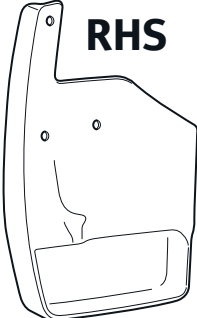 A	A1 LHS  1x	A2 RHS  1x			
 B	B1 LHS  1x	B2 RHS  1x			
 15 mm C 4x	 D 4x	 E 4x	2  F 2x	 20 mm G 4x	2  H 2x





max. 10 mm Ø 6 mm Ø 8 mm			10 mm	AIM 003 516-*	2
--	--	--	--	--	---





Material Safety Data Sheet

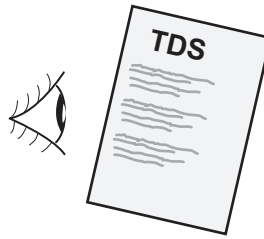

Technical Data Sheet

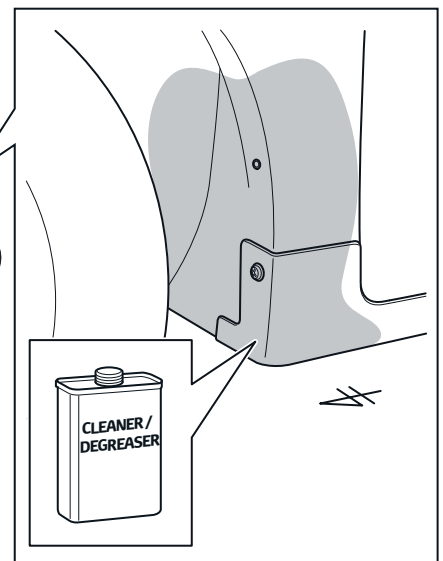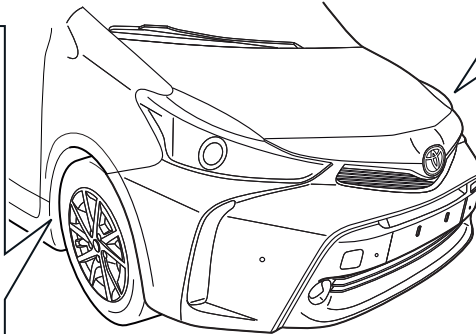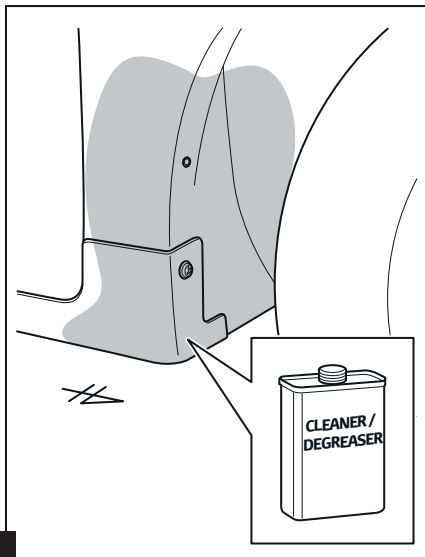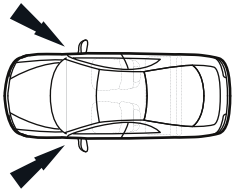


1

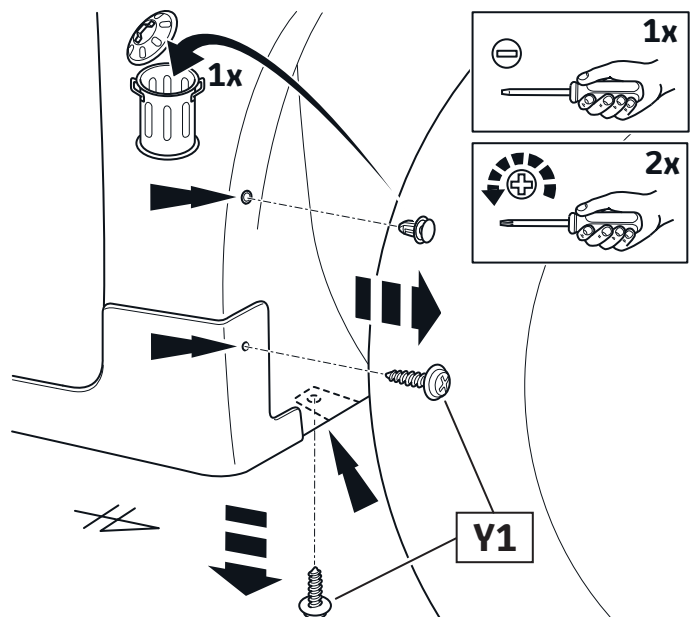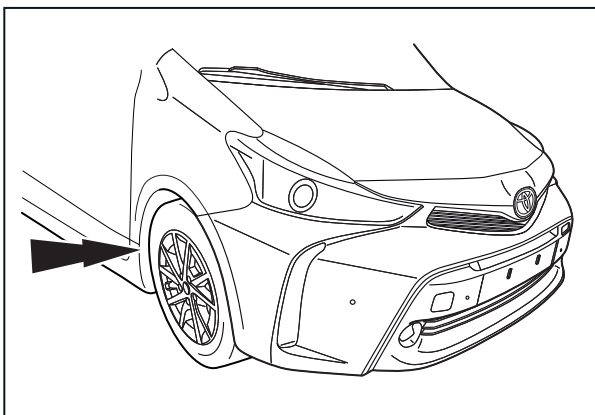


2



2

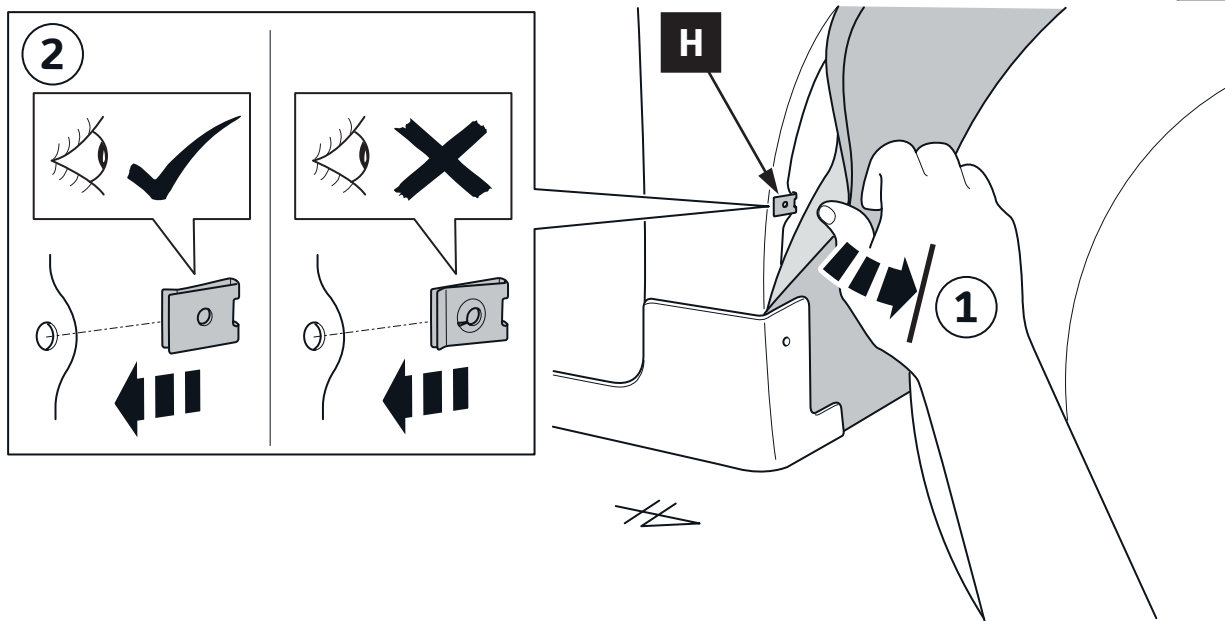





3

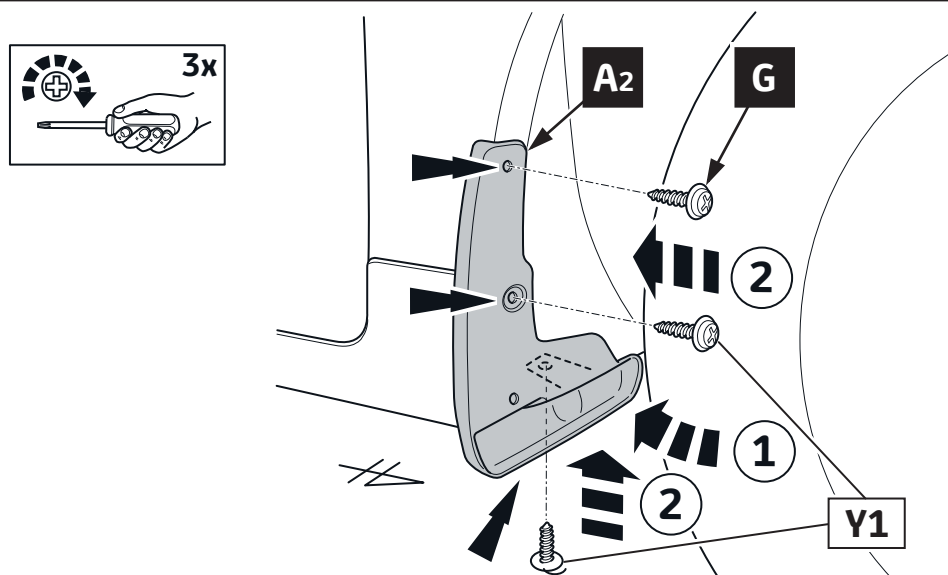


4

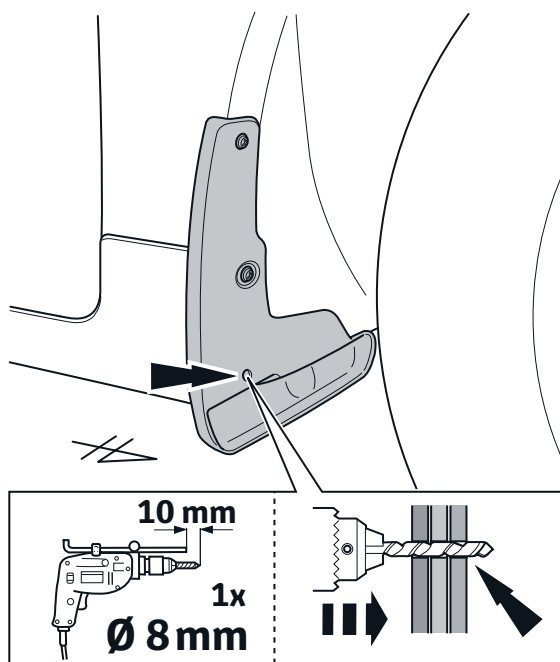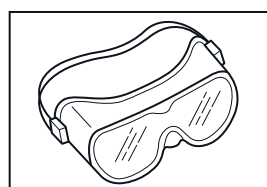


5

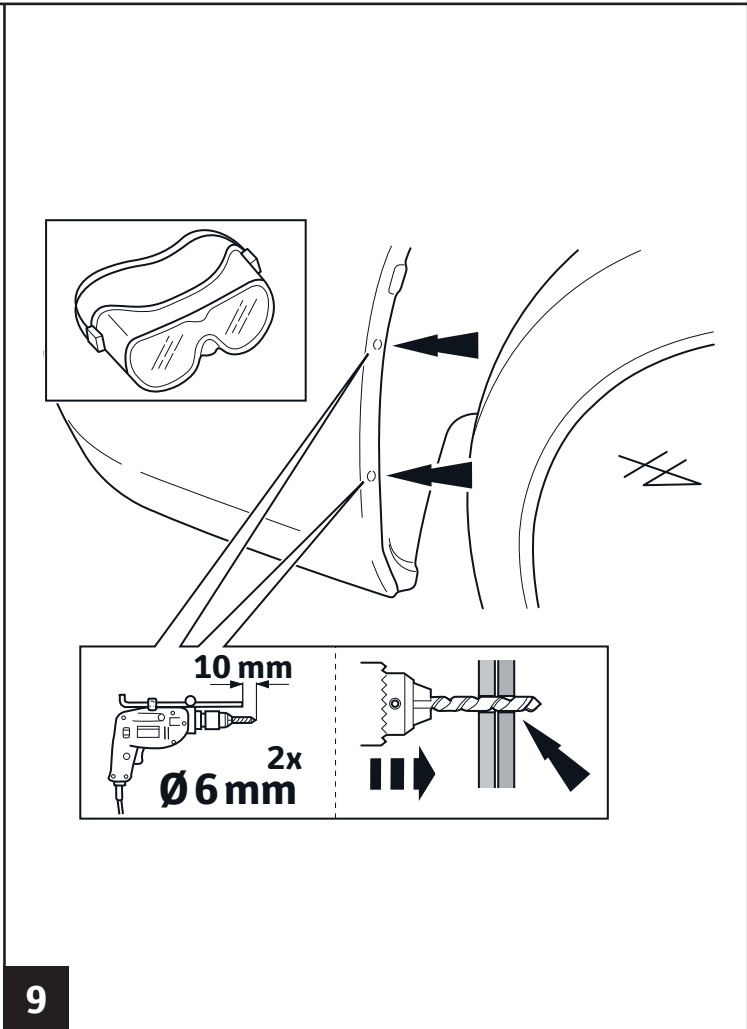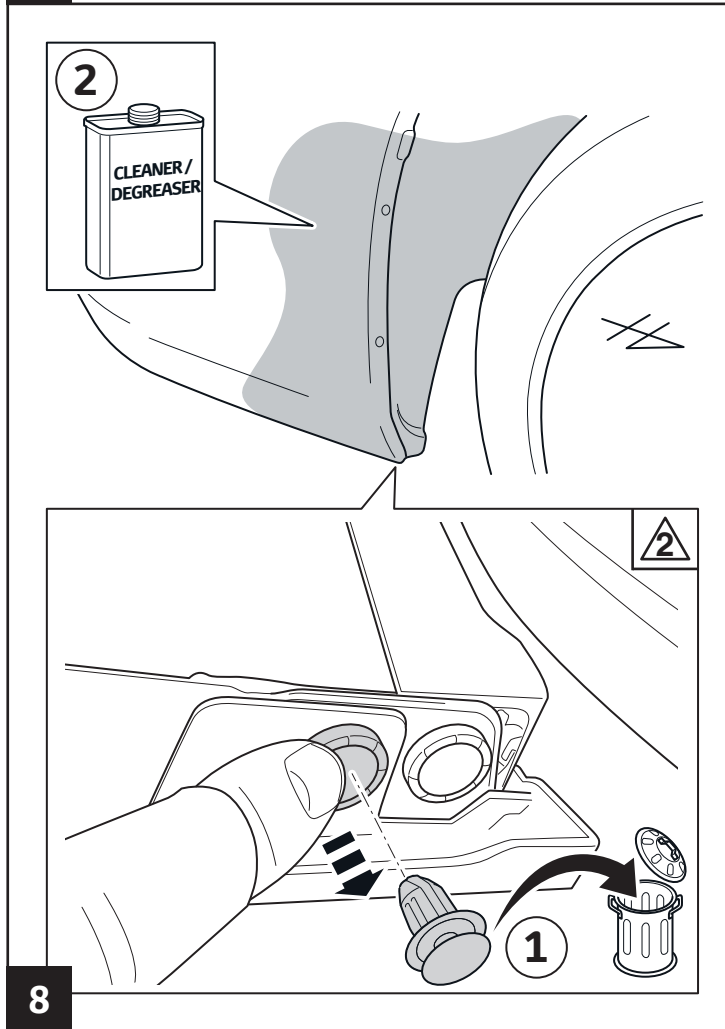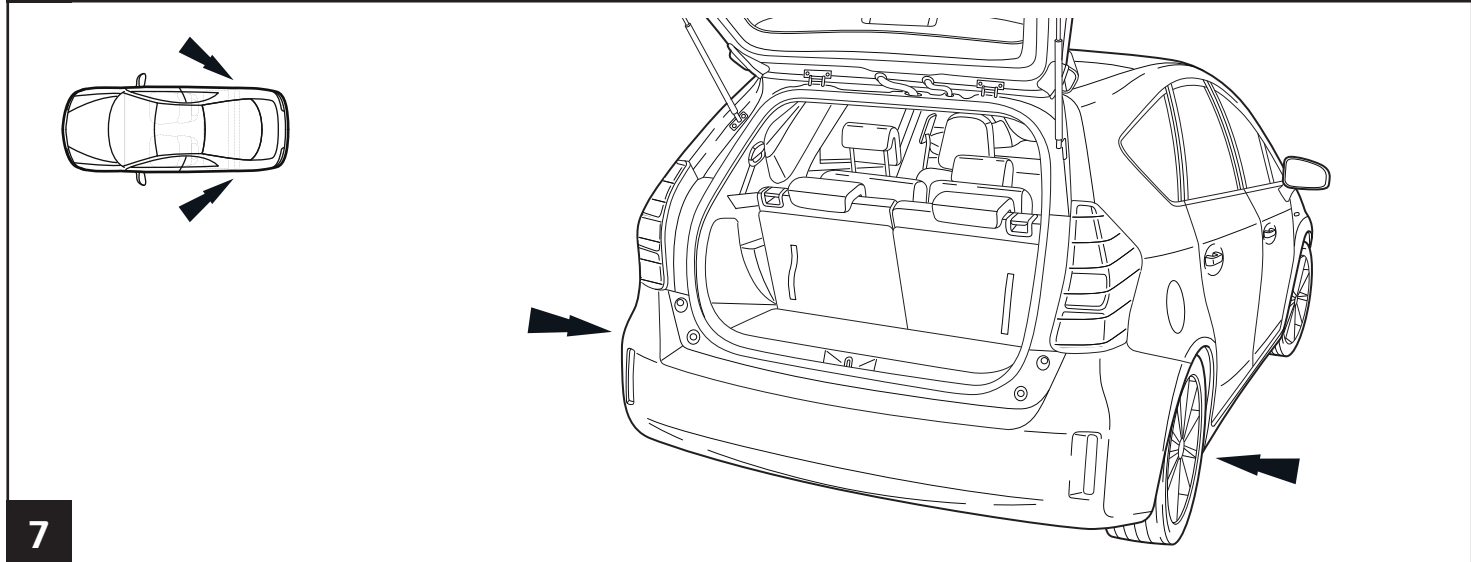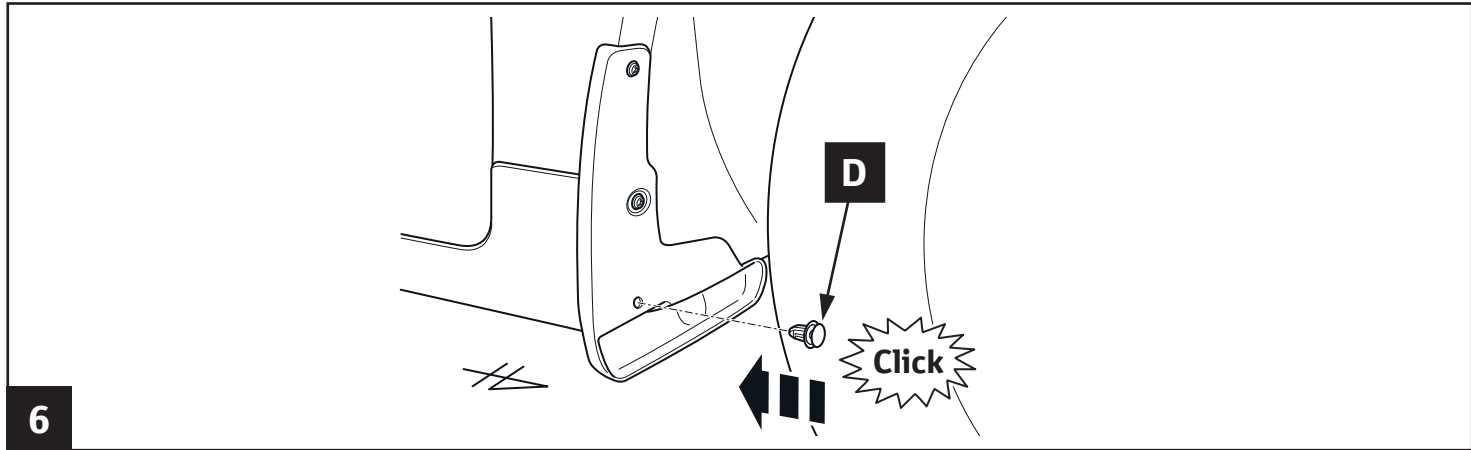


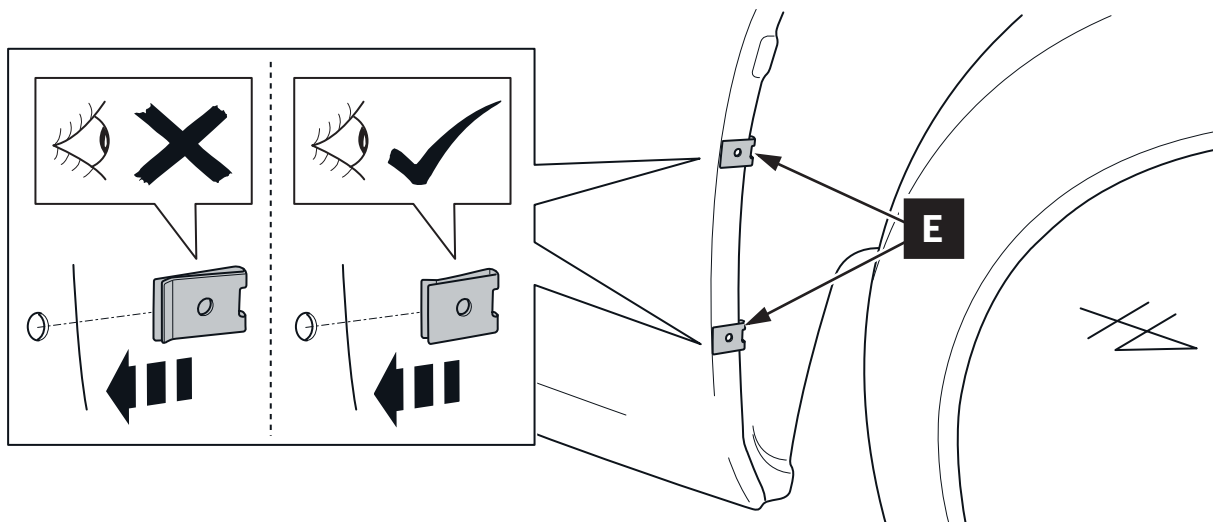

10




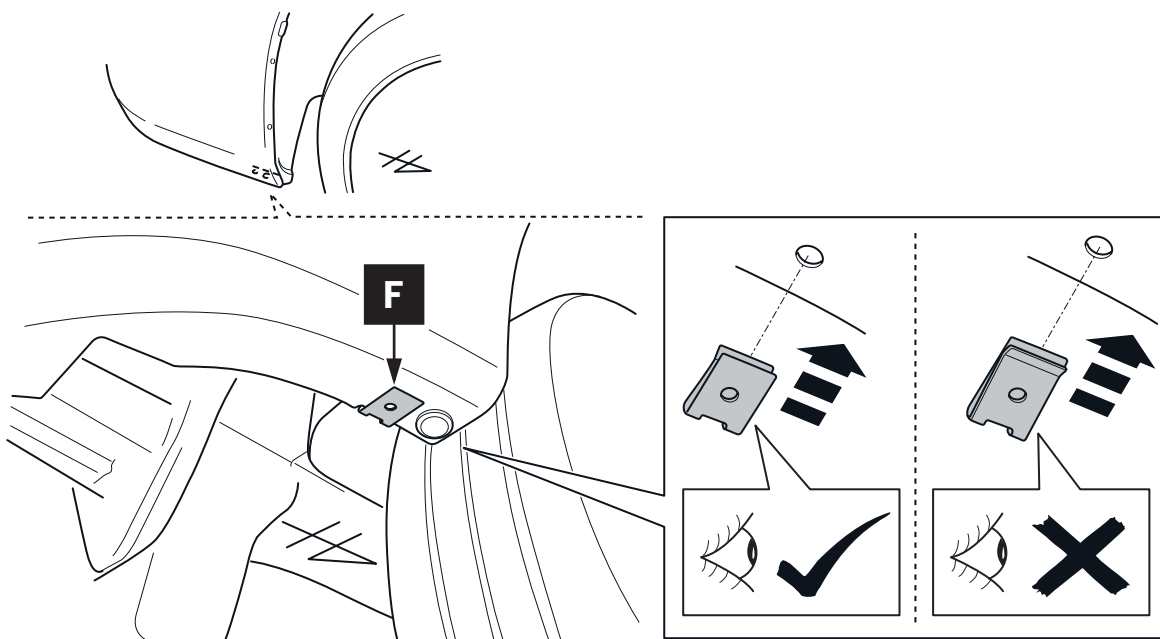


11

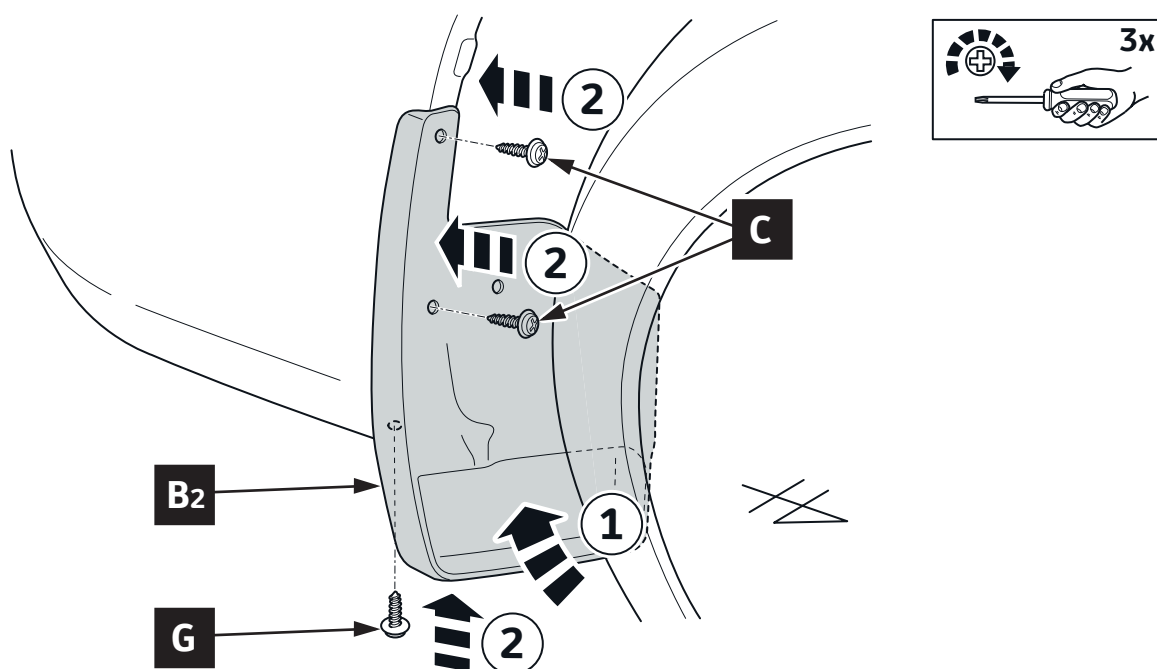


12

2

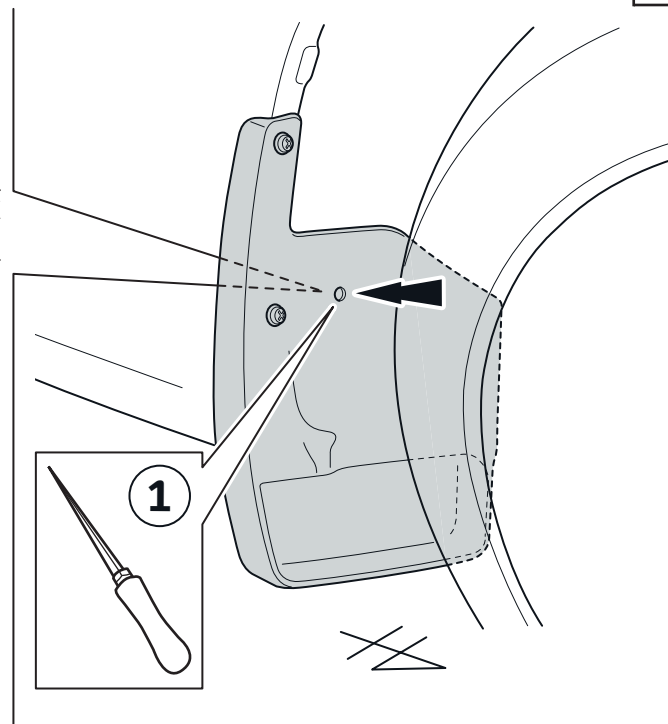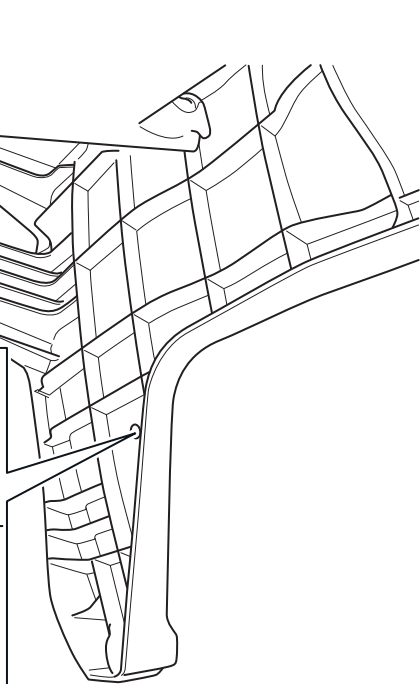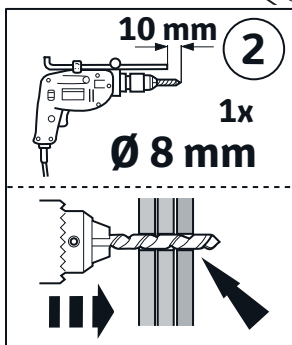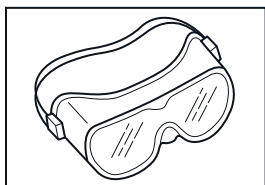

13

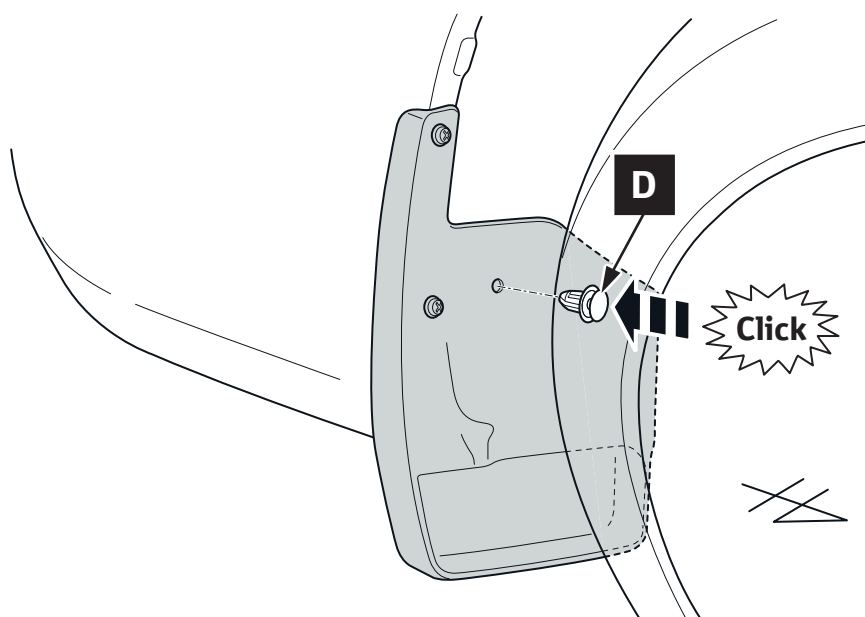

14

INFO



LHS

=



RHS






TOYOTA

Model / Year **Prius + 2014/11** **Front & rear set mudlaps**

VIN n°

ALWAYS A
BETTER WAY

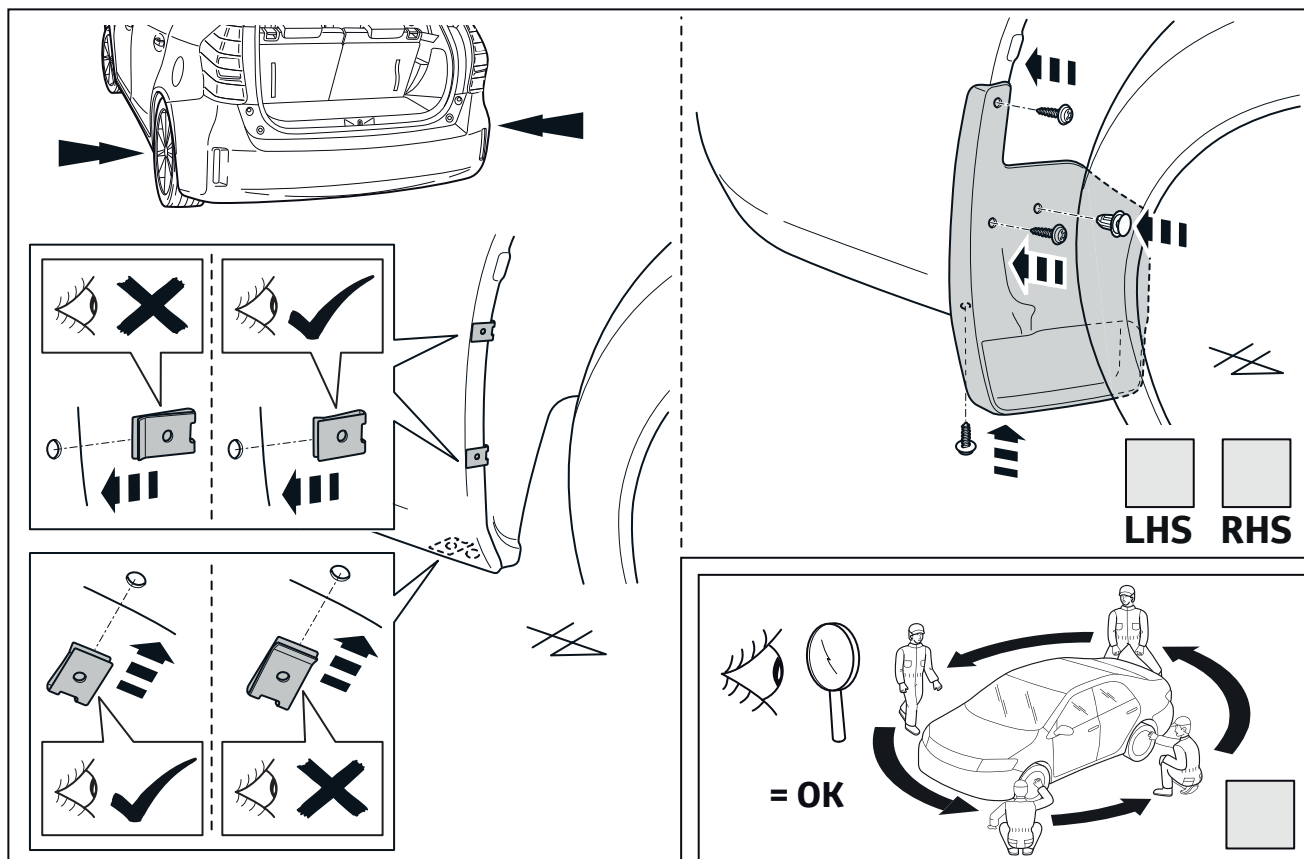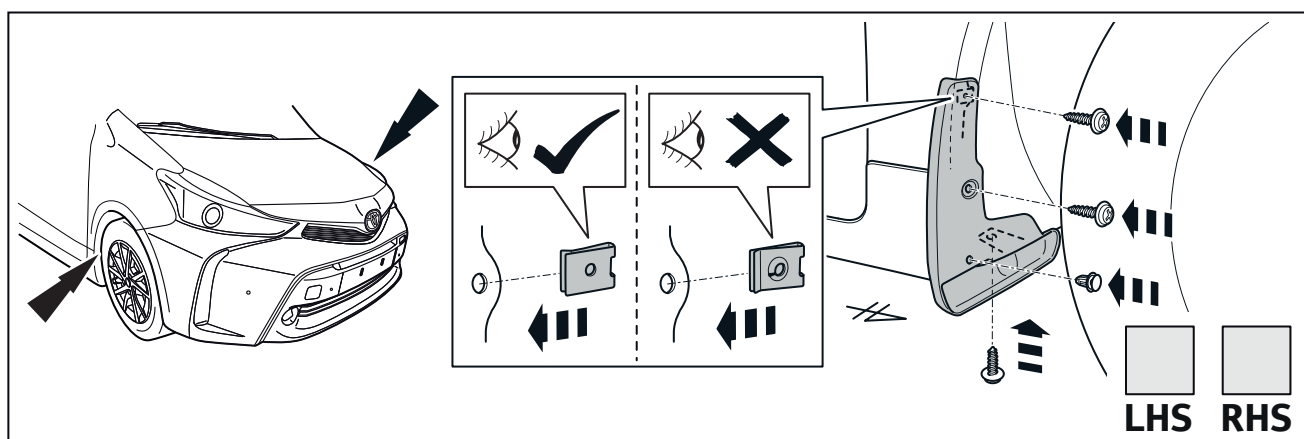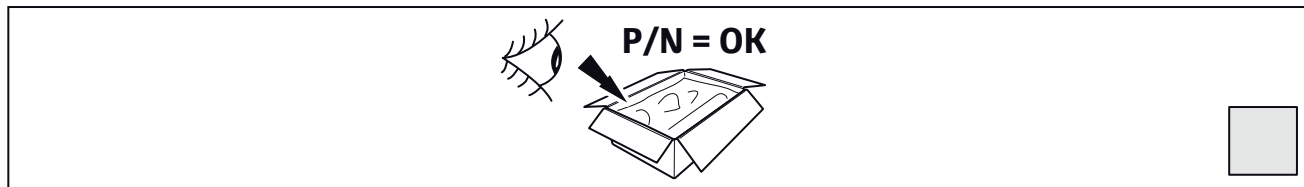

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: