



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Rear skirt

Installation instructions

Model year: 2016/10, 2019/10

Vehicle code: NG****-*H***W
ZY****-*H***W
NGX*0*-AH***X
ZYX*0*-AH***X


Part number: PW158-10000

Manual reference number: AIM 003 849 - 2

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	02.05.18	1		X		
Rev. No.	Date	Page	Step	Remarks		
	29.08.19	1, 11	C/S	Model year & Vehicle codes added		
	29.08.19	2, 4, 11	C/S	Updated		

PW158-10000

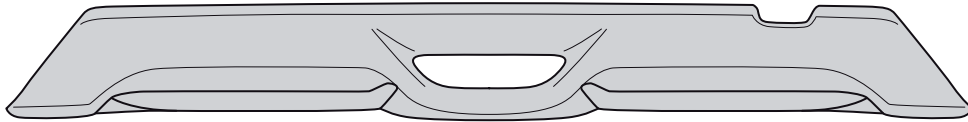


A

1x


PW158-10001

PW158-10002




B

5x




C

5x



D

1x



E

1x



F

2x



G

2x



H

5x






J

5x




10 mm

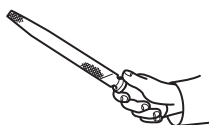






Ø 3,5 mm
Ø 6 mm
Ø 9 mm



AIM 003 516-*

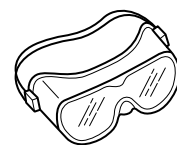


INFO

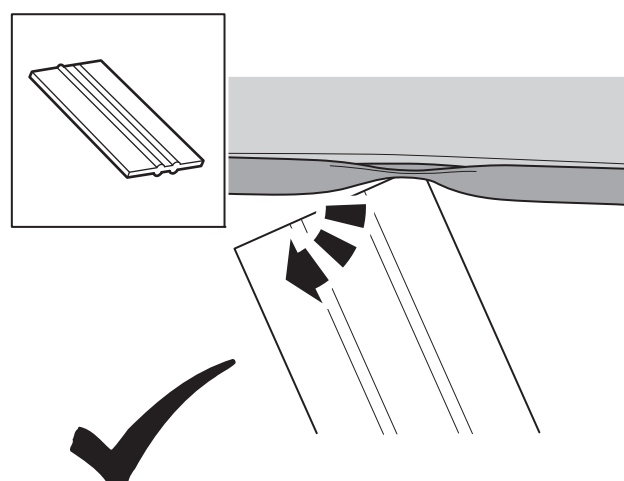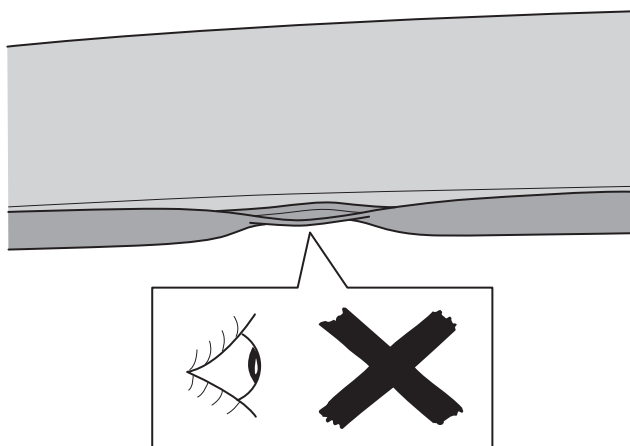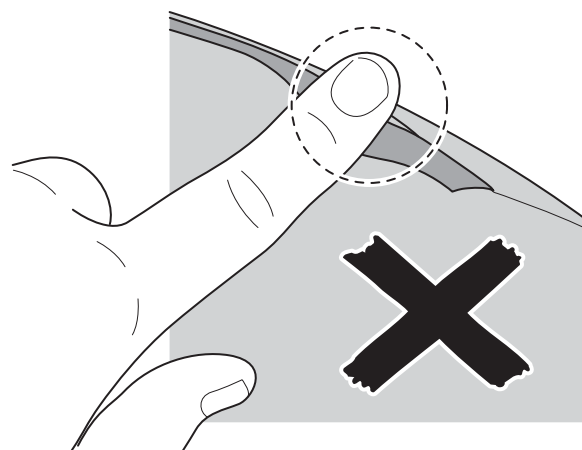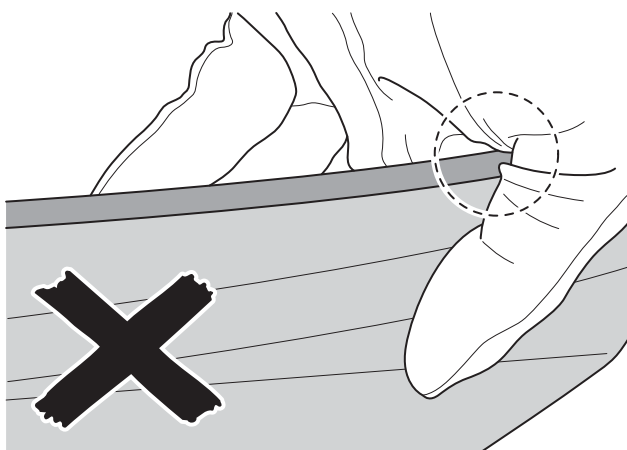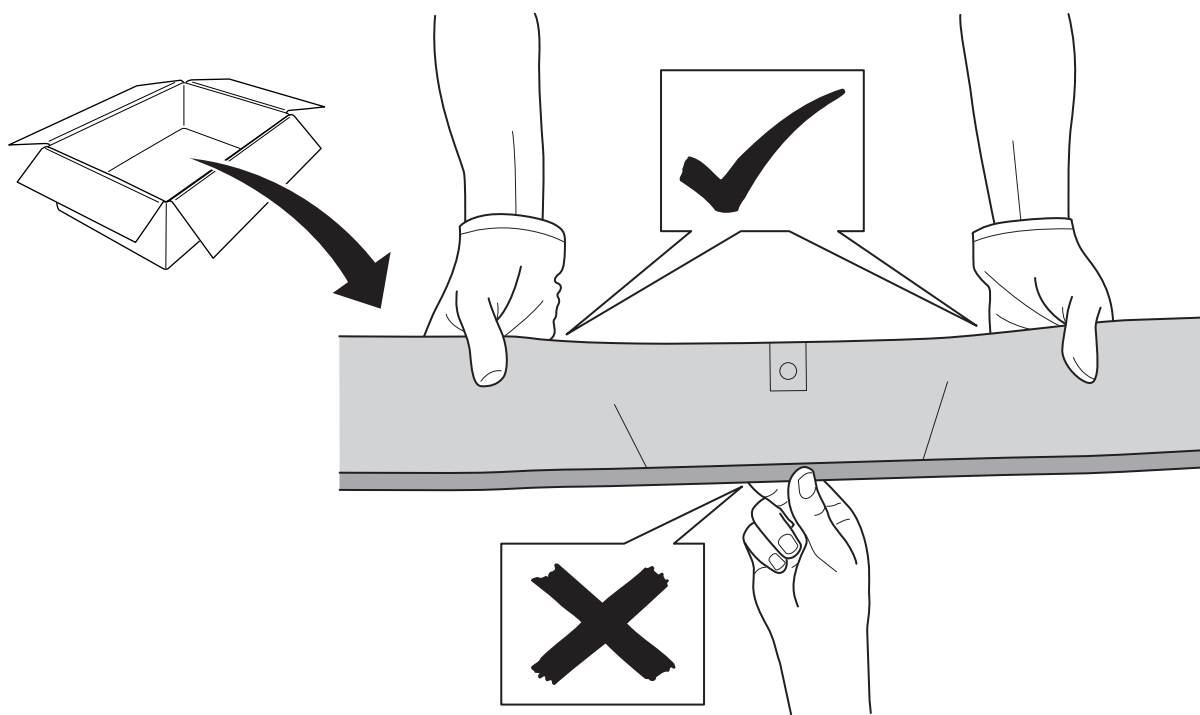


Material Safety Data Sheet




Technical Data Sheet

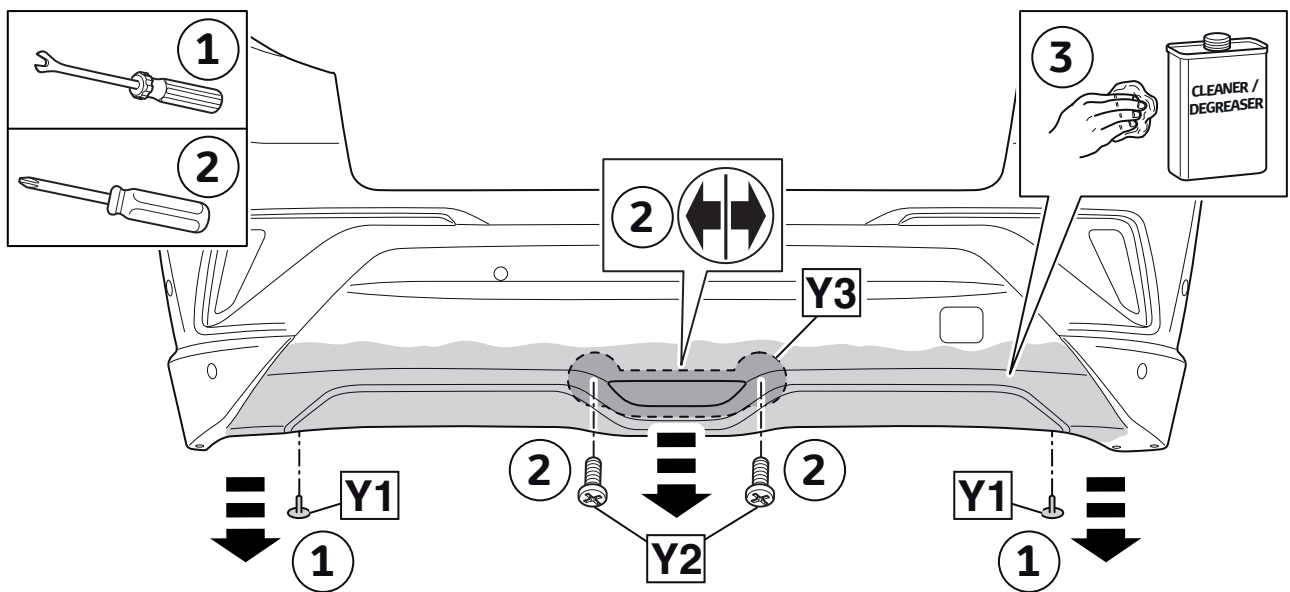


1

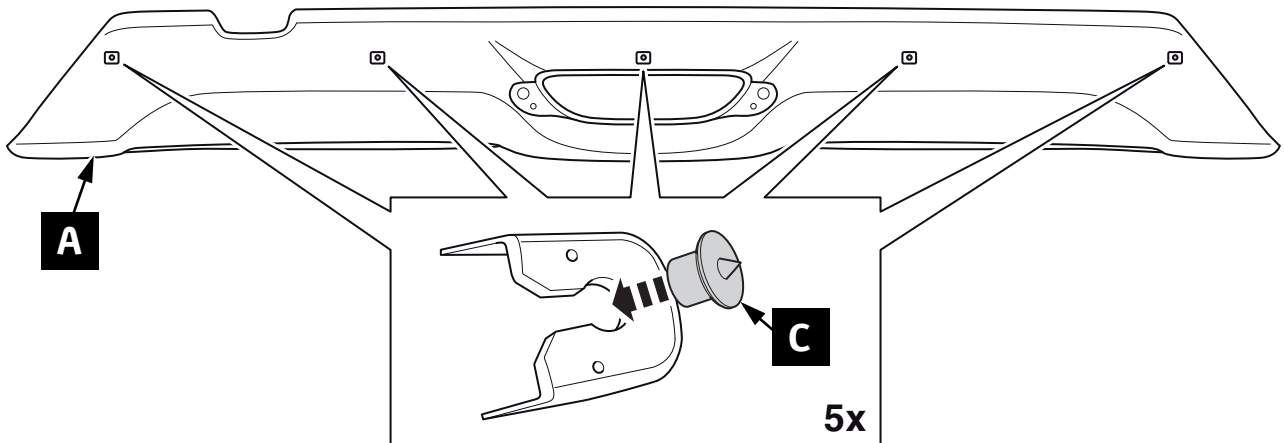


2

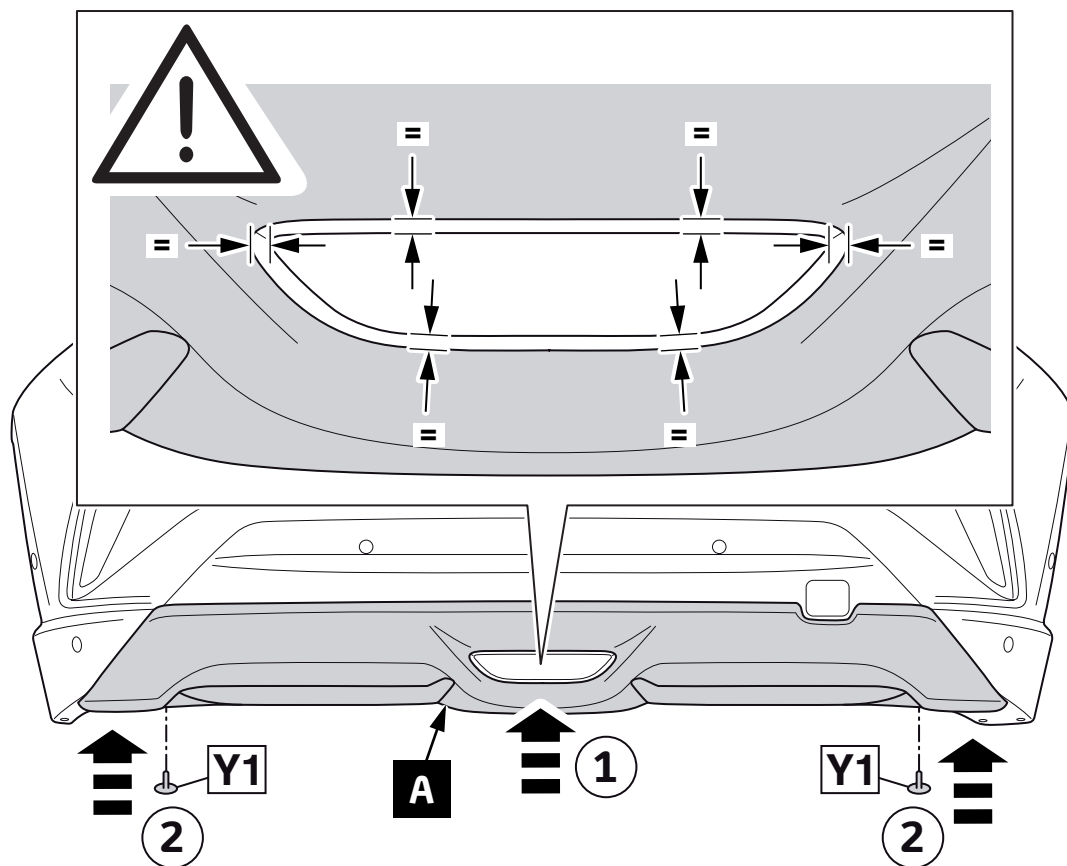


3

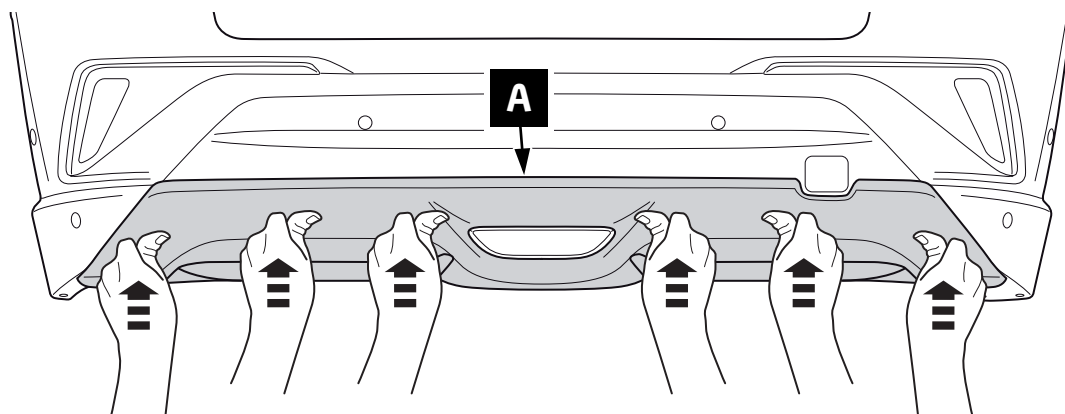


4

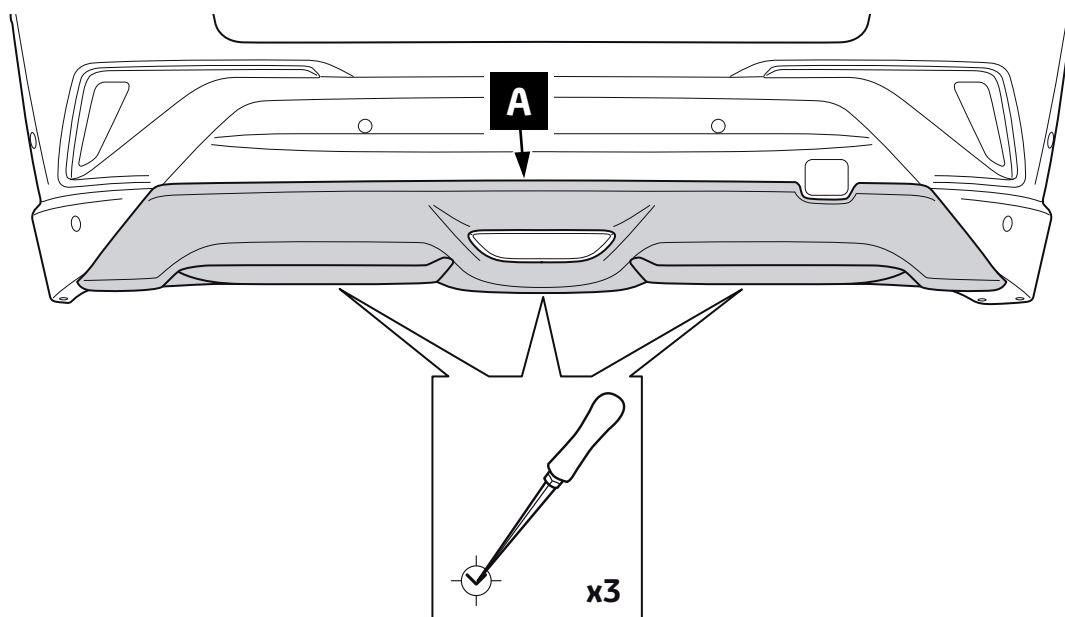


5

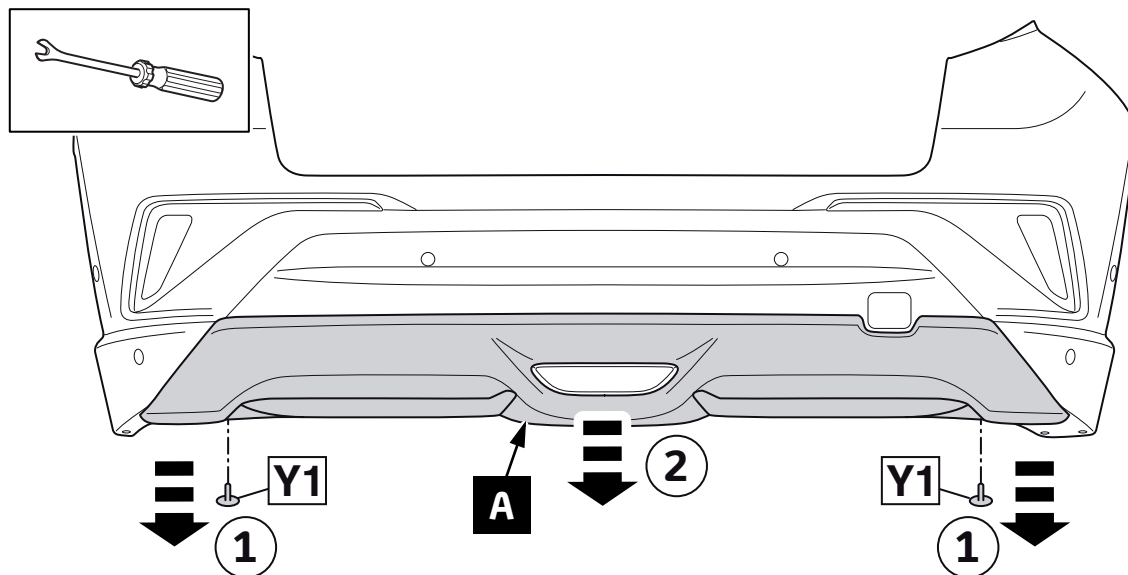


6

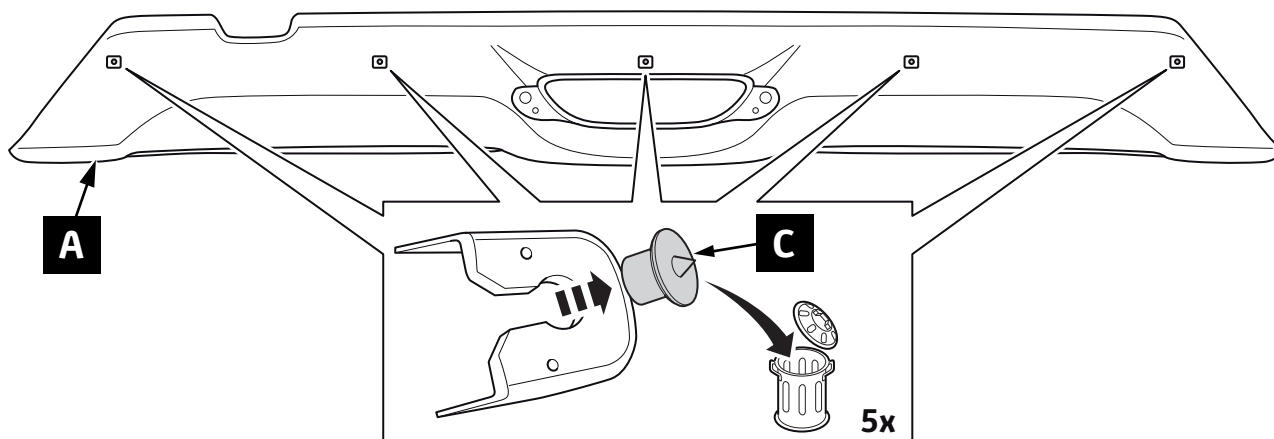


7

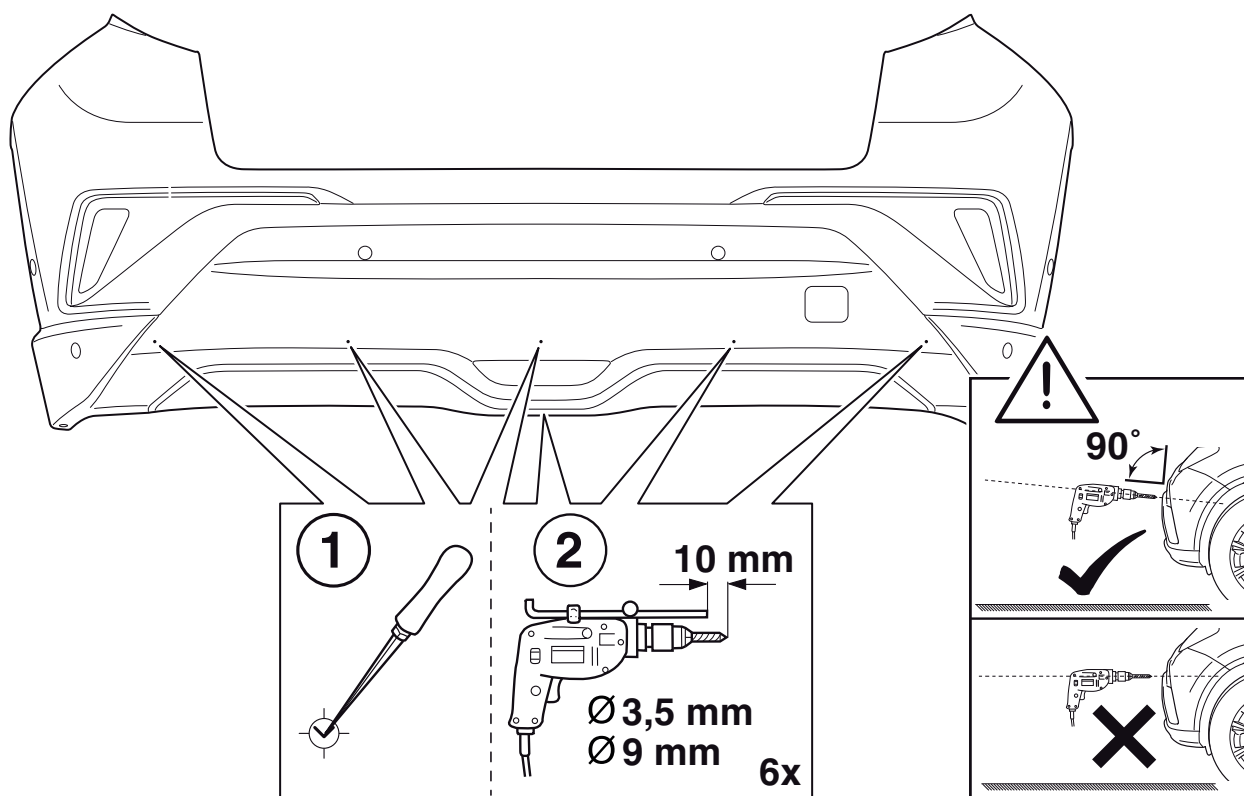


8

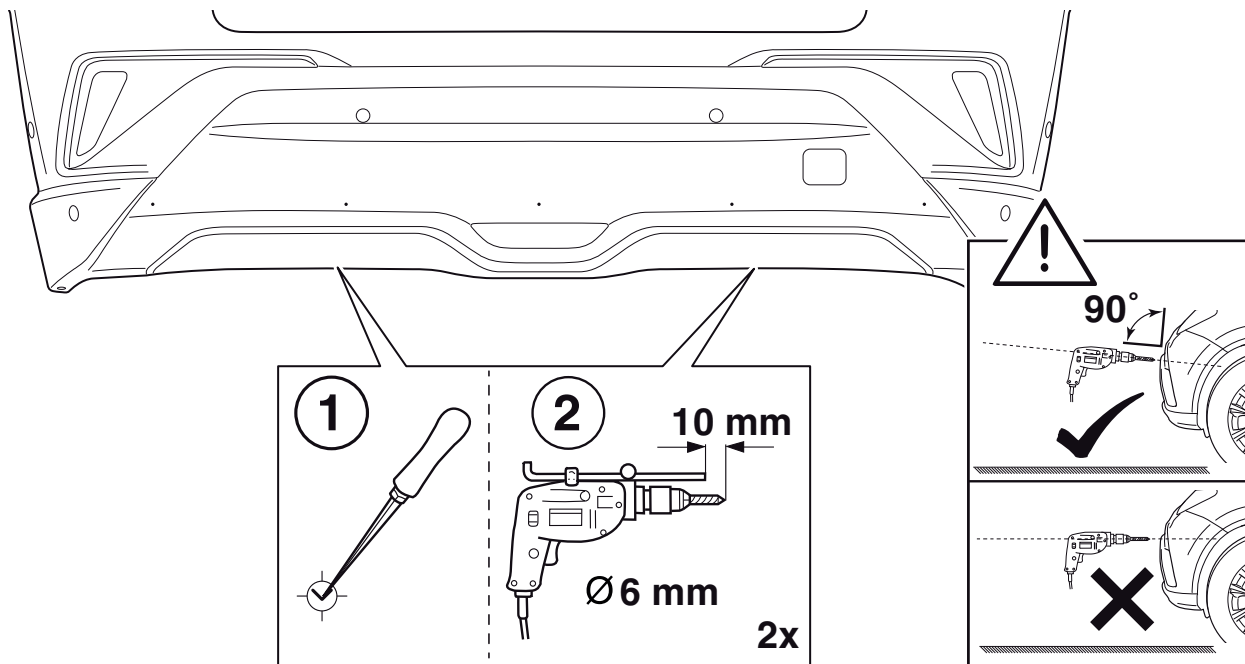


9

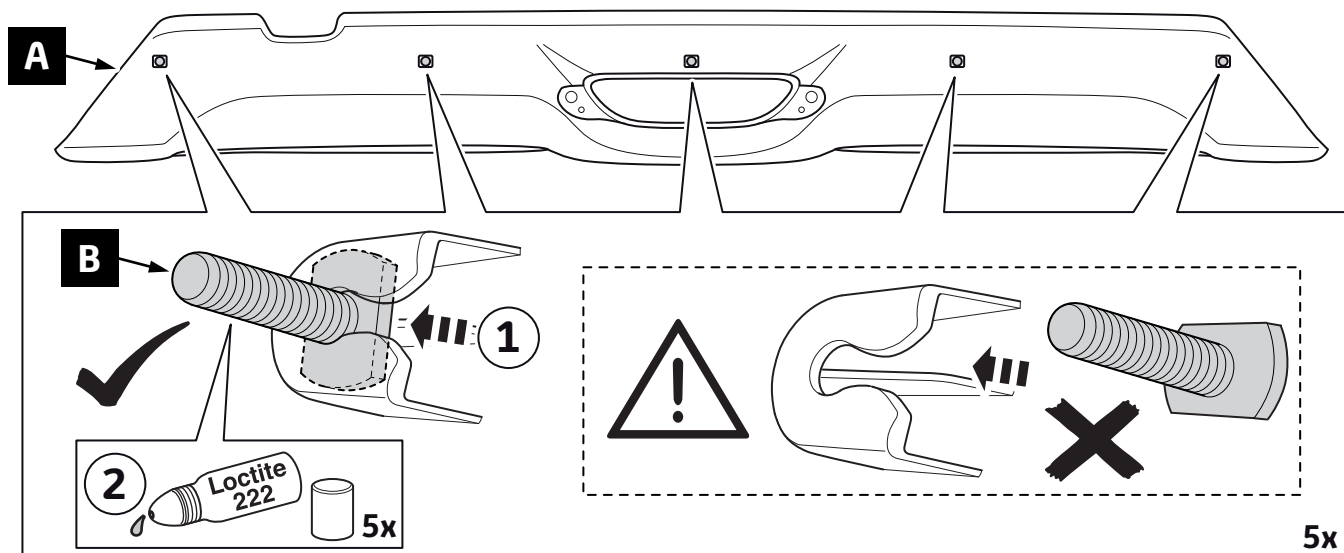


10

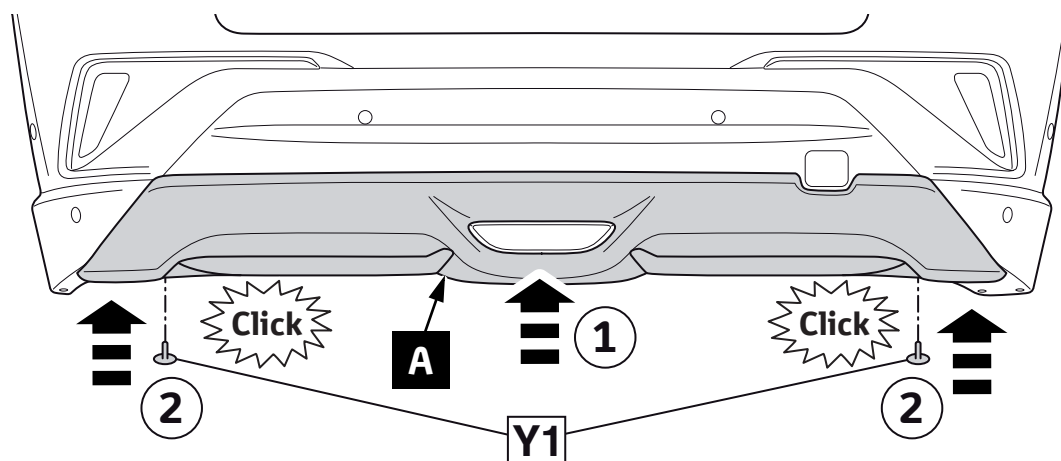


11

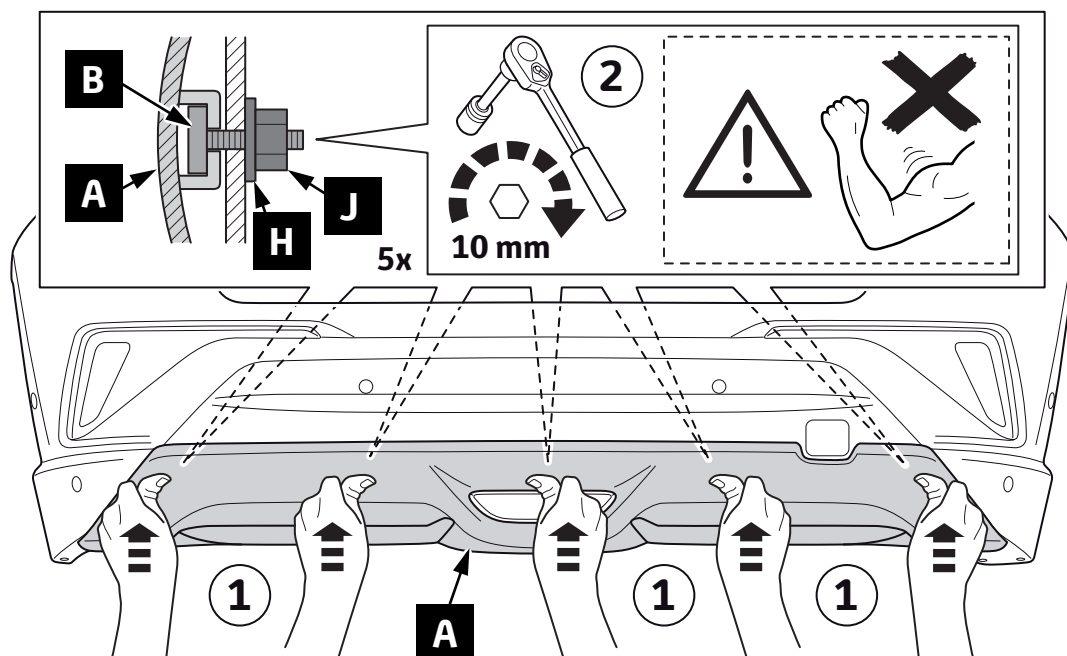


12

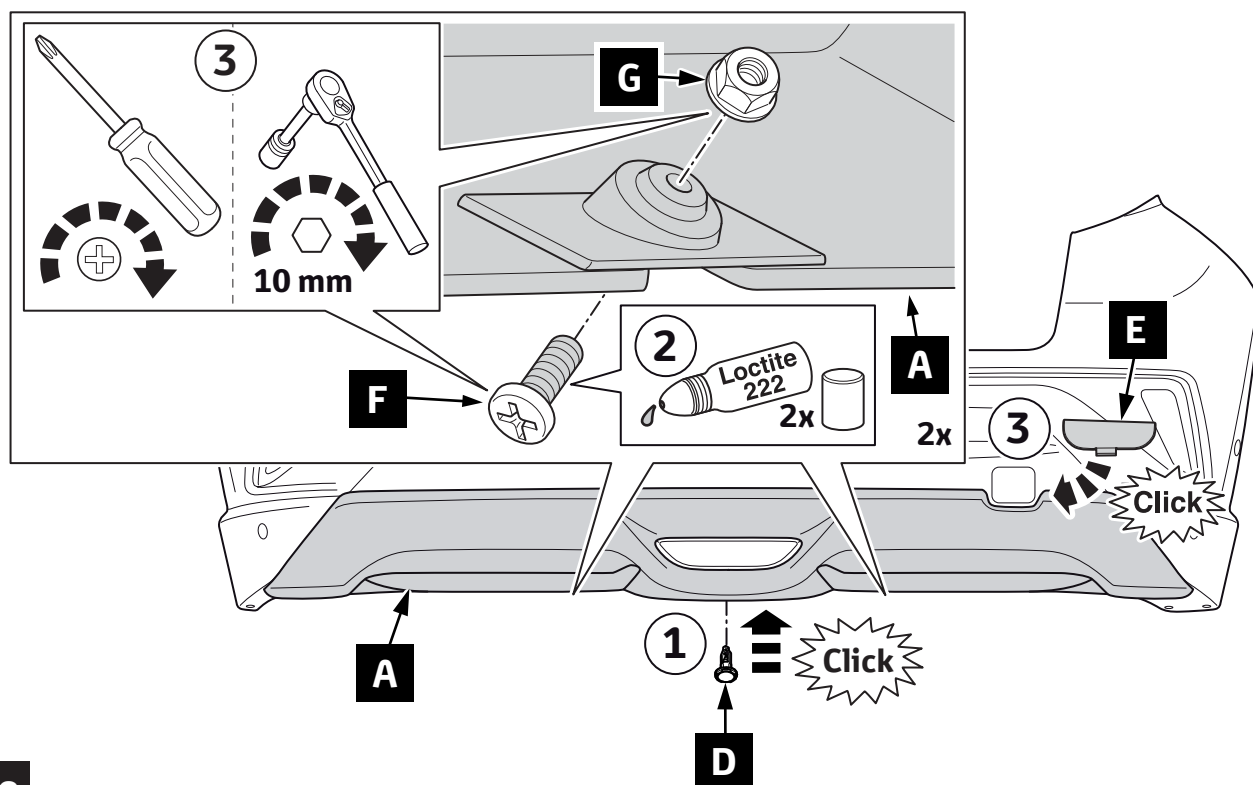


13

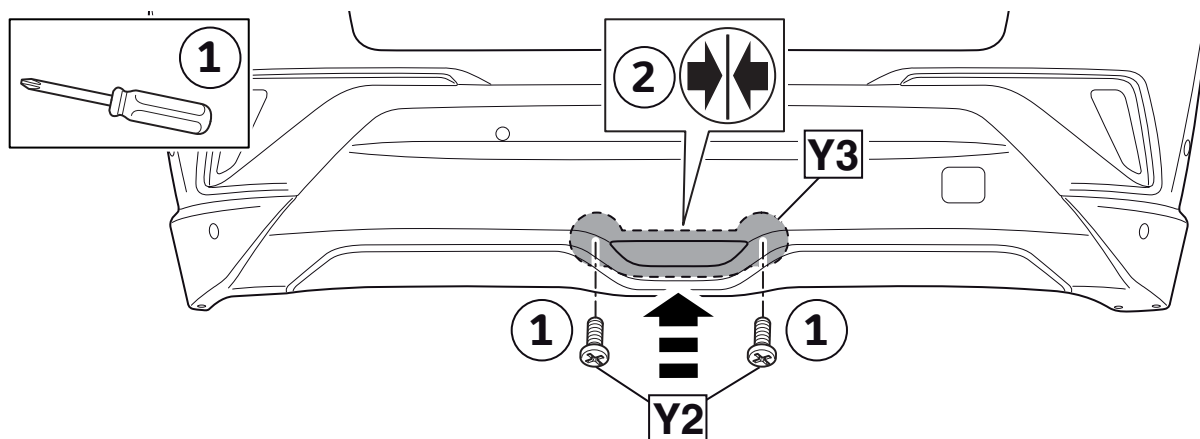

14

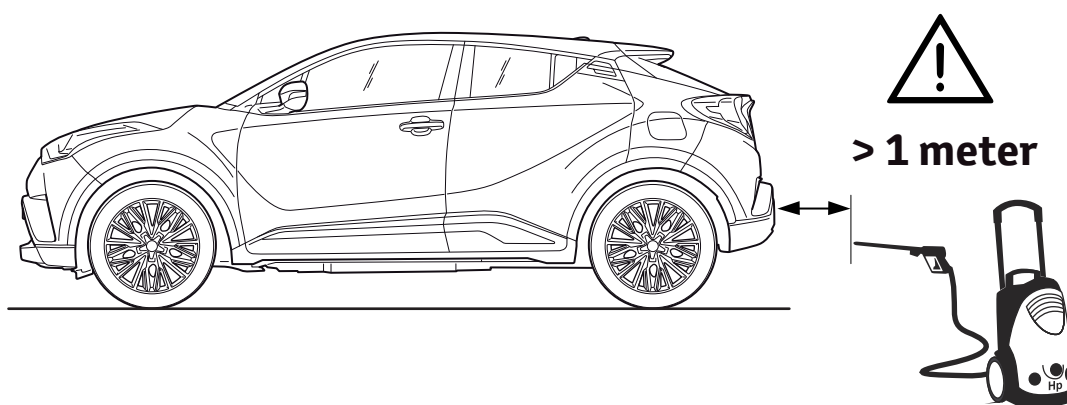

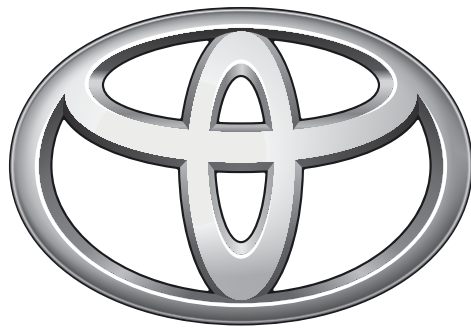

TOYOTA

CHECK SHEET Page 1 of 1








TOYOTA

Model / Year Toyota C-HR
2016/10, 2019/10

Rear Skirt

VIN n°

ALWAYS A
BETTER WAY

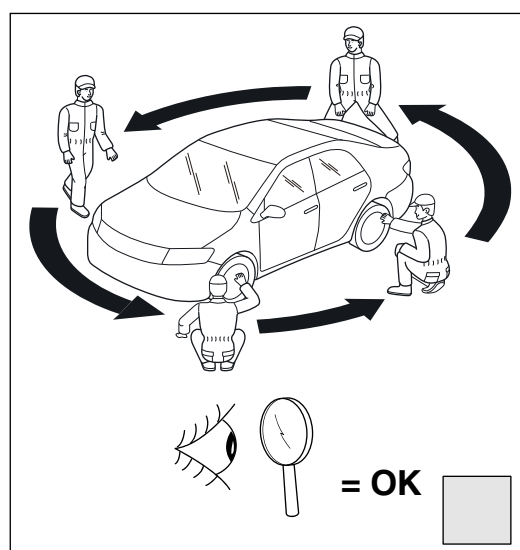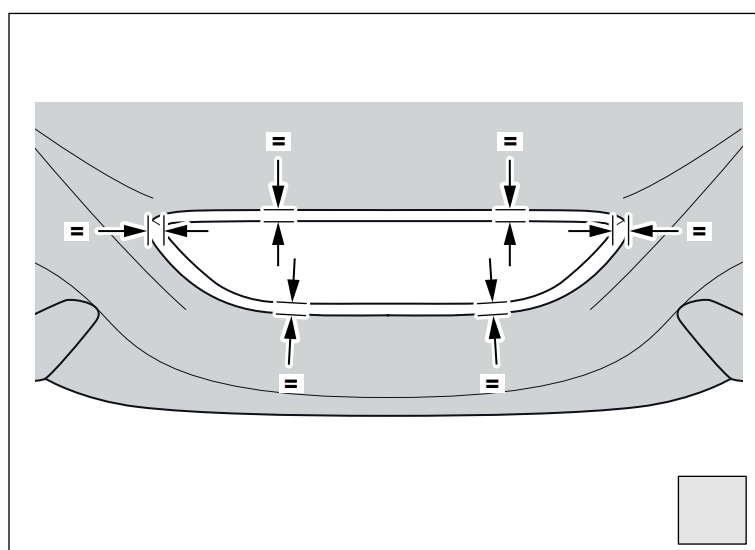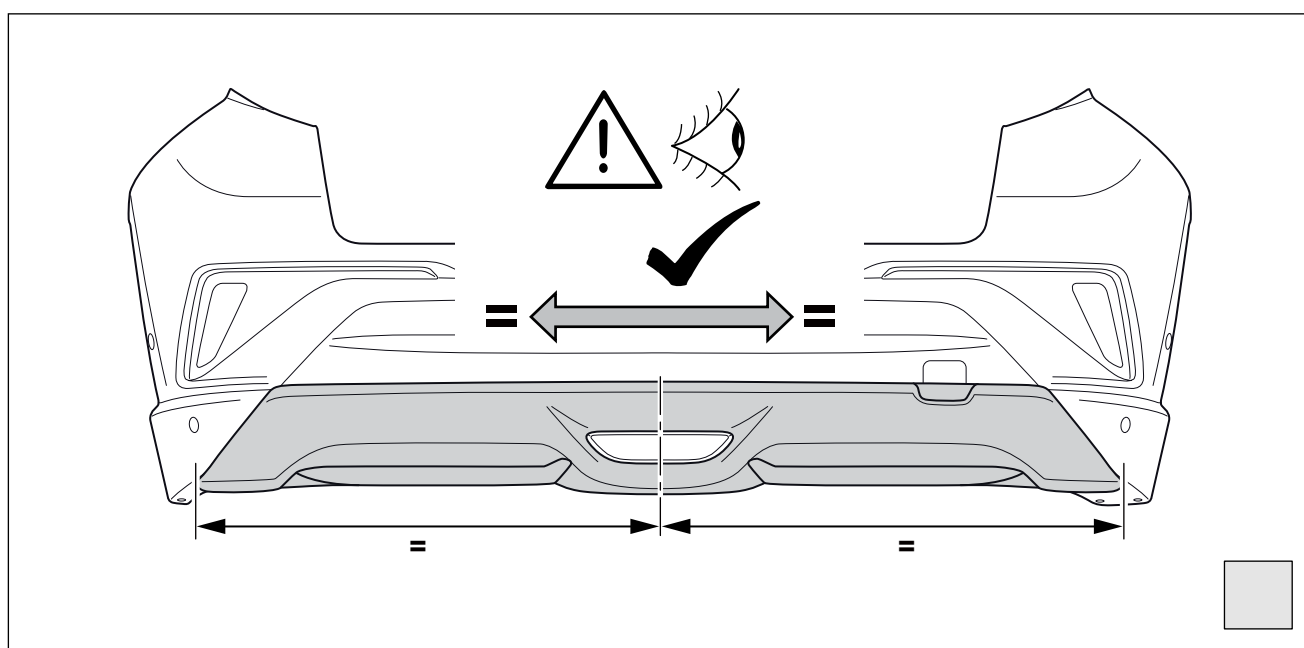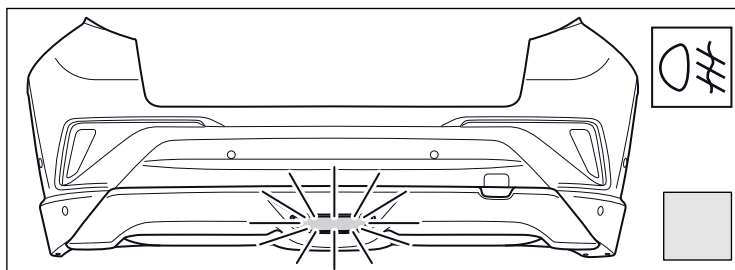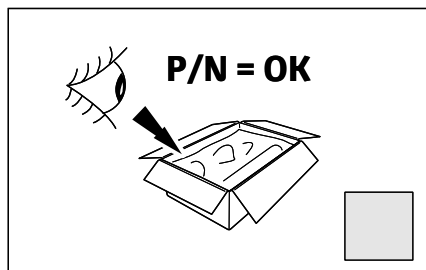

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: