



ALWAYS A
BETTER WAY

Yaris

Mud Flaps Rear

Installation Instruction

Model year: 2014/07, 2017/03

Vehicle code: **P130*-C****W, **P131*-C****W

Part number: PZ416-B9968-00


Manual reference number: AIM 003 171 - 2

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	04-07-14	6, 7	11, CS	X		
2	09-01-17	all	Various	X	Safety glasses	


A

PZ416-B9968-00

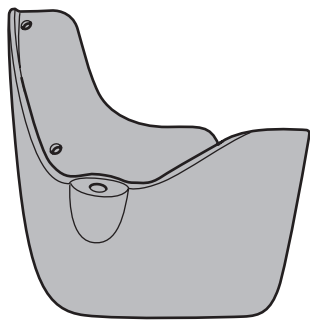

LHS


1x

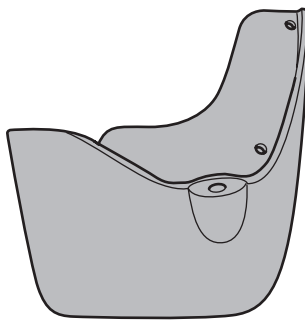

RHS





1x

B




4x


**Torque stick
100Nm**

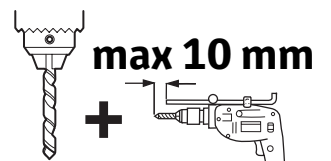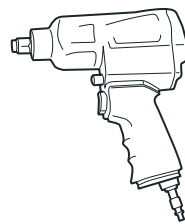


Ø 2mm

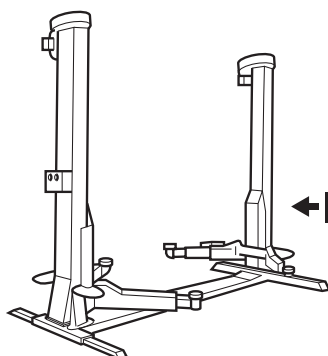


← Or →



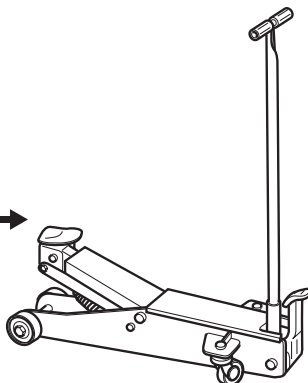


21 mm



Click




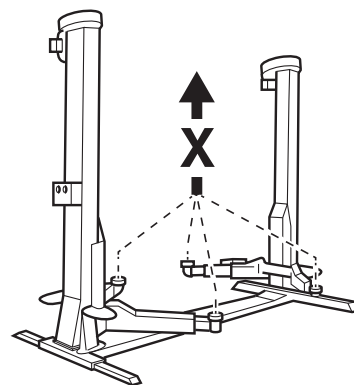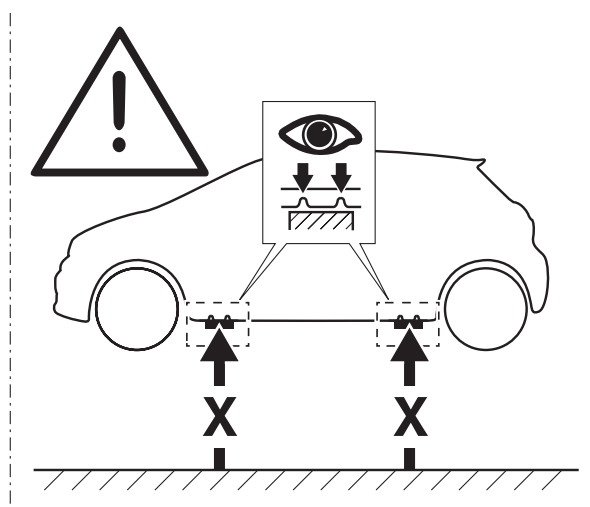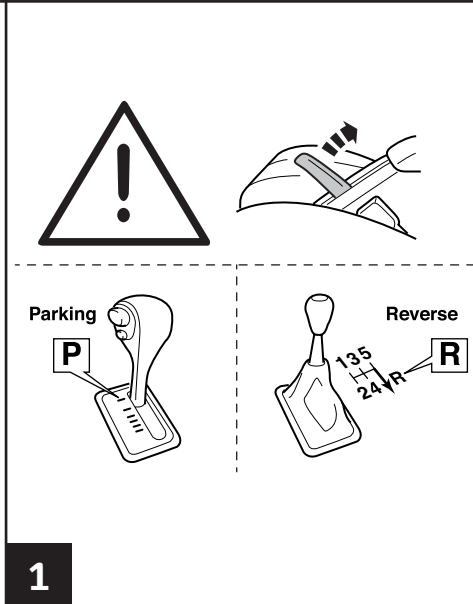


21 mm

Y1 4x







4




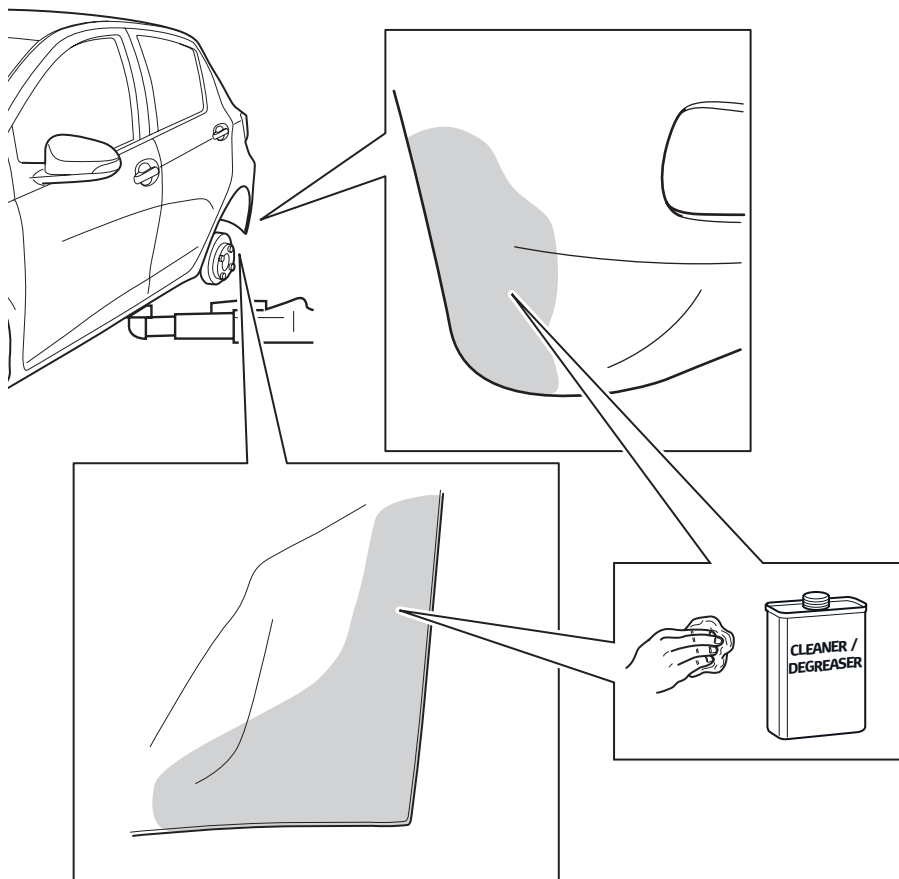


5

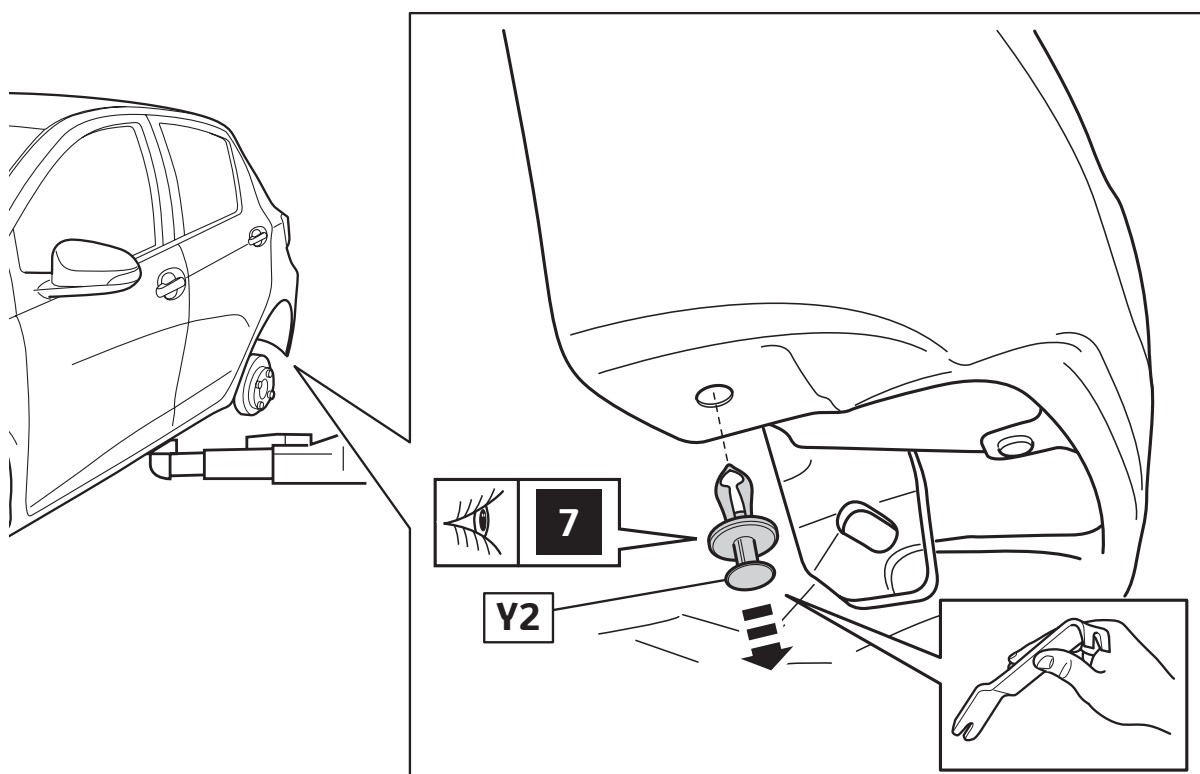

6

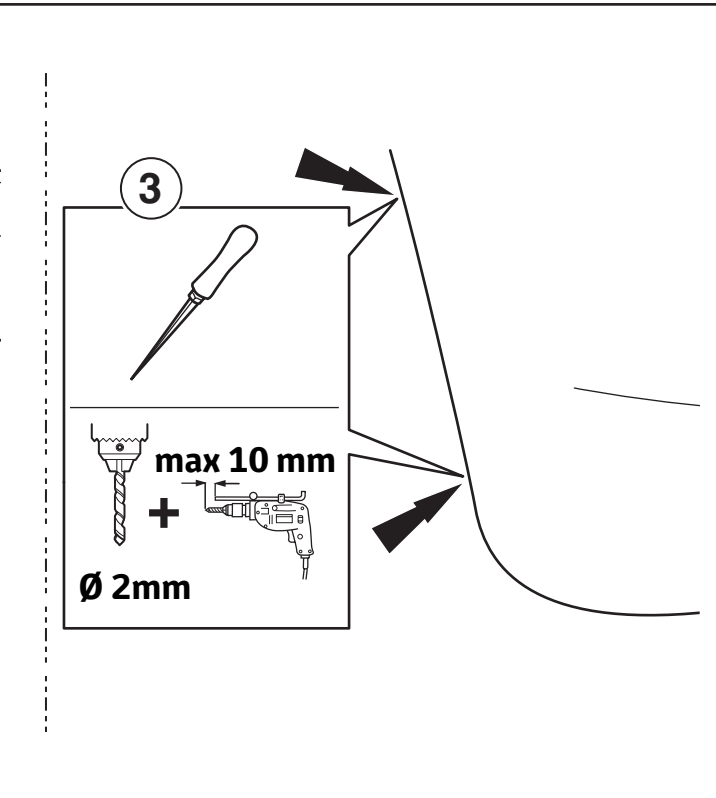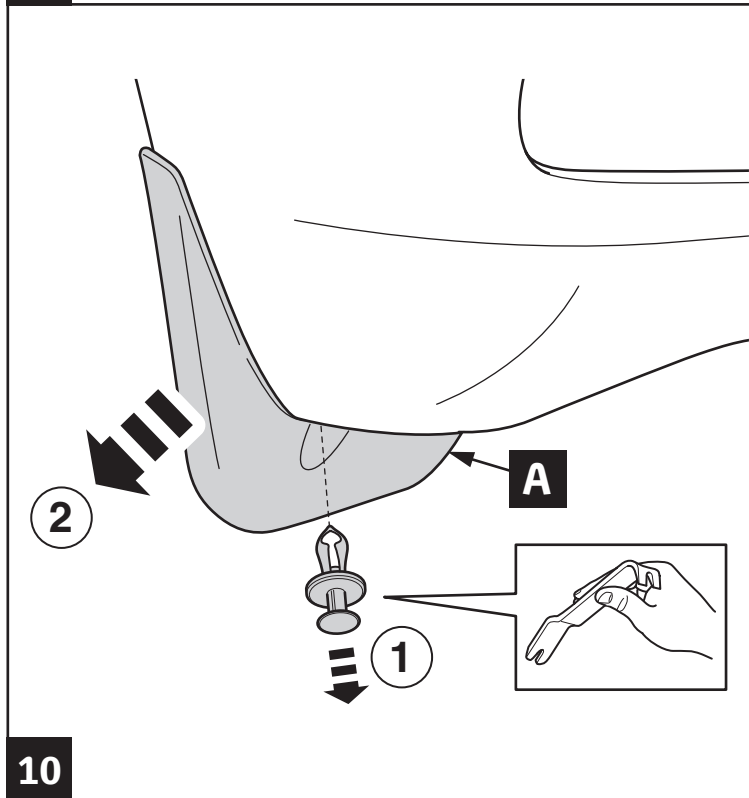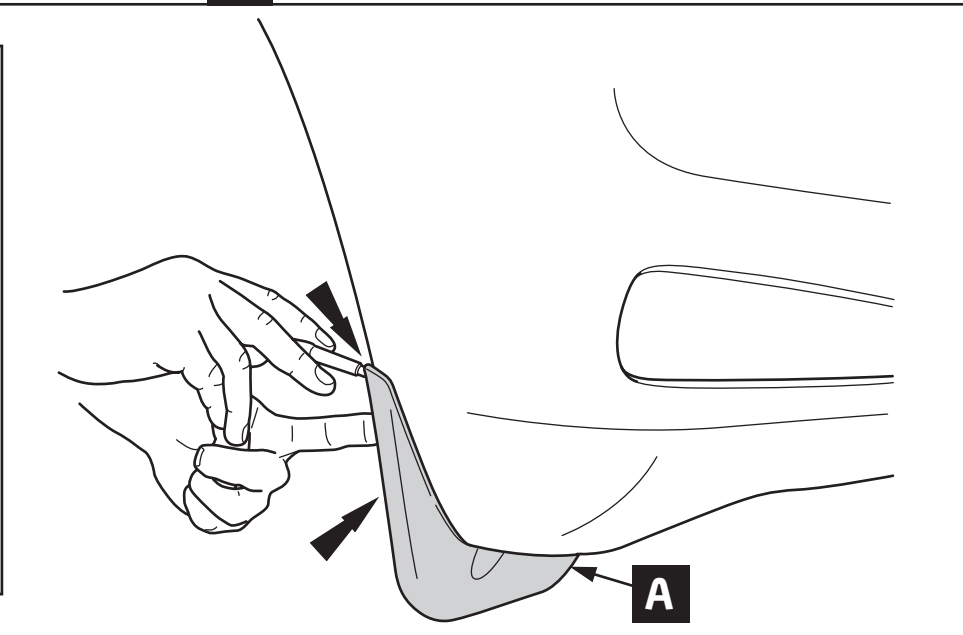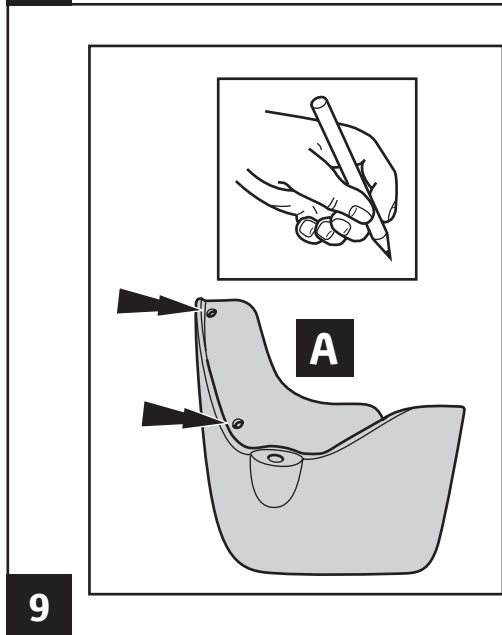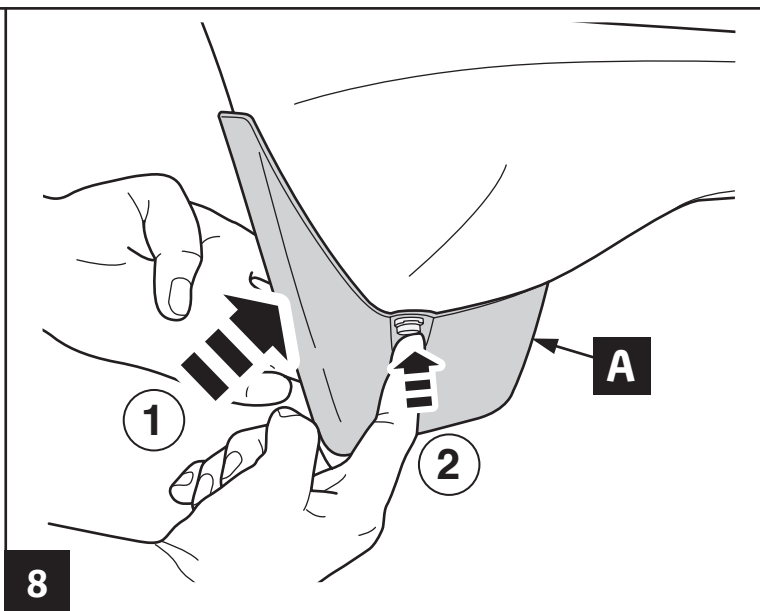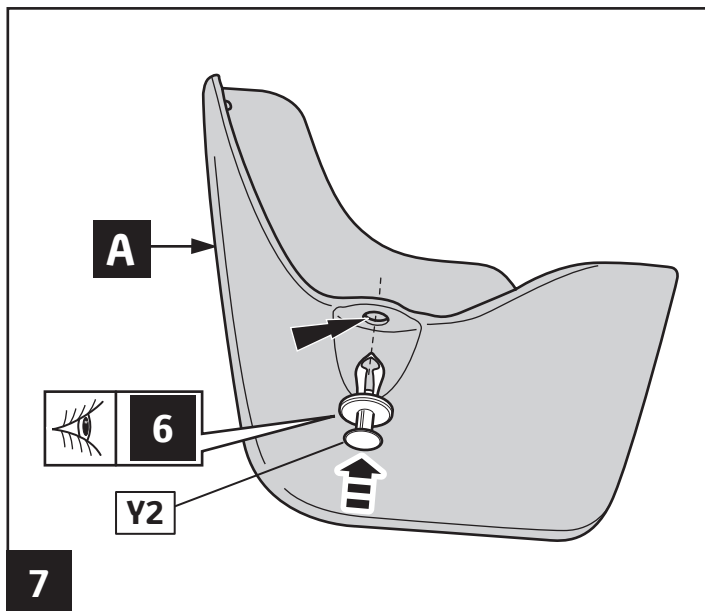

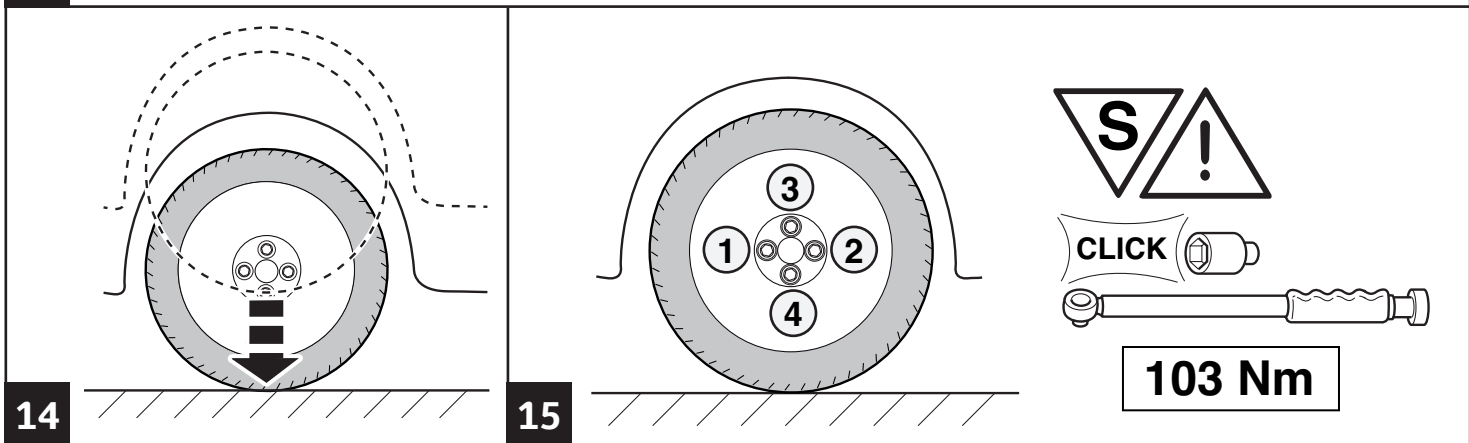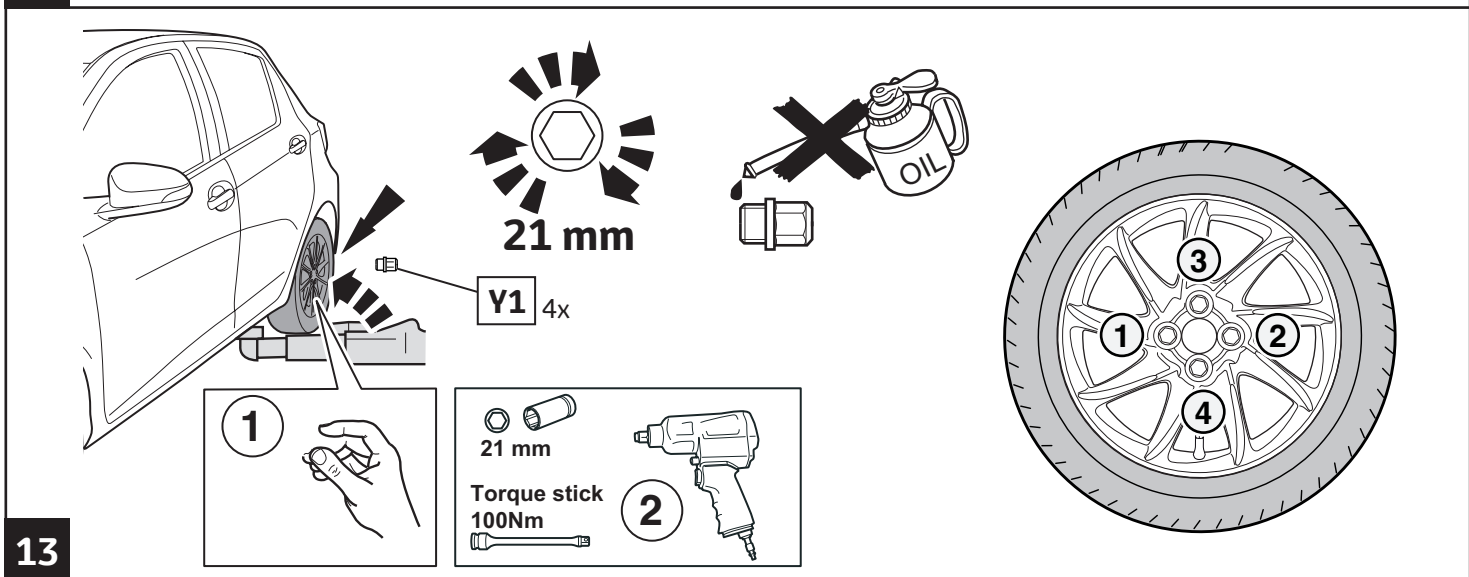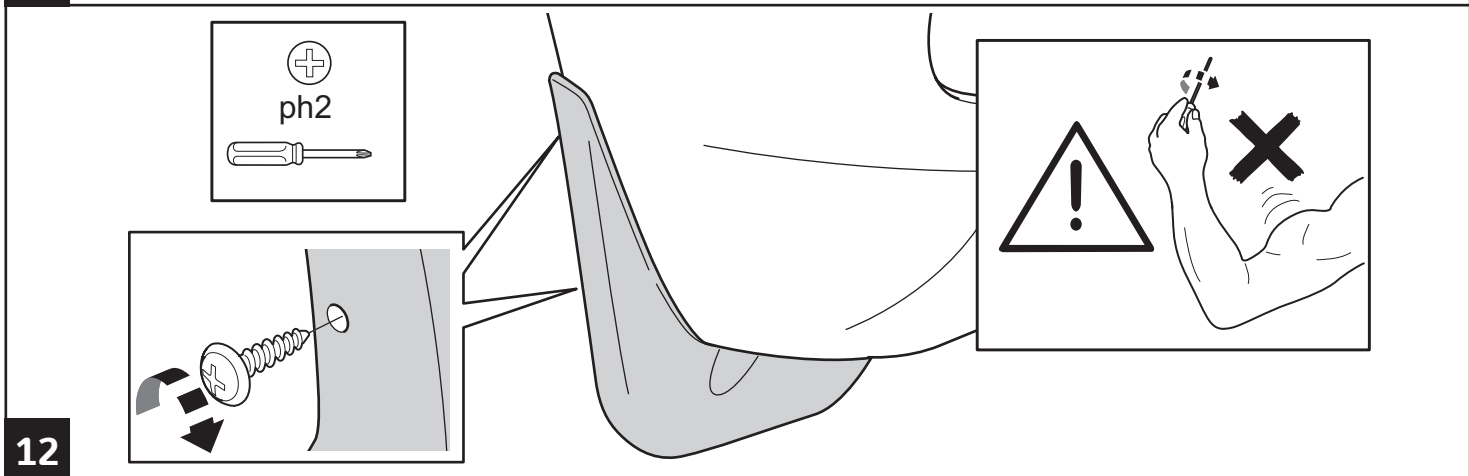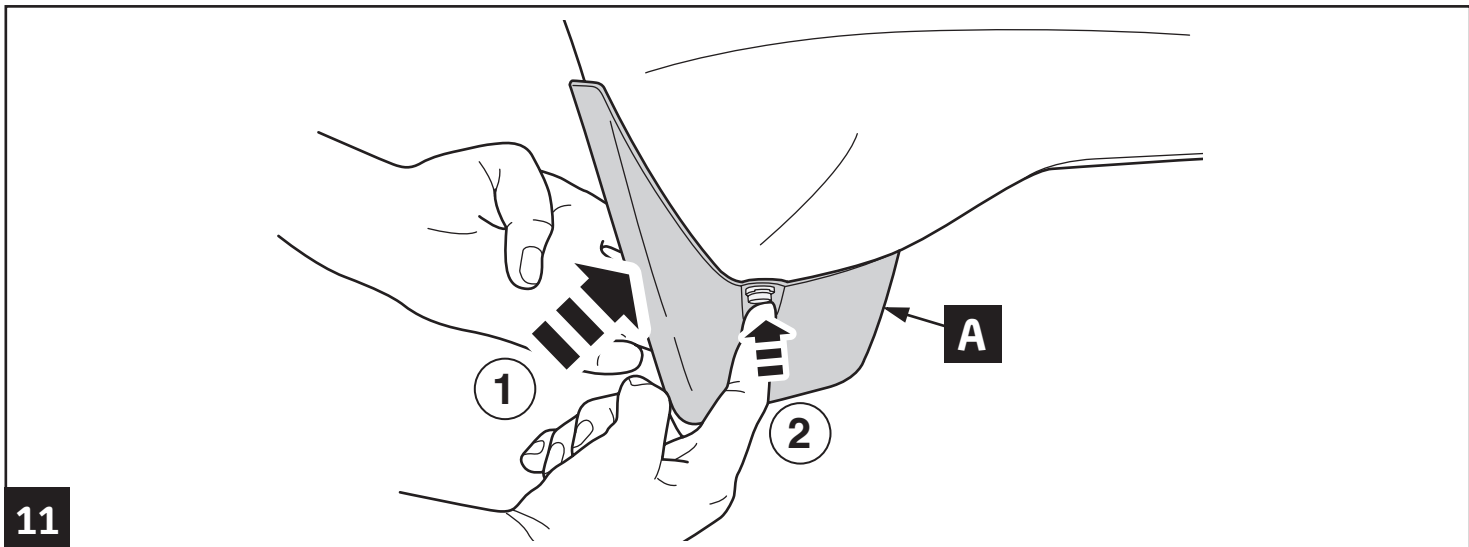

CHECK SHEET










TOYOTA

ALWAYS A
BETTER WAY

Model / Year **Yaris**
2014/07, 2017/03 **Mud Flaps Rear**

VIN n°

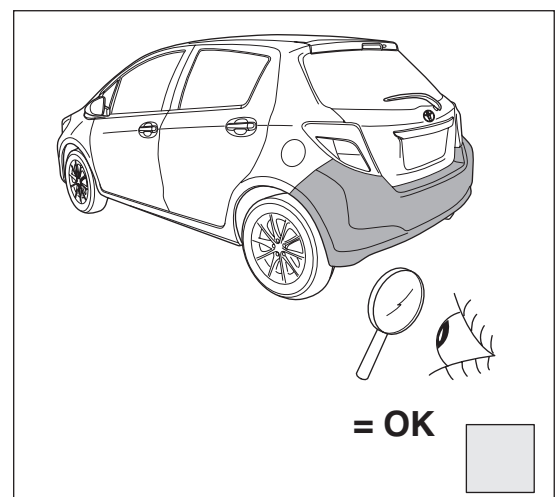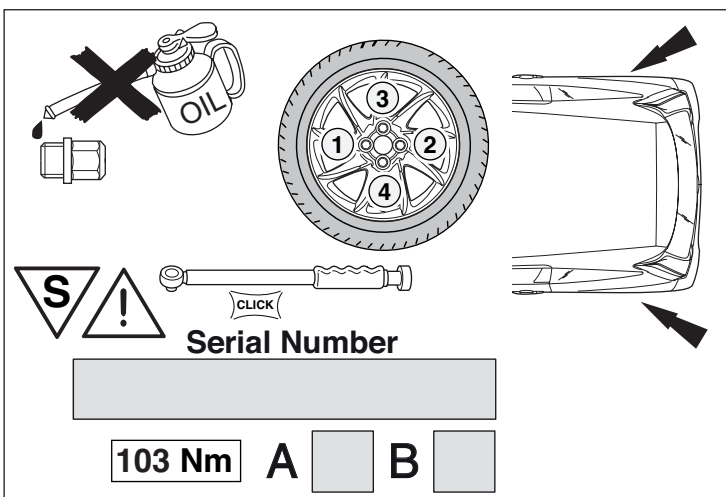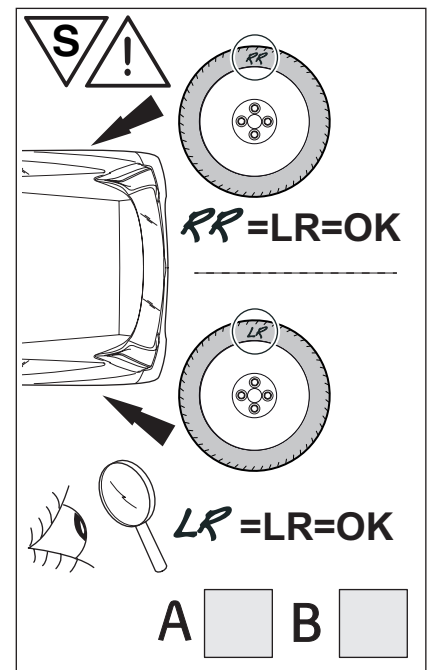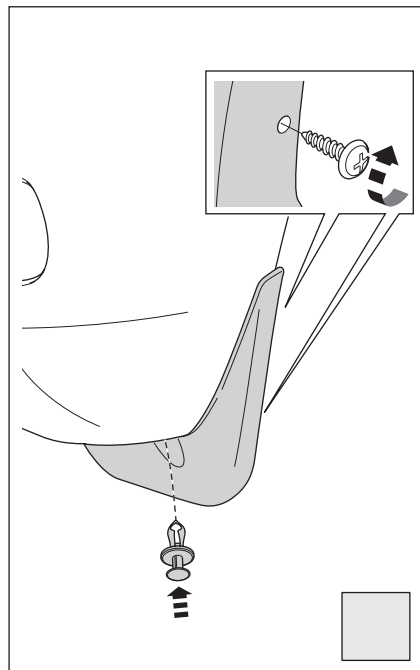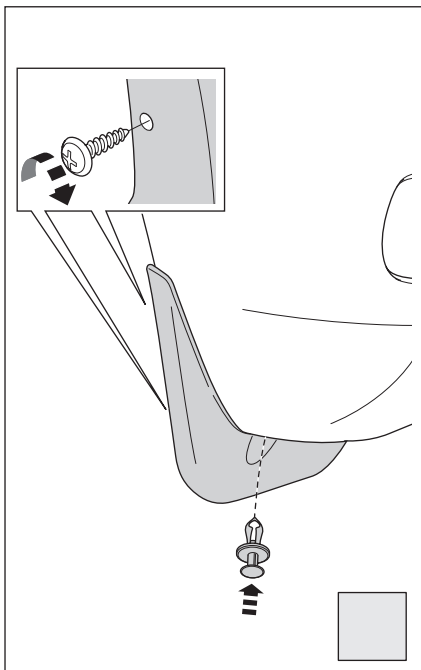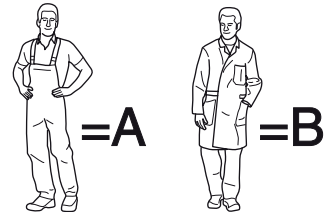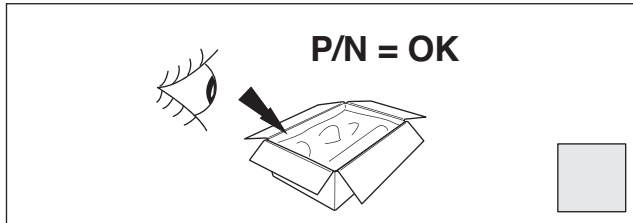

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: