



**TOYOTA**

ALWAYS A  
**BETTER WAY**

# Corolla (HB)

## Mirror Cover

Installation Instructions

Model year: 2019/01

Vehicle code: \*\*E\*1\*-DH\*\*\*W

Part number: PW403-02100-CO (Black Mica Met)  
PW403-02100-DJ (Red Mica)



Manual reference number: AIM 004 442-0

# Revision record





Rev. No.	Date	Page	Picture	Update	New	Deleted steps




PW403-02100-\*\*

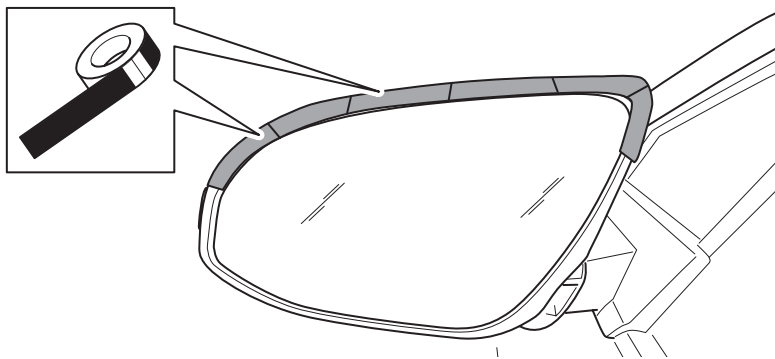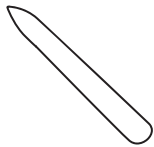


1

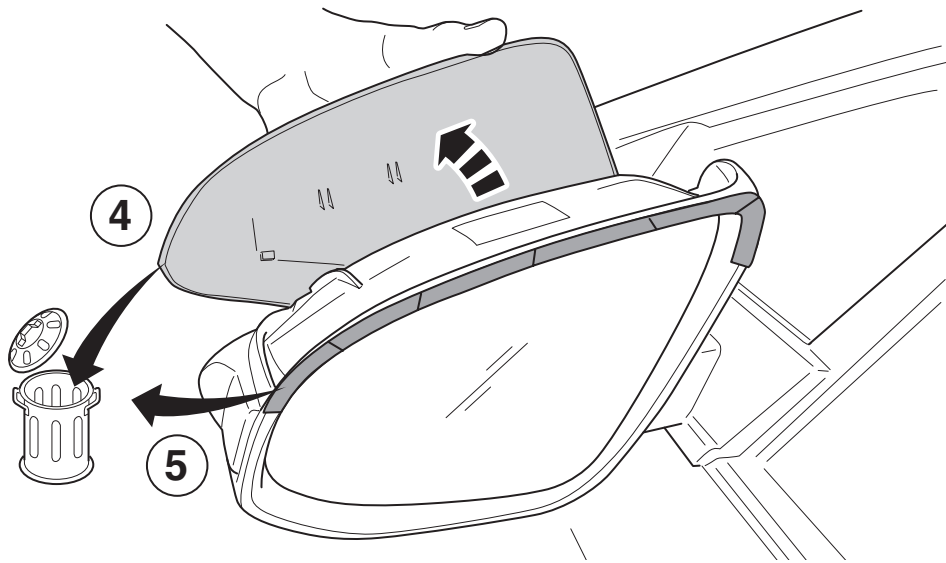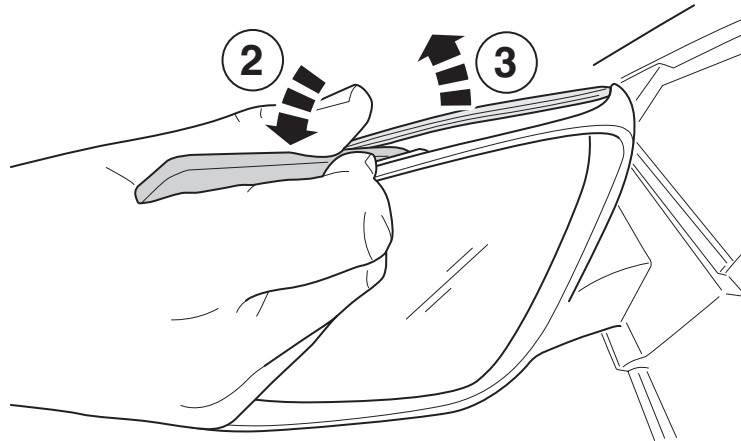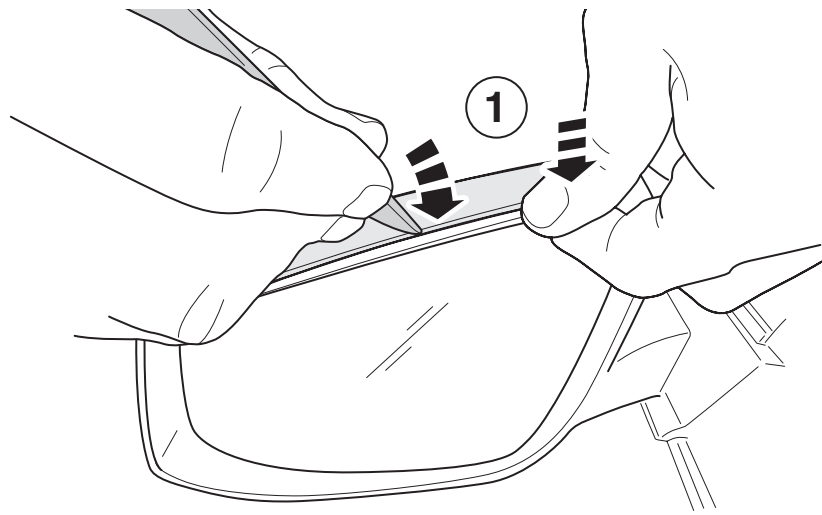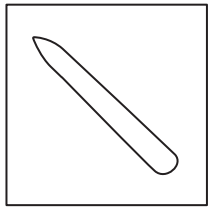

2

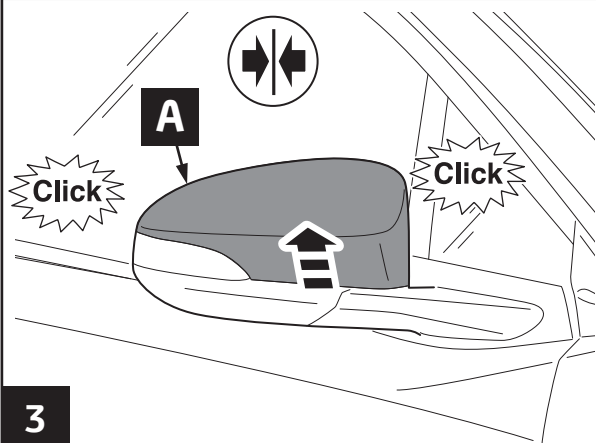

3

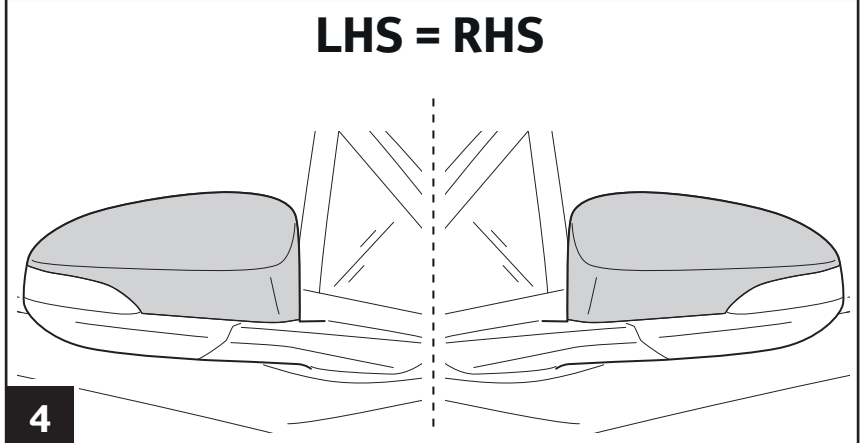

4

# CHECK SHEET







**TOYOTA**



Model / Year **Corolla (HB)** **Mirror Cover**  
**2019/01**


VIN n°

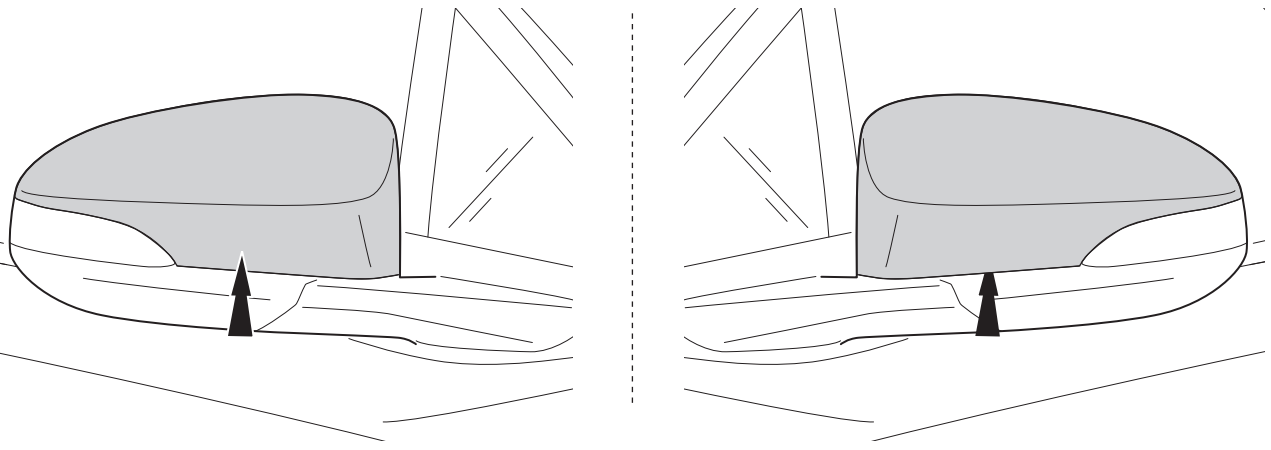

ALWAYS A  
BETTER WAY

 **P/N = OK**

  = OK

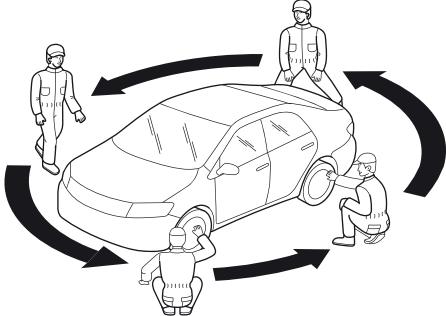

  = OK

**Installation Date:**

.. / .. / ..

**Technician Name & Signature:**

**Stamp:**