



TOYOTA

ALWAYS A
BETTER WAY

GT86

Front strut tower bar

Installation instructions


Model year:	2012/03
Vehicle code:	ZN6-AK** ZN6-AL**
Part number:	MS324-18001 SU003-03642 (2x) SU003-02885 (4x)

Manual reference number: AIM 002 754- 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps

MS324-18001

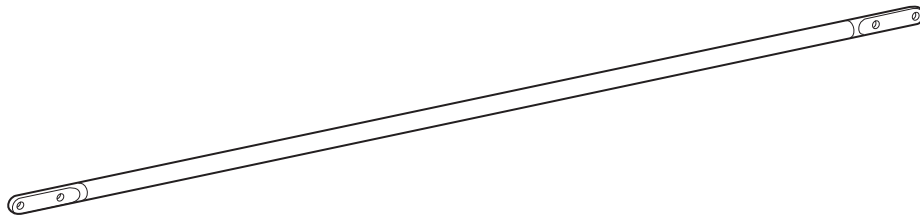


A



B

1x




C

1x




D

1x

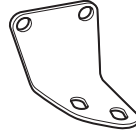

E

1x



F

4x



G

4x

SU003-03642



H



2x



SU003-02885



J







4x

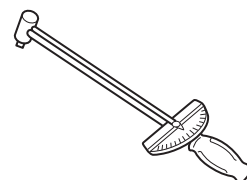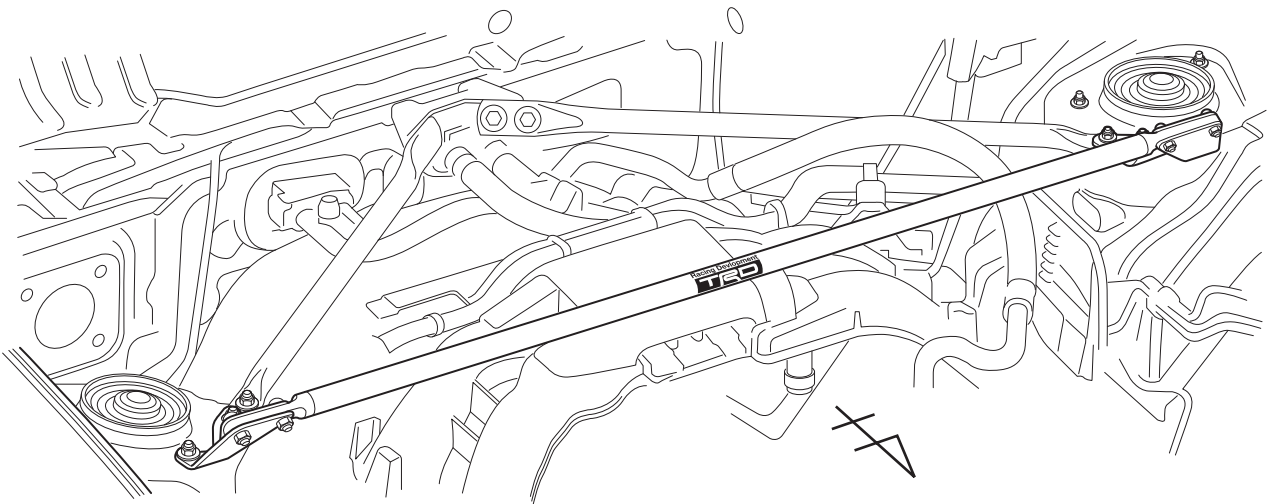

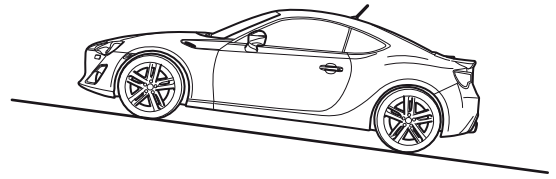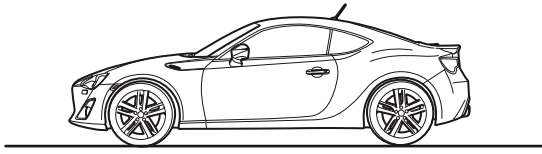

Parking




P

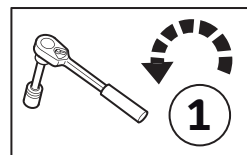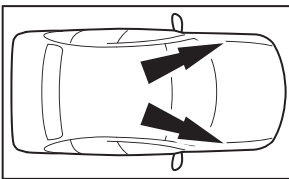
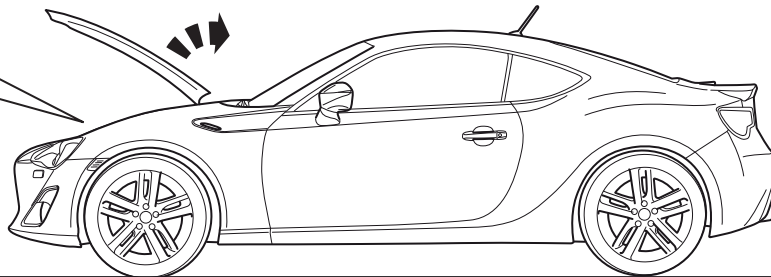

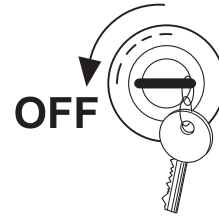
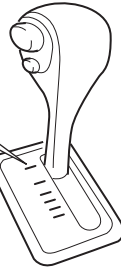


1






2



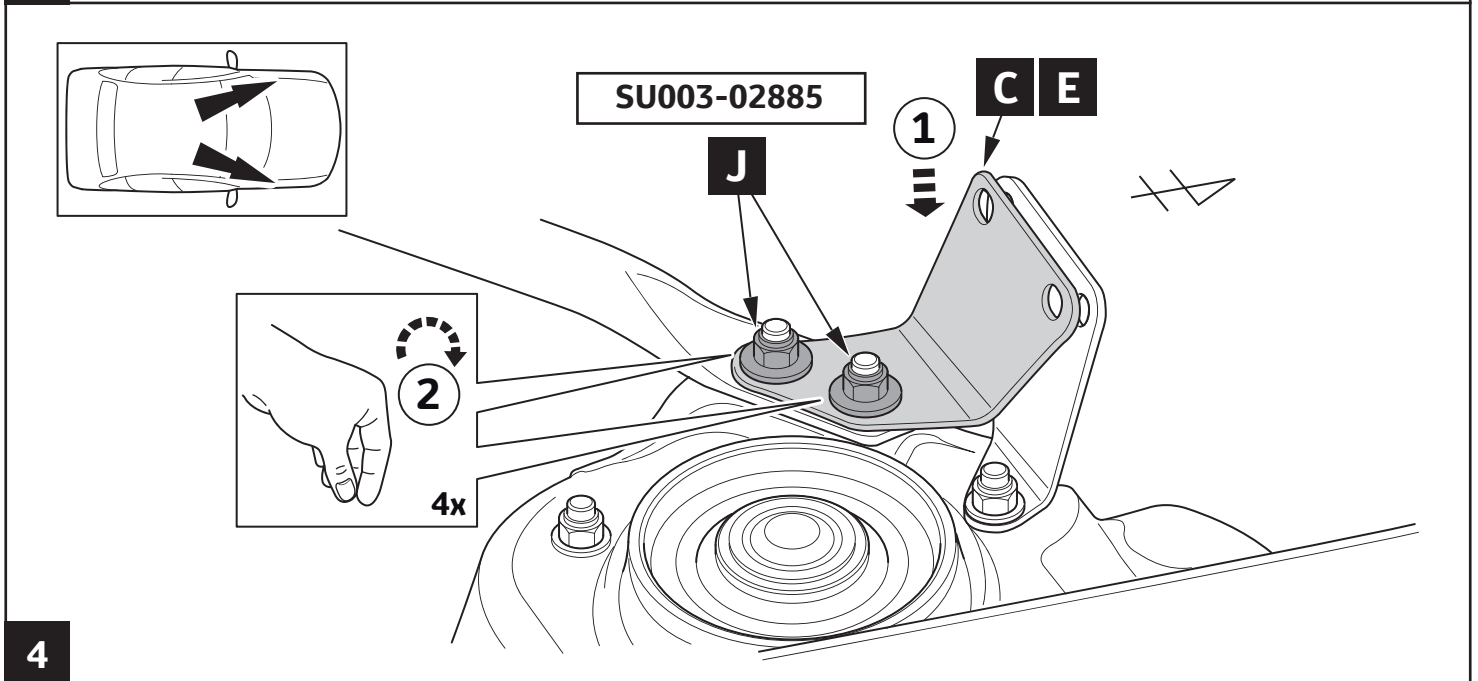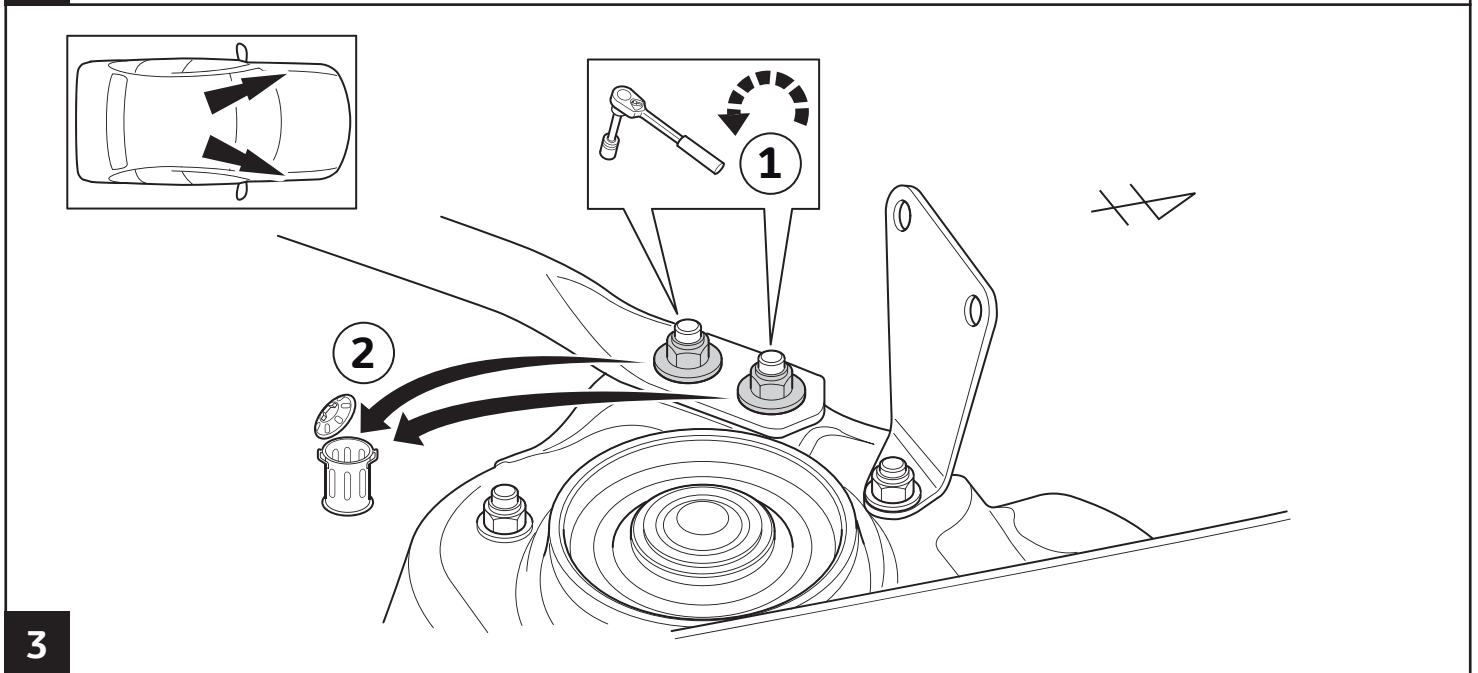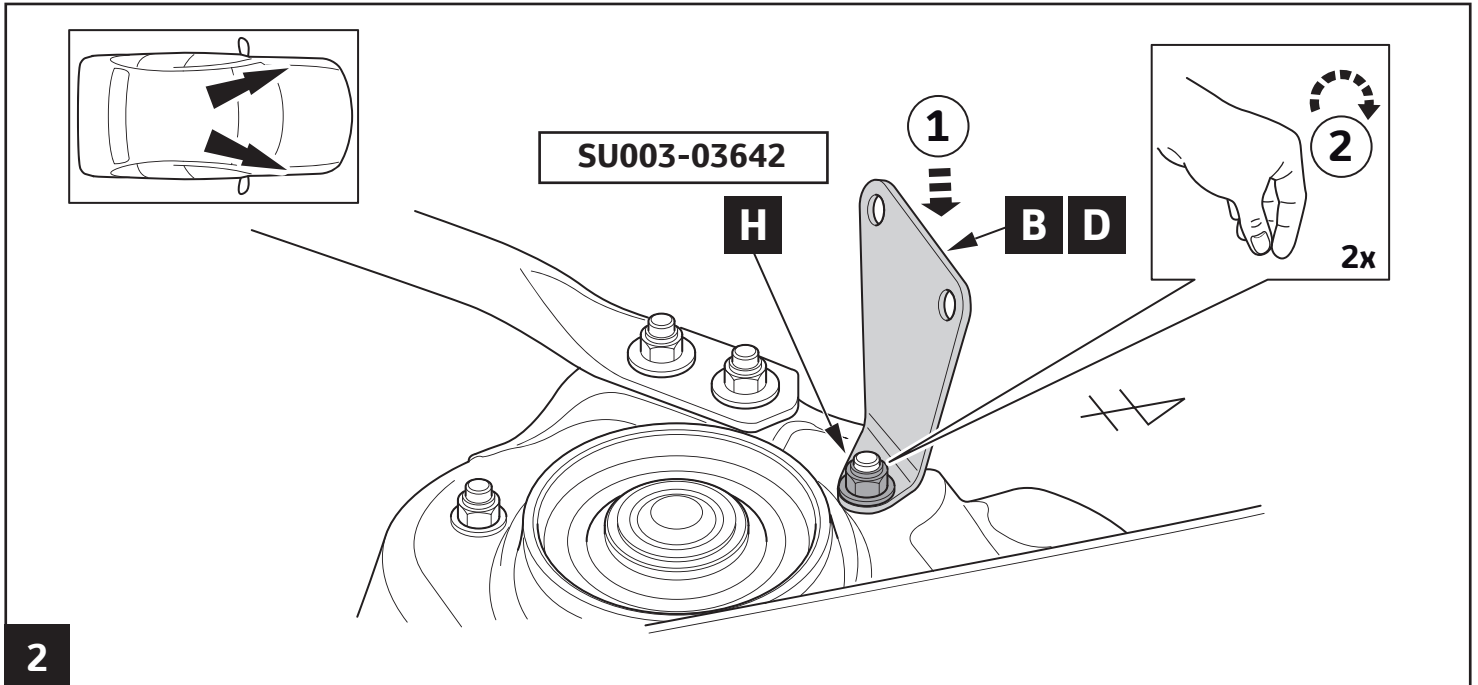

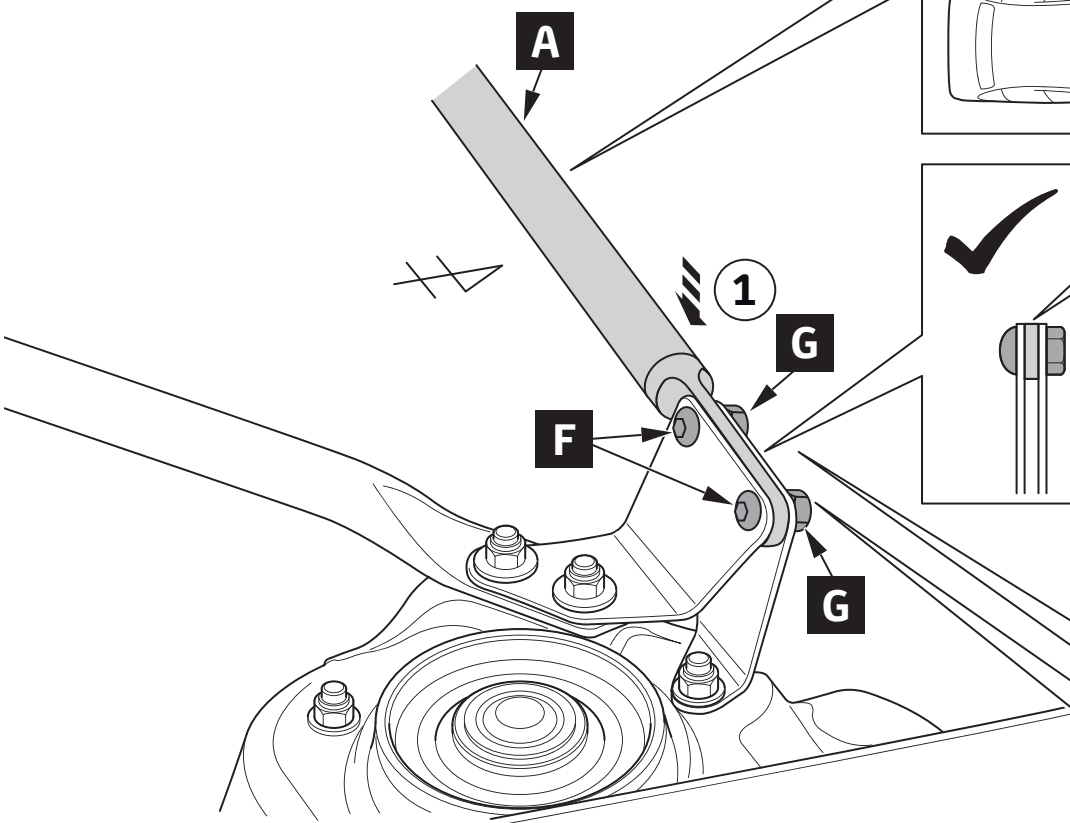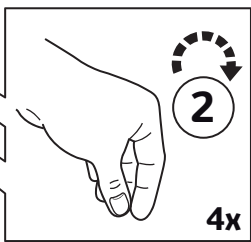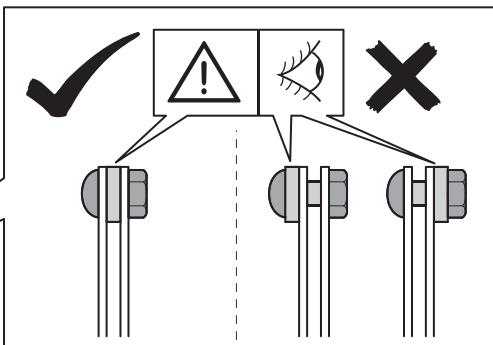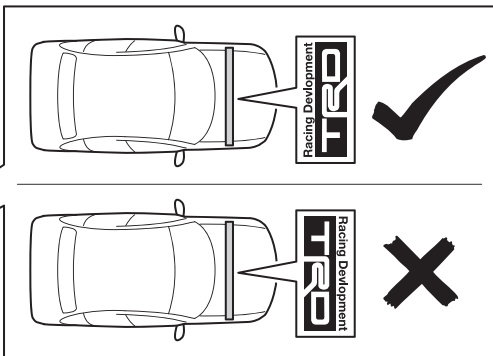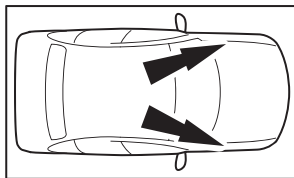

5

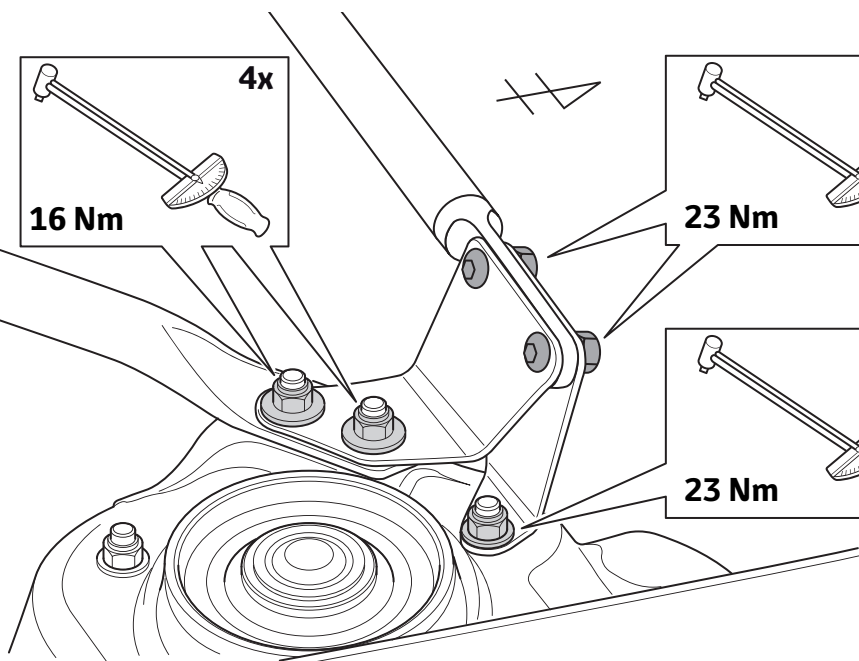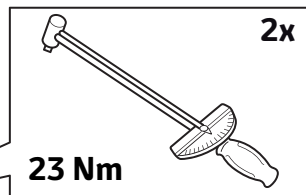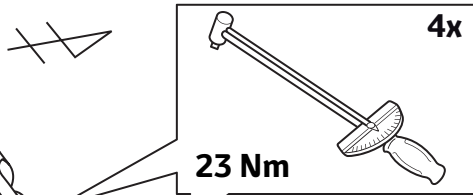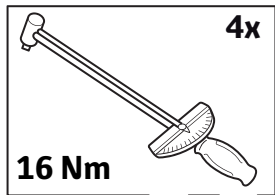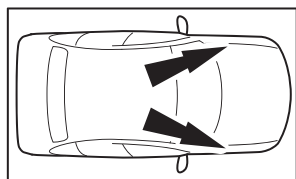

6