



TOYOTA

ALWAYS A
BETTER WAY

RAV4

Vertical Cargo Net

Installation Instructions

Model year: as from 2018/11,
as from 2020/06 (Plug-In Hybrid)








Vehicle code: *XA*5**-AN**BW

Part number: PZ472-Q0341-ZA


Manual reference number: AIM 004 399-2

Revision record


Rev. No.	Date	Page	Step	Remarks
△ ₁	06.04.2019	2	Kit & Tools	New part B, Drill 10mm removed
△ ₁	06.04.2019	3	1	10 mm drill removed
△ ₁	06.04.2019	4	2, 3	New fixation, old step 2 deleted
△ ₁	06.04.2019	7	Template	Drill diameter updated
△ ₂	27.04.2020	1, 7, 9		Model year added, Part No. updated
△ ₂	27.04.2020	2, 3, 4	Tools, 1, 2	Long nose plier added, Drill depth updated

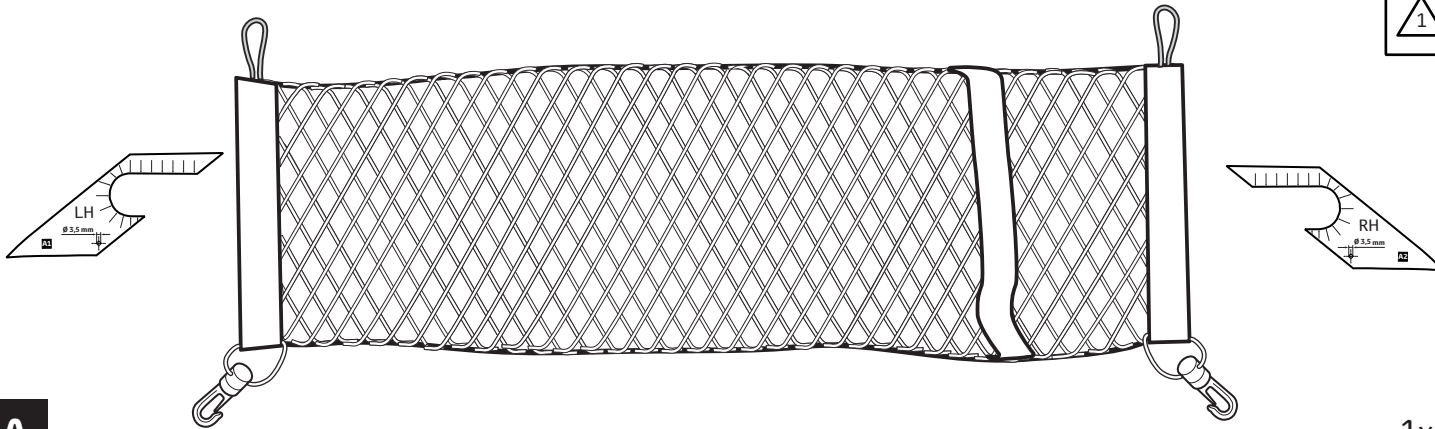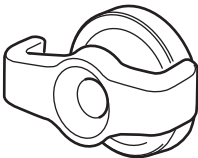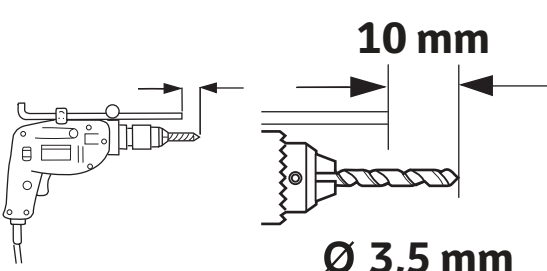PZ472-Q0341-ZA			
			
A	1x		
	2x		2x
B		C	
			2x
D			
			
			
			



1

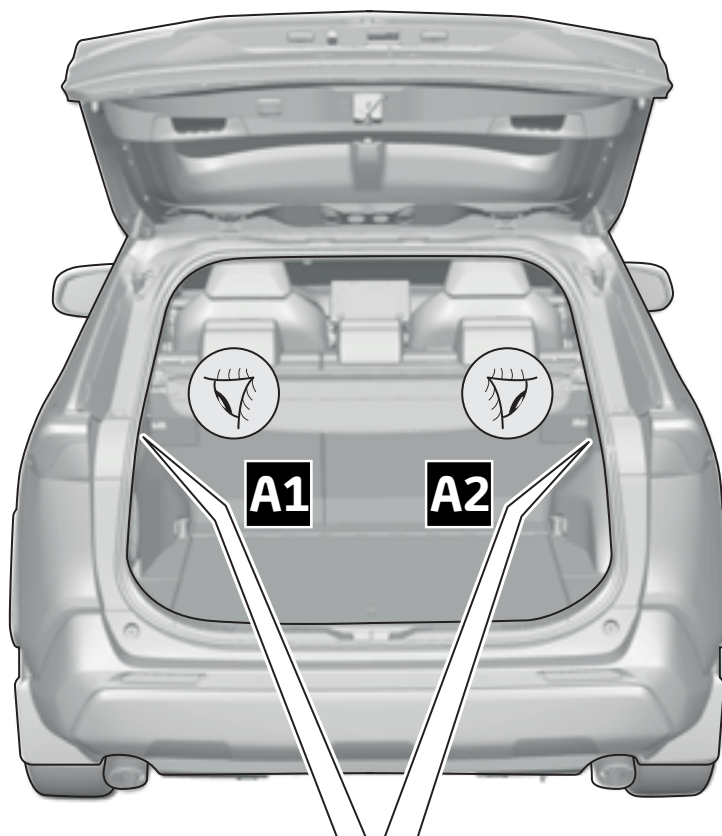


2

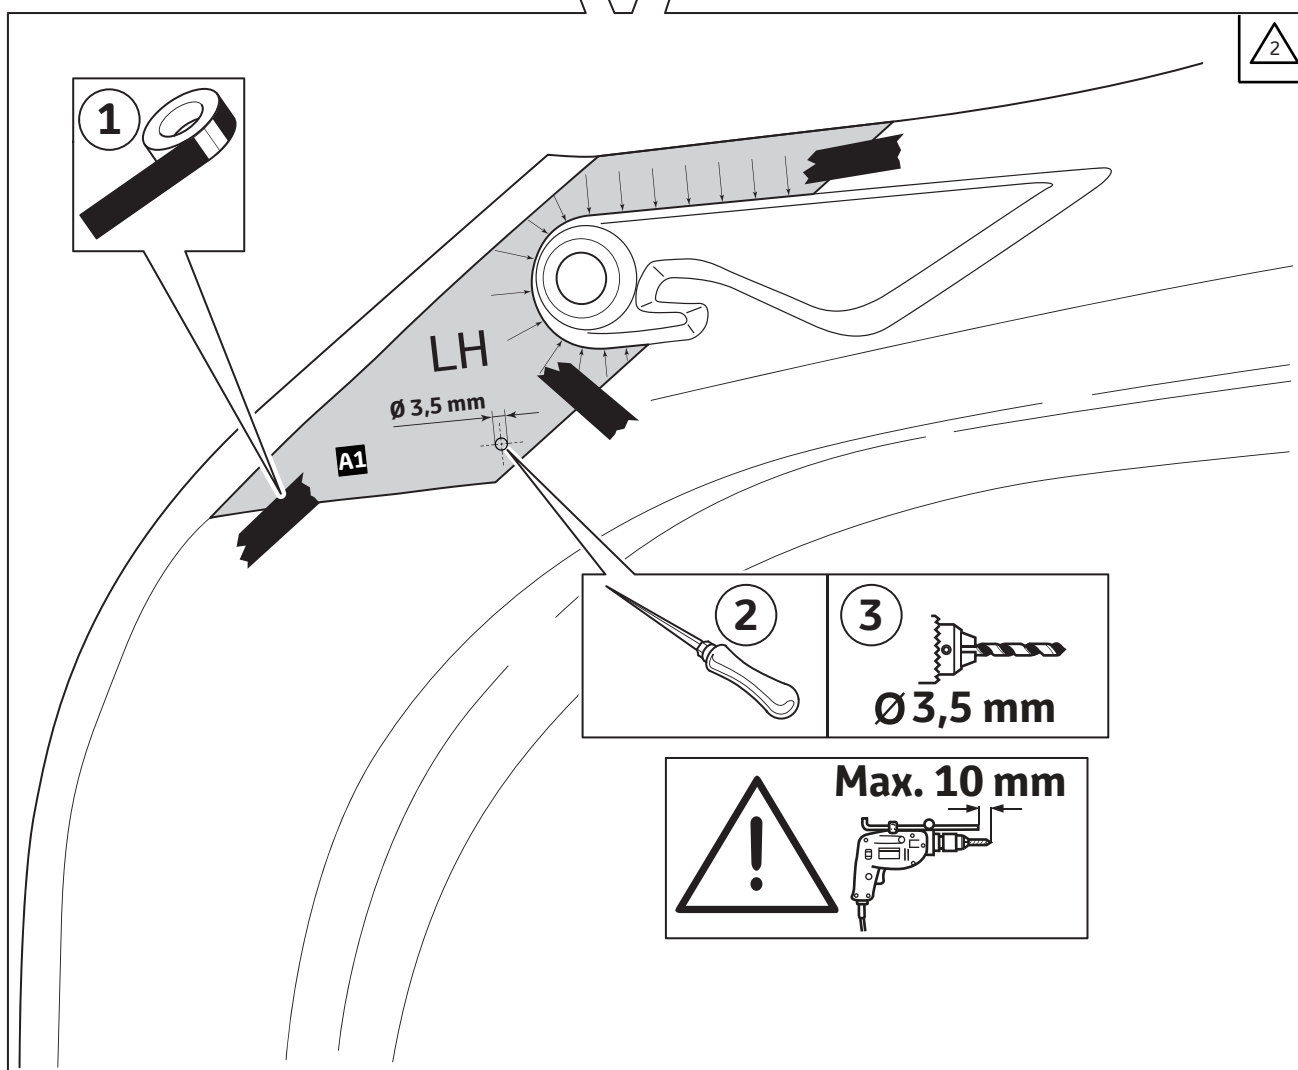

1

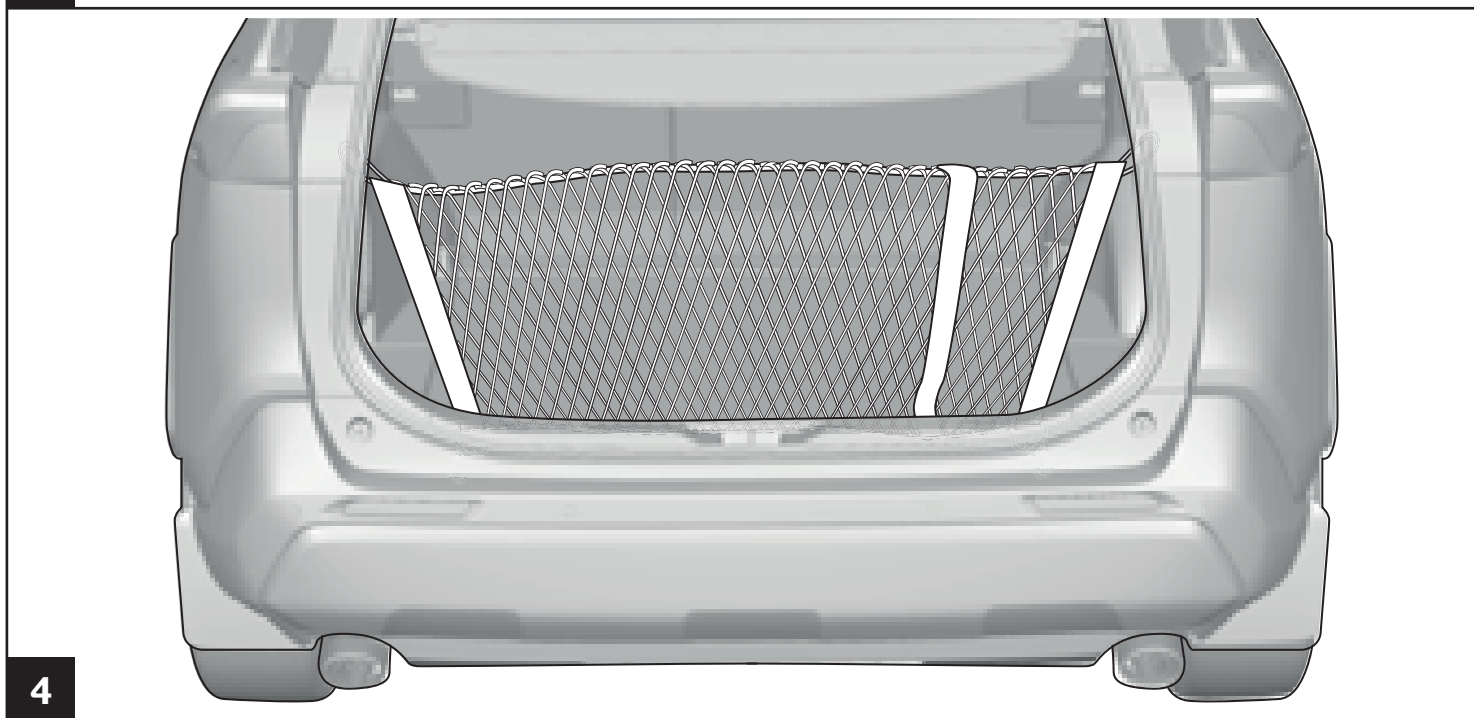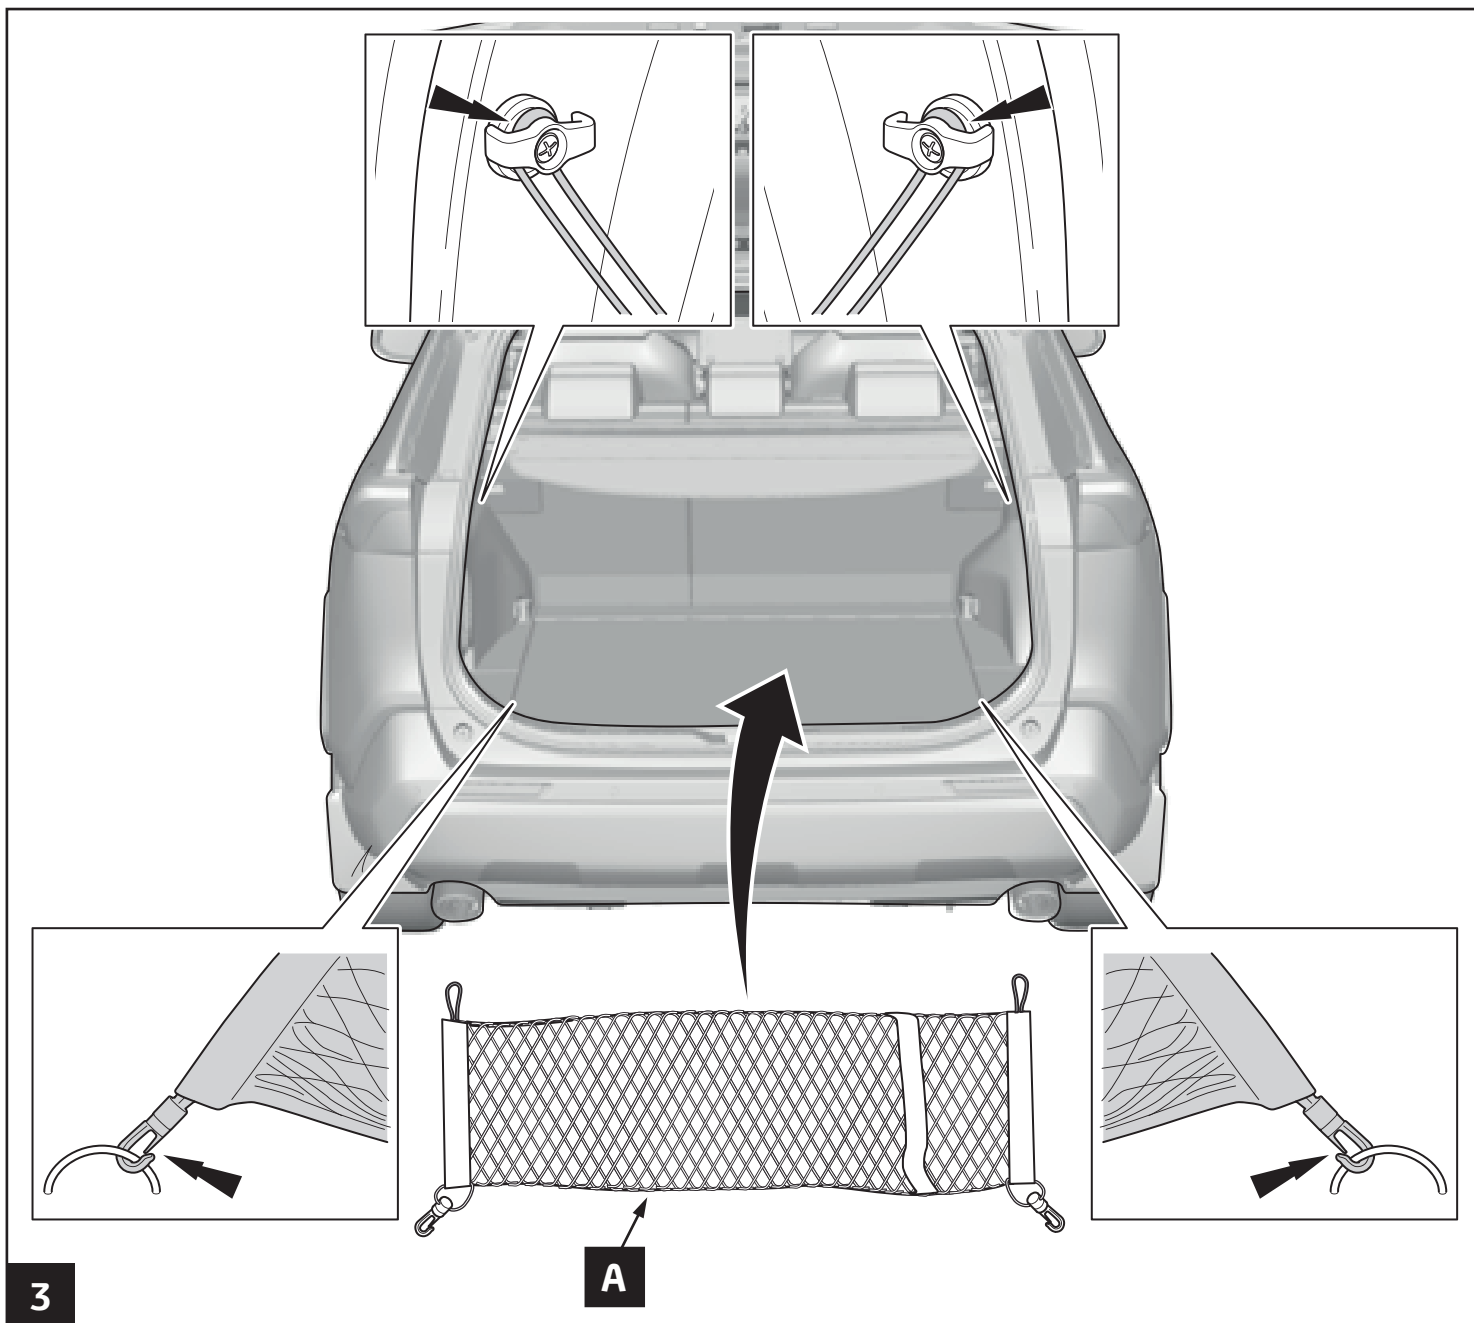

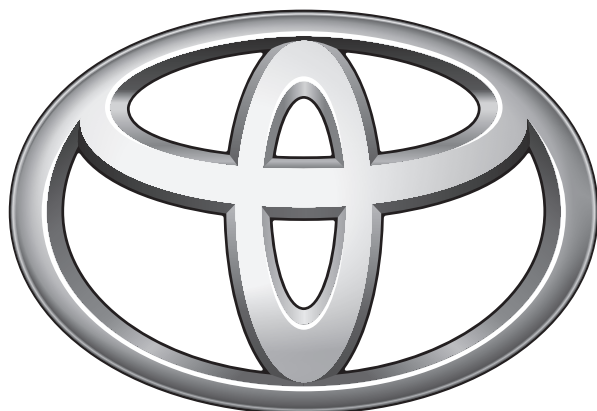

0 10 20 30 40 50 60 70 80 90 100



RAV4

Model year: as from 2018/11,
as from 2020/06 (Plug-In Hybrid)



Vehicle code: *XA*5**-AN**BW

Part number: PZ472-Q0341-ZA

LH

Ø 3,5 mm


A1



RH


Ø 3,5 mm

A2



CHECK SIZE

Print 100%
Check with rulers
before use.

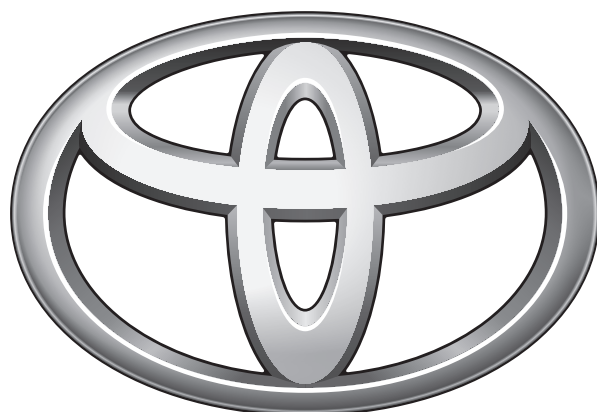



TOYOTA

ALWAYS A
BETTER WAY

CHECK SHEET

Page 1 of 1

RAV4


Model / Year as from 2018/11, Vertical Cargo Net
as from 2020/06 (Plug-In Hybrid)

VIN n°

DURING INSTALLATION








P/N = OK




1


AFTER INSTALLATION

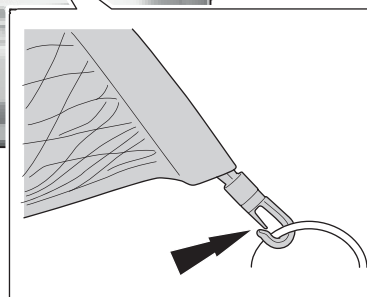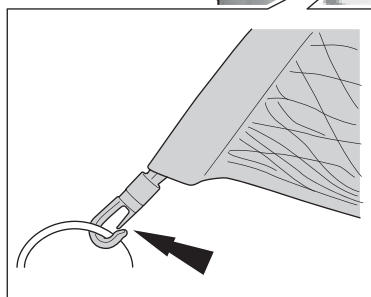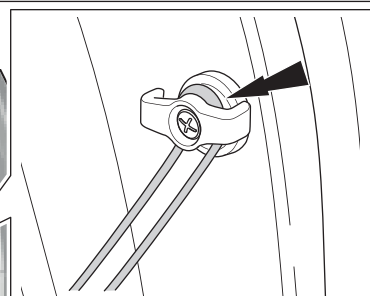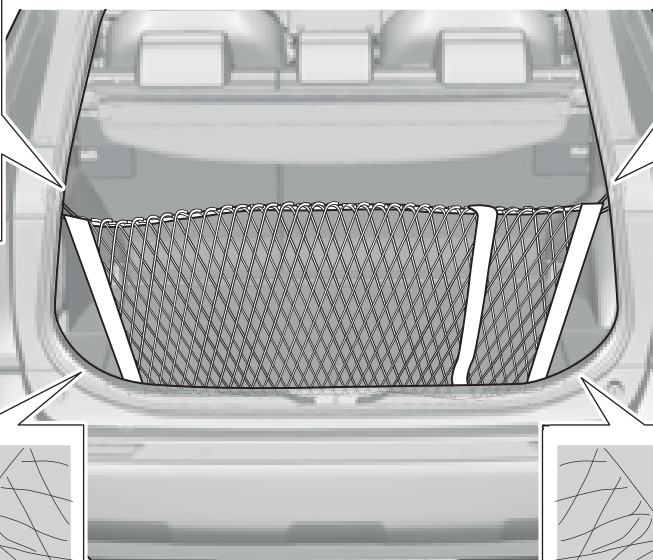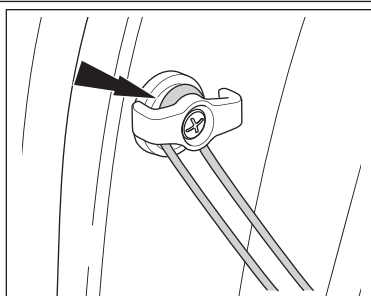

1

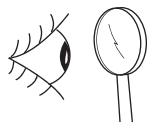

= OK

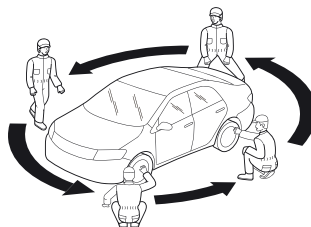

2

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: