



TOYOTA

ALWAYS A
BETTER WAY

Corolla

Front Bumper Protection Film

Installation Instructions


Model year:	As from 2019/05
Vehicle code:	NRE210*-D***ZW ZWE211*-DHX*BW MZEH12*-DHX*BW
Part number:	PW178-02017

Manual reference number: AIM 006 062-0



Revision record

Rev. No.	Date	Page	Step	Remarks



PW178-02017

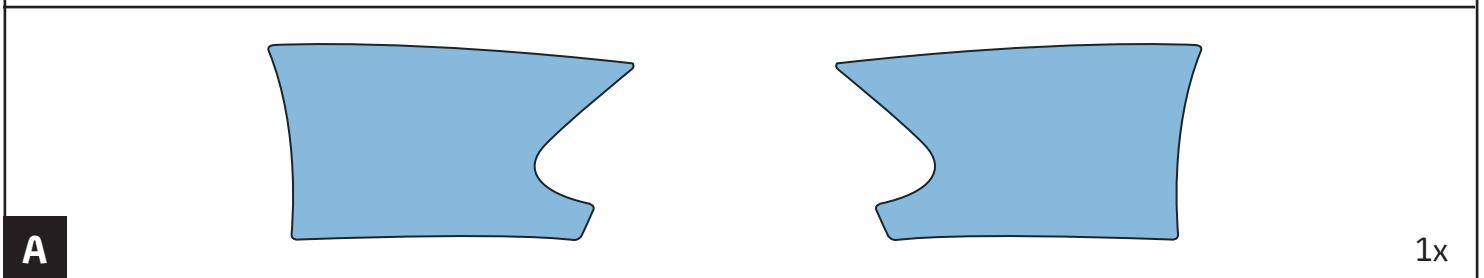

LHS=RHS

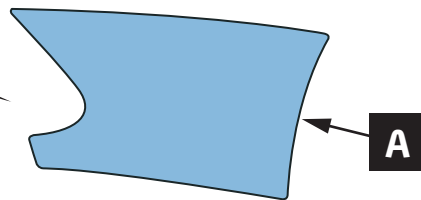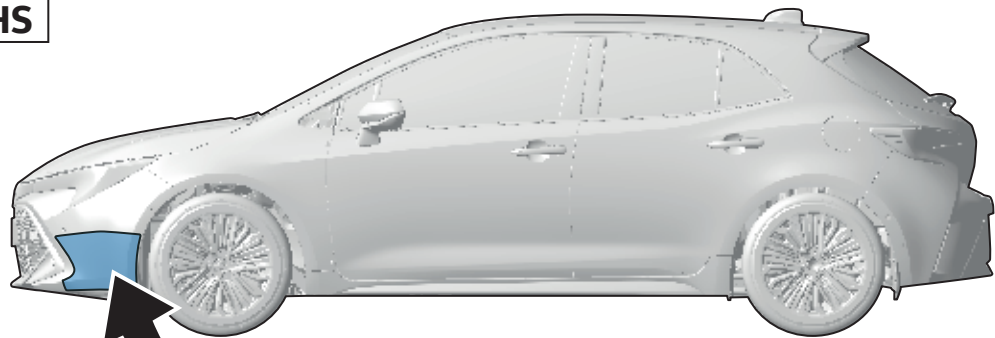

3M Gold squeegee + Low friction sleeve
NOT INCLUDED

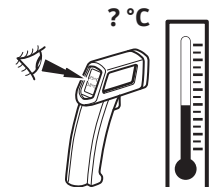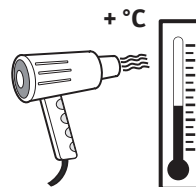

INFO










Material Safety Data Sheet



Technical Data Sheet


LHS=RHS

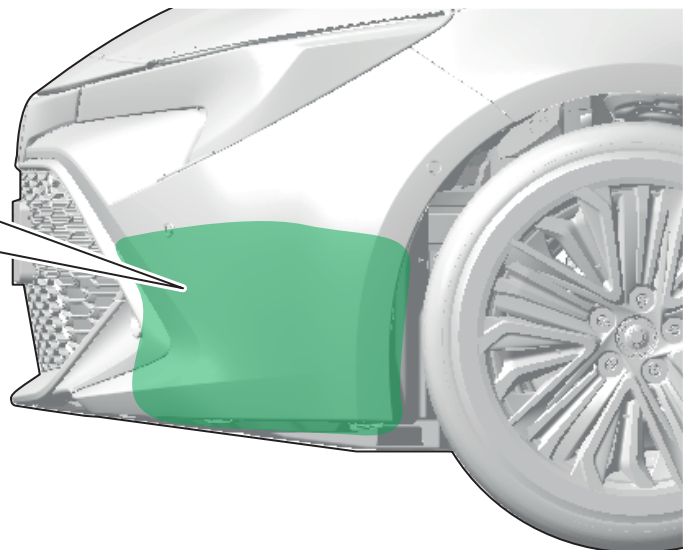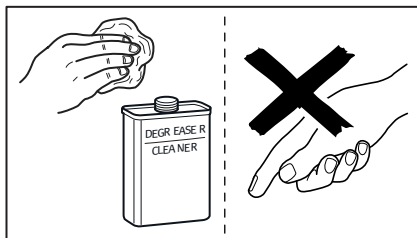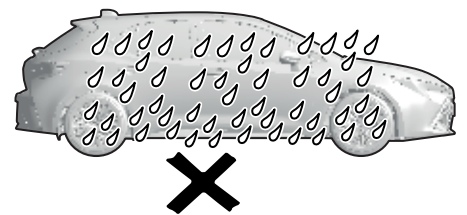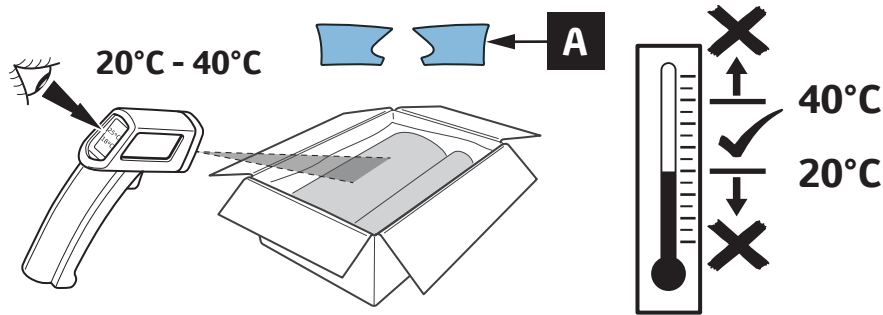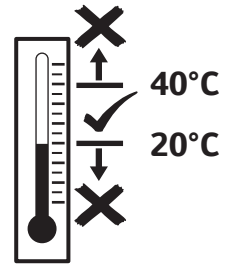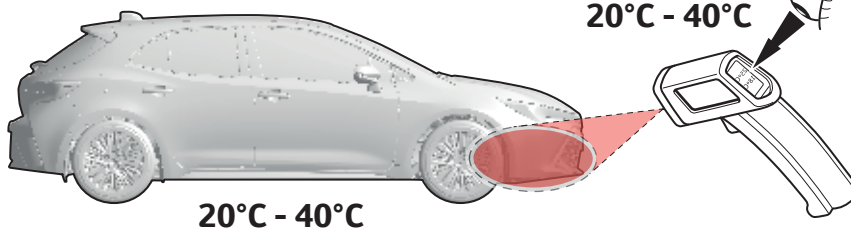

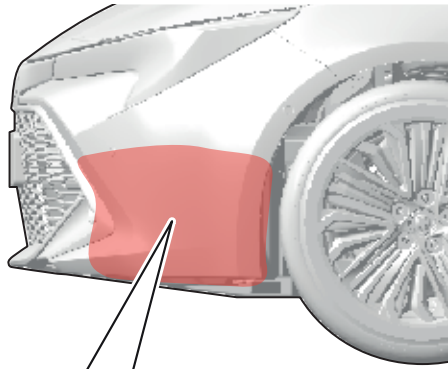



<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 3</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 3</p>	<p>INFO</p>

2

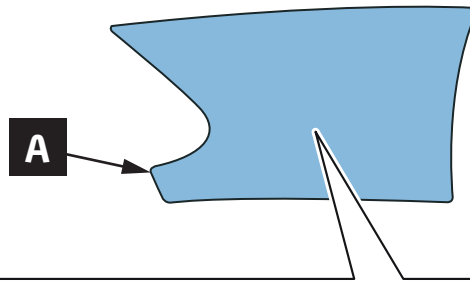


<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 3</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 3</p>	<p>INFO</p>




3

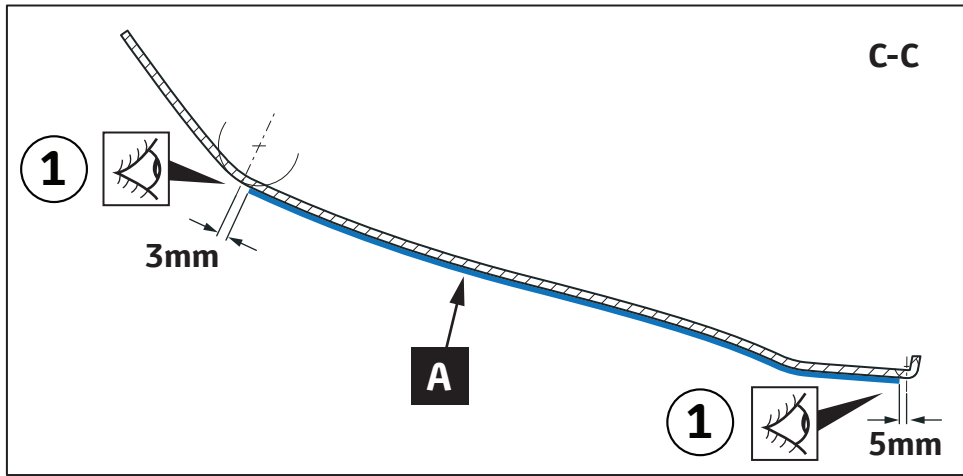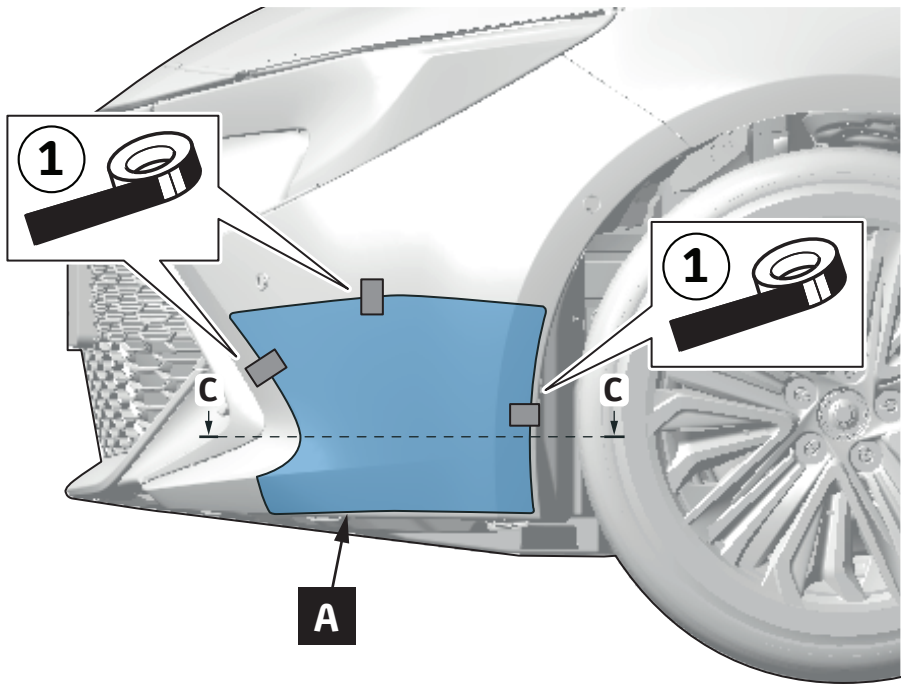

4

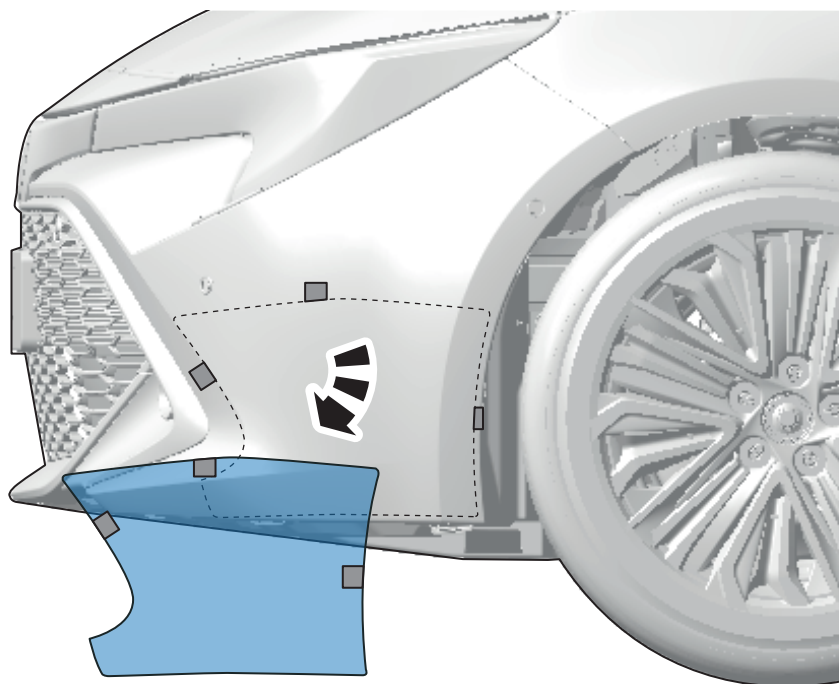


5

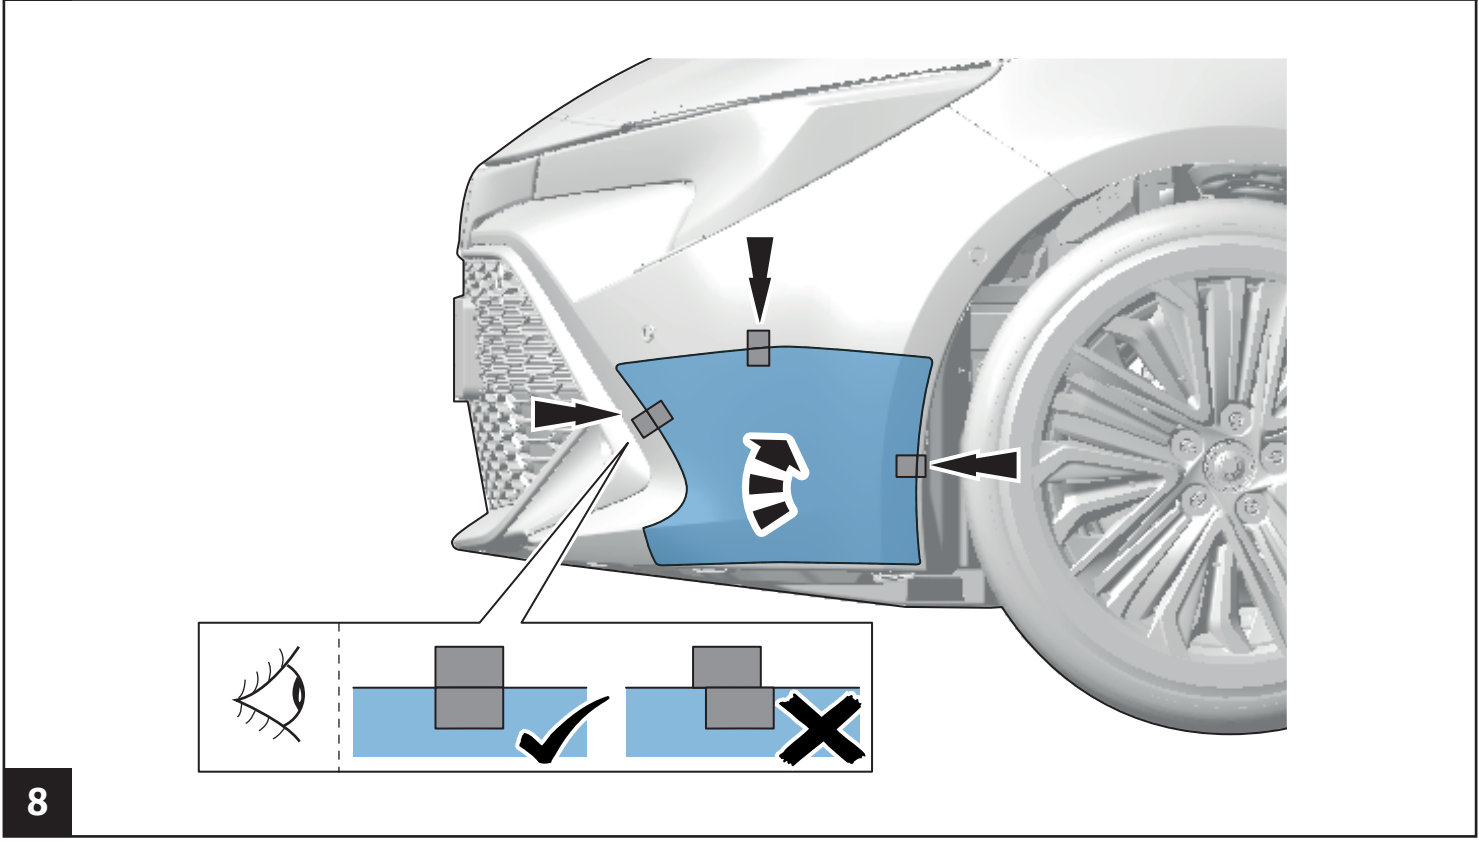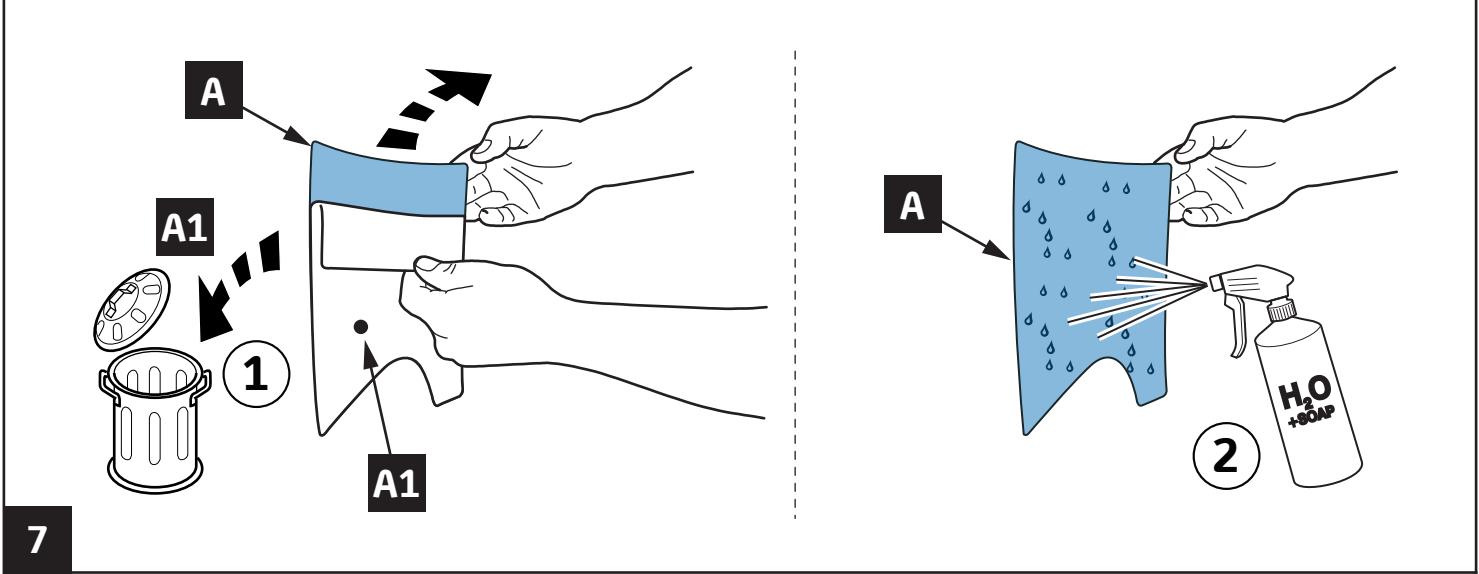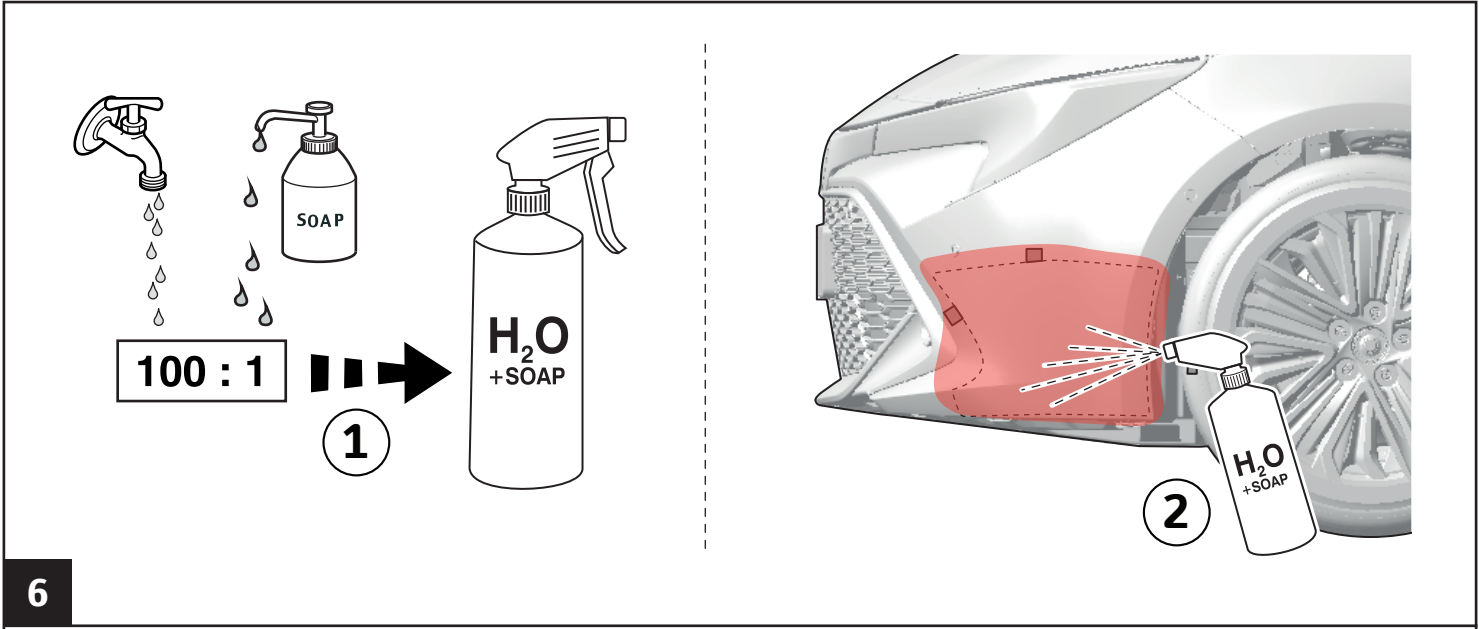



6

7


8

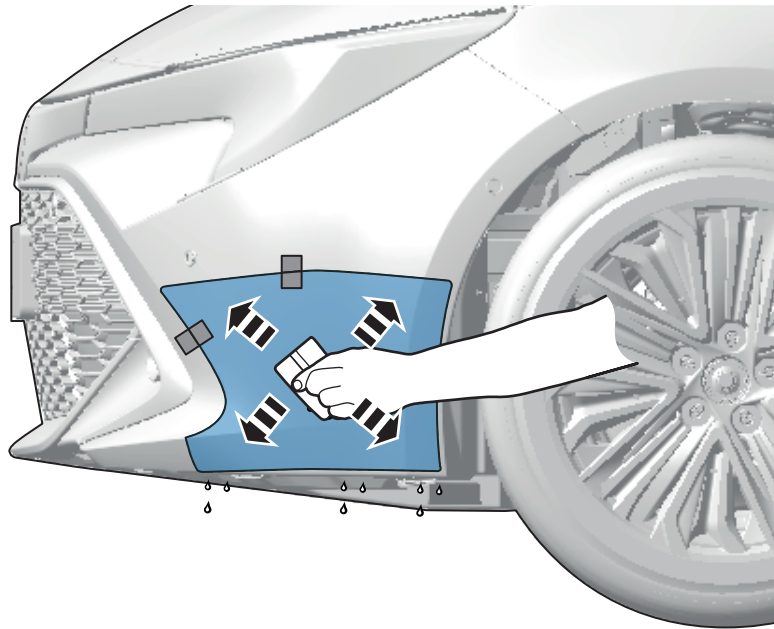


9

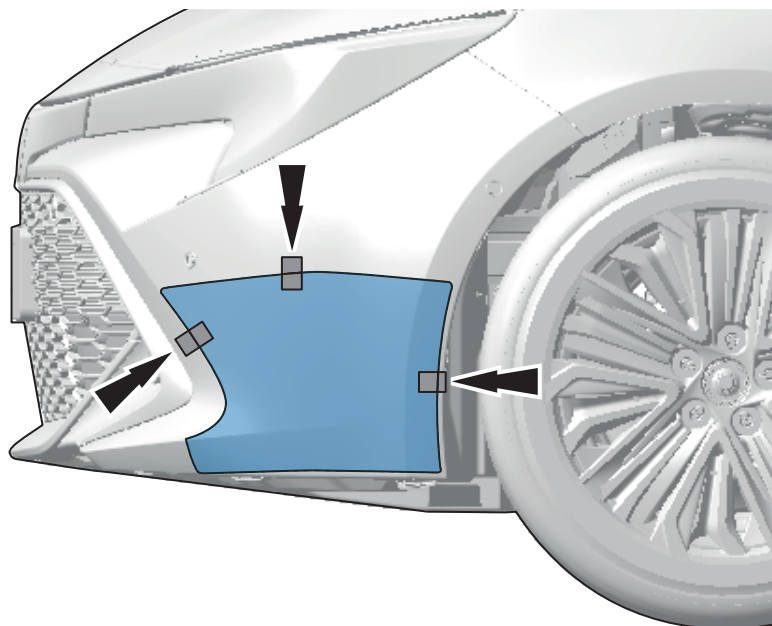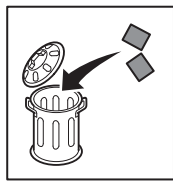

10





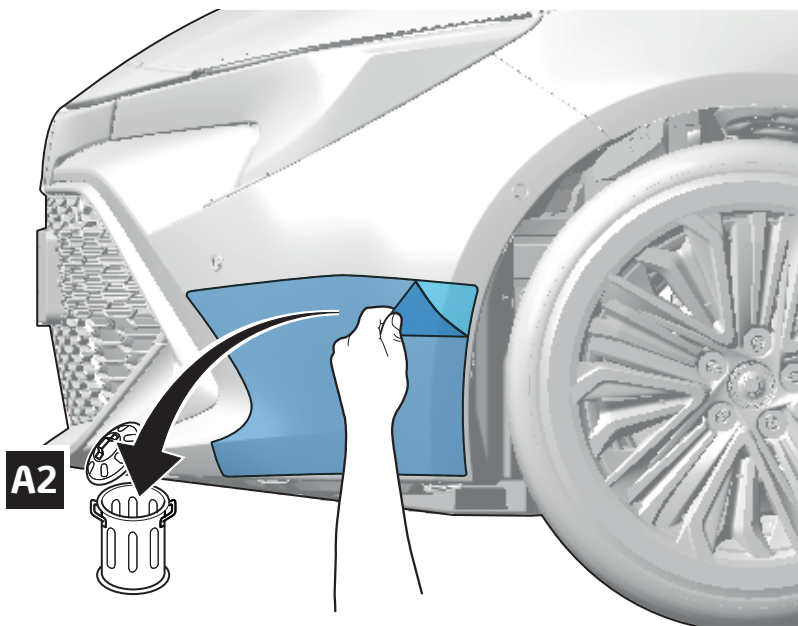


11

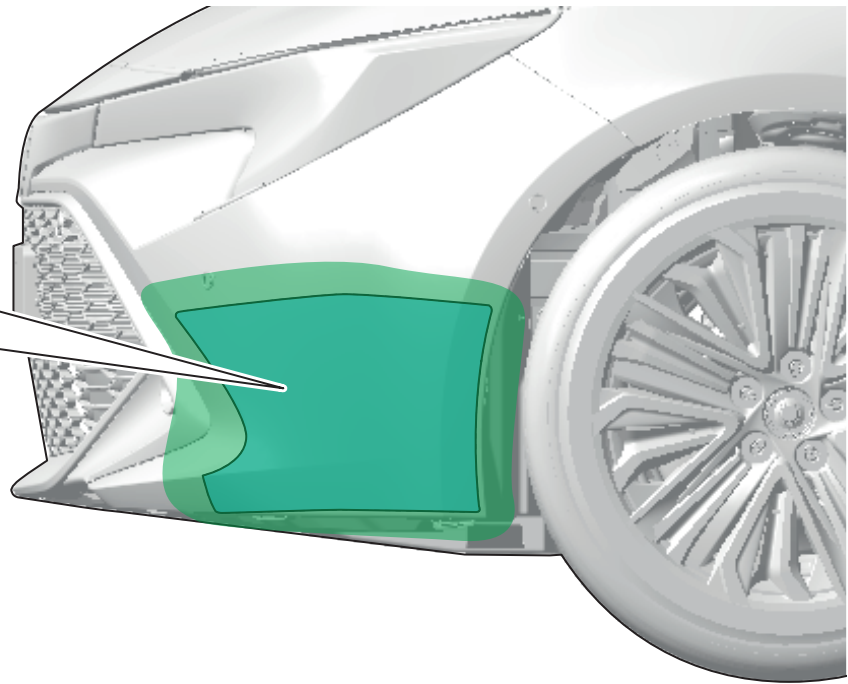

12

INFO

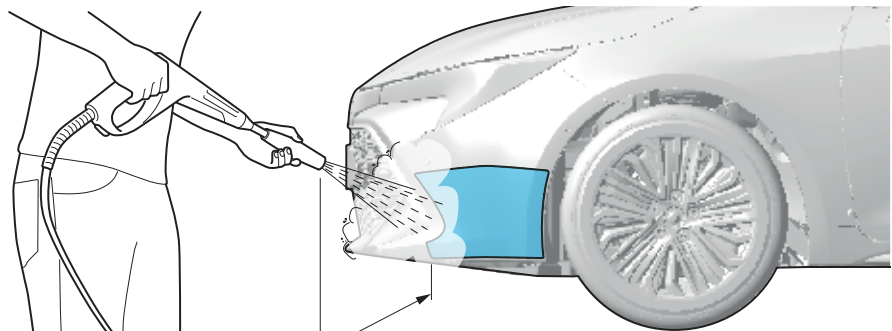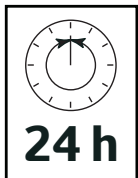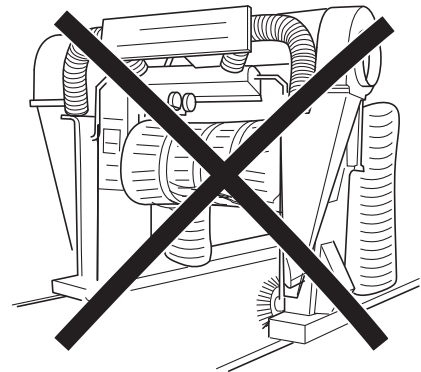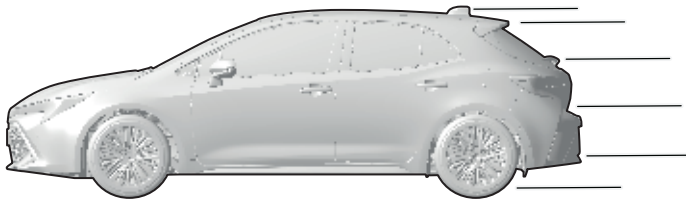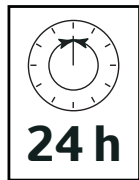

**Minimum
50cm**



TOYOTA

CHECK SHEET

Page 1 of 1

Model/Year

Corolla
As from 2019/05

Front Bumper
Protection Film

VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION

1

P/N = OK

2

3x

C-C

3mm

5mm

AFTER INSTALLATION

1

= OK

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp:

